



AIR FRYER XL

OWNER'S GUIDE

Please read this guide carefully before operating your unit and retain for future reference.

IMPORTANT SAFEGUARDS

HOUSEHOLD USE ONLY

Read all instructions before using your Ninja® Air Fryer XL.

When using electrical appliance, basic safety precautions should always be followed, including the following:

⚠ WARNINGS

- 1 This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- 2 Keep the appliance and its cord out of reach of children. **DO NOT** allow the appliance to be used by children. Close supervision is necessary when used near children.
- 3 To eliminate a choking hazard for young children, remove and discard the protective cover fitted on the power plug of this appliance.
- 4 Children shall not play with the appliance.
- 5 **NEVER** use electrical socket below counter.
- 6 **NEVER** connect this appliance to an external timer switch or separate remote-control system.
- 7 **DO NOT** use an extension cord. A short power-supply cord is used to reduce the risk of children grabbing the cord or becoming entangled and to reduce the risk of people tripping over a longer cord.
- 8 To protect against electrical shock **DO NOT** immerse cord, plugs, or main unit housing in water or other liquid. Cook only in the ceramic-coated basket provided.
- 9 Regularly inspect the appliance and power cord. **DO NOT** use the appliance if there is damage to the power cord or plug. If the appliance malfunctions or has been damaged in any way, immediately stop use and Contact a Service Center.
- 10 **ALWAYS** ensure the appliance is properly assembled before use.
- 11 **DO NOT** cover the air intake vent or air socket vent while unit is operating. Doing so will prevent even cooking and may damage the unit or cause it to overheat.

- 12 Before placing removable ceramic-coated basket into the main unit, ensure basket and unit are clean and dry by wiping with a soft cloth.
- 13 This appliance is for household use only. **DO NOT** use this appliance for anything other than its intended use. **DO NOT** use in moving vehicles or boats. **DO NOT** use outdoors. Misuse may cause injury.
- 14 Intended for worktop use only. Ensure the surface is level, clean and dry. **DO NOT** move the appliance when in use.
- 15 **DO NOT** place the appliance near the edge of a worktop during operation.
- 16 **DO NOT** use accessory attachments not recommended or sold by SharkNinja. The use of accessory attachments not recommended by SharkNinja may cause fire, electric shock, or injuries.
- 17 **DO NOT** place the appliance in or near a microwave, toaster oven, convection oven, or conventional oven or on a ceramic cooktop, electrical coil, gas burner range, or outdoor grill.
- 18 When using this appliance, provide adequate space above and on all sides for air circulation.
- 19 **ALWAYS** ensure basket is properly closed before operating.
- 20 **DO NOT** use the appliance without the removable ceramic-coated basket installed.
- 21 **DO NOT** use this appliance for deep-frying.
- 22 **DO NOT** place appliance on hot surfaces or near a hot gas or electric burner or in a heated oven.
- 23 Prevent food contact with heating elements. **DO NOT** overfill when cooking. Overfilling may cause personal injury or property damage or affect the safe use of the appliance.
- 24 Socket voltages can vary, affecting the performance of your product. To prevent possible illness, use a thermometer to check that your food is cooked to the temperatures recommended.
- 25 Should the unit emit black smoke, unplug immediately. Wait for smoking to stop before removing any cooking accessories.

804109900A

“Recipe book is not included”

 
- 26 **DO NOT** touch hot surfaces. Appliance surfaces are hot during and after operation. To prevent burns or personal injury, **ALWAYS** use protective hot pads or insulated oven mitts and use available handles.
- 27 Extreme caution must be used when the appliance contains hot food. Improper use may result in personal injury.
- 28 Spilled food can cause serious burns. Keep appliance and cord away from children. **DO NOT** let cord hang over edges of tables or counters or touch hot surfaces.
- 29 The basket and crisper plate become extremely hot during the cooking process. Avoid physical contact while removing the basket or plate from the appliance. **ALWAYS** place basket or plate on a heat-resistant surface after removing. **DO NOT** touch accessories during or immediately after cooking.
- 30 Cleaning and user maintenance shall not be made by children.
- 31 To disconnect, turn any control to OFF, then unplug from socket when not in use and before cleaning. Allow to cool before cleaning, disassembly, putting in or taking off parts and for storage.
- 32 **DO NOT** clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- 33 Please refer to the Cleaning & Maintenance section for regular maintenance of the appliance.
- 34 This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** attempt to modify the plug in any way.
- 35 Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.



Take care to avoid coming into contact with a hot surface.


SAVE THESE INSTRUCTIONS

PARTS & ACCESSORIES

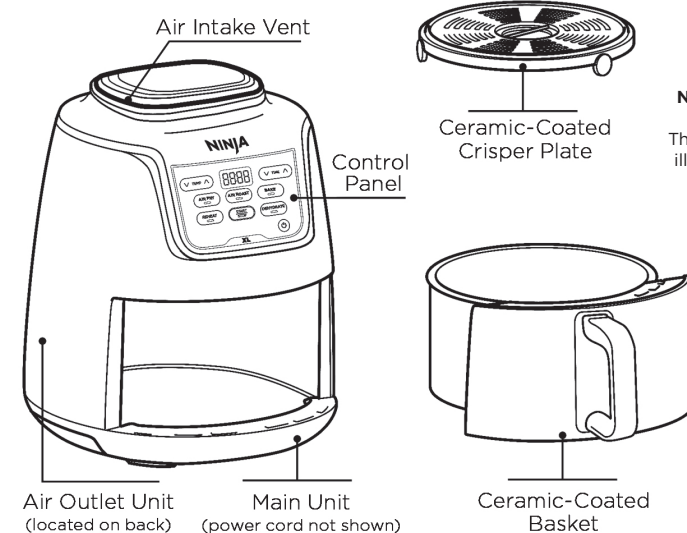

NOTE: Accessories may vary depending on the model. The images shown here are for illustrative purposes only and may be subject to change.

 GETTING TO KNOW YOUR AIR FRYER XL

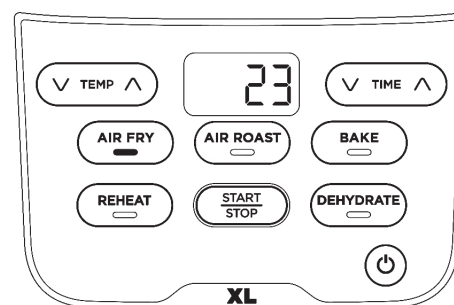

When setting time, the digital display shows HH:MM. Display currently reads 23 minutes.

FUNCTION BUTTONS

AIR FRY: Use to give food crispiness and crunch with little to no oil.

AIR ROAST: Use the unit as a roaster oven for tender meats, vegetables, and more.

BAKE: Create decadent baked treats and desserts.

REHEAT: Revive leftovers by gently warming them, leaving you with crispy results.

DEHYDRATE: Dehydrate meats, fruits, and vegetables for healthy snacks.

OPERATING BUTTONS

TEMP arrows: Use the up and down TEMP arrows to adjust the cook temperature in any function before or during cooking.

TIME arrows: Use the up and down TIME arrows to adjust the cook time in any function before or during cooking.

START/STOP button: After selecting the time and temperature, start cooking by pressing the START/STOP button. You can stop cooking at any time by pressing the button again.

POWER button: The Power button shuts off the unit and stops all cooking modes.

NOTE: After 10 minutes with no interaction with the control panel, the unit will enter standby mode.

• The actual descriptions of control panel and their locations may vary, depending on the model.

BEFORE FIRST USE

- 1 Remove and discard all packaging material from the unit.
- 2 Remove all accessories from the package and read this manual carefully. Please pay particular attention to operational instructions, warnings, and important safeguards to avoid any injury or property damage.
- 3 Wash the ceramic-coated basket, crisper plate, and accessories in hot, soapy water, then rinse and dry thoroughly. **NEVER** clean the main unit in the dishwasher.

 
USING YOUR AIR FRYER XL

USING THE COOKING FUNCTIONS


To turn on the unit, first plug the power cord into a wall outlet. Press the power button (⏻).

Air Fry


- 1 Install the crisper plate in the basket.

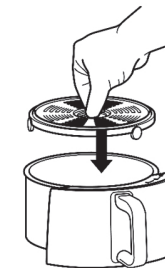

 - 2 Press the AIR FRY button. The default temperature setting will display. Use the TEMP up and down arrow buttons to set your desired temperature.

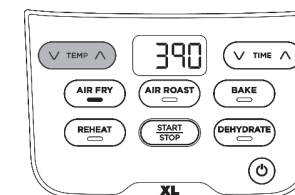

 - 3 Press the TIME up and down arrow buttons to set the cook time.

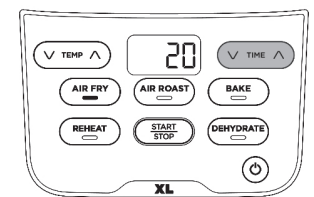


NOTE: For best results, let the unit preheat for 3 minutes before adding ingredients.

- 4 Add ingredients to the basket. Insert the basket in the unit.




 - 5 Press START/STOP to begin cooking.

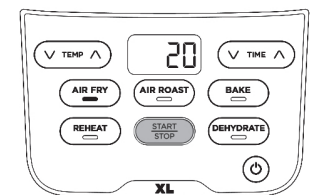


- 6 To toss ingredients during cooking, remove basket and shake it back and forth. The unit will automatically pause when the basket is removed. Reinsert basket and cooking will resume.

 
USING YOUR AIR FRYER XL - CONT.

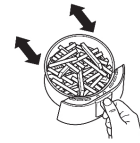

 - 7 When cooking is complete, the unit will beep and End will appear on the control panel display.

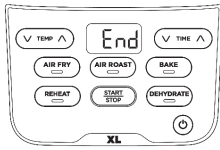


 - 8 Remove ingredients by dumping them out or using oven mitts or silicone-tipped tongs/utensils.

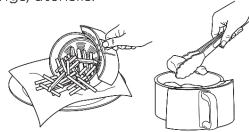


Air Roast

 
- 1 Install the crisper plate in the basket if needed.

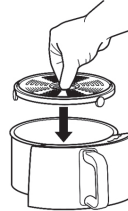

 - 2 Press the AIR ROAST button. The default temperature setting will display. Press the TEMP up and down arrow buttons to set your desired temperature.

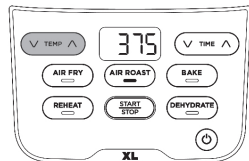

 - 3 Press the TIME up and down arrow buttons to set the cook time.

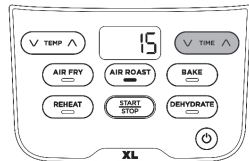

NOTE: For best results, let the unit preheat for 3 minutes before adding ingredients.

 
- 4 Add ingredients to the basket. Insert the basket in the unit.




- 5 Press START/STOP to begin cooking.



- 6 When cooking is complete, the unit will beep and End will appear on the control panel display.

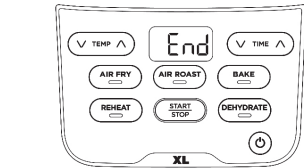


 - 7 Remove ingredients by dumping them out or using oven mitts or silicone-tipped tongs/utensils.

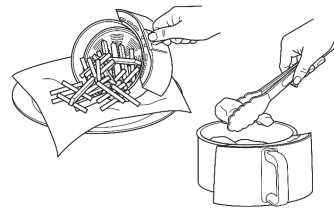

Bake

 - 1 Install the crisper plate in the basket if needed. If using a baking dish, the crisper plate is not needed.

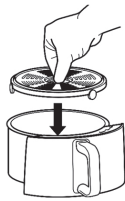

- 2 Press the BAKE button. The default temperature setting will display. Press the TEMP up and down arrow buttons to set your desired temperature.

NOTE: To convert recipes from a conventional oven, reduce the temperature of the air fryer by 25°F. Check food frequently to avoid overcooking.



- 3 Press the TIME up and down arrow buttons to set the cook time.



NOTE: For best results, let the unit preheat for 3 minutes before adding ingredients.

 
- 4 Add ingredients to the basket. Insert the basket in the unit.




- 5 Press START/STOP to begin cooking.



- 6 When cooking is complete, the unit will beep and End will appear on the control panel display.

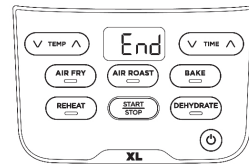


 - 7 Remove ingredients by dumping them out or using oven mitts or silicone-tipped tongs/utensils.

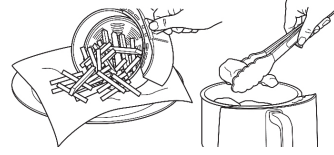

Reheat

 - 1 Install the crisper plate in the basket.

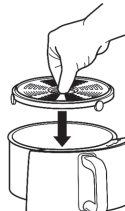

- 2 Press the REHEAT button. The default temperature setting will display. Press the TEMP up and down arrow buttons to set your desired temperature.



- 3 Press the TIME up and down arrow buttons to set the reheating time.



NOTE: For best results, let the unit preheat for 3 minutes before adding ingredients.

 
- 4 Add ingredients to the basket. Insert the basket in the unit.




- 5 Press START/STOP to begin reheating.



- 6 When reheating is complete, the unit will beep and End will appear on the control panel display.

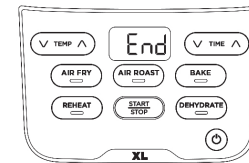


 - 7 Remove ingredients by dumping them out or using oven mitts or silicone-tipped tongs/utensils.

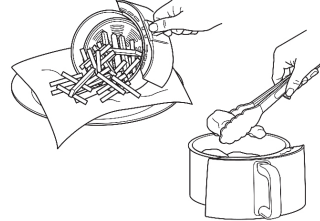

Dehydrate

 - 1 Place a layer of ingredients in the bottom of the basket. Then install the crisper plate in the basket and set a second layer of ingredients on the crisper plate.

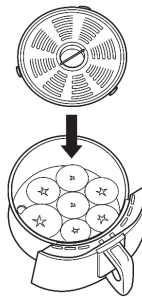

NOTE: You can increase your dehydrating capacity with the multi-layer rack.

- 2 Insert the basket in the unit.

 
- 3 Press the DEHYDRATE button. The default temperature will display. Use the TEMP up and down arrow buttons to set your desired temperature.



- 4 Press the TIME up and down arrow buttons to set the dehydrating time.



- 5 Press START/STOP to start dehydrating.

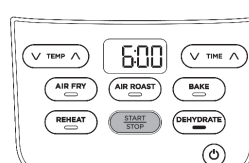

CLEANING YOUR AIR FRYER

The unit should be cleaned thoroughly after every use. Unplug the unit from the wall outlet before cleaning.

Part/Accessory	Cleaning Method	Dishwasher Safe?
Main Unit	To clean the main unit and the control panel, wipe them clean with a damp cloth. NOTE: NEVER immerse the main unit in water or any other liquid. NEVER clean the main unit in a dishwasher.	No
Crisper Plate	The crisper plate can be washed in the dishwasher or by hand. If hand-washing, air-dry or towel-dry all parts after use.	Yes
Basket	The basket can be washed in the dishwasher or by hand. If hand-washing, air-dry or towel-dry all parts after use. *To extend the life of your basket, we recommend hand-washing it.	Yes*

If food residue is stuck on the crisper plate or basket, place them in a sink filled with warm, soapy water and allow to soak.

HELPFUL TIPS

- For consistent browning, make sure ingredients are arranged in an even layer on the bottom of the basket or on top of the crisper plate with no overlapping. If ingredients are overlapping, make sure to shake them halfway through the set cook time.
- Cook time and temperature can be adjusted at any time during cooking. Simply press the up and down TIME or TEMP arrows to adjust the time or temperature.
- To convert recipes from a conventional oven, reduce the temperature of the air fryer by 25°F. Check food frequently to avoid overcooking.
- We recommend 3 minutes of preheating. You can use the built-in timer to set a 3-minute countdown.
- Occasionally, the fan from the air fryer will blow lightweight foods around. To alleviate this, secure foods (like the top slice of bread on a sandwich) with toothpicks.
- The crisper plate elevates ingredients in the basket so air can circulate under and around them for consistent, crisp results.
- After a cooking function is selected, you can press the START/STOP button to begin cooking immediately. The unit will run at the default temperature and time.
- For best results, remove food immediately after the cook time is complete to avoid overcooking.
- For best results with fresh vegetables and potatoes, use at least 1 tablespoon of oil. Add more oil as desired to achieve the preferred level of crispiness.
- For best results, check progress throughout cooking, and remove food when desired level of brownness has been achieved. We recommend using an instant-read thermometer to monitor internal temperature of proteins. After the cook time is complete, remove food immediately to avoid overcooking.

TROUBLESHOOTING GUIDE

- Why won't the temperature go any higher?**
The max temperature is 400°F.
- How long does it take to preheat, and how will I know when it's done?**
We recommend 3 minutes of preheating. To preheat, select desired function and temperature, set time to 3 minutes, and press Start/Pause..
- Should I add the ingredients before or after preheating?**
For best results, let the unit preheat for 3 minutes before adding ingredients.
- Do I need to defrost frozen foods before air frying?**
It depends on the food. Follow package instructions.
- How do I pause the countdown?**
Press Start/Pause to pause the cooking function.
- Is the basket safe to put on my countertop?**
The basket will heat during cooking. Use caution when handling, and place on heat-safe surfaces only.
- How do I know when to use the crisper plate?**
Use the crisper plate when you want food to come out crispy. The plate elevates the food in the basket so that air can flow under it to cook ingredients evenly.

TROUBLESHOOTING GUIDE

- My food didn't cook.**
Make sure the basket is fully inserted during cooking. For consistent browning, make sure ingredients are arranged in an even layer on the bottom of the basket with no overlapping. Shake basket to toss loose ingredients for consistent crispiness. Cook time and temperature can be adjusted at any time during cooking. Simply press the TIME or TEMP buttons.
- My food is burned.**
For best results, check progress throughout cooking, and remove food when desired level of brownness has been achieved. Remove food immediately after the cook time is complete to avoid overcooking.
- Why do some ingredients blow around when air frying?**
Occasionally, the fan from the air fryer will blow lightweight foods around. Use toothpicks to secure loose lightweight food, like the top slide on a sandwich.
- Can I air fry fresh battered ingredients?**
Yes, but use the proper breading technique. It is important to coat foods first with flour, then with egg, and then with bread crumbs. Be sure to press the bread crumbs onto the food so they stick in place. Loose breading may be blown off by the unit's powerful fan.
- Why is the unit beeping?**
The cooking function is complete.
- The screen went black.**
The unit is in standby mode. Please contact a service center.
- An "E" message appears on display screen.**
The unit is not functioning properly.

REFURBISHED PRODUCT LIMITED NINETY DAYS WARRANTY

The **Refurbished Product Service Center** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of NINETY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the **Refurbished Product Service Center** will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center
13225 Marquardt Avenue Santa Fe Springs, CA 90670.

WARRANTY REPAIR INFORMATION

If you need service on your unit and this product requires repair during the 90 days warranty period; please go to www.ConsumerServiceRefurbish.com or call the **Refurbished Product Service Center** at 562-946-3531 to obtain the required return authorization (RA) number. Pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt and a letter describing the problem. Send the unit freight prepaid and insured to:

Refurbished Product Service Center,
Attn: Customer Service Department 13225 Marquardt Avenue Santa Fe Springs, CA 90670

Your unit will be promptly repaired and returned to you. We will refuse to accept delivery of the returned unit unless the assigned RA number appears on the outside of the shipping carton.

Owner's Information
(Keep for your permanent records)

NAME: _____

ADDRESS: _____

CITY: _____ STATE: _____ ZIP CODE: _____

PHONE: _____ E-MAIL: _____

MODEL: _____ SERIAL NO.: _____

TECHNICAL SPECIFICATIONS

Voltage: 120V- 60Hz

SharkNinja Operating LLC

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

NINJA is a registered trademarks of SharkNinja Operating LLC.

804109900A



PRINTED IN MEXICO / SC:24-09-2020
OBPN:AF150AMZ_IB_MP_Mv5_201221
SHNMDL:AF150AMZ_B / TAB / Elbrd:M.C.

