

NINJA

FOODI™ DIGITAL AIR FRY OVEN



Recipe book is not included.

It's important to read this Owner's Guide prior to using your product for the first time.

IMPORTANT SAFEGUARDS

HOUSEHOLD USE ONLY • READ ALL INSTRUCTIONS BEFORE USE

Read and review instructions for operation and use.

Take care to avoid contacts with hot surface. Always use hand protection to avoid burns.

For indoor and household use only.

Read all instructions before using your Ninja® Foodi™ Digital Air Fry Oven.

When using electrical appliances, basic safety precautions should always be followed, including the following:

WARNING

- Read all instructions prior to using the oven and its accessories.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- To eliminate a choking hazard for young children, remove and discard the protective cover fitted on the power plug of this oven.
- Take inventory of all contents to ensure you have all parts needed to properly and safely operate your oven.
- DO NOT** use an extension cord. A short power-supply cord is used to reduce the risk of children grabbing the cord or becoming entangled and to reduce the risk of people tripping over a longer cord.
- NEVER** use outlet below counter.
- Keep the appliance and its cord out of reach of children. Do not allow the appliance to be used by children. Close supervision is necessary when used near children.
- DO NOT** let cord hang over edges of tables or counters or touch hot surfaces, including stoves and other heating ovens.
- NEVER** leave the oven unattended while in use.
- DO NOT** cover crumb tray or any part of the oven with metal foil. This will cause the oven to overheat or cause a fire.
- NEVER** place aluminum foil on top of the sheet pan or broil pan. This traps grease and can cause a fire.
- To protect against electrical shock **DO NOT** immerse cord, plugs, or main unit housing in water or other liquid.
- DO NOT** use the oven with damage to the power cord or plug. Regularly inspect the oven and power cord. If the oven malfunctions or has been damaged in any way, immediately stop use and call a service center.
- DO NOT** cover the air intake vents or air outlet vents while unit is operating. Doing so will prevent even cooking and may damage the unit or cause it to overheat.
- DO NOT** insert anything in the ventilation slots and do not obstruct them.
- DO NOT** place items on top of surface while unit is operating except for authorized recommended Ninja accessories.
- Before placing any accessories into the oven ensure they are clean and dry.
- Intended for countertop use only. **DO NOT** place the oven near the edge of a countertop. Ensure the surface is level, clean and dry.

- This oven is for household use only. **DO NOT** use this oven for anything other than its intended use. Misuse may cause injury.
- DO NOT** store any materials, other than supplied accessories, in this oven when not in use.
- DO NOT** use outdoors. **DO NOT** use in moving vehicles or boats.
- DO NOT** use accessory and attachments not recommended or sold by SharkNinja.
- When using this oven, provide adequate space above and on all sides for air circulation.
- A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, or the like when in operation. **DO NOT** place anything on the oven during operation.
- This oven has a tempered glass door and is more resistant to breakage. Avoid scratching door surface or nicking edges.
- DO NOT** use the oven without the wire rack installed.
- DO NOT** spray any type of aerosol spray or flavoring inside the oven while cooking.
- Use caution when inserting and removing anything from the oven, especially when hot.
- Outlet voltages can vary, affecting the performance of your product. To prevent possible illness, use a thermometer to check that your food is cooked to the temperatures recommended.
- Prevent food contact with heating elements. Excessive food loads may cause personal injury or property damage or affect the safe use of the oven.
- DO NOT** place any of the following materials in the oven: paper, cardboard, plastic, roasting bags and the like.
- Extreme caution should be exercised when using containers constructed of any materials other than metal or glass.
- DO NOT** touch hot surfaces. Oven surfaces are hot during and after operation. To prevent burns or personal injury, **ALWAYS** use protective hot pads or insulated oven mitts and use available handles and knobs.
- Spilled food can cause serious burns. Extreme caution must be used when the oven contains hot food. Improper use may result in personal injury.
- Please refer to the Cleaning & Maintenance section for regular maintenance of the oven.
- Cleaning and user maintenance shall not be made by children.
- Press the power button to turn oven off and allow to cool completely before cleaning, moving and flipping for storage.

- Unplug from outlet when not in use. To unplug, grasp the plug by the body and pull from the outlet. Never unplug by grasping and pulling the flexible cord.
- DO NOT** clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, causing a risk of electrical shock.

40 DO NOT use the oven as a source of heat or for drying.

TECHNICAL SPECIFICATIONS

Voltage: 120V, 60Hz

SAVE THESE INSTRUCTIONS

PARTS

 
A Main Unit (attached power cord not shown)

B Removable Crumb Tray


C Wire Rack

D Sheet Pan

E Air Fry Basket

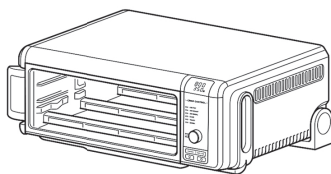

ACCESSORY PLACEMENT

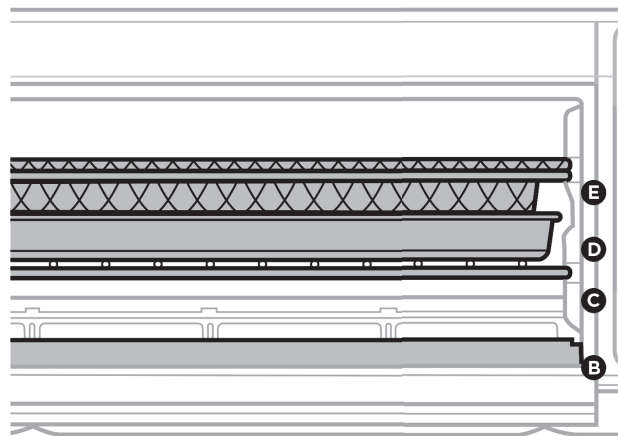 

B Removable Crumb Tray - Always place below the bottom heating elements

C Wire Rack - Keep in the bottom rail position

D Sheet Pan - Always layer on top of the wire rack

E Air Fry Basket - Use in the top rail position

BEFORE FIRST USE


- Remove and discard any packaging material from the unit.
- Remove all accessories from the package and read this manual carefully. Please pay particular attention to operational instructions, warnings, and important safeguards to avoid any injury or property damage.
- Wash the air fry basket, sheet pan, wire rack, and removable crumb tray in warm, soapy water, then rinse and dry thoroughly. **NEVER** clean the main unit in the dishwasher.

NOTE: ONLY the sheet pan and air fry basket are dishwasher safe. **DO NOT** use metal utensils on the sheet pan.

NOTE: Accessories may vary depending on the model. Refer to quick guide, if available.

The images shown here are for illustrative purposes only and may be subject to change.

 USING THE CONTROL PANEL

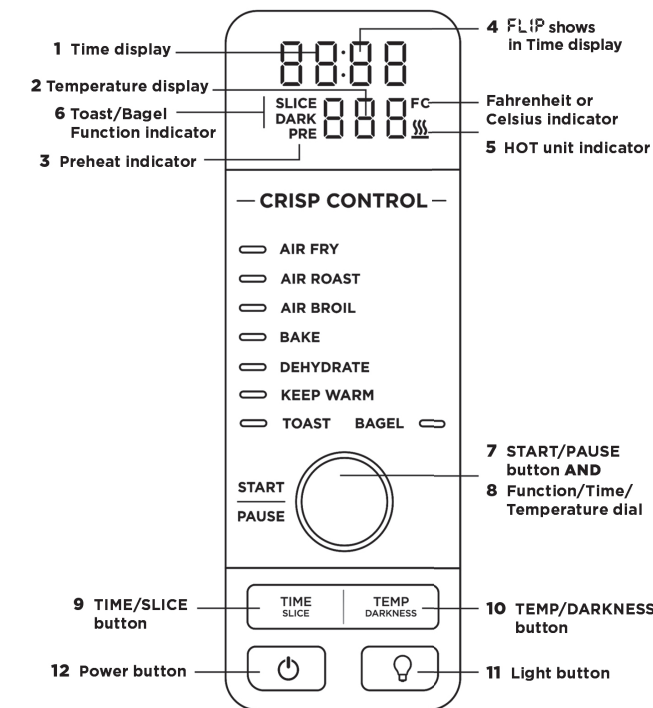

FUNCTIONS

AIR FRY: Make foods that would traditionally be fried—such as chicken wings, French fries, and chicken nuggets—with little to no added oil.

AIR ROAST: Achieve a crispy outside and perfectly cooked inside for full-sized sheet pan meals, thicker proteins, and roasted veggies.

AIR BROIL: Broils meat and fish and evenly browns the tops of casseroles.

BAKE: Evenly bakes everything from your favorite cookies to homemade pizzas.

TOAST: Evenly toasts up to 9 slices of bread to your perfect level of darkness.

BAGEL: Perfectly toast up to 9 slices of bagels halves when they're placed cut-side up on the wire rack.

DEHYDRATE: Dehydrates meats, fruits, and vegetables for healthy snacks.

KEEP WARM: Keeps food warm up to 2 hours.

NOTE: The Dehydrate and Keep Warm functions are not included on all models.

CONTROL PANEL DISPLAY & OPERATING BUTTONS

1 Time display: Shows the cook time. The time will count down when cooking is in progress.

2 Temperature display: Shows the cook temperature.

NOTE: Time and temperature will always return to the cook time and temperature that was set the last time the oven was in use.

3 PRE flashes when the unit is preheating.

4 FLIP will appear on the time display when the unit is cool enough to flip up for storage or cleaning.

5 illuminates when the unit is hot and will turn off when the oven is cool enough to be flipped up for storage or cleaning.

6 SLICE and **DARK** will illuminate when using the Toast or Bagel function.

7 START/PAUSE button: Press to start or pause cooking.

8 Function/Time/Temperature dial: Turn to select a cooking function or adjust time and temperature (or number of slices and darkness level when using the Toast and Bagel functions).

NOTE: Press and hold the START/PAUSE button for 3 seconds to return to the function selection.

9 TIME/SLICE button: To select a cook time, press the TIME button, then use the dial to adjust the time. When using the Toast or Bagel function, this button will adjust the number of slices instead of the time.

10 TEMP/DARKNESS button: To adjust temperature, press the TEMP button and use the dial to adjust the temperature. When using the Toast or Bagel function, this button will adjust the darkness level instead of the temperature.

NOTE: The cook time and temperature may be adjusted at any time during the cooking cycle.

NOTE: To switch from Fahrenheit to Celsius, press and hold the TEMP/DARKNESS button for 3 seconds while the unit is not in cook mode.

11 (Light) button: Press to turn the oven's interior light on and off.

NOTE: The light will automatically turn on when there are 30 seconds of cook time remaining.

12 (Power) button: Press to turn the unit on and off.


NOTE: The image shown here are for illustrative purposes only and may be subject to change.

Features, appearance and the actual descriptions of control panel and their locations may vary.

POWER CORD MANAGEMENT

Our cord-management system is designed so it will not interfere with the oven's flip-away functionality.

 
Option 1
Outlet on the left



Option 2
Outlet on the right



 Option 3
Outlet behind the oven



USING YOUR FOODI™ DIGITAL AIR FRY OVEN

USING THE COOKING FUNCTIONS

To turn on the unit, plug the power cord into the wall, flip oven down into cooking position, and press the **ON** button.

NOTE: The unit preheats quickly, so we recommend prepping all ingredients before turning on the oven.

Air Fry

- To select the function, turn the dial until AIR FRY illuminates. The default time and temperature settings will display.
- Press the TIME/SLICE button and use the dial to select your time up to 1 hour. To set the time, press the TIME/SLICE button again.
- Then press the TEMP/DARKNESS button and use the dial to select a temperature between 250°F–450°F. To set the temperature, press the TEMP/DARKNESS button again.
- Press START/PAUSE to begin preheating.
- Place ingredients in the air fry basket. If ingredients are fatty, oily, or marinated, place the basket on the sheet pan.



Use air fry basket with sheet pan underneath for fatty, oily, or marinated ingredients.

 
6 When the unit beeps to signify it has preheated, immediately slide the basket into the upper rails of the oven. If also using the sheet pan, slide both into the oven at the same time, with the basket in the upper rails and the pan on the wire rack beneath the basket. Close oven door.

NOTE: The timer will start counting down as soon as the unit has preheated. If ingredients are not ready to go into the oven, simply turn the dial to add more time.

7 For more even browning and crispiness, toss ingredients or turn the basket 180° halfway through cooking cycle.



Shake basket.

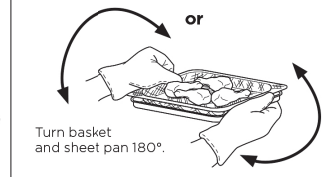

8 When cook time is complete, the unit will beep.

Air Roast

- To select the function, turn the dial until AIR ROAST illuminates. The default time and temperature settings will display.
- Press the TIME/SLICE button and use the dial to select your time up to 2 hours. To set the time, press TIME/SLICE button again.

NOTE: If cooking for 1 hour or less, the clock will count down by minutes and seconds. If cooking for more than 1 hour, the clock will count down by hours and minutes.

- Press the TEMP/DARKNESS button and use the dial to select a temperature between 250°F–450°F. To set the temperature, press the TEMP/DARKNESS button again.
- Press START/PAUSE to begin preheating.

NOTE: Food cooks faster when using the Air Roast function than when using the Bake function, so for traditional oven recipes, lower the cook time 30% and lower the temperature 25°F.

- Place ingredients on the sheet pan. When the unit beeps to signify it has preheated, immediately place the sheet pan on the wire rack. Close oven door.

NOTE: The timer will start counting down as soon as the unit has preheated. If ingredients are not ready to go into the oven, simply turn the dial to add more time.

- During cooking, you can open the oven door to check on or flip ingredients.
- When cook time is complete, the unit will beep.

Air Broil

 
- To select the function, turn the dial until AIR BROIL illuminates. The default time and temperature settings will display.
- Press the TIME/SLICE button and use the dial to select your time up to 30 minutes. To set the time, press the TIME/SLICE button again.

NOTE: The timer will start counting down as soon as the unit has preheated. If ingredients are not ready to go into the oven, simply turn the dial to add more time.

- Press the TEMP/DARKNESS button and use the dial to select either HI or LO. To set the temperature, press the TEMP/DARKNESS button again.
- Place ingredients on the sheet pan. Place the sheet pan on the wire rack and close the oven door, press START/STOP to start cooking.

NOTE: The timer will start counting down as soon as the unit has preheated. If ingredients are not ready to go into the oven, simply turn the dial to add more time.

- During cooking, you can open the oven door to check on or flip ingredients.

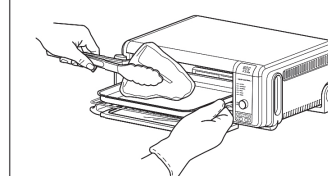

- When cook time is complete, the unit will beep.

