

USING THE POWER BLENDER & PROCESSOR PITCHER WITH FLAT LID & DOUGH BLADE ASSEMBLY (CONT.)

4 Add ingredients to the pitcher. **DO NOT** add ingredients past the **DOUGH MAX** or **COOKIE MAX** line on the pitcher.



 
5 Place the flat lid on the pitcher. Press down on the handle until it clicks into place. Once the lid is locked in place, press the Power button to turn unit on. The available program buttons will illuminate and the unit will be ready for use.




6a If using an Auto-iQ® program, use the dial to select DOUGH, then press START/STOP. The preset feature will automatically stop at the end of the program. To stop the unit at any time, press START/STOP.

6b For Manual mode, press IQ/MANUAL. Use the dial to select speed 1, then press START/STOP. Once the ingredients have reached your desired consistency, press START/STOP, and wait for the unit to come to a complete stop.


IMPORTANT: Only use speed 1 when using the dough blade assembly.



 
IMPORTANT: Only use speed 1 when using the dough blade assembly.



7 Remove the pitcher from the motor base by turning it counterclockwise and then lifting up.

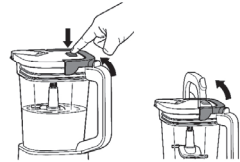

8 Remove the lid and dough blade assembly before removing contents. To remove the lid, press the release button above the handle, and rotate the lid tab counterclockwise out of the lock position, then lift the entire lid up.

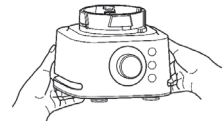

9 Turn the unit off by pressing the Power button. Unplug the unit when finished. Refer to the Care & Maintenance section for cleaning and storage instructions.

USING THE XL SMOOTHIE BOWL MAKER


IMPORTANT: Review all warnings on before proceeding.

NOTE: If the unit is plugged in and powered on, but the XL bowl and blade assembly is not properly installed, the timer will display "--" and the motor will be disabled.

1 Plug in motor base and place on a clean, dry, level surface such as a countertop or table.



2 Add ingredients to the XL bowl. **DO NOT** add liquid past the **LIQUID FILL** line or ingredients past the **MAX FILL** line.

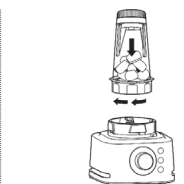

4 Turn the XL bowl upside down and install on motor base by aligning the tabs on the bowl with the slots on the base. Then, rotate bowl clockwise until it clicks. Once locked in place, press the Power button to turn unit on. The available program buttons will illuminate and the unit will be ready for use.




NOTE: While processing, twist the built-in tamper counterclockwise continuously.

5a If using an Auto-iQ program, use the dial to select the program that best suits your desired output, then press START/STOP. During the blending process, ensure to twist the built-in tamper counterclockwise continuously. The preset feature will automatically stop at the end of the program. To stop the unit at any time, press START/STOP.

5b For Manual mode, press IQ/MANUAL. With speed 10 on the display, press START/STOP. During the blending process, twist the built-in tamper counterclockwise continuously. Once the ingredients have reached your desired consistency, press START/STOP and wait for the unit to come to a complete stop.

NOTE: Only speed 10 is available when using the XL bowl.


USING THE XL SMOOTHIE BOWL MAKER (CONT.)

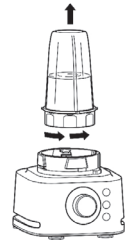


6 Remove the cup from the motor base by turning it counterclockwise and then lifting up.



7 Remove the blade assembly by twisting counterclockwise. **DO NOT** store blended contents with the blade assembly attached. Only use the spout lid or storage lid to cover. Exercise care when handling the blade assembly, as the blades are sharp.

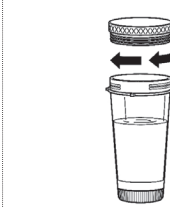

 8 To enjoy on the go, place the spout lid or storage lid onto the cup and twist lid clockwise until firmly sealed.



9 Turn the unit off by pressing the Power button. Unplug the unit when finished. Refer to the Care & Maintenance section for cleaning and storage instructions.

USING THE NUTRIENT EXTRACTION* CUP

IMPORTANT: Review all warnings on before proceeding.

NOTE: If the unit is plugged in and powered on, but the cup and blade assembly is not properly installed, the timer will display "--" and the motor will be disabled.


1 Plug in motor base and place on a clean, dry, level surface such as a countertop or table.



2 Add liquid then ingredients to the single-serve cup. **DO NOT** add ingredients past the **MAX LIQUID** line.



3 Place the Hybrid Edge™ Blades Assembly on the top of the cup and turn clockwise to seal.

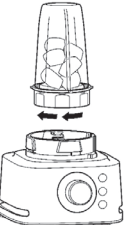


4 Turn the cup upside down and install on the motor base by aligning the tab on the cup with the slots on the base. Then, rotate cup clockwise until it clicks. Once locked in place, press the Power button to turn unit on. The available program buttons will illuminate and the unit will be ready for use.

5a If using an Auto-iQ program, use the dial to select the program that best suits your desired output, then press START/STOP. The preset feature will automatically stop at the end of the program. To stop the unit at any time, press START/STOP.

5b For Manual mode, press IQ/MANUAL. With speed 10 on the display, press START/STOP. Once the ingredients have reached your desired consistency, press START/STOP and wait for the unit to come to a complete stop.

 NOTE: Only speed 10 is available when using the single-serve cup.



6 Remove the XL bowl from the motor base by turning it counterclockwise and then lifting up.

 


7 Remove the blade assembly by twisting counterclockwise. **DO NOT** store blended contents with the blade assembly attached. Only use the spout lid or storage lid to cover. Exercise care when handling the blade assembly, as the blades are sharp.

USING THE NUTRIENT EXTRACTION* CUP (CONT.)



8 To enjoy on the go, place the spout lid or storage lid onto the cup and twist lid clockwise until firmly sealed.



9 Turn the unit off by pressing the Power button. Unplug the unit when finished. Refer to the Care & Maintenance section for cleaning and storage instructions.

*Extract a drink containing vitamins and nutrients from fruits and vegetables.

CARE & MAINTENANCE

USING THE BLENDER FOR STUCK-ON INGREDIENTS


NOTE: For best results, use a dishwasher to remove stuck-on ingredients.

1 After processing, immediately clean the container and blade assembly under warm, soapy water.

2 Depending on the container, fill with soap and water according to the following instructions:

72-ounce Pitcher & Flat Lid:

1 OR 2 SMALL DROPS OF DISH SOAP

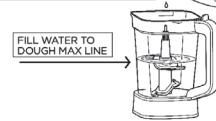

With the dough or stacked blade assembly installed, fill with warm water up to DOUGH MAX line and add 1 or 2 small drops dish soap. Secure flat lid, and ensure the pour spout is securely closed.

XL Bowl:

1 OR 2 SMALL DROPS OF DISH SOAP

FILL WATER TO TOP OF BUILT-IN TAMPER



 
Fill with warm water up to top of built-in tamper and add 1 or 2 small drops dish soap. Install blade assembly.

NOTE: If using the XL bowl, twist the built-in tamper counterclockwise continuously while cleaning.

Single-Serve Cup:

1 SMALL DROP OF DISH SOAP

FILL WATER HALFWAY



Fill halfway with warm water and add 1 small drop dish soap. Install blade assembly.

3 Install the container on the motor base. Select BOWL, then press START/STOP.

4 Once program is complete, thoroughly rinse container and blade assembly under warm, soapy water.

SharkNinja Operating LLC

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

AUTO-IQ, FOODI, NINJA, and TOTAL CRUSHING are registered trademarks of SharkNinja Operating LLC. HYBRID EDGE is a trademark of SharkNinja Operating LLC.

This product may be covered by one or more U.S. patents. See sharkninja.com/patents for more information. © 2021 SharkNinja Operating LLC



PRINTED IN MEXICO / SC: 14-12-2021
MODEL: SS401_B / Elbrd: J.E. / TAB
OBPN: SS400Series_IB_MP_Mv11_210628

TROUBLESHOOTING GUIDE

WARNING: To reduce the risk of shock and unintended operation, turn power off and unplug unit before troubleshooting.

Display reads "--".

- If the display reads "--", install a container and the available program buttons will illuminate, indicating the unit is ready for use. Ensure the lid is fully engaged and the container has been rotated clockwise and clicked to lock into place.
- If vessel is properly installed and the display reads "--", ensure the interior of the base area is clean of any debris.

Display reads "E1".

- If the display reads "E1", unplug the unit from the electrical outlet and allow it to cool for 15 minutes. Remove the blade assembly and empty the contents to ensure no ingredients are jamming the blade assembly.

Display reads "E2".

- If the display reads "E2" unplug the unit from the electrical outlet and allow it to cool for 5 minutes. Remove the blade assembly and empty the contents to ensure no ingredients are jamming the blade assembly. If output is too thick and ingredients are not processing properly, add more liquid.

Blade speed sometimes changes when blending thinner ingredients.

- When using speed 9 or 10 with the pitcher, you may notice a change in the blade speed when blending thinner ingredients. This is due to the smart technology in the blender and is part of the unit's normal operation.

Unit doesn't mix well; ingredients get stuck.

- Using the Auto-iQ® programs is the easiest way to achieve great results. The pulses and pauses allow the ingredients to settle toward the blade assembly. If ingredients are routinely getting stuck, adding some liquid will usually help.
- When filling the cup, start with fresh fruit or veggies, then leafy greens or herbs. Next add liquids or yogurt, then seeds, powders, or nut butters. Finally, add ice or frozen ingredients.
- If using the XL bowl, during the blending process twist the built-in tamper counterclockwise continuously to circulate ingredients.

Unit moves on counter while blending.

- Make sure the surface and feet of the unit are clean and dry.

Preset program will not work.

- The unit can detect which container is on the motor base. You may be trying to use a program that is not designed for the container or lid you have installed. The programs will light up, indicating which programs are available for each container.

Food is not evenly chopped.

- For best results when chopping, cut pieces of ingredients in a uniform size and don't overfill the Pitcher. Refer to the Quick Start Guide or Inspiration Guide for food prep instructions.

Can't remove the built-in tamper from the XL bowl.

- The built-in tamper in the XL bowl is not removable. For cleaning instructions, refer to the Care & Maintenance section.

All ten speed ranges are not available when using the XL bowl, the single-serve cup, or the feed chute lid and disc assemblies.

- Only speed 10 is available when using the XL bowl or single-serve cup, and only speed 1 is available when using feed chute lid and disc assemblies.
- All 10 speed ranges are available when using the pitcher and stacked blade assembly.

Cannot install feed chute lid onto pitcher.

- Thoroughly wash the handle of the pitcher with soap and water where the lid connects to the pitcher.
- Check to ensure the desired disc is fully seated on the disc spindle.

Ingredients are unevenly sliced.

- For best results when using the reversible slicing/shredding disc, trim ingredients to a uniform size so they fit better through the feed chute. Do not cut ingredients smaller than the feed chute height. **DO NOT** attempt to force ingredients through the feed chute.

REFURBISHED PRODUCT LIMITED NINETY DAYS WARRANTY

The *Refurbished Product Service Center* offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of NINETY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the *Refurbished Product Service Center* will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and/or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center
13225 Marquardt Avenue Santa Fe Springs, CA 90670.

WARRANTY REPAIR INFORMATION

If you need service on your unit and this product requires repair during the 90 days warranty period; please go to www.ConsumerServiceRefurbish.com or call the *Refurbished Product Service Center* at 562-946-3531 to obtain the required return authorization (RA) number. Pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt and a letter describing the problem. Send the unit freight prepaid and insured to:

Refurbished Product Service Center,
Att: Customer Service Department 13225 Marquardt Avenue Santa Fe Springs, CA 90670

Your unit will be promptly repaired and returned to you. We will refuse to accept delivery of the returned unit unless the assigned RA number appears on the outside of the shipping carton.

Owner's Information (Keep for your permanent records)

NAME: _____
ADDRESS: _____
CITY: _____ STATE: _____ ZIP CODE: _____
PHONE: _____ E-MAIL: _____
MODEL: _____ SERIAL NO.: _____