

IMPORTANT SAFETY INSTRUCTIONS For Household Use Only

WHEN USING YOUR SHARK® STEAM MOP, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS BEFORE USING YOUR STEAM MOP.

WARNING: DANGER OF SCALDING. The steam emitted from the Steam Mop is very hot and may cause scalding. Please use caution when using the Steam Mop.

WARNING: KEEP STEAM MOP AWAY FROM CHILDREN.

POLARIZED PLUG:

This Steam Mop has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT attempt to defeat this safety feature.**

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- CAUTION: When in use, NEVER turn the Steam Mop over or on its side. NEVER direct steam toward people, pets, or plants.**
- Use the system only for its intended use.
- DO NOT** use outdoors.
- DO NOT** use for space-heating purposes.
- DO NOT** leave the appliance unattended when plugged in. **ALWAYS** unplug the power cord from the electrical outlet when not in use and before servicing.
- DO NOT** allow the appliance to be used by children. Close attention is necessary when used near children, pets, or plants.
- Use only as described in this manual.
- Use only manufacturer's recommended accessories.
- DO NOT** use with damaged cord or plug. If Steam Mop is not working as it should or has been dropped, damaged, left outdoors, or dropped into water, return it to SharkNinja Operating LLC for examination and repair. Incorrect reassembly or repair can cause a risk of electrical shock or injury.
- To protect against a risk of electric shock, **DO NOT** immerse the Steam Mop into water or any other liquids.
- DO NOT** handle plug or Steam Mop with wet hands or operate appliance without shoes.
- DO NOT** pull or carry by power cord, use power cord as handle, close a door on the power cord, or pull the power cord around sharp edges or corners. Keep power cord away from heated surfaces.
- DO NOT** unplug by pulling on power cord. To unplug, grasp the plug not the power cord. **DO NOT** use extension cords or outlets with inadequate current carrying capacity.

 
- DO NOT** put any objects into openings. **DO NOT** use with any opening that is blocked.
- DO NOT** put hands or feet under the Steam Mop. Unit gets very hot.
- Use **ONLY** on flat, horizontal surfaces. **DO NOT** use on walls, counters or windows.
- DO NOT** use on leather, wax polished furniture or floors, synthetic fabrics, velvet or other delicate, steam sensitive materials.
- DO NOT** add cleaning solutions, scented perfumes, oils or any other chemicals to the water used in this appliance as this may damage the unit or make it unsafe for use. If you live in a hard water area, we recommend using distilled water in your Steam Mop.
- NEVER** leave any pocket pad in one spot while using or storing for an extended period, as this may damage your surfaces.
- Carefully remove the pocket pad immediately after you have unplugged and allowed the Steam Mop to cool.
- When cleaning the Steam Mop, unplug the power cord and clean with a dry or damp cloth. **DO NOT** pour water or use alcohol, benzene or paint thinner on the unit.
- Extreme caution should be exercised when using this appliance to clean stairs.
- NEVER** use the Steam Mop without the pocket pad attached.
- Keep your work area well lit.
- Store the Steam Mop indoors in a cool, dry place.
- To avoid circuit overload, **DO NOT** operate another appliance on the same socket (circuit) as the steam cleaner.
- DO NOT** leave your Steam Mop unattended when it is connected to a power supply/electrical outlet.
- ALWAYS** unplug and allow the Steam Mop to cool before removing, changing, or servicing mop heads.

CAUTION: Your Steam Pocket Mop is designed to clean hard floor surfaces that will withstand high heat. **DO NOT use on unsealed wood or unglazed ceramic floors. On surfaces that have been treated with wax or some unwaxed floors, the sheen may be removed by the heat and steam action. Test an isolated area of the surface to be cleaned before proceeding, and follow the use and care instructions from the floor manufacturer.**


SAVE THESE INSTRUCTIONS

GETTING STARTED

When assembling your Steam Mop there may be a little water in or around the water tank. This is because we test all our Steam Mops before you buy them, so you get a quality Shark® Pro Steam Pocket® Mop.

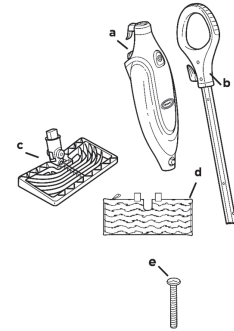

 - a Steam Mop Body
 - b Mop Handle
 - c Rectangle Mop Heads
 - d Dirt Grip® pocket pad
 - e Large Screw*
- *Phillips-head or flat-head screwdriver can be used. Screwdriver not included.

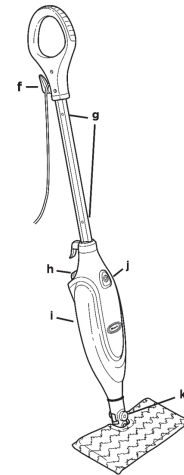


- f Quick Release Cord Holder
- g Cord Clips
- h Water Tank Cap
- i Water Tank
- j Steam Control Button
- k Mop Head Release Button

Note: The Quick Guide shows the select accessories that are included with your model.

Accessory type and quantity may vary depending on the model. The image shown here is for illustrative purposes only and may be subject to change.

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

 
NOTE: For proper operation, please ensure that all parts are firmly pressed until CLICKED in place.

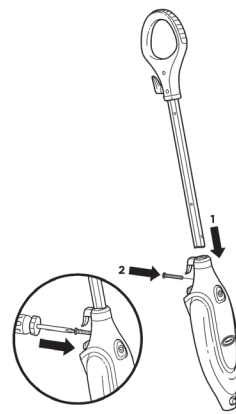

IMPORTANT: ALWAYS make sure the Shark® Pro Steam Pocket® Mop is UNPLUGGED from the wall when not in use. **NEVER** fill the mop, attach the mop head, or change or remove the pocket pad when the mop is plugged into the wall. To prolong the life of your Steam Mop, we recommend using distilled water. Make sure you only add water to the tank. Chemicals or cleaning solution may damage the appliance and could be unsafe for you and your family.

ASSEMBLE

 - Insert the mop handle into the Steam Mop body. Be sure the cord hook is facing the back of the mop and the handle is inserted past the line marked on the pole. Secure handle in place with the included screw and either a Phillips-head or flat-head screwdriver (not included). (fig. 1)

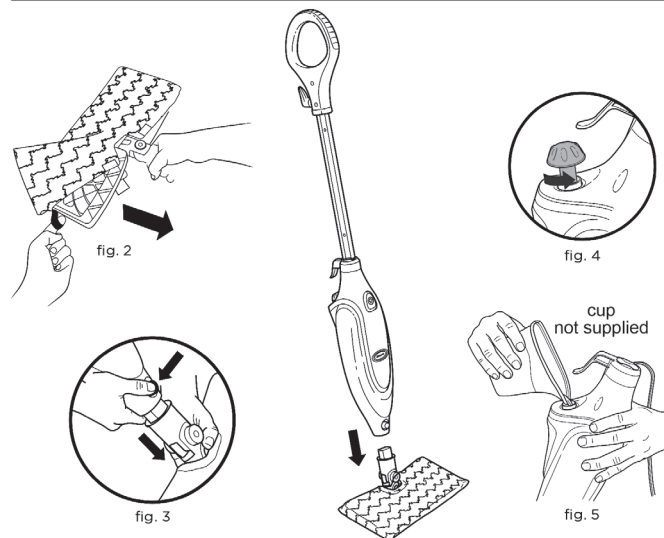


- Use the lavender loop on the side of the pocket pad to slide mop head into pocket. Then secure the quick fasteners on the top of the pocket to lock in place. (fig. 2)
- Insert the mop head post into the mop body until it clicks into place. (fig. 3)
- Twist the cap on the water tank counterclockwise to open. (fig. 4) Use the filling flask to pour water into the tank. **DO NOT** overfill. Replace the cap on the water tank and turn it clockwise to secure it. (fig. 5)

NOTE: To prolong the life of your Steam Mop, we recommend using distilled water.

IMPORTANT: DO NOT use Steam Mop on unsealed wood or unglazed ceramic floors. On surfaces that have been treated with wax or some unwaxed floors, the sheen may be removed by the heat and steam action. Test an isolated area of the surface to be cleaned before proceeding, and follow the use and care instructions from the floor manufacturer.

 
USING YOUR STEAM MOP

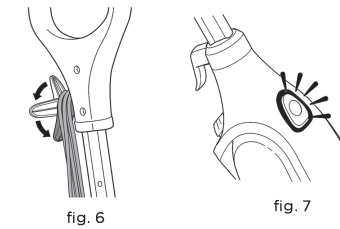

IMPORTANT: NEVER use the Steam Mop unless there is water in the tank and a pocket pad is attached.

Sweep or vacuum your floors prior to cleaning with your Steam Mop.

 - Pull and twist the quick release cord holder to unwrap the power cord completely. Plug into an electrical outlet. (fig. 6)
- When cord is plugged in, the Steam Control button will flash blue. If the light does not illuminate, reference the Troubleshooting section. (fig. 7)

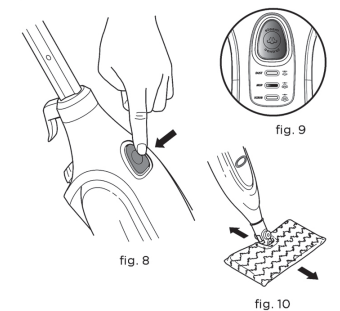

SELECTING A STEAM SETTING

- For quick dusting and drying, use the DUST setting. Press the steam control button once to select DUST. (fig. 8) For normal everyday steam cleaning, press the steam control button again to select the MOP setting. (fig. 9)

When you are using the mop for the first time, it might take longer than the normal 30 seconds to start steaming.

To better understand which steam setting to use for each cleaning task, refer to the Settings chart.

- Clean your floors with a forward and backward motion. (fig. 10) To stop the steam, press the steam control button until it flashes.

The Shark® Pro Steam Pocket® Mop has two unique steam settings so you can use the perfect amount of steam for the cleaning task at hand. See below for tips on when to use each setting.

SETTINGS	IDEAL FOR THESE SURFACES	RECOMMENDED USAGE
DUST	Laminate Bamboo Hardwood Marble	Light cleaning and dusting Loosening and removing light dirt
MOP	Hardwood Marble Tile Stone Linoleum	Basic, everyday steam cleaning Removing spots and smaller messes Cleaning moderately or heavily trafficked areas Sanitizing floors*

TO SANITIZE* WITH THE RECTANGLE MOP HEAD:

- Start with a clean pad.
- Follow instructions in the Using Your Steam Mop section.
- Wait for the unit to begin producing steam.
- Start mopping on an appropriate sealed hard-floor surface with a forward and backward motion.
- After three minutes, your unit will be ready to sanitize.
- Using a forward and backward motion, move the unit slowly and evenly over the area to be sanitized.
- Repeat at least 15 times.

*Sanitization studies were conducted under controlled test conditions. Household conditions and results may vary.

IMPORTANT: DO NOT use the Steam Mop without attaching a Dirt Grip® pad and adding water to the water tank first. When you are using the Steam Mop for the first time, it might take longer than the normal 30 seconds to start steaming.

IMPORTANT: DO NOT use on unsealed wood or unglazed ceramic floors. On surfaces that have been treated with wax and on some unwaxed floors, the sheen may be removed by the heat and steam action. Test an isolated area of the surface to be cleaned before proceeding, and follow the use and care instructions from the floor manufacturer.

USING YOUR STEAM MOP - CONT'D

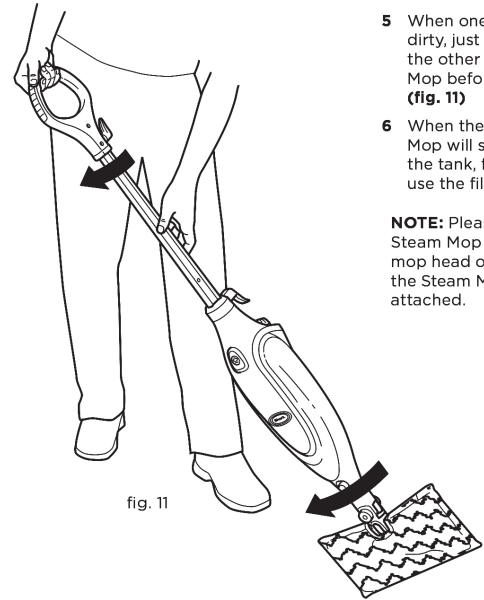 


fig. 11

- When one side of the pocket pad gets dirty, just flip the mop head over to use the other side. **ALWAYS** unplug the Steam Mop before changing or removing pads. (fig. 11)
- When the water tank is empty, the Steam Mop will stop producing steam. To refill the tank, first unplug the Steam Mop, then use the filling flask to refill the water tank.

NOTE: Please wait 2 to 3 minutes for the Steam Mop to cool off before removing the mop head or the pocket pad. **NEVER** leave the Steam Mop with a damp or wet pad attached.

CARE OF YOUR STEAM MOP

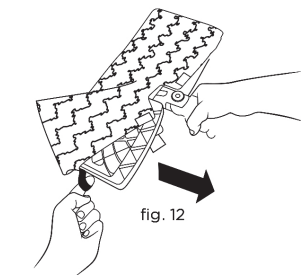 


fig. 12

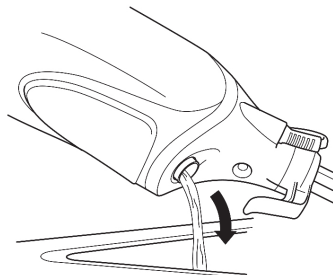 


fig. 13



fig. 14

AFTER USE AND STORAGE

- When you have finished using the Steam Mop, stop the steam by pressing and holding the steam control button until the light flashes blue. Unplug from the outlet, stand the mop upright, and let it cool for 2 to 3 minutes.
Release the pocket pad from the mop head. (fig. 12)
- All water must be removed from the tank before storage. Remove the cap and pour the remaining water out of the tank into a sink. Replace the cap on the water tank. (fig. 13)
- After the unit has cooled and all steam has been released, remove the mop head. Store the Steam Mop by hanging it from a large hook on the wall. (Hook not included.). (fig. 14)

TECHNICAL SPECIFICATIONS

Voltage: 120V., 60Hz.
Water Capacity: 500ml (16.9 oz.)

CARE OF YOUR STEAM MOP - CONT'D

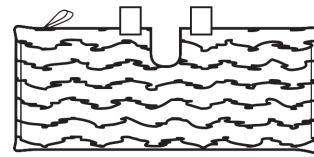 


fig. 15

CARE OF THE DIRT GRIP® PAD

- We recommend washing the pad separately from other fabrics to avoid picking up lint. Only use liquid detergent (no powder detergent). **DO NOT** use any fabric softeners or bleach. Line dry or dry on a low dryer setting. (fig. 15)
- If there are loose threads on the pad, carefully cut the threads with scissors. **DO NOT** pull on them or cut at the base. (fig. 16)

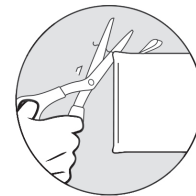 


fig. 16

DECALCIFYING YOUR STEAM MOP

Over time, calcium and mineral deposits can build up and impact the performance of your Steam Mop. To extend the life of your product, we recommend that you use distilled water.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE REASONS & SOLUTIONS
The Pro Steam Pocket® Mop will not turn on.	Make sure the Steam Mop is securely plugged in to a working electrical outlet. Check the fuse or breaker. If your unit still does not work, Contact a Service Center.
The unit will not make steam.	Is there water in the water tank? If not, add water, following the instructions. If you are using tap water, we recommend switching to distilled water.
Cannot select steam setting/flashing blue light remains on.	If you have already plugged in your unit, unplug and try a different outlet. This may reset the standby mode. Add water to the tank and press the steam control button to select a steam setting. If your unit still does not work, Contact a Service Center.
The Steam Mop leaves water on the floor.	Check to see if the pad is soaked through. We recommend unplugging the Steam Mop and changing the pad. Make sure the pocket pad is attached correctly.
The Steam Mop leaves white spots on the floor.	DO NOT leave your Steam Mop on the floor with a damp or wet pad attached. If you're using tap water, we recommend switching to distilled water. Make sure the cap is securely on the water tank.
Floors are cloudy, streaky, or spotty after steaming.	The pocket pad might be dirty. Flip or change the pocket pad. If you washed the pad with powder detergent, then it may be damaged and require replacement. You might have left the mop in the same spot for too long. If you have hard water, try switching to distilled water. This residue may be left over from previous cleaners. Use the Steam Mop a few more times to remove the residue. If this does not work, we suggest rinsing the floor with water, letting it dry, and then steam mopping again with a clean pocket pad. One or more rinses generally removes the residue. A more stubborn case may require you to rinse the floor with a mix of one part vinegar and two parts water.
The Steam Mop is hard to push.	Make sure the pocket pad is attached correctly. Replace the pad if it is dirty.

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process.
For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir.
It is recommended to rinse the water reservoir with fresh water prior to its first use.

ACCESSORIES

NOTE: Not all accessories come with all units. For a list of the accessories included with this model, see the top inside flap of the box.

ACCESSORY	
Triangle Mop Head Ideal for cleaning corners and other hard-to-reach areas.	
Rectangle Mop Head For general, all-purpose steam cleaning.	
Triangle Steam Pocket® Dirt Grip® Washable Pad Double-sided triangle-shaped pad for cleaning corners and other hard-to-reach areas. Featuring Dirt Grip technology for removing moisture, dirt, and tough, stuck-on stains.	
Rectangle Steam Pocket Dirt Grip Washable Pad Double-sided for twice the cleaning capability of a single-sided pad. Dirt Grip technology combines a super-absorbent microfiber with a scrubbing material to remove moisture, dirt, and the toughest stains.	

REFURBISHED PRODUCT LIMITED NINETY DAYS WARRANTY

The **Refurbished Product Service Center** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of NINETY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the **Refurbished Product Service Center** will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center
13225 Marquardt Avenue Santa Fe Springs, CA 90670.

WARRANTY REPAIR INFORMATION

If you need service on your unit and this product requires repair during the 90 day warranty period; please go to www.ConsumerServiceRefurbish.com or call the **Refurbished Product Service Center** at 562-946-3531 to obtain the required return authorization (RA) number. Pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt and a letter describing the problem. Send the unit freight prepaid and insured to:

Refurbished Product Service Center,
Att: Customer Service Department 13225 Marquardt Avenue Santa Fe Springs, CA 90670

Your unit will be promptly repaired and returned to you.
We will refuse to accept delivery of the returned unit unless the assigned RA number appears on the outside of the shipping carton.

Owner's Information
(Keep for your permanent records)

NAME: _____

ADDRESS: _____

CITY: _____ STATE: _____ ZIP CODE: _____

PHONE: _____ E-MAIL: _____

MODEL: _____ SERIAL NO.: _____

PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

This Owner's Guide is designed to help you get a complete understanding of your new Shark® Pro Steam Pocket® Mop.
SharkNinja Operating LLC
Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

For SharkNinja U.S. Patent information, visit sharkninja.com/USPatents

