

NINJA®



FOODI® DUAL HEAT AIR FRY OVEN OWNER'S GUIDE 804106665

Recipe book is not included.

It's important to read this Owner's Guide prior to using your product for the first time.

IMPORTANT SAFEGUARDS

HOUSEHOLD USE ONLY • READ ALL INSTRUCTIONS BEFORE USE

When using electrical appliances, basic safety precautions should always be followed, including the following:

WARNING

- Read all instructions prior to using the oven and its accessories.
- To eliminate a choking hazard for young children, discard all packaging materials immediately upon unpacking.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Take inventory of all contents to ensure you have all parts needed to properly and safely operate your oven.
- NEVER leave the oven unattended while in use.
- NEVER use outlet below counter.
- DO NOT let cord hang over edges of tables or counters or touch hot surfaces, including stoves and other heating ovens.
- Keep the appliance and its cord out of reach of children. DO NOT allow the appliance to be used by children. Close supervision is necessary when used near children.
- DO NOT use an extension cord. A short power-supply cord is used to reduce the risk of children grabbing the cord or becoming entangled and to reduce the risk of people tripping over a longer cord.
- DO NOT place any object directly onto the heating elements and DO NOT cover crumb tray or any part of the oven with metal foil. This will cause the oven to overheat or cause a fire.
- To protect against electrical shock DO NOT immerse cord, plugs, or main unit housing in water or other liquid.
- DO NOT use the oven with damage to the power cord or plug. Regularly inspect the oven and power cord. If the oven malfunctions or has been damaged in any way, immediately stop use and call a Service Center.
- DO NOT cover the air intake vents or air outlet vents while unit is operating. Doing so will prevent even cooking and may damage the unit or cause it to overheat.
- DO NOT insert anything in the intake and ventilation slots and DO NOT obstruct them.
- Only use recommended accessories included with this appliance or sold by SharkNinja.
- DO NOT place items on top of surface while unit is operating.
- Before placing any accessories into the oven ensure they are clean and dry.
- Intended for countertop use only. DO NOT place the oven near the edge of a countertop. Ensure the surface is level, clean and dry.
- This oven is for household use only. DO NOT use outdoors. DO NOT use in moving vehicles or boats.
- DO NOT use this oven for anything other than its intended use. Misuse may cause injury.
- DO NOT store any materials, other than supplied accessories, in this oven when not in use.
- When using this oven, provide adequate space above and on all sides for air circulation.

- Indicates to read and review instructions to understand operation and use of product.
- Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored.
- Take care to avoid contact with hot surface. Always use hand protection to avoid burns.
- For indoor and household use only.

SAVE THESE INSTRUCTIONS

PARTS

A Main Unit

Attached power cord not shown.

B Air Fry Basket

Use in the top rail position for Air Fry and Dehydrate. Slide into top rails for storage. Hand-wash recommended.

C Wire Rack

Slide into middle rails for Toast and Bagel. If using other oven accessories, slide into bottom rails for Reheat, Broil and Bake. Slide into middle rails for storage. Hand-wash recommended.

E Removable Crumb Tray

Always place below the bottom heating element. Hand-wash only.

D SearPlate


Slide into bottom rails for Fresh Pizza, Frozen Pizza, Sear Crisp, Rapid Bake, Griddle, Air Roast, Broil, and Bake. ALWAYS slide the SearPlate into bottom rails on Dual Heat functions or temperature reading will not work properly. Slide into bottom rails for storage. Hand-wash recommended.

NOTE: Dehydrate and Reheat are not included with all models.

NOTE: DO NOT use metal or sharp utensils or cut foods on SearPlate. For drippy, greasy foods, slide the SearPlate into the bottom rails to catch any droppings.

TIP: There is a hook on the left side of the bottom rails of the oven. This tool is designed to stabilize the wire rack or SearPlate when pulling partially out of oven. Always pull out tray carefully when removing and installing to prevent spills.

ACCESSORY STORAGE PLACEMENT

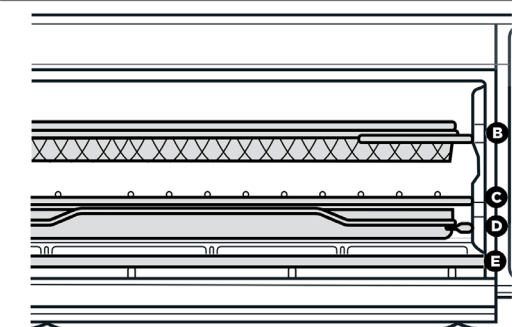


BEFORE FIRST USE

- Remove and discard any packaging material.
- Remove all accessories from the package and read this manual carefully. Please pay particular attention to operational instructions, warnings, and important safeguards to avoid any injury or property damage.
- Wash the air fry basket, wire rack, and removable crumb tray in warm, soapy water, then rinse and dry thoroughly with non-abrasive sponge. Wash the SearPlate thoroughly in hot, soapy water.
- NEVER submerge the main unit in water or place in dishwasher.

We recommend placing the wire rack, SearPlate, and air fry basket inside the oven and running it on Air Fry at 450°F for 20 minutes without adding food. Make sure the area is well ventilated, as some odor may be released. This removes any packaging residue and odor traces that may be present. This is completely safe and not detrimental to the performance of the oven.

NOTE: For longest use, we recommend hand-washing the accessories. The air fry basket and wire rack can be put in the dishwasher, but this may cause them to wear more quickly over time.

USING THE CONTROL PANEL

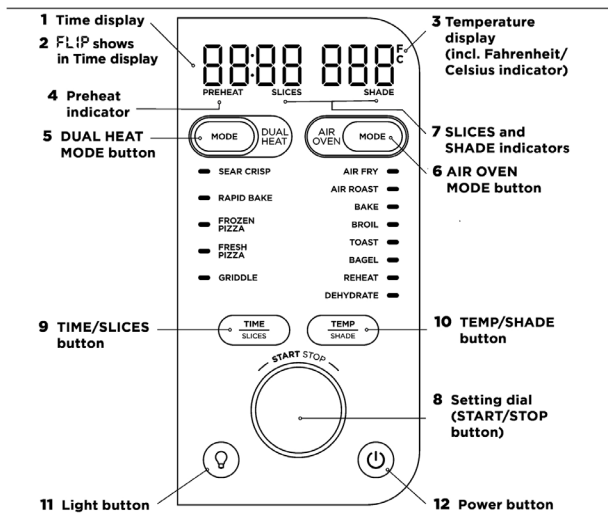

FUNCTIONS

- SEAR CRISP:** Achieve contact searing with larger proteins, and large casseroles.
- RAPID BAKE:** Contact cooking to jumpstart doughs for extra rise and external texture development.
- GRIDDLE:** Achieve light browning on breakfast foods, quesadillas, sandwiches, and more.
- FRESH PIZZA:** Quickly cook homemade pizzas for deliciously crisp crusts.
- FROZEN PIZZA:** Cook frozen pizza from thin to thick crust.
- AIR FRY:** Make fast, extra-crispy foods—such as chicken wings, French fries, and chicken nuggets—with little to no added oil.
- AIR ROAST:** Achieve a crispy outside and perfectly cooked inside for full-sized sheet pan meals, thicker proteins, and roasted veggies.
- BROIL:** Broils meat and fish and evenly browns the tops of casseroles.
- BAKE:** Evenly bakes cookies, brownies, cakes, and more.
- TOAST:** Evenly toasts up to 9 slices of bread to your perfect level of darkness.
- BAGEL:** Perfectly toast up to 6 bagel halves when they're placed cut-side up on the wire rack.
- REHEAT:** Heat leftovers without over cooking.
- DEHYDRATE:** Dehydrates meats, fruits, and vegetables for healthy snacks.

NOTE: Accessories may vary depending on the model. Refer to quick guide, if available. The images shown here are for illustrative purposes only and may be subject to change.

CONTROL PANEL DISPLAY & OPERATING BUTTONS

- Time display:** Shows the cook time. The time will count down when cooking is in progress.
- FLIP** will appear on the time display when the unit is cool enough to flip up for storage or cleaning.
- Temperature display:** Shows the cook temperature.
- PREHEAT:** Illuminates and shows progress bar (for Dual Heat functions) when the unit is preheating. Preheat will take up to 60 seconds on Air Oven Mode functions. Toast, Bagel, and Broil do not have preheat. Preheat will take 5-10 minutes with Dual Heat functions.
- DUAL HEAT MODE button:** Press to enable selection of Dual Heat functions (Sear Crisp, Rapid Bake, Fresh Pizza, Frozen Pizza, and Griddle) and use dial to cycle through functions. Press DUAL HEAT MODE button again to confirm selection. These functions REQUIRE the SearPlate to preheat while oven is preheating.
- AIR OVEN MODE button:** Press to enable selection of Air Oven Mode functions (Air Fry, Air Roast, Bake, Broil, Toast, Bagel, Reheat, and Dehydrate) and use dial to cycle through functions. Press AIR OVEN MODE button again to confirm selection. These functions do not require the SearPlate to preheat while the oven is preheating.
- SLICES and SHADE** will illuminate when using the Toast or Bagel function.
- Setting dial (START/STOP button):** Push to start or pause cooking.
- TIME/SLICES button:** To select a cook time, press the TIME/SLICES button, then use the dial to adjust the time. Press TIME/SLICES button again or wait 3 seconds to confirm. When using the Toast or Bagel function, this button will adjust the number of slices instead of the time. If cooking for 1 hour or less, the clock will count down by minutes and seconds. If cooking for more than 1 hour, the clock will count down by hours and minutes.
- TEMP/SHADE button:** To adjust temperature, press the TEMP/SHADE button and use the dial to adjust the temperature. Press TEMP/SHADE button again or wait 3 seconds to confirm. When using the Toast or Bagel function, this button will adjust the darkness (SHADE) level instead of the temperature.
- Light button:** Press to turn the oven's interior light on and off. Light will automatically turn on when 30 seconds of cook time remains.
- Power button:** Press to turn the unit on and off.

NOTE: Preheat time may vary if unit is already warm.

 
NOTE: The cook time and temperature may be adjusted at any time during the cooking cycle.

NOTE: To switch from Fahrenheit to Celsius, press and hold the TEMP/SHADE button for 5 seconds while the unit is not in cook mode.


USING YOUR FOODI® DUAL HEAT AIR FRY OVEN

POWER CORD MANAGEMENT
Our cord-management system is designed so it will not interfere with the oven's flip-away functionality.

Option 1 Outlet on the left



Option 2 Outlet behind the oven

 

HOW TO REDUCE SMOKE

When cooking greasy, drippy foods with the Air Fry Basket, place the SearPlate on the bottom rails to catch the drippings.



- Recommended:** Canola, Refined coconut, Avocado, Vegetable, Grapeseed
- Not recommended:** Olive oil, Butter, Margarine

The unit may produce smoke when cooking on a hotter setting than what is recommended. Avoid exceeding 400°F when using oils to limit smoke.

When using cooking spray, DO NOT spray it on the interior side walls or heating elements of the unit. Cooking spray may reduce life of product.

USING THE COOKING FUNCTIONS
To turn on the unit, plug the power cord into the wall, flip oven door into cooking position, and press the **ON** button.

DUAL HEAT FUNCTIONS
Press the MODE button to select the following Dual Heat functions. Dual Heat functions require preheating the SearPlate and can take 5 to 10 minutes. **Ensure SearPlate is inserted in the unit before preheating.** The unit will show a progress bar then beep to signify it has preheated and time will start counting down. **DO NOT** place food inside unit until preheat is complete.

NOTE: Results may vary if unit is already warm.

SEAR CRISP

- To select the function, press the DUAL HEAT MODE button then turn the dial until SEAR CRISP illuminates.
- Press the TIME/SLICES button and use the dial to select your time up to 2 hours. Time will adjust in 1-minute increments under 1 hour and 5-minute increments over 1 hour.
- Press the TEMP/SHADE button and use the dial to set temperature between 250°F and 500°F. Temperature will adjust in 5-degree increments.
- Insert the SearPlate into the bottom rails of the oven to let the SearPlate preheat with oven.
- Press the setting dial to begin preheating. This can take 5 to 10 minutes.
- When the unit beeps to signify it has preheated, immediately open the oven door and, using oven mitts, place ingredients on the SearPlate and slide back into bottom rails. Close oven door.

NOTE: If preferred, place the SearPlate on top of the unit after preheating to load food. To flip or slide food onto SearPlate, pull 3/4 out until you feel hook on left side of oven. This mechanism is designed to stabilize the SearPlate if pulled out partially.

7 Time will immediately start counting down once the unit has signified it has preheated. Simply turn the dial during cooking to adjust time.

8 When cooking is complete, the unit will beep and "END HOT" will appear on the display.

RAPID BAKE

- NOTE: Food cooks 30%-50% faster than average box instructions. Refer to the Rapid Bake chart in the Quick Start & Inspiration Guide for more guidance on times and temperature adjustments.
- To select the function, press the DUAL HEAT MODE button then turn the dial until RAPID BAKE illuminates.
 - Press the TIME/SLICES button and use the dial to select your time up to 2 hours. Time will adjust in 1-minute increments under 1 hour and 5-minute increments over 1 hour.
 - Press the TEMP/SHADE button and use the dial to set oven temperature between 180°F and 450°F. Temperature will adjust in 5-degree increments.
 - Insert the SearPlate into the bottom rails of the oven to let the SearPlate preheat with oven.
 - Press the setting dial to begin preheating. This can take 5 to 10 minutes.
 - When the unit beeps to signify it has preheated, immediately open the oven door and, using oven mitts, place ingredients on the SearPlate and slide back into bottom rails. Close oven door.

NOTE: If preferred, place the SearPlate on top of the unit after preheating to load food. To flip or slide food onto SearPlate, pull 3/4 out until you feel hook on left side of oven. This mechanism is designed to stabilize the SearPlate if pulled out partially.

7 Time will immediately start counting down once the unit has signified it has preheated. Simply turn the dial during cooking to adjust time.

8 When cooking is complete, the unit will beep and "END HOT" will appear on the display.

NOTE: We recommend using a pizza peel as the best method for transferring fresh dough onto the preheated SearPlate. If you do not have a pizza peel, you can use parchment paper.

3 Press the TEMP/SHADE button and use the dial to set oven temperature between 180°F and 500°F. Temperature will adjust in 5-degree increments.

4 Insert the SearPlate into the bottom rails of the oven to let the SearPlate preheat with oven.

5 Press the setting dial to begin preheating. This can take 5 to 10 minutes.

NOTE: For cooking multiple pizzas back to back, we recommend fully preheating the unit before each use for best results. If you do not want to preheat after the first pizza, you may skip it by holding the setting dial for 3 seconds when starting the cook cycle or during preheat. Skipping preheat may impact cook time and quality.

6 When the unit beeps to signify it has preheated, immediately open the oven door and, using oven mitts, place the pizza on the SearPlate and slide back into bottom rails. Close oven door.

NOTE: If preferred, place the SearPlate on top of the unit after preheating to load food. To flip or slide food onto SearPlate, pull 3/4 out until you feel hook on left side of oven. This mechanism is designed to stabilize the SearPlate if pulled out partially.

7 Time will immediately start counting down once the unit has signified it has preheated. Simply turn the dial during cooking to adjust time.

8 When cooking is complete, the unit will beep and "END HOT" will appear on the display.

NOTE: Frozen pizzas will cook 30%-50% faster than average box recommended time. Use box recommended temperature. Always keep an eye out on food while cooking.

1 To select the function, press the DUAL HEAT MODE button then turn the dial until FROZEN PIZZA illuminates.

2 Insert the SearPlate into the bottom rails of the oven to let the SearPlate preheat with oven.

3 Press the TIME/SLICES button and use the dial to select your time up to 2 hours. Time will adjust in 1-minute increments under 1 hour and 5-minute increments over 1 hour.

4 Press the TEMP/SHADE button and use the dial to set temperature between 180°F and 500°F. Temperature will adjust in 5-degree increments. Set temperature of the oven based on box instructions. Time will cook faster than the recommended time on the box, so keep an eye on food while cooking.

5 Press the setting dial to begin preheating. This can take 5 to 10 minutes.

6 When the unit beeps to signify it has preheated, immediately open the oven door and, using oven mitts, place ingredients on the SearPlate and slide back into bottom rails. Close oven door.

NOTE: If preferred, place the SearPlate on top of the unit after preheating to load food. To slide pizza onto SearPlate without removing, pull 3/4 out until you feel hook on left side of oven. This mechanism is designed to stabilize the SearPlate if pulled out partially.

7 Time will immediately start counting down once the unit has signified it has preheated. Simply turn the dial during cooking to adjust time.

AIR OVEN MODE FUNCTIONS
Press the AIR OVEN MODE button to select the following Air Oven Mode functions. Preheat will take 60 seconds. Preheating with the SearPlate is not required with these functions.

NOTE: The unit preheats more quickly on Air Oven Mode functions, so we recommend prepping all ingredients before turning on the oven.

Air Fry

- To select the function, press AIR OVEN MODE, then turn the dial until AIR FRY illuminates. The default time and temperature settings will display.
- Press the TIME/SLICES button and use the dial to select your time up to 1 hour. Time will adjust in 1-minute increments under 1 hour. To set the time, press the TIME/SLICES button again.
- Press the TEMP/SHADE button and use the dial to select a temperature between 250°F and 450°F. Temperature will adjust in 5-degree increments. To set the temperature, press the TEMP/SHADE button again.
- Press the setting dial to begin preheating.
- Place ingredients in the air fry basket. If ingredients are fatty, oily, or marinated, place the basket on the top rails and the SearPlate on the bottom rails.



Use air fry basket for dry ingredients.



Use air fry basket with SearPlate underneath for fatty, oily, or marinated ingredients. When using the SearPlate underneath, you may need to flip food over halfway through cooking for more even cooking.

6 When the unit beeps to signify it has preheated, immediately slide the basket into the upper rails of the oven. If also using the SearPlate, slide the SearPlate into the bottom rails.

NOTE: The timer will start counting down as soon as the unit has preheated. If ingredients are not ready to go into the oven, simply turn the dial to add more time.

7 For more even browning and crispiness, flip ingredients using non-metal tongs or spatula halfway through cooking cycle.

8 When cook time is complete, the unit will beep and "END HOT" will appear on the display.

Air Roast
1 To select the function, press the AIR OVEN MODE button, then turn the dial repeatedly until AIR ROAST illuminates. The default time and temperature settings will display.

2 Press the TIME/SLICES button and use the dial to select your time up to 2 hours. Time will adjust in 1-minute increments over 1 hour and 5-minute increments over 1 hour. To set the time, press TIME/SLICES button again.

3 Press the TEMP/SHADE button and use the dial to select a temperature between 250°F and 450°F. Temperature will adjust in 5-degree increments. To set the temperature, press the TEMP/SHADE button again.

4 Press the setting dial to begin preheating. Place ingredients on the SearPlate.

NOTE: Food cooks faster when using the Air Roast function than when using the Bake function, so for traditional oven recipes, refer to the Inspiration Guide for guidance on cook times and temperatures.

5 When the unit beeps to signify it has preheated, immediately open the oven door and use an oven mitt to slide the SearPlate into the bottom rails with ingredients. Close oven door.

NOTE: The timer will start counting down as soon as the unit has preheated. If ingredients are not ready to go into the oven, simply turn the dial to add more time.

6 During cooking, you can open the oven door to check on or flip ingredients.

7 When cook time is complete, the unit will beep and "END HOT" will appear on the display.

Broil
1 To select the function, press the AIR OVEN MODE button, then turn the dial until BROIL illuminates. The default time and temperature settings will display.

2 Press the TIME/SLICES button and use the dial to select your time up to 30 minutes. Time will adjust in 30-second increments. To set the time, press the TIME/SLICES button again.

3 Press the TEMP/SHADE button and use the dial to select either HI (450°F) or LO (400°F). To set the temperature, press the TEMP/SHADE button again.

NOTE: There is no preheat for the Broil function.

4 If using the wire rack, slide wire rack into middle rails with or without SearPlate in bottom rails to catch drippings, then add ingredients. If using the SearPlate, place ingredients on the SearPlate and slide into bottom rails, then add ingredients. If using wire rack with other baking accessory, slide wire rack into bottom rails, then add ingredients. Close oven door. Press the setting dial to begin cooking.

5 During cooking, you can open the oven door to check on or flip ingredients.

6 When cook time is complete, the unit will beep and "END HOT" will appear on the display.

Bake
NOTE: Use recommended times and temperatures with boxed foods. Time and temperature will vary when using different types of baking accessories from box instructions. Always keep an eye on your food while cooking.


1 To select the function, press the AIR OVEN MODE button, then turn the dial until BAKE illuminates. The default time and temperature settings will display.

2 Press the TIME/SLICES button and use the dial to select your time up to 2 hours. Time will adjust in 1-minute increments under 1 hour and 5-minute increments over 1 hour. To set the time, press the TIME/SLICES button again.

3 Press the TEMP/SHADE button and use the dial to select a temperature between 180°F and 450°F. Temperature will adjust in 5-degree increments. To set the temperature, press the TEMP/SHADE button again.

USING YOUR FOODI® DUAL HEAT AIR FRY OVEN - CONT.


- Press the setting dial to begin preheating.
- Place ingredients on the SearPlate. When the unit beeps to signify it has preheated, immediately slide the SearPlate into the bottom rails. Close oven door.

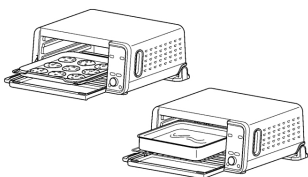

NOTE: The timer will start counting down as soon as the unit has preheated. If ingredients are not ready to go into the oven, simply turn the dial to add more time.

NOTE: If using another baking accessory, slide the wire rack into the bottom rails with the accessory on top.

 - During cooking, you can open the oven door to check on or flip ingredients.



- When cook time is complete, the unit will beep and "END HOT" will appear on the display.

Toast

- To select the function, press the AIR OVEN MODE button, then turn the dial until TOAST illuminates. The default amount of slices and shade will be displayed.
- Press the TIME/SLICES button and use the dial to select the number of bread slices. You may toast up to 9 slices at once. To set the number of slices, press the TIME/SLICES button again.
- Press the TEMP/SHADE button and use the dial to select a shade level. To set the shade level, press the TEMP/SHADE button again.

NOTE: There is no temperature adjustment available for the Toast function, and the unit does not preheat in Toast mode. It is very important to select the exact number of slices to avoid over- or under-toasting. Results may vary when unit is already warm.

- Place bread slices on the wire rack into middle rails. Close oven door and press the setting dial to begin cooking. You do not need to flip the slices during cooking.

NOTE: You can also manually adjust the time once cooking has started to better choose your preferred shade.

- When cook time is complete, the unit will beep and "END HOT" will appear on the display.



Bagel

- To select the function, press the AIR OVEN MODE button, then turn the dial until BAGEL illuminates. The default number of slices and shade level will display.
- Press the TIME/SLICES button and use the dial to select the number of slices. You may toast up to 6 bagel halves at once. To set the number of slices, press the TIME/SLICES button again.
- Press the TEMP/SHADE button and use the dial to select a shade level. To set the shade level, press the TEMP/SHADE button again.

NOTE: There is no temperature adjustment available for the Bagel function, and the unit does not preheat in Bagel mode. It is very important to select the exact number of slices to avoid over- or under-toasting. Results may vary when unit is already warm.

- Place bagel slices, cut-side up, on the wire rack into middle rails. Close oven door and press the setting dial to begin cooking. You do not need to flip the slices during cooking.



- When cook time is complete, the unit will beep and "END HOT" will appear on the display.

NOTE: You can also manually adjust the time once cooking has started to better achieve your preferred shade.

 
Dehydrate

NOTE: The DEHYDRATE function is not included on all models.

- To select the function, press the AIR OVEN MODE button, then turn the dial until DEHYDRATE illuminates. The default time and temperature settings will display.

NOTE: There is no preheat with Dehydrate.

- Press the TIME/SLICES button and use the dial to select a time up to 12 hours. Time will adjust in 15-minute increments. To set the time, press the TIME/SLICES button again.
- Press the TEMP/SHADE button and use the dial to select a temperature between 85°F and 200°F. Temperature will adjust in 5-degree increments. To set the temperature, press the TEMP/SHADE button again.
- Place ingredients in the air fry basket and place basket into top rails of oven. Close oven door and press the setting dial to begin cooking.



- During cooking, you can open the oven door to check on or flip ingredients halfway through cooking.

- When cook time is complete, the unit will beep and "END HOT" will appear on the display.

REHEAT

NOTE: The REHEAT function is not included on all models.

- To select the function, press the AIR OVEN MODE button, then turn the dial until REHEAT illuminates.
- Press the TIME/SLICES buttons to select a reheat time up to 2 hours. Time will adjust in 1-minute increments under 1 hour and 5-minute increments over 1 hour.
- Press the TEMP/SHADE button to select a temperature between 100°F and 450°F. Temperature will adjust in 5-degree increments.
- Place food on the SearPlate or in an oven-safe container and place the pan or container on the wire rack into the bottom rails. Close oven door and press the setting dial to begin cooking.
- When cook time is complete, the unit will beep and "END HOT" will appear on the display.

NOTE: There is no preheat with Reheat.

ALTERNATIVE TO PIZZA PEEL

We recommend a pizza peel as the best method for transferring fresh dough onto the preheated SearPlate. If you do not have a pizza peel, use the following instructions.

- Measure a large sheet of parchment paper to match the size of the SearPlate. Then take the parchment paper and set it on a cutting board or other flat surface to roll out your fresh pizza dough with flour to your desired thickness.



- Place your toppings and ingredients on the fresh dough. Once the SearPlate has preheated, using oven mitts, slide the SearPlate partially out of the oven and transfer the fresh pizza with the parchment paper onto the SearPlate. Slide the SearPlate back into the oven and close the door.



- After 3 to 4 minutes of cook time, you can remove the parchment paper from the bottom of the pizza. Use oven mitts to slide the SearPlate partially out of the oven and carefully slide the parchment out from underneath pizza by grabbing one of the corners. Slide the SearPlate back into the oven and close the door. If you leave the parchment paper during the cook cycle, the paper may become brittle.




NOTE: The parchment paper should not touch any of the heating elements or the inside oven walls as it could cause smoke. **DO NOT** use parchment paper on Broil or above the recommended manufacturer's instructions.

EVERYDAY CLEANING

The unit should be cleaned thoroughly after every use.

- Unplug the unit from the outlet and allow it to cool down before cleaning.
- Empty crumb tray by sliding it out of the oven when the oven is in the flipped-down position. Clean accessories after each use. Accessories are hand-wash recommended. The air fry basket and wire rack can be put in the dishwasher, but may wear more quickly over time.

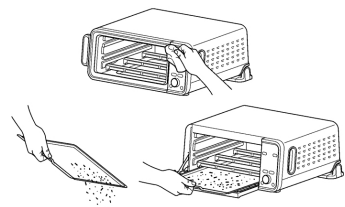

NOTE: Empty crumb tray frequently. Hand-wash when necessary.

- To clean any food splatter on the interior walls of the unit, wipe them with a soft, damp sponge. **DO NOT** use abrasive cleaners, scrubbing brushes, or chemical cleaners, as they will damage the oven.

- To clean the exterior of the main unit and the control panel, wipe them clean with a damp cloth. A non-abrasive liquid cleanser or mild spray solution may be used. Apply the cleanser to the sponge, not the oven surface, before cleaning.



NOTE: **DO NOT** submerge unit in water or place in dishwasher.

CLEANING, MAINTENANCE & STORAGE

SEARPLATE CLEANING

The SearPlate should be cleaned thoroughly after every use.

- Remove the SearPlate from the oven and allow it to cool down before cleaning.

SEARPLATE CLEANING CONTINUED

NOTE: Always allow the SearPlate to cool before immersing in water. Temperature shock could cause the SearPlate to be damaged or warp.

- Use hot, soapy water and a non-abrasive sponge to wash the SearPlate. **DO NOT** place SearPlate in the dishwasher.

- For deep cleaning, soak the SearPlate overnight in hot, soapy water, and then wash it in the morning. This can also help restore nonstick performance.

SEARPLATE CARE

- To extend the life of the SearPlate, **DO NOT** use metal or sharp utensils or cut foods on it.
- Make sure to wash after every use. The nonstick performance can wear if there is burned grease or food residue built up on the surface.
- DO NOT** store food on the SearPlate as it can cause staining. It should remain clean when not in use.

DEEP CLEANING

 
- Allow the unit to cool down, then unplug the unit from the outlet before cleaning.
- Remove all accessories from the unit, including the crumb tray, and wash separately. Use a non-abrasive cleaning brush to wash the air fry basket more thoroughly. Soak accessories overnight in hot, soapy water. The air fry basket and wire rack can be put in the dishwasher, but may wear more quickly over time.
- Use warm, soapy water and a soft cloth to wash the oven's interior. **DO NOT** use abrasive cleaners, scrubbing brushes, or chemical cleaners, as they will damage the oven.

NOTE: **NEVER** put the main unit in the dishwasher or immerse it in water or any other liquid.

- To prolong use of accessories, hand-wash with warm, soapy water.
- Thoroughly dry all parts before placing them back in the oven.




NOTE: Brush not supplied




FLIP-UP-AND-AWAY STORAGE


- DO NOT** flip unit up when it is hot or in use. FLIP will appear on the display when unit is cooled and ready to flip. Wait for unit to cool down before handling. Hold handles on each side of the unit. **DO NOT** unplug the unit after use until FLIP appears. The fan will continue to run after cooking has completed for about 15 minutes or until the unit's temperature is 95°F. This is normal and not a cause for concern.

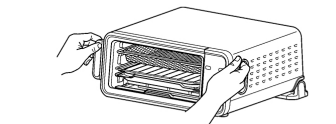

- Lift and flip unit upward using the handles on each side of the unit.

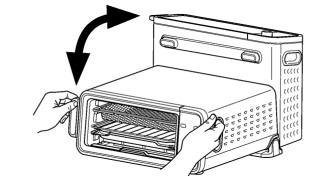

- Leave the unit in the upright position when storing or for deep cleaning. Accessories can be stored inside while in the upright position.

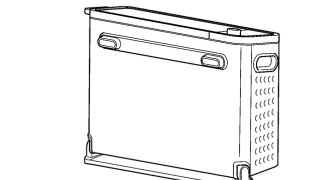

NOTE: Cleaning tools not supplied.

TROUBLESHOOTING & FAQ

ERROR MESSAGES

"Er0," "Er1," "Er2," "Er3," "Er4," "Er5," "Er6," or "Er7"

Power off the unit and call a Service Center.

FAQ

Why won't the oven turn on?

- Oven needs to be in flipped-down position in order to power it on.
- Make sure the power cord is securely plugged into the outlet.
- Insert the power cord into a different outlet.
- Reset the circuit breaker if necessary.
- Press the power button.

Can I use the SearPlate instead of the air fry basket with air fry function?

- Yes, but flipping ingredients during cooking is required, and levels of crispiness may vary.

Do I need to adjust the cook times and temperatures of traditional oven recipes?

- For best results, keep an eye out on your food while cooking. Refer to cook charts in the Inspiration Guide for more guidance on cook times and temperatures.

Should I add my ingredients before or after preheating?

- For Dual Heat functions, preheating the SearPlate is required before adding ingredients. If you do not preheat the SearPlate, food may be cooked improperly.
- For Oven Mode functions, preheating the SearPlate or other accessories is not required, but adding ingredients before the unit finishes preheating may impact cooking performance.

Why is my food undercooked or overcooked?

- Do not add food until recommended preheat time is complete. For best results, check progress throughout cooking, and remove food if desired level of brownness has been achieved. Remove food immediately after the cook time is complete to avoid overcooking.
- This unit cooks faster than a traditional oven. Always keep an eye on your food while cooking.

Can I restore the unit to its default settings?

- The oven will remember the last setting used for each function, even if you unplug it. To restore the oven's default settings for each function, press the TIME/SLICE and TEMP/SHADE buttons simultaneously for 5 seconds.

Why do the heating elements appear to be turning on and off?

- This is normal. The oven is designed to control temperature precisely for every function by adjusting the heating elements' power levels.

Why is steam coming out from the oven door?

- This is normal. The door is vented to release steam created by foods with a high moisture content.

Why is water dripping onto the counter from under the door?

- This is normal. The condensation created by foods with a high moisture content (such as frozen breads) may run down the inside of the door and drip onto the counter.

Why is there noise coming from the control panel or back of unit?

- When the oven is hot, a fan turns on to cool down the control panel.

Why does the unit sound like it is still running even though the power is off?

- The cooling fan may continue to run even after the unit has been turned off. This is a normal function and should not be a source of concern. The cooling fan will stop after the temperature of the unit is below 95°F.

REFURBISHED PRODUCT LIMITED NINETY DAYS WARRANTY

The **Refurbished Product Service Center** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of NINETY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the **Refurbished Product Service Center** will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center
13225 Marquardt Avenue Santa Fe Springs, CA 90670.

WARRANTY REPAIR INFORMATION

If you need service on your unit and this product requires repair during the 90 days warranty period; please go to www.ConsumerServiceRefurbish.com or call the **Refurbished Product Service Center** at 562-946-3531 to obtain the required return authorization (RA) number. Pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt and a letter describing the problem. Send the unit freight prepaid and insured to:

Refurbished Product Service Center,
Attn: Customer Service Department 13225 Marquardt Avenue Santa Fe Springs, CA 90670

Your unit will be promptly repaired and returned to you. We will refuse to accept delivery of the returned unit unless the assigned RA number appears on the outside of the shipping carton.

Owner's Information
(Keep for your permanent records)

NAME: _____

ADDRESS: _____

CITY: _____ STATE: _____ ZIP CODE: _____

PHONE: _____ E-MAIL: _____

 
MODEL: _____ SERIAL NO.: _____

SharkNinja Operating LLC

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

NINJA is a registered trademark of SharkNinja Operating LLC.
FOODI is a trademark of SharkNinja Operating LLC.

For SharkNinja U.S. patent information, visit sharkninja.com/uspatents.
© 2021 SharkNinja Operating LLC.



8 0 4 1 0 6 6 6 5

PRINTED IN MEXICO Elbrd: M.C
OBPN: SP300SERIES_IB_E_MP_MV5_210524
SC: 01-17-2022_TAB SHNMDL: SP300_BP

