

Shark

OWNER'S GUIDE

It's important to read this instructions prior to using your new product for the first time

804108220

IMPORTANT SAFETY INSTRUCTIONS For Household Use Only

READ ALL INSTRUCTIONS BEFORE USING YOUR SHARK® CORDLESS FLOOR AND CARPET SWEEPER.

WHEN USING YOUR SHARK CORDLESS FLOOR AND CARPET SWEEPER, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE OBSERVED, INCLUDING THE FOLLOWING:

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- 1 Read all label, operational and marking instructions before using the appliance.
- 2 Use **ONLY** as described in this manual. Use only manufacturer's recommended attachments.
- 3 To reduce the risk of injury, **DO NOT** allow to be used as a toy. Close attention is necessary when used by or near children.
- 4 **DO NOT** use for any purpose other than described in this user's guide.
- 5 **DO NOT** use with damaged cord or plug. Do not use the cordless floor and carpet sweeper if it has been dropped, damaged, left outdoors, or dropped in water.
- 6 **DO NOT** abuse the charger cord. Never carry the charger or base by the cord or yank to disconnect from an outlet; instead grasp the charger and pull to disconnect.
- 7 Keep the charger cord away from heated surfaces.
- 8 **DO NOT** use the charger with an extension cord. Plug the charger directly into an electrical outlet. Use charger only in a standard electrical outlet.
- 9 **DO NOT** attempt to use the charger with any other product or attempt to charge this product with another charger. Use only the charger model YLS0041-T110025 supplied with this cordless floor and carpet sweeper.
- 10 **DO NOT** charge this unit outdoors.
- 11 **DO NOT** use outdoors or on wet surfaces.
- 12 **DO NOT** handle plug or appliance with wet hands.
- 13 Use only on dry, indoor surfaces.

- 14 **DO NOT** put any object into openings. Do not use with brush roll blocked; keep free of fiber, lint, hair and anything that may prevent the brush roll from working.
- 15 Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
- 16 **DO NOT** pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- 17 **DO NOT** use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
- 18 **DO NOT** attempt to change accessories while the unit is running.
- 19 **DO NOT** use the cordless floor and carpet sweeper without the dust cup in place.
- 20 Use extra care when cleaning on stairs.
- 21 Store the cordless floor and carpet sweeper indoors. Store after use to prevent accidents.
- 22 Leaks from battery cells can occur under extreme conditions. If the liquid, which is 20-35% solution of potassium hydroxide, gets on the skin - wash immediately with soap and water or neutralize with a mild acid such as lemon juice or vinegar. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes and seek medical attention.
- 23 This product includes rechargeable nickel metal hydride batteries. Batteries must be recycled or disposed of properly. Do not incinerate the batteries or expose to high temperatures as they may explode.
- 24 The cordless floor and carpet sweeper must be disconnected from the power supply when removing the battery.
- 25 To reduce the risk of electrical shock, do not put the charger and sweeper body in water or other liquid. Do not place or store the appliance where it can fall or be pulled into a tub or sink.

TO MAXIMIZE THE LIFE OF YOUR NI-MH BATTERIES:

- 1 Charge for 7 hours before initial use. Failure to do so will reduce the product's battery life significantly.
- 2 Always remove the charging adapter from the unit after the charging period has completed.
- 3 Do not store the unit with the charging adapter attached and plugged in.
- 4 For maximum battery life, only recharge the unit when the batteries are close to fully discharged. It is best to fully discharge the batteries at least once a month.
- 5 **DO NOT** store in areas of high temperature or humidity.
- 6 After 3 months of non-use, the product should be fully discharged and then recharged to maximize battery power.
- 7 Ni-MH batteries have a long useful life but at some time they will need to be replaced.

NOTE: The On/Off switch must be in the "Off" position in order to charge the unit. If the charging indicator does not light, press the On/Off button once.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

QUICK START

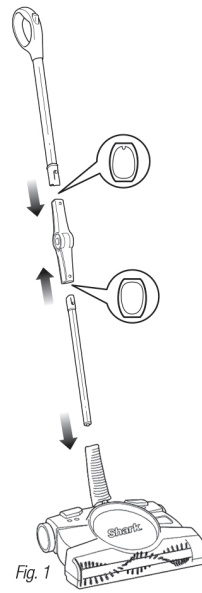


Fig. 1

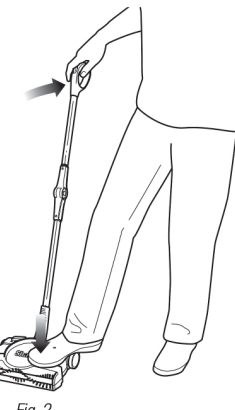
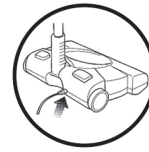


Fig. 2

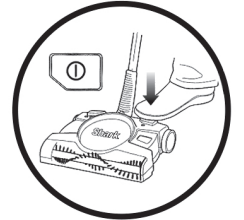


Fig. 3

ASSEMBLE

- 1 Assemble the upper and lower handle into the elbow joint to form the Shark® Backsaver™ folding handle. Then insert it into the top of the lower handle. (fig. 1)

CLEAN

- 2 Pull back on the handle and press lightly on the body of the unit with your foot to engage the steering. (fig. 2)
- 3 Using your foot, press the power button and push the unit forward over the surface you wish to clean. (fig. 3)

- 4 Press the speed button on the right with your foot to change the speeds. One light indicates the speed optimized to clean bare floors and two lights indicate the speed optimized to clean carpets and larger debris on bare floors.

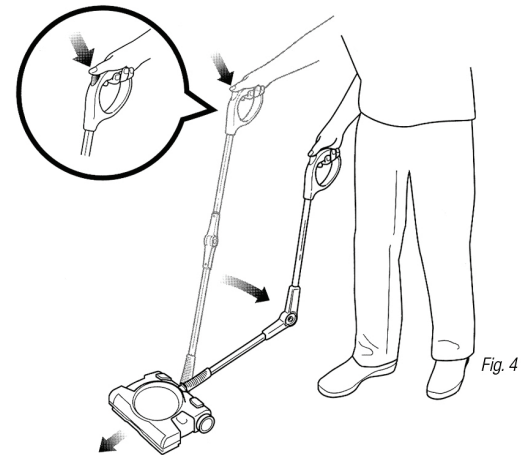


Fig. 4

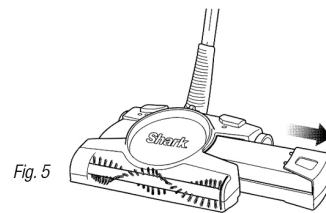


Fig. 5



Fig. 6

EMPTY

- 5 The Shark® Backsaver™ folding handle makes cleaning under furniture a breeze. Just press the button on the handle with your thumb to engage the Shark® Backsaver™ function. (fig. 4)


- 6 When you're finished cleaning, empty the dust container straight out from the side. (fig. 5)

NOTE: Be careful not to accidentally turn the unit on.

- 7 Empty dust container contents. (fig. 6) If desired, you may rinse with water to clean the dust container - but dry thoroughly before replacing. When finished, replace the dust container.

NOTE: Accessories may vary depending on the model. Refer to quick guide, if available. The images shown here are for illustrative purposes only and may be subject to change.

ASSEMBLY

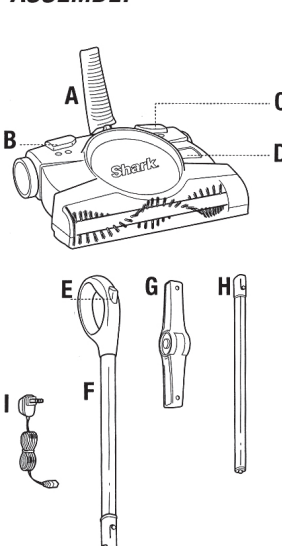

COMPONENTS:

- A Main Unit
- B Speed Control Button
- C Power Button
- D Dust Container
- E Backsaver™ Release Button
- F Upper Pole with Handle
- G Shark® Backsaver™ Joint
- H Lower Pole
- I Charging Adapter

Model Number: V2945Z 32
Voltage: 7.2 V

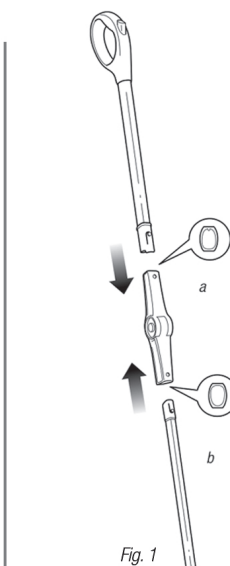


Fig. 1

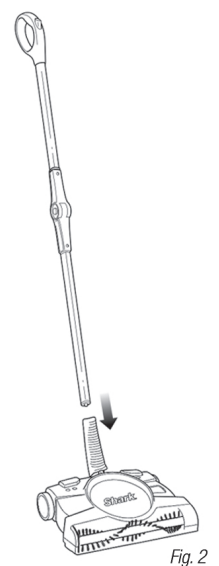


Fig. 2

ASSEMBLY OF YOUR FLOOR AND CARPET SWEEPER:

NOTE: The charging adapter and lower handle will be shipped inside the packaging.



- 1 Slide the upper pole (the tube with the handle) into the end of the Shark® Backsaver™ joint that has a small notch in it (a). Then slide the lower pole into the other end of the joint (b). Push it in until it clicks into place. (fig. 1)

- 2 Insert the Shark® Backsaver™ folding handle you just assembled into the top of the lower handle. You should hear the locking tab click into place (Fig. 2)

IMPORTANT: Charge the batteries for 7 hours before using the unit for the first time

SAVE THESE INSTRUCTIONS

CHARGING YOUR CORDLESS FLOOR AND CARPET SWEEPER

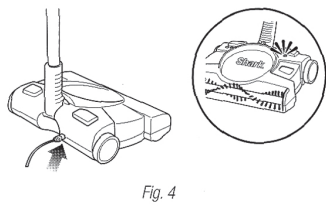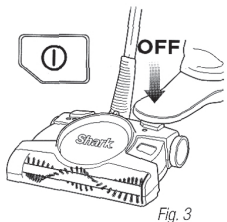


- 1 Always make sure that the unit is turned off. (Fig. 3)
- 2 Insert the charger plug into the hole on the back of the unit. Plug the charger into a wall outlet. The light next to the power button will illuminate when the unit is charging. If the unit is plugged in and the light is not illuminated, press the power button once. The light should now be illuminated indicating that the unit is charging. The light will turn off once the charge is completed. (Fig. 4)

- 3 Charge the battery for 7 hours before initial use and 7 hours for each recharge. Your cordless floor and carpet sweeper is powered by Ni-MH batteries that need this time to build up their charge.
- 4 For best battery performance, remove the charging adapter from the unit after the charging period has completed. **Storing the unit with the adapter attached and plugged in will reduce the battery life.**

IMPORTANT: Although many adaptors look similar, it's important to use only the adaptor that came with the unit (XA2950).

USING YOUR CORDLESS FLOOR AND CARPET SWEEPER

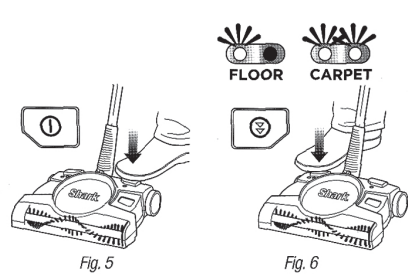

Lightbulb icon: If the brush roll stops moving, it's probably due to the anti-jam feature. This feature protects the motor from becoming overheated. If the brush becomes overloaded, it will stop turning and both speed indicator lights will stay on. Turn off your unit by pressing the power button once. See instructions on removing or cleaning the brush roll. Wait for 10 seconds to let your unit cool down. Now press the power button again and you're ready to resume cleaning!

- 1 Press the power button to start the unit. When finished cleaning, press the power button again to turn the unit off. (Fig. 5)



- 2 You can adjust the speed of the brush roll to suit the floors that you are cleaning. Press the button on the right (opposite the power button) to switch between speeds. One light

indicates the speed optimized to clean bare floors and two lights indicate the speed optimized to clean carpets and larger debris on bare floors. (Fig. 6)



CHARGING YOUR CORDLESS FLOOR AND CARPET SWEEPER

- 3 To clean under furniture, use the Shark® Backsaver™ folding handle. Press the handle release button and apply a bit of pressure to bend the handle forward. (Fig. 7) The Shark® Backsaver™ joint will release from the locked position to reach messes under furniture. (Fig. 8)
- 4 Do not use the unit to pick up liquids or clean wet floors.
- 5 Do not use the unit on concrete, tar or other rough surfaces.

- 6 Do not use the unit to pick up pieces of string or fabrics. Do not use the unit to clean tasseled or frayed carpets.

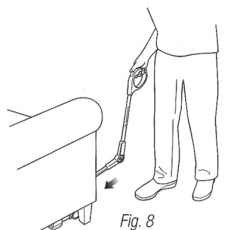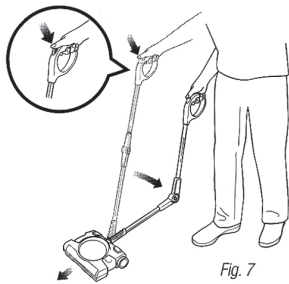

EMPTY THE DUST CONTAINER

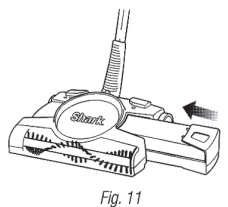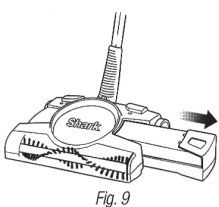

- 1 To achieve the best performance, empty the dust container after each use. Pull the dust container straight out from the side. (Fig. 9)

- 2 Empty dust container contents. (Fig. 10) If desired, you may rinse with water to clean the dust container - but dry thoroughly before replacing.

- 3 Re-insert the dust container into the unit. (Fig. 11)

NOTE: Be careful not to accidentally turn the unit on.

REFURBISHED PRODUCT LIMITED NINETY DAYS WARRANTY

The **Refurbished Product Service Center** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of NINETY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the **Refurbished Product Service Center** will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.






This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center
13225 Marquardt Avenue Santa Fe Springs, CA 90670.

MAINTENANCE

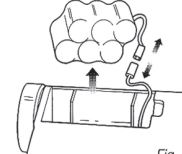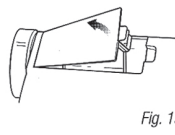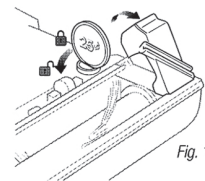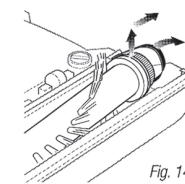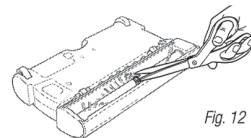

CAUTION: Do not clean the unit while it is charging.

- 1 Once a month, wipe down the unit with a dry cloth, including the area under the dust container. Wipe away any hair, fiber or other dirt that may have built up in the chamber and on the rotating brush. Do not use any harsh cleaner or chemicals.
- 2 Do not immerse the unit in water.

CLEANING THE ROTATING BRUSH

- 1 Pull the dust container straight out from the side. (Fig. 9)
- 2 Turn the unit upside down. **Be careful not to accidentally turn the unit on!**
- 3 Remove all hair, string or fibers wrapped around the brush bar. Using a pair of scissors, carefully cut along the raised guide to remove anything wound around the brush bar. Avoid damaging or cutting the bristles. (Fig. 12)
- 4 Use a coin to remove the trap door if you need to remove the brushroll to either clean it or replace it. (Fig. 13)

REMOVING AND REPLACING THE BATTERY

NOTE: If uncertain as to how to remove your battery pack, we suggest you take the unit to a reputable small appliance service technician to have this service performed.

- 1 Pull the dust container straight out from the side. (Fig. 9)
- 2 Turn the unit upside down. **Be careful not to accidentally turn the unit on!**
- 3 Push in the locking tab and lift off the battery compartment cover. (Fig. 15)
- 4 Carefully lift out the battery pack and disconnect the wire terminals by pressing on the latch and pulling apart the wire terminal connectors. Remove the battery pack. (Fig. 16)

- 5 Carefully lift and remove the brushbar from the belt. (Fig. 14) To reinsert the brushbar, slide the brush bar into the bushing and then place the belt over the ridges of the brushbar cap. Replace the trap door and lock in place.

- 6 Tuck the wiring inside the battery compartment and replace the cover.

- 7 Follow the instructions to charge your new battery pack.

IMPORTANT: This appliance contains Ni-MH batteries. The batteries must be recycled or disposed of in accordance with local regulations. Please consult your Yellow Pages or local recycling center for more information.

WARNING: Never use ordinary batteries for replacement as these may leak and cause damage. Use only battery pack XB2950 for replacement.

NI-MH BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY

TROUBLESHOOTING GUIDE & REPLACEMENT PARTS

PROBLEM	POSSIBLE REASONS AND SUGGESTED SOLUTION
The unit will not operate	Batteries need to be recharged. Batteries are dead and need to be replaced. There is no power in the electrical outlet supplying the charging adapter. Try to charge using a different outlet. Ensure the wire terminal connectors on the battery pack are securely attached. Clear any obstruction from the rotating brush. Turn unit off for 10 seconds, and then restart. If your unit still doesn't work, call a service center.
The unit will not pick up	Empty the dust container. Recharge the battery
Dust is escaping from the unit	Empty the dust container. Ensure that the dust container is properly in place.
The rotating brush will not pick up	Check for and remove any excessive material on the brush roll or in the bottom of the unit. Empty the dust container.
The unit will not charge	Press the power button once to turn the unit "OFF". There is no power in the electrical outlet supplying the charging adapter. Try to charge using a different outlet. Ensure the wire terminal connectors on the battery pack are securely attached. Charging adapter may not be working. Call a service center. Batteries are dead and need to be replaced

WARRANTY REPAIR INFORMATION

If you need service on your unit and this product requires repair during the 90 days warranty period; please go to www.ConsumerServiceRefurbish.com or call the **Refurbished Product Service Center** at 562-946-3531 to obtain the required return authorization (RA) number. Pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt and a letter describing the problem. Send the unit freight prepaid and insured to:

Refurbished Product Service Center,
Att: Customer Service Department 13225 Marquardt Avenue Santa Fe Springs, CA 90670

Your unit will be promptly repaired and returned to you. We will refuse to accept delivery of the returned unit unless the assigned RA number appears on the outside of the shipping carton.

Owner's Information
(Keep for your permanent records)

NAME: _____
ADDRESS: _____
CITY: _____ STATE: _____ ZIP CODE: _____
PHONE: _____ E-MAIL: _____
MODEL: _____ SERIAL NO.: _____



8 0 4 1 0 8 2 2 0

PRINTED IN MEXICO
SC: 02-13-2018_TAB

OBPN: V2945Z.E.131115.8
MODEL: V2945Z_32_BP