



GE APPLIANCES

804109749

SAFETY INFORMATION

IMPORTANT SAFETY INFORMATION READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE

- WARNING For your safety, the information in this manual must be followed to minimize the risk of fire, electric shock or personal injury. Use this appliance only for its intended purpose as described in this Owner's Manual. This air conditioner must be properly installed in accordance with the Installation Instructions before it is used. Never unplug your air conditioner by pulling on the power cord. Always grip plug firmly and pull straight out from the receptacle. Replace immediately all electric service cords that have become frayed or otherwise damaged. A damaged power supply cord must be replaced with a new power supply cord obtained from the manufacturer and not repaired. Do not use a cord that shows cracks or abrasion damage along its length or at either the plug or connector end. Turn the unit OFF and unplug your air conditioner before making any repairs or cleaning. NOTE: We strongly recommend that any servicing be performed by a qualified individual.

- WARNING USE OF EXTENSION CORDS RISK OF FIRE. Could cause serious injury or death. DO NOT use an extension cord with this Window Air Conditioner. DO NOT use surge protectors or multi-outlet adaptors with this Window Air Conditioner.


HOW TO CONNECT ELECTRICITY Do not, under any circumstances, cut or remove the third (ground) prong from the power cord. For personal safety, this appliance must be properly grounded. DO NOT use an adapter plug with this appliance. The power cord of this appliance is equipped with a 3-prong (grounding) plug which mates with a standard 3-prong (grounding) wall outlet to minimize the possibility of electric shock hazard from this appliance. Power cord includes a current interrupter device. A test and reset button is provided on the plug case. The device should be tested on a periodic basis by first pressing the TEST button and then the RESET button while plugged into the outlet. If the TEST button does not trip or if the RESET button will not stay engaged, discontinue use of the air conditioner and contact a qualified service technician. Have the wall outlet and circuit checked by a qualified electrician to make sure the outlet is properly grounded. Where a 2-prong wall outlet is encountered, it is your personal responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet. The air conditioner should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating plate. This provides the best performance and also prevents overloading house wiring circuits which could cause a fire hazard from overheated wires. See the Installation Instructions, Electrical Requirements section for specific electrical connection requirements.

READ AND SAVE THESE INSTRUCTIONS

USING THE AIR CONDITIONER

Controls

Features and appearance will vary. Lights next to the touch pads on the air conditioner control panel indicate the selected settings.

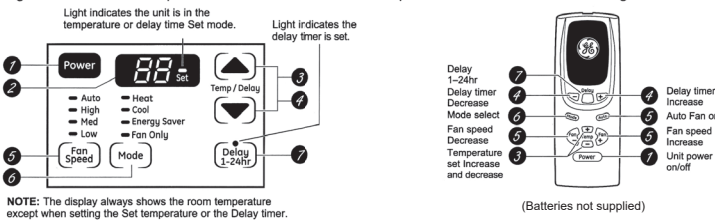

NOTE: The display always shows the room temperature except when setting the Set temperature or the Delay timer. The image shown here is for illustrative purposes only and may be subject to change. The actual descriptions of control panel and their locations may vary, depending on the model. The remote control vary depend of model: The buttons on remote control may have a different name or location than the remote control shows in this manual.

- Air Conditioner Controls Controls 1. Power Pad Turns air conditioner on and off. When turned on, the display will show the room temperature. 2. Display Shows the room temperature or time remaining on the Delay timer. Shows the Set temperature while setting the temperature in Heat, Cool or Energy Saver modes. 3. Temp Increase + / Decrease - Pads Use to set temperature when in Heat, Cool or Energy Saver mode. The Set light will turn on while setting. Remote Control 4. Delay Increase + / Decrease - Pads Each touch of the Increase / Decrease pads on the unit or the Increase + / Decrease - pads on the remote control will set the delay time when using the Delay 1-24hr timer. The Set light will turn on while setting. 5. Fan Speed Pads Use to set the fan speed to Low, Med, High or Auto on the unit. NOTE: On the remote control, use the fan speed Increase + / Decrease - pads to set the fan speeds to Low, Med or High. Use the Auto pad to turn Auto fan on.

ROOM AIR CONDITIONER OWNER'S MANUAL & INSTALLATION INSTRUCTIONS

- 6. Mode Pad Use to set the air conditioner to Heat, Cool, Energy Saver or Fan Only mode. To review the remaining time on the Delay 1-24hr timer, press the Delay 1-24hr pad on the unit or the Delay pad on the remote control. Use the Increase + / Decrease - pads on the unit or the Increase + / Decrease - pads on the remote control to set a new time if desired. To cancel the timer, press the Delay 1-24hr pad until the light on the Delay 1-24hr pad goes off. 7. Delay Pad Delay ON—When the air conditioner is off, it can be set to automatically come on in 1 to 24 hours at its previous mode and fan settings. Delay OFF—When the air conditioner is on, it can be set to automatically turn off in 1 to 24 hours. How to set: Press the Delay 1-24hr pad on the unit or the Delay pad on the remote control. Each touch of the Increase + / Decrease - pads on the unit or the Increase + / Decrease - pads on the remote control will set the timer in 1-hour intervals. The Set light will turn on while setting. NOTE: The default temperature reading on the display is degree Fahrenheit (°F). To change the display to degree Celsius (°C), press the Temp Increase + and Temp Decrease - buttons together and hold for 3 seconds. Repeat the process to change back to degree Fahrenheit (°F)

- Remote Control To ensure proper operation, aim the remote control at the signal receiver on the air conditioner. Make sure batteries are fresh and installed correctly as indicated on the remote control. Make sure nothing is between the air conditioner and the remote control that could block the signal. Remote contains a magnet allowing it to attach to metal surfaces. The remote control signal has a range of up to 20 feet.

Heat Mode Use the Heat mode at Low, Med, High or Auto Fan Speed for heating. Use the Temperature Increase + / Decrease - pads to set the desired temperature between 61°F and 86°F in 1°F increments. An electronic thermostat is used to maintain the room temperature. The heater will cycle on and off to keep the room at the set level of comfort.

Cool Mode Use the Cool mode at Low, Med, High or Auto Fan Speed for cooling. Use the Temperature Increase + / Decrease - pads to set the desired temperature between 61°F and 86°F in 1°F increments. Cooling Descriptions For Normal Cooling—Select the Cool mode and High or Med fan with a middle set temperature. For Maximum Cooling—Select the Cool mode and High fan with a lower set temperature. For Quieter and Nighttime Cooling—Select the Cool mode and Low fan with a middle set temperature.

Energy Saver Mode Controls the fan. ON—The fan will cycle on and off with the compressor. This results in wider variations of room temperature and humidity. Normally used when the room is unoccupied. NOTE: The fan may continue to run for a short time after the compressor cycles off. OFF—The fan runs all the time, while the compressor cycles on and off. NOTE: Auto Fan Speed cannot be used when in the Fan Only Mode.

 
Fan Only Mode Use the Fan Only Mode at Low, Med or High fan speed to provide air circulation and filtering without cooling. Since fan-only settings do not provide cooling, a Set temperature cannot be entered. The room temperature will appear in the display. NOTE: Auto Fan Speed cannot be used when in the Fan Only Mode.

Auto Fan Mode Set to Auto fan speed for the fan speed to automatically set to the speed needed to provide optimum comfort settings with the set temperature. If the room needs more cooling, the fan speed will automatically increase. If the room needs less cooling, the fan speed will automatically decrease. NOTE: Auto Fan Speed cannot be used when in the Fan Only Mode.

Control Display On and Off To reduce brightness during sleeping hours, this air conditioner control display has an automatic off feature where the control display will turn off completely after 2 minute of inactivity. To illuminate the control interface, press any button on the control display or remote control. The control display will illuminate all previously illuminated LED's. The control interface will now respond to any prescribed button press after it is illuminated.

Power Outage Recovery Feature In the case of a power outage or interruption, the unit will automatically restart in the settings last used after the power is restored. If the Delay 1-24hr feature was set, it will resume countdown. You may need to set a new time if desired.

Air Direction Use the lever to adjust the air direction left and right only.




CARE AND CLEANING

Care and Cleaning

Grille and Case Turn the air conditioner off and remove the plug from the wall outlet before cleaning. To clean, use water and a mild detergent. Do not use bleach or abrasives.

 Air Filter The air filter behind the front grille should be checked and cleaned at least every 30 days or more often if necessary. CAUTION DO NOT operate the air conditioner without a filter because dirt and lint will clog it and reduce performance.



Outdoor Coils The coils on the outdoor side of the air conditioner should be checked regularly. If they are clogged with dirt or soot, they may be professionally cleaned.

- How to Insert Battery (Not Supplied) in the Remote Control 1. Remove the battery cover by sliding it according to the arrow direction. 2. Insert new batteries, making sure that the (+) and (-) of battery are installed correctly. 3. Reattach the cover by sliding it back into position. NOTES: Use 2 "AAA" (1.5 volt) alkaline batteries. Do not use rechargeable batteries. Remove the batteries from the remote control if the system is not going to be used for a long time. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc) batteries.

INSTALLATION INSTRUCTIONS

BEFORE YOU BEGIN

Read these instructions completely and carefully. IMPORTANT — Save these instructions for local inspector's use. IMPORTANT — Observe all governing codes and ordinances. Note to Installer — Be sure to leave these instructions with the Consumer. Note to Consumer — Keep these instructions for future reference.


- Skill level — Installation of this appliance requires basic mechanical skills. Completion time — Approximately 1 hour. We recommend that two people install this product. Proper installation is the responsibility of the installer. Product failure due to improper installation is not covered under the Warranty. You MUST use all supplied parts and use proper installation procedures as described in these instructions when installing this air conditioner.

CAUTION Do not, under any circumstances, cut or remove the third (ground) prong from the power cord. Do not change the plug on the power cord of this air conditioner. Aluminum house wiring may present special problems—consult a qualified electrician.


ELECTRICAL REQUIREMENTS Some models require a 115/120-volt AC, 60-Hz grounded outlet protected with a 15-amp time-delay fuse or circuit breaker. The 3-prong grounding plug minimizes the possibility of electric shock hazard. If the wall outlet you plan to use is only a 2-prong outlet, it is your responsibility to have it replaced with a properly grounded 3-prong wall outlet. Some models require 230/208-volt AC, protected with a time-delay fuse or circuit breaker. These models should be installed on their own single branch circuit for best performance and to prevent overloading house or apartment wiring circuits, which could cause a possible fire hazard from overheating wires.

Power cord includes a current interrupter device. A test and reset button is provided on the plug case. The device should be tested on a periodic basis by first pressing the TEST button and then the RESET button while plugged into the outlet. If the TEST button does not trip or if the RESET button will not stay engaged, discontinue use of the air conditioner and contact a qualified service technician.

TOOLS YOU WILL NEED (NOT SUPPLIED)

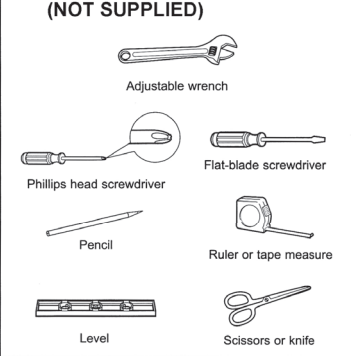


PARTS INCLUDED (Appearance may vary)

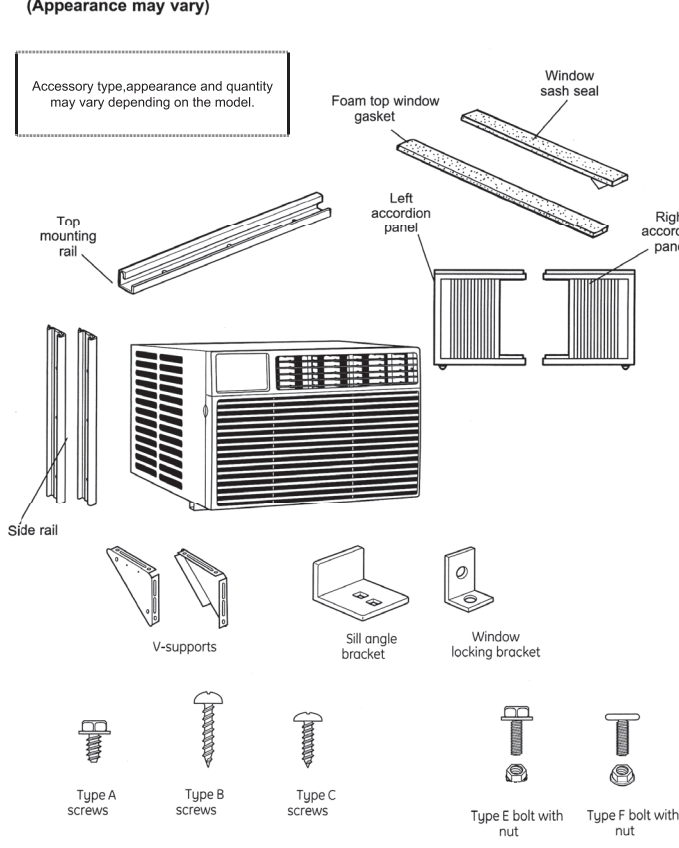

1. WINDOW REQUIREMENTS

- These instructions are for a standard double-hung window. You will need to modify them for other types of windows. CAUTION If the sill support bolts do not contact the window sill, or if you have a window without a sill, you must order accessory kit RAK87 to properly install this air conditioner. Contact a service center. The air conditioner can be installed without the accordion panels if needed to fit in a narrow window. See the window opening dimensions. All supporting parts must be secured to firm wood, masonry or metal. The electrical outlet must be within reach of the power cord.

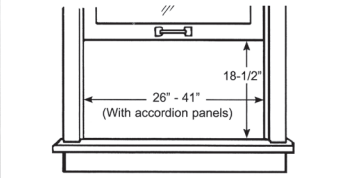


2. STORM WINDOW REQUIREMENTS

A storm window frame will not allow the air conditioner to tilt toward the outside, and will keep it from draining properly. To adjust for this, attach a piece of wood to the sill.

WOOD PIECES WIDTH: 2" LENGTH: Long enough to fit inside the window frame. THICKNESS: To determine the thickness, place a piece of wood on the sill to make it 1/2" higher than the top of the storm window frame or the vinyl frame. Attach securely with nails or screws provided by the installer. 1/2" higher than storm window frame. 1/2" higher than vinyl frame (on some windows). Wood. Sill. Storm window frame. Vinyl frame. Remove Screws.


3. PREPARE THE AIR CONDITIONER

- A. Pull down the front panel and remove the filter. Remove the front panel by lifting up at an angle. B. Remove the four front screws. Save them for reinstalling the front housing. C. Grasp the lower corners of the grille while pressing in on the case sides with your finger tips. Pull out to release and lift it up. NOTE: Do not pull the bottom edge toward you more than 3" or you may damage the tabs of the grille. D. When the front grille is removed the control panel will still be attached by a harness. Turn the grille around so you can see the back side of the grille. Remove the 2 screws to separate the control panel housing from the grille. NOTE: Be sure to save these screws. You will need them later in the installation.

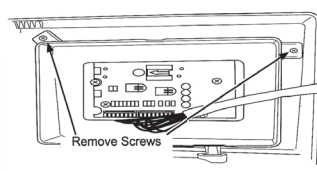


3. PREPARE THE AIR CONDITIONER (continues)


E. Remove the shipping screws located on the top of the case.

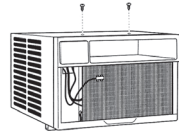


F. Remove the ground screws from each side of the case. Keep them in a safe location. NOTE: Be sure to save the ground screws. You will need them later in the installation.

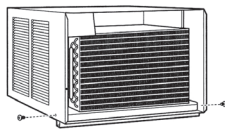

G. Slide the air conditioner from the case by gripping the base pan handle, lifting up on the air conditioner, and pulling forward. Have a second person brace the case. Do not pull or lift on the styrofoam discharge area.

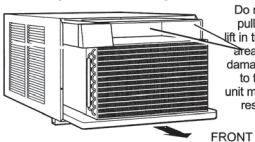

H. Your unit may come with internal packaging. This packaging must be removed prior to installing the air conditioner back into the cabinet.

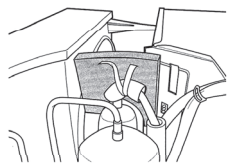


4. PREPARE THE CASE


A. Attach the top rail gasket.




B. Install the top mounting rail with 4 type A screws from the inside of the case. Press firmly to drive the screws into the gasket and through the top mounting rail.

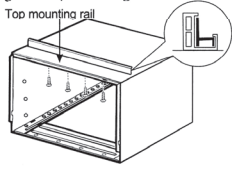

C. Slide each side retainer onto the edge of each accordion panel. The figure shows the orientation of each accordion panel and side retainer assembly relative to the case from a top view of the unit.

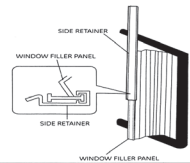


D. Slide the left and right accordion panels into the top and bottom mounting rails.

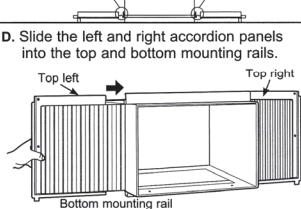


4. PREPARE THE CASE (continues)

 E. Attach the side retainers to the case using 6 type A screws. Mount the screws from the inside of the wall case.




5. PREPARE THE WINDOW AND INSTALL THE CASE

A. Cut the window sash seal to the proper length. Peel off the backing and attach the seal to the underside of the window sash.

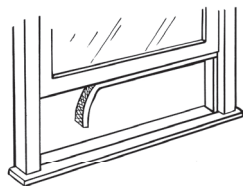


B. Open the window and mark the center of the window sill.


C. Carefully slide the case into the window and center the case. Lower the window behind the top mounting rail. Pull the bottom of the case forward so that the bottom mounting rail is tight against the back of the window stool. Mount the case to the window sill using 2 type B screws. Drill pilot holes, if necessary.

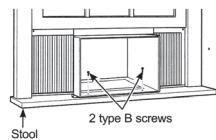


D. Assemble the V-support and V-support bracket with Type F nut and bolt.

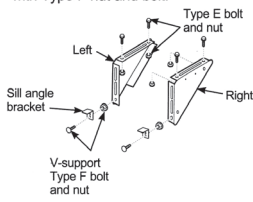


E. Position the V-supports on the case bottom so that they will be near the outside wall. Attach a V-support to each side of the bottom of the case with Type E bolts, 2 for each support.

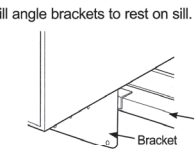

F. Adjust sill angle brackets to rest on sill.

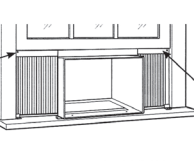

G. Extend the left and right accordion panels to the vertical window sashes. Drill pilot holes and attach the top corners with 2 type C screws.

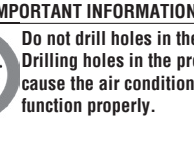


IMPORTANT INFORMATION

Do not drill holes in the product. Drilling holes in the product can cause the air conditioner to not function properly.


5. PREPARE THE WINDOW AND INSTALL THE CASE (continues)

H. **CAUTION**
To prevent broken glass or damage to windows, on vinyl or other similarly constructed windows, attach the window locking bracket to the window side jamb with one Type B screw.

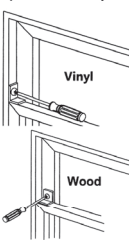

I. Cut the foam top window gasket to the window width.

 
J. Stuff the foam between the glass and the window to prevent air and insects from getting into the room.



NOTE: If the gasket supplied does not fit your window, obtain appropriate material locally to provide a proper installation seal.


6. INSTALL THE AIR CONDITIONER IN THE CASE

A. Slide the air conditioner into the case by the base pan. Do not push on the controls, foam air discharge housing or the finned coils. Make sure the air conditioner is firmly seated.

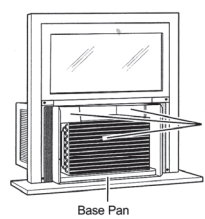


Do not press on these areas—damage to the unit may result


B. Replace the 1 screw removed earlier, one on each side of the case.
IMPORTANT: THE GROUND SCREWS MUST BE REINSTALLED TO ENSURE PROPER GROUND.

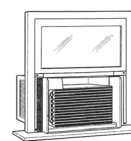


C. Reinstall the control to the panel housing by replacing the 2 screws you removed earlier.

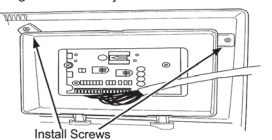

 D. Attach the front grille to the case by inserting the tabs on the grille into the slots on the front top of the case. Push the grille in.



E. Replace the screws.

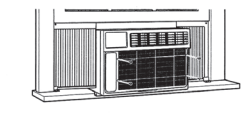

F. Install the filter and the front grille.



G. Plug in the air conditioner.

The image shown here is for illustrative purposes only and may be subject to change.

Through-the-Wall Installation Instructions-Optional

The case may be installed through-the-wall in both existing and new construction. Read completely, then follow step-by-step. NOTE: Obtain all materials locally for mounting the air conditioner through-the-wall.

1. IMPORTANT


Through-the-wall installation is not appropriate if any of the side or top louvers in the case will be obstructed by the wall. All side and top louvers in the case must project on the outdoor side of the wall.

The room side of the case must project into the room far enough to maximize the balance of the unit.

The case must be installed level from side-to-side and with a slight tilt from front to rear. Use a level; no more than a 1/2 bubble will be the correct case slant to the outside. Lintel angle is required to support bricks or blocks above opening.

Flashing is required and should extend the length of the opening to ensure no inside cavity leakage occurs.

A. Remove the air conditioner from the case. For specific instruction, refer to the Window Installation Instructions.
B. Make certain that a wall receptacle is available close to the hole location or make arrangements to install a receptacle.

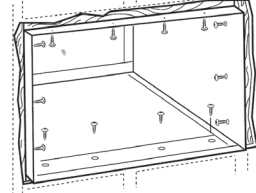


C. Place the case in the wall opening and place wood support strips between the case bottom and the flashing on both sides of the bottom rail. They should be the same height as the bottom rail and the same length as the wall opening.

D. Secure with 14 wood screws anchored at least an inch into the wall support structure.
NOTE: Drill pilot holes, if necessary, for proper installation. If the frame is oversized, use shims to prevent case distortion.

2. FINISH THE WALL OPENING

A. Caulk all four sides on the outdoor side of the case to prevent moisture from getting through to the interior wall. Use of flashing (drip rail) will further prevent water from dripping inside the wall and down the outside of the building.

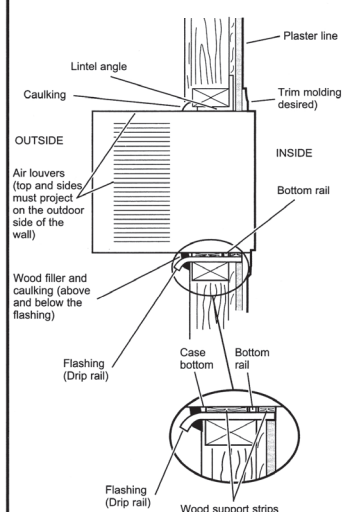

B. Place the air conditioner into the case. For specific instruction, refer to the Window Installation Instructions.

TROUBLESHOOTING TIPS

| Problem | Possible Causes | What To Do |
|--|---|---|
| Air conditioner does not start | The air conditioner is unplugged. | • Make sure the air conditioner plug is pushed completely into the outlet. |
| | The fuse is blown/circuit breaker is tripped. | • Check the house fuse/circuit breaker box and replace the fuse or reset the breaker. |
| | Power failure. | • The unit will automatically restart in the settings last used after the power is restored. • There is a protective time delay (approximately 3 minutes) to prevent tripping of the compressor overload. For this reason, the unit may not start normal cooling for 3 minutes after it is turned back on. |
| Air conditioner does not cool as it should | Airflow is restricted. | • Make sure there are no curtains, blinds or furniture blocking the front of the air conditioner. |
| | The temp control may not be set correctly. | • In the Cool mode, press the Decrease pad. |
| | The air filter is dirty. | • Clean the filter at least every 30 days. See the Care and Cleaning section. |
| Air conditioner freezing up | The room may have been hot. | • When the air conditioner is first turned on, you need to allow time for the room to cool down. |
| | Cold air is escaping. | • Check for open furnace registers and cold air returns. |
| | Cooling coils have iced up. | • See "Air conditioner freezing up" below. |
| The remote control is not working | The batteries are inserted incorrectly. | • Check the position of the batteries. They should be inserted in the opposite (+) and (-) direction. |
| | The batteries may be dead. | • Replace the batteries. |
| Water drips outside | Hot, humid weather. | • This is normal. |
| Water drips indoors | The air conditioner is not tilted to the outside. | • For proper water disposal, make sure the air conditioner slants slightly from the case front to the rear. |
| Water collects in base pan | Moisture removed from air and drains into base pan. | • This is normal for a short period in areas with little humidity; normal for a longer period in very humid areas. |

Normal Operating Sounds

- You may hear a pinging noise caused by water being picked up and thrown against the condenser on rainy days or when the humidity is high. This design feature helps remove moisture and improve efficiency.
- Water will collect in the base pan during high humidity or on rainy days. The water may overflow and drip from the outdoor side of the unit.
- The fan may run even when the compressor does not.
- You may hear the thermostat click when the compressor cycles on and off.

PRINTED IN MEXICO / SC: 06-08-2020
SHNMDL:AHE18DX_B
OBPN:49-7795 09-17 GEA
TAB / Elbrd:J.E.



REFURBISHED PRODUCT LIMITED THIRTY DAY WARRANTY

The **Refurbished Product Service Center** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of THIRTY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the **Refurbished Product Service Center** will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center
13225 Marquardt Avenue Santa Fe Springs, CA 90670

WARRANTY REPAIR INFORMATION

If you need service on your unit during the 30 day warranty period, please go to www.ConsumerServiceRefurbish.com or call the Refurbished Product Service Center at 562-946-3531 to obtain the required claim number. Once you obtain your claim number, pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt. Send the unit freight prepaid and insured to:

Refurbished Product Service Center,
Att: Customer Service Department 13225 Marquardt Avenue Santa Fe Springs, CA 90670

Your unit will be promptly exchanged and returned to you. We will refuse to accept delivery of the returned unit unless the assigned claim number appears on the outside of the shipping carton.

Owner's Information

(Keep for your permanent records)

NAME: _____
ADDRESS: _____
CITY: _____ STATE: _____ ZIP CODE: _____
PHONE: _____ E-MAIL: _____
MODEL: _____ SERIAL NO.: _____

804109749

