

Please read this manual carefully before operating your unit and retain for future reference.

IMPORTANT SAFEGUARDS

	Is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
	WARNING Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
	CAUTION Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
	Is used to provide important information not related to personal injury. When you see this sign, please take note of the advice for the correct and safe use of your appliance.

When using electrical appliances, basic important safeguards should always be followed, including the following:

- Read all instructions.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- The appliance is intended to prepare beverages according to these instructions.
- This appliance should only be used for intended purpose.
- This appliance is only meant for indoor use, under non-extreme temperature conditions.
- The appliance must not be used, cleaned, or maintained by children under 8 years of age unless supervised, instructed by an adult on how to use the appliance safely, and fully informed regarding the dangers involved.
- Close supervision is necessary when any appliance is used near children.
- Keep appliance / power cord / capsule holder out of reach of children.
- Children should not use the appliance.
- This appliance may be used by persons with reduced physical, sensory or mental capabilities, or whose experience or knowledge is not sufficient, provided they are supervised or have received instruction to use the device safely and understand the dangers.
- Only use capsules intended for this appliance. If the capsule does not fit, do not force the capsule into the appliance.

- **WARNING:** To avoid the risk of injury, do not open the brew chamber during the brew process.

Avoid risk of fatal electrical shock and fire to protect against fire, electric shock and injury to persons.

- If the cord or the plug are damaged, they must be replaced by the manufacturer, its service agent or similarly qualified persons.
- If the cord or the plug are damaged, do not operate the appliance.
- Turn appliance to off position before plugging into outlet.
- To disconnect, turn machine "OFF", then remove the plug from the outlet.
- To avoid hazardous damage, never place the appliance on or beside hot surfaces such as radiators, stoves, ovens, gas burners, open flames, or similar.
- Do not touch hot surfaces. Use handles or knobs.
- Disconnect from outlet before cleaning. Allow to cool before adding or removing parts, and before cleaning the appliance.
- Never immerse the cord, plug, appliance or any part of it in water or any other liquid.
- Electricity and water together are dangerous and can lead to fatal electric shocks.
- Do not put anything else than specified capsules into any openings, doing so may cause fire or electric shock!
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury.

Avoid possible harm when operating the appliance.

- Risk of scalding by hot liquids. If the machine is forced open hot liquids and coffee grounds may splash. Always lock the system completely and never open it during operation.
 - Be careful, capsule is hot. Risk of scalding. If a capsule is blocked in the capsule compartment, turn the machine off and unplug it before any operation.
- When using electrical appliances, basic Important Safeguards should always be followed, including the following:**
- The important safeguards are part of the appliance. Read the important safeguards provided with the appliance carefully prior to first use. Keep them in a place where you can find and refer to them in the future.
 - Protect the appliance from direct sunlight, water splash and humidity.
 - **THIS APPLIANCE IS DESIGNED FOR DOMESTIC USE ONLY.**
 - Close supervision is necessary when the appliance is used by or near children.
 - Children shall not play with the appliance.
 - The manufacturer accepts no responsibility for and the warranty will not apply to any commercial use, inappropriate handling or use of the appliance, damage resulting from use for other purposes, faulty operation, non-professional repairs or failure to comply with the instructions.

Avoid risk of fatal electrical shock and fire to protect against fire, electric shock and injury to persons.

- In case of emergency, immediately remove the plug from the power outlet.
- Only plug the appliance into suitable, easily accessible, outlets. Make sure that the voltage of the power source is the same as that specified on the rating plate. The use of an incorrect voltage or frequency of electricity voids the warranty.
- The appliance must only be connected after installation.
- Do not pull the cord over sharp edges, clamp it or allow it to hang down.
- Keep the cord away from heat and moisture.
- If an extension lead is required, use only a power cord with a conductor cross-section with matching input 16 AWG (1.3 mm²).
- Always place the appliance on a horizontal, stable, hard, even surface that does not allow for water accumulation under the machine.
- The surface must be resistant to heat and fluids, like water, coffee, descaler or similar.
- Disconnect the appliance from the power outlet when not in use for a long period of time.
- Disconnect by pulling out the plug; do not pull on the cord itself to avoid damage.
- Never touch the cord with wet hands.
- Never put the appliance or part of it in a dishwasher.
- Do not open the appliance. Hazardous voltage inside!
- Do not dismantle the appliance.

Avoid possible harm when operating the appliance.

- Never leave the appliance unattended during operation.
- Do not use the appliance if it is damaged or not operating perfectly. Immediately remove the plug from the power outlet.
- A damaged appliance can cause electric shocks, burns and fire.
- Do not put fingers under coffee outlet; risk of scalding.
- Do not put fingers into the capsule compartment or capsule shaft; risk of injury!
- Water could flow around a capsule when not perforated by the blades and damage the appliance.

OTHER SAFEGUARDS

Short cord instructions.


- Use the power cord supplied with the device in an unmodified form. It is important for user safety that the appliance is only used with a suitably electrical supply.
 - a) A short power supply cord or detachable power supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
 - b) Extension cords are available and may be used if care is exercised in their use.
 - c) If a long detachable power cord or extension cord is used:
 - 1) The marked electrical rating or the detachable power cord or extension should be at least as great as the electrical rating of the appliance.
 - 2) The longer cord should be arranged so that it will not dangle over the countertop or tabletop, where it can be pulled on by children or tripped over.
 - 3) This appliance has a polarized plug (one blade is wider than the other).
- To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way.
- If the plug does not fit fully into the outlet, reverse the plug.
- If it still does not fit, contact a qualified electrician.
- Do not attempt to modify the plug in any way.

Descaling

- *Nespresso* descaling agent, when used correctly, helps to ensure the proper functioning of your machine over its lifetime and that your coffee experience is as perfect as on the first day.

SAVE THESE INSTRUCTIONS

OVERVIEW

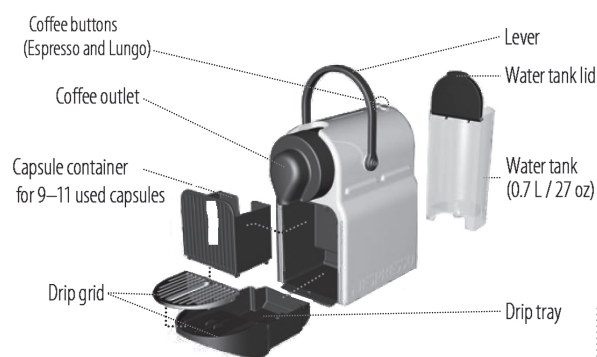

SPECIFICATIONS

INISSIA C40			
	4,72 in 12 cm	9,06 in 23 cm	12,64 in 32,1 cm
	120 V, 60 Hz, 1200 W (US and/et CANADA)		
P	Max/max. 19 Bar		
	5.3 lbs/2.4 Kg		
	0.7 L/27 oz		

Accessory type and quantity may vary depending on the model.

PACKAGING CONTENT





The image shown here is for illustrative purposes only and may be subject to change.




Capsules sold separately

ENERGY SAVING MODE

This machine is equipped with an energy saving feature. The machine will automatically enter Power Off mode after 9 minutes.




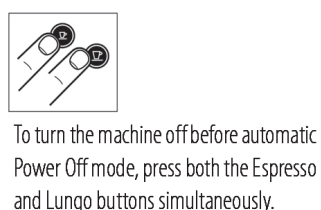
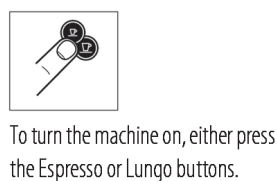


To change this setting:

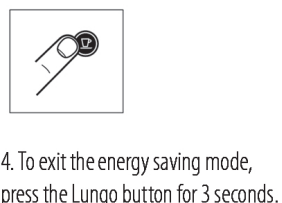
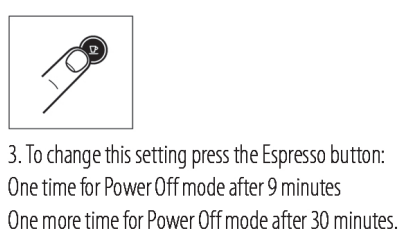
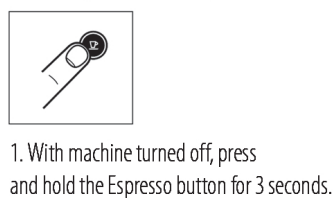


FIRST USE OR AFTER A LONG PERIOD OF NON-USE

CAUTION: first read the Important Safeguards to avoid risks of fatal electrical discharge or fire.

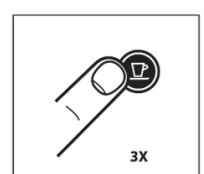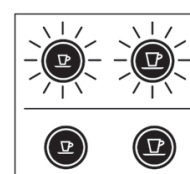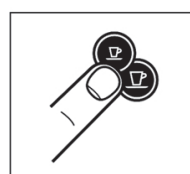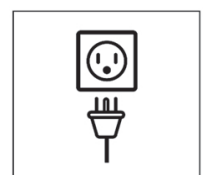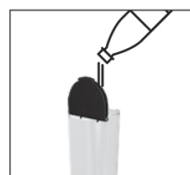

COFFEE PREPARATION

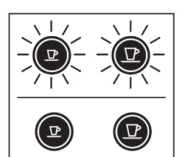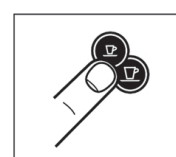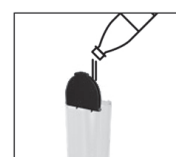


CAUTION: never lift lever during operation and refer to the important safeguards to avoid possible harm when operating the appliance.

NOTE: during heat up, you can press either coffee buttons while blinking. The coffee will then flow automatically when the machine is ready.



4. Close the lever and place a cup under the coffee outlet.

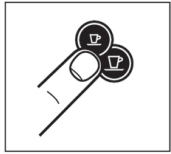


5. Press the Espresso (40 ml / 1.35 oz) or the Lungo (110 ml / 3.7 oz) button to start. Preparation will stop automatically. To stop the coffee flow manually or add more coffee, press again.



6. Remove the cup. Lift and close the lever to eject the capsule into the used capsule container.

PROGRAMMING THE WATER VOLUME

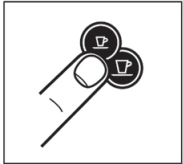


1. Turn the machine on and wait for it to be in ready mode (steady lights).



2. Fill the water tank with fresh, drinkable water and insert a Nespresso capsule.




3. Place a cup under the coffee outlet.

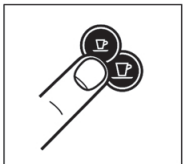

4. Press and hold the Espresso or Lungo button.


Capsules sold separately

5. Release button once the desired volume is served.

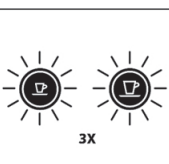

6. Water volume level is now stored.


EMPTYING THE SYSTEM BEFORE A PERIOD OF NON-USE FOR FROST PROTECTION, OR BEFORE A REPAIR

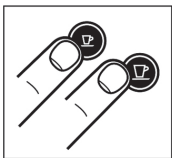


1. To enter the emptying mode, press both the Espresso and Lungo buttons to turn the machine off.



2. Remove the water tank and open the lever.

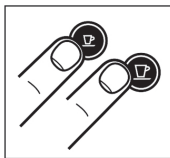

3. Press both the Espresso and Lungo buttons for 3 seconds.

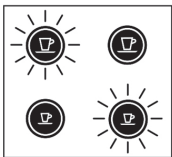

Both LEDs blink alternately.




4. Close the lever.


5. Machine switches off automatically.

6. Empty and clean the used capsule container and drip tray.


RESET TO FACTORY SETTINGS

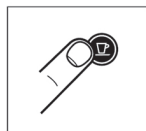

1. With machine turned off, press and hold down the Lungo button for 5 seconds.

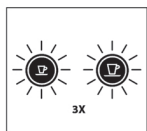

2. LEDs will blink fast 3 times to confirm machine has been reset to factory settings.

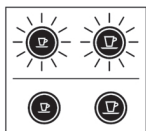

3. Then, the LEDs will continue to blink normally.

• Steady lights: machine ready.

Factory settings

Espresso Cup: 40 ml / 1.35 oz
Lungo Cup: 110 ml / 3.7 oz
Power Off mode: 9 minutes

DESCALING

NOTE: duration is approximately 15 minutes.



1. Remove the capsule and close the lever.




2. Empty the drip tray and used capsule container.



3. Fill the water tank with 0.5 L / 17 oz of drinkable water and add 1 packet of Nespresso descaling liquid.



4. Place a container (minimum volume 1 L / 34 oz) under the coffee outlet.

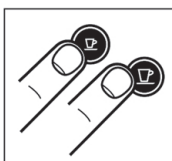

5. To enter descaling mode, press both the Espresso and Lungo buttons for 3 seconds while the machine is being turned on.



Both LEDs blink.




6. Press and release the Lungo button, then wait until the water tank is empty.




7. Refill the water tank with the used descaling solution collected in the container and repeat steps 4 and 6.




8. Empty and rinse the water tank. Fill with drinkable water.

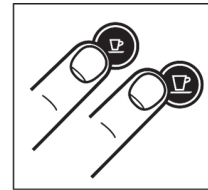

9. When ready, repeat steps 4 and 6 to now rinse the machine. Repeat twice.

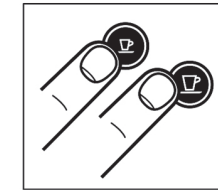

10. To exit the descaling mode, press both the Espresso and Lungo buttons for 3 seconds.

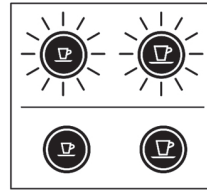

Blinking lights: heating up (25 seconds).
Steady lights: ready.

11. The machine is now ready for use.

CAUTION: the descaling solution can be harmful. Avoid contact with eyes, skin and surfaces. Never use any product other than the Nespresso descaling kit available at the Nespresso Club to avoid damage to your machine. Be careful not to use other products (vinegar type) that leave a taste to coffee. The following table will indicate the descaling frequency required for the optimum performance of your machine, based on water hardness. For any additional questions you may have regarding descaling, please contact a service center.

Water hardness:		Descalce after:		fH	French grade
fH	dH	CaCO ₃	Cups, Tasses (1.35 oz / 40 ml)	dH	
36	20	360 mg/l	1000		Grade allemand
18	10	180 mg/l	2000	CaCO ₃	Carbonate de calcium
0	0	0 mg/l	4000		

CLEANING

WARNING

Risk of fatal electrical shock and fire.

- Never immerse the appliance or part of it in water.
- Do not use any strong cleaning agent or solvent cleaner.
- Do not place in a dishwasher.
- Make sure to unplug the machine before cleaning.
- Do not use sharp objects, brushes or sharp abrasives.



Clean the coffee outlet regularly with a soft damp cloth.



Maintenance unit can be removed in separate pieces for easy cleaning.

TROUBLESHOOTING

No light indicator.	→ Check the power outlet, plug, voltage, and fuse. In case of problems, contact a service center.
No coffee, no water.	→ First use: fill water tank with warm water (maximum 55° C) and run through machine according to instructions → Water tank is empty. Fill water tank. → Descalce if necessary; see Descaling section.
Coffee comes out very slowly.	→ Flow speed depends on the coffee variety. → Descalce if necessary; see Descaling section.
Coffee is not hot enough.	→ Preheat cup. → Descalce if necessary.
Capsule area is leaking (water in capsule container).	→ Position capsule correctly. If leakages occur, contact a service center.
Irregular blinking.	→ Send appliance to repair or contact a service center.
No coffee, only water runs out (despite inserted capsule).	→ In case of problems, contact a service center.

REFURBISHED PRODUCT LIMITED THIRTY DAY WARRANTY

The **Refurbished Product Service Center** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of THIRTY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the **Refurbished Product Service Center** will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and/or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center
13225 Marquardt Avenue Santa Fe Springs, CA 90670

WARRANTY REPAIR INFORMATION

If you need service on your unit during the 30 day warranty period; please go to www.ConsumerServiceRefurbish.com or call the Refurbished Product Service Center at 562-946-3531 to obtain the required claim number. Once you obtain your claim number, pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt. Send the unit freight prepaid and insured to:

Refurbished Product Service Center,
Att: Customer Service Department 13225 Marquardt Avenue
Santa Fe Springs, CA 90670

Your unit will be promptly exchanged and returned to you.

We will refuse to accept delivery of the returned unit unless the assigned claim number appears on the outside of the shipping carton.

Owner's Information
(Keep for your permanent records)

NAME: _____
ADDRESS: _____
CITY: _____
STATE: _____
ZIP CODE: _____
PHONE: _____
E-MAIL: _____
MODEL: _____
SERIAL NO.: _____

8 0 4 1 0 6 9 1 7



PRINTED IN MEXICO / Elbrd: J.E. / TAB
OBPN: NN-432001-2002C-US
SC: 22-02-2023 _ / MODEL: EN80B_B

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.