

REFURBISHED PRODUCT LIMITED NINETY DAY WARRANTY

The **Refurbished Product Service Center** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of NINETY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the **Refurbished Product Service Center** will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center
13225 Marquardt Avenue Santa Fe Springs, CA 90670

WARRANTY REPAIR INFORMATION

If you need service on your unit during the 90 day warranty period; please go to www.ConsumerServiceRefurbish.com or call the Refurbished Product Service Center at 562-946-3531 to obtain the required claim number. Once you obtain your claim number, pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt. Send the unit freight prepaid and insured to:

Refurbished Product Service Center,
Att: Customer Service Department 13225 Marquardt Avenue Santa Fe Springs, CA 90670

Your unit will be promptly exchanged and returned to you.

We will refuse to accept delivery of the returned unit unless the assigned claim number appears on the outside of the shipping carton.

Owner's Information
(Keep for your permanent records)

 
NAME: _____
ADDRESS: _____
CITY: _____ STATE: _____ ZIP CODE: _____
PHONE: _____ E-MAIL: _____
MODEL: _____ SERIAL NO.: _____

Please make sure to read the enclosed Ninja' Owner's Guide prior to using your unit.

NINJA WOODFIRE™ ACCESSORIES

(Grill sold separately)

Collapsible Grill Stand

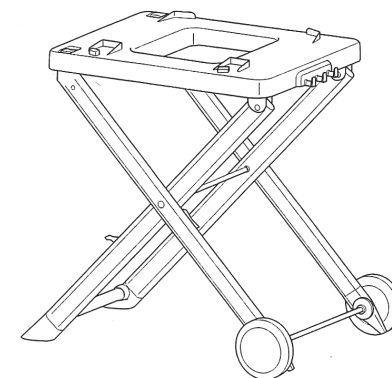

⚠ IMPORTANT SAFEGUARDS

FOR HOUSEHOLD USE ONLY. READ ALL INSTRUCTIONS BEFORE USE.

Failure to follow these instructions could result in serious bodily injury or damage to property.

- To eliminate a choking hazard for young children, discard all packaging materials immediately upon unpacking.
- Ensure the stand is properly assembled and secured before use.
- **DO NOT** set-up or fold-down stand with grill or any other objects on stand.
- Reasonable care should be followed when operating your grill attached to stand.
- **NEVER** move the stand with grill on upright stand and when operating and unit is hot.
- To avoid property damage from flames or heat, maintain a minimum distance of 3 feet from rear, sides and top to walls, rails, or other combustible constructions.
- **ALWAYS** use on a level and stable surface. **DO NOT** use on a sloped surface as grill and cart may tip over.
- **DO NOT** attach anything other than the Ninja Outdoor Grill to the stand. This is specifically purposed for use only with this product.
- **DO NOT** move, roll and store stand with grill attached.
- Remove accessories before folding stand.
- **NEVER** use the cart as a step stool or seat.

SAVE THESE INSTRUCTIONS



 
8 1 4 1 0 0 1 1 3 OBPIN: XSKSTAND_IS_GrillStand_MP_E_F_S_Mv8_220808

PRINTED IN MEXICO / Elbrd: M.C
SC:09-06-2022_TAB / MODEL: CFP451CO_B

Set-up & Fold-Down Instructions

Set-Up:


- 1 Remove all packaging material from the stand.
- 2 Pull the plastic latch (located near the handle) to the un-locked position.

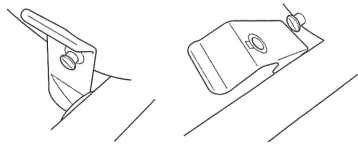


Locked

Unlocked

- 3 Place one foot on the handle while grasping the table surface. Lift up and pull back until the stand is straight, and the two detached legs are aligned below the open slots in corners. Press down on the table surface to lock the detached legs into place.

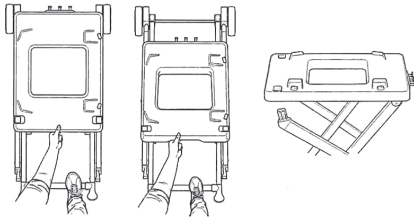

- 4 Place the grill on top of the stand by sliding the back feet into their respective slots. Then, gently place front feet into place behind the raised notches.

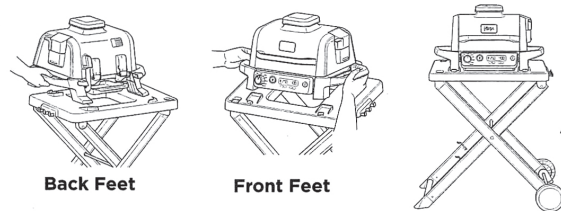


Back Feet

Front Feet


Assembled Stand with Grill
(Grill sold separately)

Fold down:

 
- 1 To remove the grill from the stand, lift the front feet out of place. Then, slide the back feet out of their respective slots and carefully remove the grill.

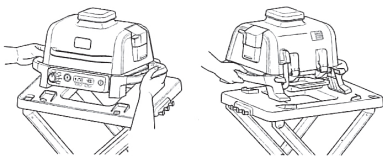

 - 2 Pinch the two notches located on the corners of the stand, outwards. Then lift the table surface up so the detached legs are free from the table surface. Slowly and gently glide the stand down until it lays flat.

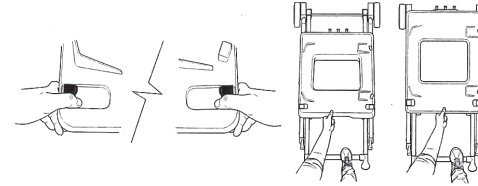

- 3 Re-lock the plastic latch (located near the handle). For ease of use, stand can be wheeled around for transport. Never move the stand with the grill on top.

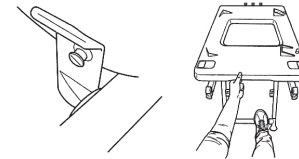

Note: The images shown here are for illustrative purpose only and may be subject to change.