804008822


Shark Navigator LIFT-AWAY® PRO

QUICK START GUIDE

WHAT'S INSIDE


- A Handle with Stretch Hose
- Crevice Tool
- B Floor Nozzle
- Dusting Brush
- © Extension Wand
- G Pet Power Brush
- Portable Lift-Away® Canister

ASSEMBLY

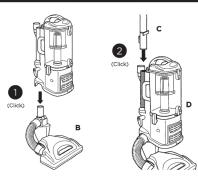

Insert canister into motorized floor nozzle

Insert wand into the canister.

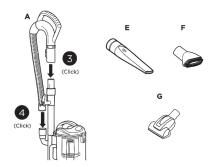

Connect handle to the wand, pressing until it clicks into place. Connect hose to the back of the canister pressing until it clicks into place.

MAINTENANCE

Empty dust cup after each use







Pull up on Dust Cup Release latch and lift dust cup off canister.

Pre-Motor

Hold Dust Cup over a trash bin and press the empty-release latch on the bottom.

Press top Dust Cup Release latch to access dust screen and remove built-up debris as required

Cleaning Filters



Wash filters every 3 months to keep the suction strong. Rinse filters and allow to air-dry completely. Tap loose dirt from foam filters as needed between washes.

Pre-Motor (foam and felt):

With the dust cup removed, take out and rinse the foam and felt filters with water only.

Post-Motor (HEPA):

To access the HEPA filter, reach under the grill and pull the Filter Access latch to remove the grill. Remove and rinse the HEPA filter with water only. Let all filters air-dry completely before reinstalling.

Easy brushroll maintenance





Detach the motorized nozzle from the portable Lift-Away canister.

Remove any string, carpet fibers, or hair that may be wrapped around the brushroll.

Please be sure to read the enclosed Owner's Guide prior to using your unit.

804008822


Shark Navigator LIFT-AWAY® PRO

QUICK START GUIDE

WHAT'S INSIDE


- A Handle with Stretch Hose
- Crevice Tool
- B Floor Nozzle
- Dusting Brush
- Extension Wand
- Pet Power Brush
- Portable Lift-Away® Canister

ASSEMBLY

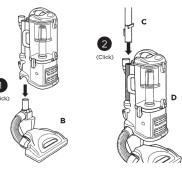

Insert canister into motorized floor nozzle.

Insert wand into the canister.

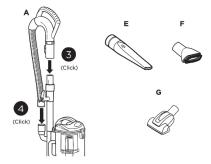

Connect handle to the wand, pressing until it clicks into place. Connect hose to the back of the canister pressing until it clicks into place.

MAINTENANCE

Empty dust cup after each use







Hold Dust Cup over a trash bin and press the empty-release latch on the bottom.



Press top
Dust Cup Release
latch to access
dust screen and
remove built-up
debris as required.

Cleaning Filters

Pre-Motor





Wash filters every 3 months to keep the suction strong. Rinse filters and

TIP:

Rinse filters and allow to air-dry completely. Tap loose dirt from foam filters as needed between washes.

Pre-Motor (foam and felt):

 
With the dust cup removed, take out and rinse the foam and felt filters with water only.

 
Post-Motor (HEPA):

To access the HEPA filter, reach under the grill and pull the Filter Access latch to remove the grill. Remove and rinse the HEPA filter with water only. Let all filters air-dry completely before reinstalling.

Easy brushroll maintenance







Remove any string, carpet fibers, or hair that may be wrapped around the brushroll.

Note: The images shown here are for illustrative purpose only and may vary.

Note: The images shown here are for illustrative purpose only and may vary.

VERSATILE FLOOR-TO-CEILING CLEANING

FLOOR CLEANING

Plug In Vacuum

Then place your foot gently on the floor nozzle and tilt the handle back.



Choose Setting

Slide the power switch to the appropriate floor setting and start cleaning.

= Carpet Cleaning = Bare/Above Floor O = OFF

BRUSHROLL ON/OFF:


- 1 Press the ON/OFF switch at the top of the canister to the I position to vacuum bare floors (straight suction only) or use Lift-Away® mode. To vacuum carpets and rugs, set the switch to the II position to engage the motorized brushroll.
- 2 Press the floor nozzle down with your foot and tilt the handle back towards you to engage the brushroll.

Note: Accessories may vary depending on the model

PORTABLE LIFT-AWAY® MODE



Attach desired cleaning accessory.

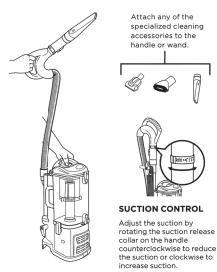

VERSATILE FLOOR-TO-CEILING CLEANING

FLOOR CLEANING

Plug In Vacuum

Then place your foot gently on the floor nozzle and tilt the handle back.



Choose Setting

Slide the power switch to the appropriate floor setting and start cleaning.

= Carpet Cleaning = Bare / Above Floor O = OFF

BRUSHROLL ON/OFF:


- 1 Press the ON/OFF switch at the top of the canister to the I position to vacuum bare floors (straight suction only) or use Lift-Away® mode. To vacuum carpets and rugs, set the switch to the II position to engage the motorized brushroll.
- 2 Press the floor nozzle down with your foot and tilt the handle back towards you to engage the brushroll.

PORTABLE LIFT-AWAY® MODE



Plug In Vacuum

Press Lift-Away button to lift canister off floor nozzle. You are now ready to clean those hard-to-reach places.

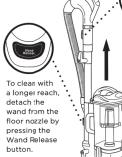

To clean above-floor areas with the handle, detach it from the wand by pressing the Handle button.



Attach desired cleaning accessory.



Attach any of the specialized cleaning accessories to the handle or wand.





SUCTION CONTROL

Adjust the suction by rotating the suction release collar on the handle counterclockwise to reduce the suction or clockwise to increase suction.

Note: Accessories may vary depending on the model

0 4 0 0 8 8 2 2

PRINTED IN MEXICO OBPN: N/A SC: 04-17-2019 1P

Elbrd: J.E.

MODEL: NV370 B

8 0 4 0 0 8 8 2 2

PRINTED IN MEXICO OBPN: N/A SC: 04-17-2019 1P

Elbrd: J.E.

MODEL: NV370 B