As with any electrical appliance, the instructions aim to cover as many situations as possible. Caution and common sense should be used when

operating and installing this air conditioner.
This appliance has been manufactured to cool and dehumidify domestic environments and must not be used for other purposes.

It is dangerous to alter or modify the unit's

characteristics in any way.

The appliance must be installed in accordance with the relevant national legislation.

The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that

they do not play with the appliance.

If the power cable is damaged, it must be

- replaced by the manufacturer or an authorized technical service centre in order to avoid all risk. Always ensure the appliance is plugged into a grounded 3-prong outlet. If you have any doubts
- Do not use extension cables.

 Before cleaning or maintenance operations, always unplug the unit from the outlet.

check with a qualified electrician

- Do not pull on or place strain on the power cord when moving the appliance. The appliance should not be installed where the atmosphere may contain combustible gases, oil or sulphur, or near heat sources. Do not rest hot or heavy objects on the appliance.
- Clean the filters at least once a week.
- Avoid using heaters near the unit.
 The unit should be transported in a vertical position. If this is not possible secure the unit at an angle, do not lie it horizontally.
- Before transporting the unit, drain the unit. After transportation, wait at least 6 hours before switching the unit on
- The packaging materials can be recycled. You are therefore recommended to place them in the special containers for differentiated waste collection.
- tonection.

 This appliance is fitted with a special safety device. When the compressor switches off, this device prevents it from switching on again for at least 3 minutes. WARNING: Changes or modifications not expressly approved by the party responsible for
- compliance could void the user's authority to

Save these instructions

This product is for household only

DēLonghi)

1

EL275 SERIES

Please read this manual before using the unit for the first time.

PORTABLE AIR CONDITIONER

Note: This appliance features an auto evaporative function to remove excess condensate water during cooling and

dehumidifying modes.

AIR CONDITIONING WITHOUT INSTALLATION You can set-up in a double-hung window:

· Fit the assembled air exhaust hose in the housing at the back of the appliance. Insert it as shown in figure 1.



· Place the window bracket in the window sill, extend the bracket fully within the window frame, fix the bracket by using the pin then lower the window onto the

(Should the window bracket be too large for the window, the plastic can be cut with a saw by a qualified professional.)

- · Connect the window outlet to the other end of the exhaust hose.
- · Insert the window outlet of the exhaust hose into the slot of the window bracket (fig. 2).



Other set-up methods:

· Thanks to the locking pins, it's possible to use the window bracket also for sliding windows. Position the hole of the bracket so to allow a correct installation of the exhaust hose (see figure 3).



- If you have a casement window (figure 4) proceed as follows:
- Fit the assembled air exhaust hose in the relevant housing located on the rear side of the appliance, (fig. 1) then, apply the window outlet to the air exhaust hose and place it outside the window to exhaust the hot air.



Specific warnings for appliances with R410A refrigerant gas

Instructions for use keep these instructions

ELECTRICAL CHARACTERISTICS

115V~ 60Hz

804109154A

R410A is a refrigerant that complies with European ecological standards; nevertheless, it is recommended not to pierce the cooling circuit of the machine. At the end of its useful life, deliver the appliance to a special waste collection centre for disposal.

This hermetically sealed system contains fluorinated greenhouse gases

ENVIRONMENTAL INFORMATION:

This unit contains fluorinated greenhouse gases covered by the Kyoto Protocol.

Maintenance and disposal must be carried out by qualified personnel only (R410A, GWP=2088).

FOAM STRIPPING INSTRUCTIONS

- 1.- Extend the window bracket to the desired width
- 2.- Remove the protection from the tape and apply it to the window bracket as show in figure.



Α A6 A2 A1 A5 -A3

A11 A12

DESCRIPTION Description of the appliance

- A1 Air outlet grid
- A2 Control panel
- A3 Handles A4 Wheels
- A5 Remote control signal receiver A6 Remote control storage
- A7 Filter
- A8 Air intake grille A9 Air exhaust hose housing
- A10 Air intake grille
- **A11** Drainage hose with cap A12 Power supply cable

Description of accessories

- **B1** air exhaust hose
- B1a hose adapter to unit B1b hose adapter
- B2 Window outlet
- B3 Window bracket with pins
- **B5** Remote control

Accessorytype,appearanceandquantitymayvary

If it becomes necessary, the power cable must be re-

The instructions below will enable you to prepare your air

conditioner for operation as efficiently as possible. Before use,

make sure the air intake and outlet grilles are unobstructed.

depending on the model.

placed by a qualified professional only.

Increase key Decrease key C4 **B4** Additional window bracket with pins C5 Temperature indicator

C6 Timer indicator

C3

(7

fan, heating)

Timer symbol Air conditioning symbol **C8**

C14

C1

C2

(((8)))

DESCRIPTION OF THE CONTROL PANEL (C)

ON/STAND-BY (on/off) key

Function selection key MODE

(air conditioning, dehumidifying,

—C3

C4

- **C9** Dehumidifying symbol C10 Fan symbol
- C11 Heating symbol
- C12 Auto indicator
- C13 Air flow indicator
- C14 Alarm symbol
- C15 Real feel symbol
- C16 Set temperature values, programmed on/off time

OPERATING FROM THE REMOTE CONTROL

Remove the cover on the rear of the remote control;

Insert or replace the batteries with two new RO3 "AAA" 1.5V

batteries, inserting them correctly (see the instructions in-

If the remote control unit is replaced or discarded, the batteries must be removed and disposed of in accordance with current

legislation as they are harmful to the environment. Do not mix

Do not mix alkaline, standard (carbon-zinc) or rechargeable

(nickel-cadmium) batteries. Do not dispose of batteries in fire.

Batteries may explode or leak. If the remote control is not be

Point the remote control at the receiver (A5) on the air

conditioner. The remote control must be no more than 23

ft (7 metres) away from the appliance (without obstacles

The remote control must be handled with care. Do not drop

used for a certain length of time, remove the batteries.

between the remote control and the receiver).

it or expose it to direct sunlight or sources of heat.

INSERTING OR REPLACING THE BATTERIES

side the battery compartment);

Replace the cover.

 
old and new batteries.

USING THE REMOTE CONTROL

Theimageshownhereisforillustrativepurposes only and may be subject to change. The actual descriptions of control panel and their locations may vary, depending on the model.

CONTROL PANEL OPERATING FROM THE CONTROL PANEL TURNING THE APPLIANCE ON/OFF

Before plugging the appliance check the cap on back of the unit are correctly inserted on drain-

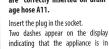

stand-by Touch the () (C1) key to turn on the appliance.

When the appliance comes on, the last function set before it was shut off is activated. NOTE: After few seconds of the control

panel inactivity, its brightness will be automatically reduced and in the next few minutes it will be

further reduced. To turn the appliance off, touch the () key.

Note: Never turn off the air conditioner by simply pulling the plug. Touch the key in order to put your air conditioner in stand-by and wait a few minutes before pulling the plug. In this manner, the appliance can perform the operating status checks



MODES SELECTION

To select the desired operating mode touch repeatedly the MODE key until the desired function is selected.

* AIR CONDITIONING MODE



This is ideal for hot and humid weather

when the room needs to be both cooled and dehumidified. To correctly set this mode: Touch repeatedly the MODE key until

the air conditioning symbol appears.

The display will show the desired tem-

(((\$()))

perature. To change the temperature to be reached, touch the ▲ or ▼ key. Note: The most suitable temperatures, during the summer range from 75 to 81°F. However, setting the temperature signifi-

cantly lower than the outdoor temperature is not recommended. In conditioning mode, the air flow can be selected only from the remote control.

↑ DEHUMIDIFYING MODE

This is ideal for reducing humidity in the room (spring and autumn, damp rooms, rainy periods, etc). For this type of use, the appliance must be set up as for air condi-tioner mode. That is, the air exhaust hose must be fitted to the appliance to al-low the humidity to be discharged outside To correctly set this mode: · Touch repeatedly the MODE key until AUTO

the dehumidifying symbol appea The appliance automatically chooses

😽 FAN MODE

٥

S

5

When using this mode, the air exhaust hose does not need to be attached to the appliance. To correctly set this mode

· Touch repeatedly the MODE key until

the fan 🗣 symbol appears. Select the desired air flow by touching the increase ▲ (C3) or decrease ▼

The air flows available are:

Minimum air flow: when maximum silent operation is desired.

((%)) Medium air flow: when the noise level needs to be low but with a good comfort level

(((S))) Maximum air flow: for maximum performance.

* HEATING MODE

*

This is ideal in spring and autumn when outdoor temperatures are not particularly severe. For this mode, the appliance should be prepared in the same way as for air conditioning, with the air exhaust hose attached.

To set this mode:

Touch repeatedly the MODE button until the heating symbol is displayed. AUTO Touch increase ▲ (C3) or decrease ▼ (C4) buttons to adjust the desired temperature.

OPERATING FROM THE CONTROL PANEL (CONT...)

B1a

Electrical connection

turer of all liability.

In this mode, the air flow is selected automatically by the

Before plugging the appliance into the outlet, check that:

The outlet's power supply corresponds to the value

indicated on the rating label on the back of the appliance;

The outlet and electrical circuit are adequate for the appli-

 
The outlet is a 3-hole grounded outlet $\begin{tabular}{c} \end{tabular}$. If this is not

the case, you must choose another outlet. Failure to follow

these important safety instructions absolves the manufac-


- appliance and cannot be set manually.

 When operating in very cold rooms, the appliance defreezes automatically, momentarily interrupting normal operation. In this case," Lt" appears on the display. During this operation, it
- is normal for the noise made by the appliance to change. In this mode, you may have to wait a few minutes before the appliance starts giving out hot air. In this mode, the fan may operate for short periods, even though the set temperature has already been reached.
- It may happen that the display shows "HL" alarm. In this case, empty the internal safety tank following the instruc-tions in the Section "End of Season operations". At the end, press again the U button to restore the heating function

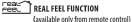



REAL FEEL is the innovative De'Longhi technology that works simultaneously on temperature reduction and humidity control, securing best comfort level. With traditional systems, during working time, optimal comfort conditions may be reached but not secured over time. With RFAL FFFL once ontimal comfort compressor action and air flow, to keep it

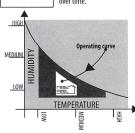

After approx. 1 minute, the REAL FEEL symbol (C15) changes color when approaching the best comfort level (see following diagram).



The well-being feeling is a subjective condition: for this reason, different people may judge differently the same

BLUE LIGHT: Best comfort level.

 $environmental\ conditions.$ In particularly severe environmental conditions (large size of the environment, high temperature or humidity outside, poor insulation of the room, too many of people or strong heat load in the room, strong exposure to the sun ...) this

device may not be able to reach the best comfort level. SELECT THE TEMPERATURE SCALE



 
The temperature can be displayed in °C or °F.

To change the temperature unit of measure touch both the increase/ decrease keys ▲ and ▼ for about

> Note: The remote control can be safely stored in the appropriate compartment A6

DESCRIPTION OF THE REMOTE CONTROL

- D1) ON/STAND-BY buttor
- Real Feel button D3.1) Air flow increase/decrease button
- D3.2) Temperature increase/decrease button
- Timer button MODE button

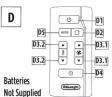

TURNING THE APPLIANCE ON/OFF

- Plug into the outlet. Press the U button (D1) (when turned on, the air conditioner starts operating in the same mode as when it was turned off).
- To switch the appliance off, press button (D1) .

Note: Never switch the appliance off by removing the plug. Always switch it off by pushing the (1) button and waiting few minutes before removing the plug. Only in this way the appliance will perform the standard checkings.

SELECTING THE OPERATING MODES

Most of the commands available on the remote control corre spond to those on the appliance control panel (C).

SELECTING THE TEMPERATURES In conditioning and heating modes press button D3.2 to select the desired temperature

SELECTING THE AIR FLOW In conditioning and fan modes, press button D3.1 to select the desired air flow

The air flow available are: Minimum air flow: when maximum silent ((%)

operation is desired.

((5)) Medium air flow: when the noise level needs to be low but with a good comfort level. (((S))) Maximum air flow; for maximum performance

AUTO The appliance automatically chooses the air flow based on the temperature selected and the environmenta

conditions (This is available only in the air conditioning

mode).

FEEL REAL FEEL FUNCTION To activate this function, push button (D2) See description of the function

SETTING THE TIMER



The timer allows for the delayed start up or shut down of the appliance. This function will prevent wasting electricity by optimising the operating periods.

How to program delayed shut down

- While the appliance is on in any operating mode, delayed shut down can be programmed.
- Press the timer button (D4): the timer symbol (C7) and hours (C6) light up.
- Press the timer key until the desired numbers of hours to shut down appears on the display (1,2,4,6,8,12 hours).

A few seconds after the timer is set, the setting is acquired, the display shows the operating mode and the timer symbol stays lit. Once the set time is elapsed, the air conditioner goes into standby. To cancel the timer program, press the timer button (D4) twice. The timer symbol (C7) will go off.

Note: Once the timer has been activated, by pressing the timer key only one time, the remaining hours to shut down will be displayed.

How to program delayed start up

- Plug in the appliance and set to standby.
- Press the timer button (D4): the timer symbol (C7) and hours (C6) light up.
- Press the timer key until the desired numbers of hours to start up appears (1,2,4,6,8,12 hours).

When the set time is elapsed, the appliance will start to operate in the same operating mode that was previously set.

To cancel the timer program, touch the timer button (D4) twice. The timer symbol (C7) will go off.

NOTE: Once the timer has been activated, by pressing the timer key only one time, the remaining hours to the start up will be displayed.

Notes:

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
- This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following
 - Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This Class B digital apparatus complies with Canadian ICES-

Transport, filling, cleaning, recovery and disposal of refrigerant should be performed by a technical service centre appointed by the manufacturer only.

The appliance should be disposed of by a specialist centre appointed by the manufacturer only.

TO AVOID DAMAGE TO THE UNIT:

NEVER TRANSPORT OR TURN THE APPLIANCE UPSIDE DOWN OR ON ITS SIDE. IF THIS OCCURS, WAIT 6 HOURS BEFORE TURNING THE APPLIANCE ON, 24 HOURS IS RECOMMENDED. After the unit has been on its side, oil needs to return to the compressor to ensure proper function. Without allowing the unit this time (6-24 hours) the unit may function for only a short time, and then the compressor will break down from lack of oil.

FLECTRICAL CONNECTION

This appliance is equipped with a 3 prong grounded plug. The plug must be connected into an outlet that is properly installed and grounded in the accordance with all local codes and ordinances. Do not modify the plug provided with the appliance. If it will not fit the outlet, have a proper outlet installed by a

qualified electrician or relocate the unit to a proper outlet. If the household electrical supply does not meet the above specifications, or if you are not sure your home has an effective electrical ground, have a qualified electrician or your local electrical utility company check it and correct any problems.

SAFETY PLUG

The appliance is fitted with a safety plug to protect the power cable. If power is cut off, unplug from the outlet and make sure the power cable is undamaged. If the cable is damaged, call the service center immediately. If power cuts off frequently and the power cable is undamaged, contact a qualified electrician.

OPERATION OF THE SAFETY PLUG

If the safety device incorporated in the plug trips and cuts off the power supply, check that the power cable and plug are not damaged. If the power cable is undamaged, to restore operation press the "RESET" button. To verify correct operation of the plug, press the "TEST" button periodically and make sure the appliance disconnects. If this is not the case, contact the service center. To restore operation, press the "RESET" button.

TROUBLESHOOTING

Check the following points before calling the a Service Center.

PROBLEMS	CAUSES	SOLUTIONS
The air conditioner does not turn on	It is not plugged in	plug it in
	there is no power	wait
	the internal protection device was triggered	call a Service Center.
The air conditioner works for a short period of time	the air exhaust hose is obstructed or bent	correctly position the air exhaust hos limiting the length and curves as mu as possible and avoiding any obstruction
	an obstruction is impeding air exhaust outside	identify and remove the obstacles the impede air exhaust outside
The air conditioner runs but does not cool the room	windows, doors, drapes open	close the windows, doors and drape keeping in mind the "recommendation for proper use"
	there is some heat source in the room (oven, hair dryer, etc.)	eliminate the heat source
	the air exhaust hose is disconnected from the appliance	attach the air exhaust hose to the housin on the back of the appliance (fig.1)
	dust filters clogged	clean or replace the filters as previous described
	the technical characteristics of the appliance are not suitable for cooling the room where it is located	
During operation there is an unpleasant odour in the room	dust filters clogged	clean or replace the filters as previous described
The air conditioner does not work for about 3 minutes from restart	to protect the compressor there is an internal device that delays startup for about 3 minutes from restart	wait
The display shows the A symbol with one of the following messages: HL/PF	the appliance has a self-diagnosis system that identifies some operating errors	refer to the SELF-DIAGNOSIS chapter

SELF-DIAGNOSIS

The appliance has a self diagnosis system to identify a number of warning/malfunctions. Error messages are displayed on the appliance display.



"Low Temperature" (frost prevention)

..WHAT SHOULD I DO?

The appliance is fitted with a frost protection device to avoid excessive formation of ice. The appliance starts up again automatically when the defrosting process is completed

IF ... IS DISPLAYED.



Probe Failure (Probe damaged) ..WHAT SHOULD I DO?

If this is displayed, contact a

service center.

IF ... IS DISPLAYED,



"High Level" (Internal tray full)

..WHAT SHOULD I DO?

Empty the internal safety tank following the instructions in the section "End of season operations".

Before cleaning or maintenance, turn the appliance off by touching the () button, then unplug from the outlet.

CLEANING THE CABINET

You should clean the appliance with a slightly damp cloth then dry with a dry cloth. For safety reasons, never wash the air conditioner with water.

Never use petrol, alcohol or solvents to clean the appliance. Never spray insecticide liquids or similar.

CLEANING THE BIO SILVER AIR FILTER (If fitted)

If the filter is dirty, air circulation is compromised and the efficiency of the dehumidifying and air purifying functions decreases.

It is therefore good practice to clean the filter at regular intervals. The frequency depends on the duration and conditions of


If the unit is used constantly or systematically, you are recommended to clean the filter once a week.

The filter is housed in the intake grille.

To clean the filter, extract as shown in fig. 8.

To maintain the efficiency of the air conditioner, it is recommended to clean the dust filter after every week of use.

The filter is located near the intake grille. Remove the grille to access the filter. To clean the filter, it will need to be extracted as shown in fig. 8.

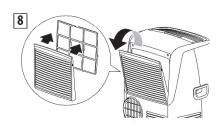

Use a vacuum cleaner to remove any dust deposited on the filter. If it is very dirty, submerge it into warm water and rinse it several times. The water temperature must be kept below 104° F (40°C). After washing the filter, allow it to dry.

TAfter washing the filter, allow it to dry completely before repositioning it.


The BioSilver filter helps capture dust and pollen and helps reduce the growth of bacteria and mold on the filter.

CHECKS AT THE START OF THE SEASON

Make sure the power cable and socket are in perfect condition and make sure the earthing system is efficient. Comply strictly with the installation standards.

END OF SEASON OPERATIONS

To drain all water from the circuit, remove the cap A11 from the drainage on the back of the appliance and allow the water to drain out into a basin (fig. 10).

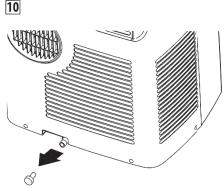

When the appliance is empty, replace the cap. Clean the filter and dry thoroughly before putting back.

TECHNICAL SPECIFICATIONS

Power supply voltage see rating label Max. absorbed power during air conditioning Refrigerant Cooling capacity

LIMIT CONDITIONS

air conditioning Room temperature for heating

64 ÷ 95°F (18° ÷ 35°C)

50 ÷ 77°F (10 ÷ 25°C)

Room temperature for

The Refurbished Product Service Center offers the following WARRANTY to the ORIGINAL

purchaser of a product which we have refurbished.

REFURBISHED PRODUCT LIMITED THIRTY DAY WARRANTY

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of THIRTY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the Refurbished Product Service Center will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty

. This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

> Refurbished Product Service Center 13225 Marquardt Avenue Santa Fe Springs, CA 90670

WARRANTY REPAIR INFORMATION

If you need service on your unit during the 30 day warranty period; please go to www.ConsumerServiceRefurbish.com or call the Refurbished Product Service Center at 562-946-3531 to obtain the required claim number. Once you obtain your claim number, pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt.

Send the unit freight prepaid and insured to:

Refurbished Product Service Center,

Att: Customer Service Department 13225 Marquardt Avenue Santa Fe Springs, CA 90670 Your unit will be promptly exchanged and returned to you

We will refuse to accept delivery of the returned unit unless the assigned claim number appears on the outside of the shipping carton.

Owner's Information

(Keep for your permanent records)

NAME:	
ADDRESS:	
CITY:	STATE: ZIP CODE:
PHONE.	E-MAIL:
	SERIAL NO:
WODEL.	CERTAL NO

PRINTED IN MEXICO Sc:03.20.2019 REV.A.04.11.2019_REMVI:WALLFLANGE obpn:5715112691_00/11.17 shnmdl:PACEL275HGRKC-1A+ INSERT 8040000269

804109154A



TAB elbr:i.a.