



Please read this manual carefully before operating your unit and retain for future reference.

804106841

## IMPORTANT SAFETY INSTRUCTIONS

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments / accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

### ADDITIONAL SAFETY INFORMATION

- The AC adapter and apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet that may prevent air flow through vent openings.
- Do not place lighted candles, cigarettes, cigars, etc. on the product.
- Care should be taken so that objects do not fall into the product.
- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.
- To prevent the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- Do not play your headset at high volume. Hearing experts warn against extended high-volume play.

 
### WARNING:

- High or low extreme temperatures that a battery can be subjected to during use, storage transportation, and low air pressure at high altitude.
- Replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types).
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion of the leakage of flammable liquid or gas.

- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

**⚠ WARNING:** The AC adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the mains plug from mains completely, the AC adapter should be disconnected from the mains socket outlet completely. The socket-outlet shall be installed near the equipment and shall be easily accessible.

**ⓘ** The Laptop can be used only the provided AC Adaptor to charge the battery.



Equipment tested for compliance as a complete unit

### FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
### FCC RF Radiation Exposure Statement:

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 0.5 cm between the radiator and your body.

**Caution:** Exposure to Radio Frequency Radiation. Operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

**BC** Printed in China

## Get to Know Your Tablet

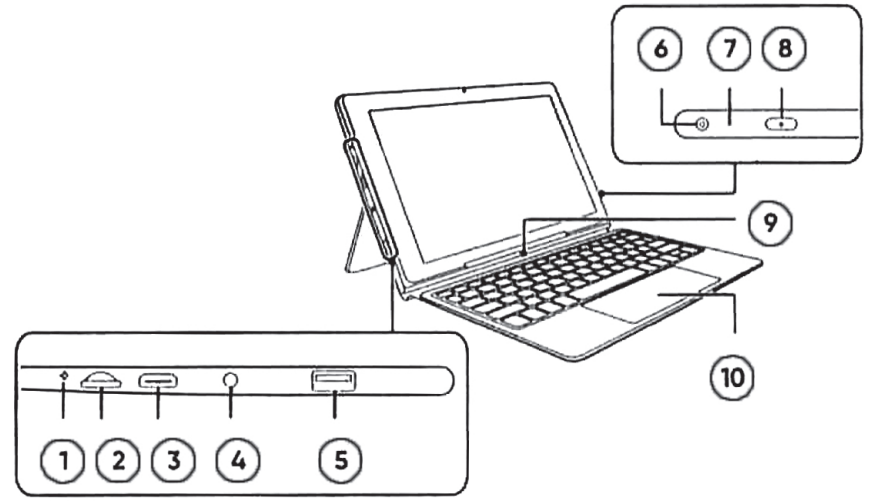


1. Microphone
2. SD card slot  
\*Micro SD (Not included)
3. HDMI port
4. Headphones jack
5. USB port
6. DC IN jack
7. Charging indicator
8. Power button
9. Connector
10. Touchpad

## Let's Get Started!
 
### Charging your tablet

### IMPORTANT! Please Read.

We recommend fully charging your Tablet before using it for the first time. For optimum performance, please connect the provided AC adaptor to your Tablet when it falls below 20% charge.

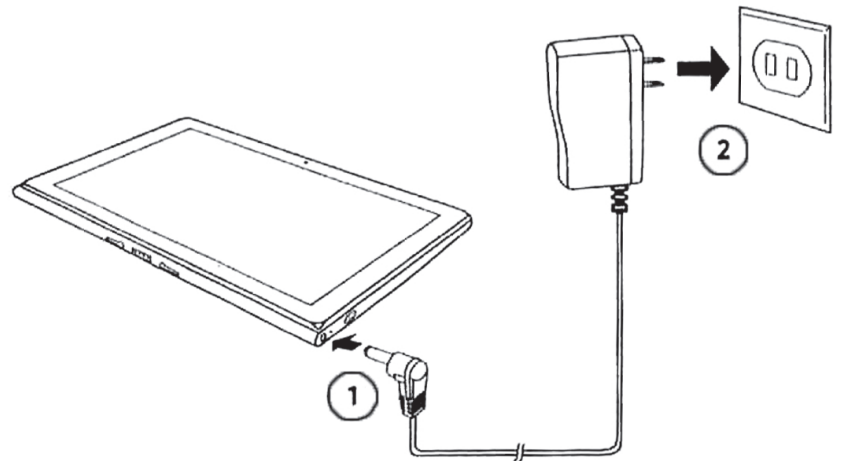


Use **ONLY** the provided AC Adapter to charge the battery.

The cables mentioned in this manual are not supplied with your unit.

## Turning on your tablet for the first time

 
01

- 1) Press and hold the Power button on your Tablet until ONN logo appears.

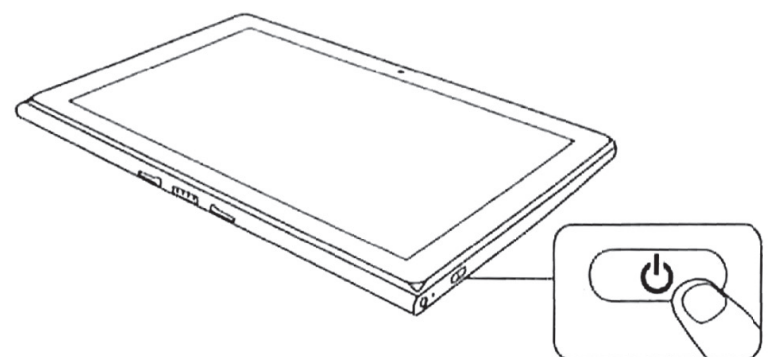


- 2) Select your desired language, then click **"Yes"**.
- 3) Follow the onscreen instructions to configure your Tablet.

## What's in the Box?

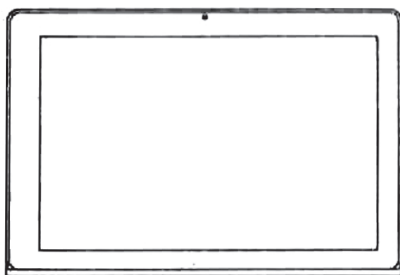 


1

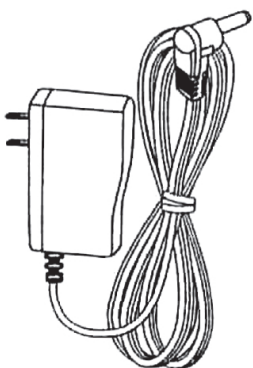 

3

 Check to make sure you have everything below.

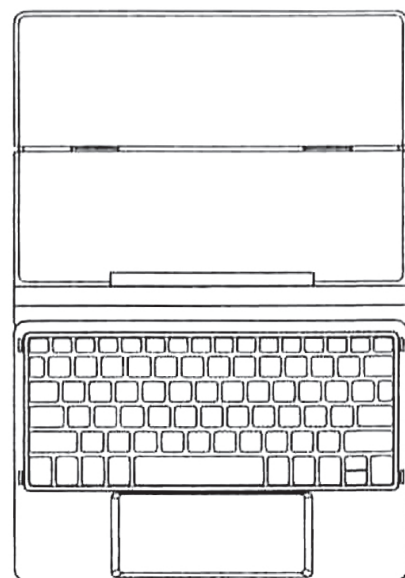

2



1. Tablet
2. Folio keyboard
3. Adapter

Accessory type and quantity may vary depending on the model.

Note: The image shown here is for illustrative purposes only and may be subject to change. The actual number of ports and their locations may vary depending on the model.

## Connecting to a Wi-Fi network

02

- 1) Select  (start),  (Settings), **Network & Internet**, and **Wi-Fi**, and then set Wi-Fi to **On**.
- 2) Select **Show available networks**, the desired Wi-Fi access point, and then **Connect**.

When a connection is established, **Connected** appears in the Wi-Fi access point field.

 
**Note:** If you are prompted for the security key in a new window, enter the security key as required, select **Next**.

## Windows 10 Home in S mode

Streamlined for security and performance, Windows 10 Home in S mode works exclusively with apps from the Windows Store. Some accessories and apps that are compatible with other Windows 10 version might not work with Windows 10 Home in S mode, and performance can vary. Certain default settings, features, and apps cannot be changed. If needed, you can easily switch to a Windows 10 Home configuration.

## Tablet docking / undocking

03

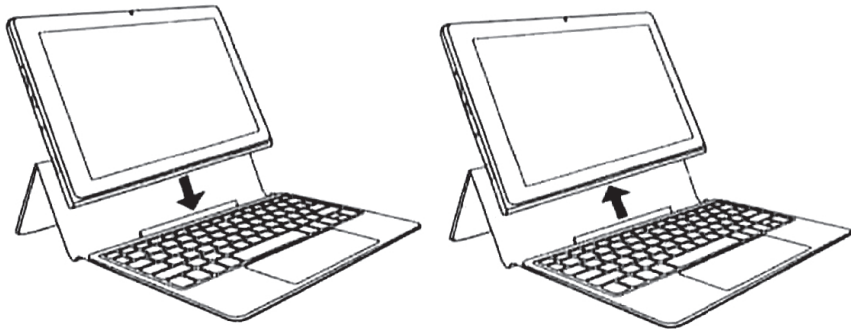

Notes for folio keyboard



## FAQs

### 1. Do I need to charge my tablet before first use?

Yes, it's highly recommended to fully charge the tablet before the initial use. Using the provided AC adapter connect the cable end to the tablet, and then plug the charger in to a standard wall outlet. Allow the tablet to charge for a minimum of 20 minutes before use.


### 2. What do the charging lights indicate?

The charge light indicator has some settings as below.


1. Off, or no light displayed means the tablet's AC adapter is either not plugged in or has a poor connection.
2. Flashing Red color means low battery, plug in AC adapter to charge your tablet. Red color light means the tablet is charging.
3. Green color light means the tablet is fully charged.

*Note: Leaving your tablet plugged in after it's fully charged will not harm your device or the battery.*


### 3. How do I connect to WiFi?

Navigate to your tablet's settings  and then click 'Network & Internet'. Select WiFi and use your finger to slide the bar to "ON". Next, simply choose your network from the list of choices and enter your password. Once your password is entered click "Connect". To turn WiFi off, simply slide the bar to the "OFF" position.


### 4. How do I change the displayed language?

Navigate to your tablet's settings  and select "Time and Language". Then, choose your region and language. You may also "Add a language" and scroll through a list of available languages. Once selected, the language will be added to the system automatically.

### 5. How do I change the font size?

From your settings menu  select "Ease of Access". To make just the text on your screen larger, adjust the slider under Make text bigger. To make everything larger, including images and apps, choose an option from the drop-down menu under Make everything bigger.

### 6. How do I change screen brightness?

To find the brightness slider, navigate to Settings  System and then select Display. You may then move the "Change brightness" slider to adjust the brightness.

### 7. How can I turn the Narrator On or Off.

There are a couple of ways you can turn Narrator On or Off.

1. On the sign-in screen, select the Ease of access button in the lower-right corner, and use the toggle under Narrator.
2. Click on Settings, Ease of Access and then Narrator. Use the toggle to turn Narrator On or Off.

### 8. How do I insert and remove the tablet from the keyboard case?

To remove the tablet, simply hold the keyboard portion of the case and lift the tablet from either the top right or top left edge. It should come apart very easily. To reattach the tablet, align the pin connectors on the keyboard to the bottom edge of the tablet.

### 9. What's the battery life expectancy.

Battery life expectancy is approximately six hours but may vary based on use and the types of applications running on your tablet.

Quick tip: Keeping your screen brightness down can conserve battery life.

### 10. How often should I update my tablet?

It's always a good idea to make sure you're operating your tablet with the latest updates. To do so, head to settings and click on "Update and Security". Once there you can select "Check for Updates".

## REFURBISHED PRODUCT LIMITED THIRTY DAY WARRANTY

The **Refurbished Product Service Center** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of THIRTY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the **Refurbished Product Service Center** will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

**Refurbished Product Service Center**

13225 Marquardt Avenue Santa Fe Springs, CA 90670

## WARRANTY REPAIR INFORMATION

If you need service on your unit during the 30 day warranty period; please go to [www.ConsumerServiceRefurbish.com](http://www.ConsumerServiceRefurbish.com) or call the Refurbished Product Service Center at 562-946-3531 to obtain the required claim number. Once you obtain your claim number, pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt.

Send the unit freight prepaid and insured to:

**Refurbished Product Service Center,**

**Att: Customer Service Department 13225 Marquardt Avenue Santa Fe Springs, CA 90670**

Your unit will be promptly exchanged and returned to you.

We will refuse to accept delivery of the returned unit unless the assigned claim number appears on the outside of the shipping carton.

### Owner's Information

(Keep for your permanent records)

NAME: \_\_\_\_\_

ADDRESS: \_\_\_\_\_

CITY: \_\_\_\_\_ STATE: \_\_\_\_\_ ZIP CODE: \_\_\_\_\_

PHONE: \_\_\_\_\_ E-MAIL: \_\_\_\_\_

MODEL: \_\_\_\_\_ SERIAL NO.: \_\_\_\_\_

804106841



PRINTED IN MEXICO / SC:08-07-2022 / TAB / Elbrd.J.E.  
OBPN: 681131284592/681131284585 / SHNMDL: 100002435\_B