



THE NEXT-GEN BLENDER
 “Recipe book is not included”



Take your cordless, portable blender anywhere to shake up your routine.

Make a smoothie, shake or cocktail in 20 seconds, anywhere.

The image shown here is for illustrative purposes only and may be subject to change.

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

YOUR FIRST BLEND

1

Charge your BlendJet with the included USB cable for 1 hour or until you see a solid blue circle.

2

Ensure the arrows on the rear of the jar & base are aligned.

3

Clean your BlendJet by blending water with a drop of soap, then rinse.

4

Add liquid first, then throw in your solids. Don't overfill.

5

Tighten the lid & press the power button to blend for one 20-second cycle.

6

Enjoy your blended creation & remember to repeat step 3 after each use.

FLAVOR ON FULL BLAST

Meet the JetPacks

Make a delicious, nutritious, juice-bar-quality smoothie anytime, anywhere.



No refrigeration needed, just add water—or get creative with your favorite milks, fruits, protein powders, yogurts or superfoods.

JetPacks' fruit is picked at peak ripeness & immediately freeze dried, locking in flavor, color & nutrients like potassium, calcium, iron & fiber.



Gluten Free



Good Source of Fiber



Vegan



No Artificial Flavors or Preservatives



Non-GMO



No Artificial Sugar

Note: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

POWERING UP

BlendJet takes about 1.5 hours to fully charge & lasts for 15+blends. Battery life is visible while charging.



Zero Charge
Circle slashes
red & purple.



50% Charge
Circle is half
purple, half blue..



Full Charge
Circle is
solid blue.

Circle will turn purple while blending or pulsing when battery is low.

TROUBLESHOOTING



Flashing Red
Jar isn't aligned with base.

Loosen jar from base & screw it back in until arrows on back of jar & base line up.
Power button will flash white.



Solid Red
Blades are blocked.

Turn upside down & start blending, then turn right-side up again so your ingredients hit the blades at full speed.

A MODE FOR EVERY MOOD



Blend Mode

Perfect for smoothies, shakes & mixed drinks.

Press power button once to start a 20-second blend cycle, or press it again to stop mid-cycle.



Pulse Mode

Perfect for guacamole, salsa & hummus.

To enter Pulse Mode, double-press power button. Blue lights will flash left to right 3 times & the swirl will stay illuminated while Pulse Mode is active. Press & hold power button repeatedly to pulse. Pulse Mode will end after 5 seconds of inactivity.



Lock Mode

Perfect for sipping & travel.

To lock, you must be in Blend Mode. Hold down power button for 3 seconds until purple circle flashes 3 times.
To unlock, Hold down power button for 3 seconds until blue circle flashes 3 times.

REFURBISHED PRODUCT LIMITED THIRTY DAY WARRANTY

The **Refurbished Product Service Center** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of THIRTY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the **Refurbished Product Service Center** will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center
13225 Marquardt Avenue Santa Fe Springs, CA 90670

WARRANTY REPAIR INFORMATION

If you need service on your unit during the 30 day warranty period; please go to www.ConsumerServiceRefurbish.com or call the Refurbished Product Service Center at 562-946-3531 to obtain the required claim number. Once you obtain your claim number, pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt.

Send the unit freight prepaid and insured to:

Refurbished Product Service Center,
Att: Customer Service Department 13225 Marquardt Avenue Santa Fe Springs, CA 90670

Your unit will be promptly exchanged and returned to you. We will refuse to accept delivery of the returned unit unless the assigned claim number appears on the outside of the shipping carton.

Owner's Information
(Keep for your permanent records)

NAME: _____

ADDRESS: _____

CITY: _____ STATE: _____ ZIP CODE: _____

PHONE: _____ E-MAIL: _____

MODEL: _____ SERIAL NO.: _____

