



SmartSet® Clock Radio, With Auto-Time Setting System, 1.4"Blue Jumbo Display, Dual Alarms, FM Radio, USB Charge Out, Night Light and Bluetooth Speaker

OWNER'S MANUAL CKS1507

804108515

Alarm Clock Radio with Bluetooth,USB

WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED AND THERE IS NO BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



- WARNING: SHOCK HAZARD - DO NOT OPEN
- Caution Marking and rating plate was located at rear enclosure of the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal;
- Minimum distances 10cm around the apparatus for sufficient ventilation;
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.;
- No naked flame sources, such as lighted candles, should be placed on the apparatus;
- The use of apparatus in moderate climates.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- WARNING
Do not ingest the battery, Chemical Burn Hazard
This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- When a plug on the unit is used as a disconnect device, this unit must remain readily accessible.
- The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- ATTENTION
Danger of explosion if the battery is not replaced correctly. Replace only with the same type or equivalent type
- The appliance must not be exposed to water dripping or splashing and that no objects filled with liquids such as vases should be placed on the appliance.

IC Warning:
This device complies with Industry Canada Licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. To maintain compliance with RSS-102 — Radio Frequency (RF) Exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

FCC Note:
FCC Part 15.19 Warning Statement
THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

FCC Part 15.21 Warning Statement
NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.

FCC Part 15.105 Warning Statement
Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio communications. However, there is no guarantee that interference to radio communication. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- consult the dealer or an experienced radio/TV technician for help.

RF warning statement
The device has been evaluated to meet general RF exposure requirement. To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

Important Safety Instructions

- Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, ask an electrician to replace the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
- Only use attachments / accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- The AC adapter must not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on apparatus.
- The AC adapter is used as a disconnect device and it must remain readily accessible during intended use. In order to disconnect the apparatus from the AC power completely, the AC adapter must be removed from the AC outlet completely.
- The battery must not be exposed to excessive heat such as sunshine, fire, etc.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Preparation For Use

- Unpacking And Set Up**
- Remove the radio from the carton and remove all packing material from the radio. Save the packing material, if possible, in case the radio ever needs to be serviced or transported.
 - Remove any descriptive labels or stickers on the front or top of the cabinet. Do not remove any labels or stickers from the back or bottom of the cabinet.
 - Note the serial number on the bottom of your radio and write this number in the space provided on the Warranty page of this manual.
 - Place your radio on a level surface such as a table, desk or shelf convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity, or vibration.
 - Unwind the Line cord connecting the AC adapter and extend it to its full length. The FM antenna is built in to this cord. It must be fully extended to provide the best FM reception.

Protect Your Furniture

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

Power Source

 
This radio is designed to operate on normal 120V 60Hz AC power only. Do not attempt to operate the radio on any other power source. You could cause damage to the radio that is not covered by your warranty. This radio should be connected to an AC outlet that is always 'live'. Do not connect it to an outlet that is controlled by a wall switch. When the power to the radio is interrupted, the built in lithium battery takes over to maintain the time and alarm settings. To maximize the life of the lithium battery keep the radio connected to a 'live' AC outlet at all times.

Important Notes


- Avoid installing this unit in places exposed to direct sunlight or close to heat radiating appliances such as: electric heaters, on top of other stereo equipment that radiates heat, places lacking ventilation, dusty areas, places subject to constant vibration and/or humid or moist areas.
- Operate controls and switches as described in the manual.
- Before turning on the power, make certain that the AC adapter is properly installed.
- When moving the set, be sure to first disconnect the AC adapter.

Location of Controls and Indicators

FRONT PANEL

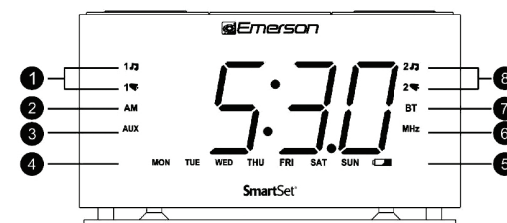

TOP PANEL

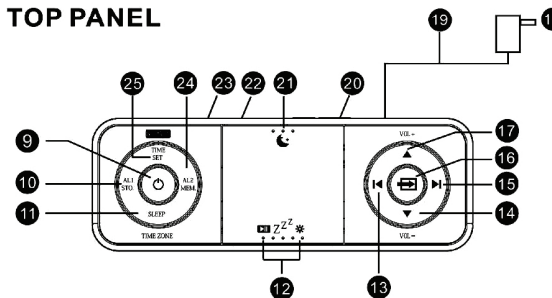 

- ALARM 1 Radio/Buzzer Indicators
- AM Indicator ('On'=AM, 'Off'=PM)
- AUX Indicator
- DAY of WEEK Indicators
- LOW BATTERY Indicator
- MHZ (FM Radio) Indicator
- BT (Bluetooth) Indicator
- ALARM 2 Radio/Buzzer Indicators
- POWER ('On'/Standby) Button
- ALARM 1/STORE (FM station) Button
- SLEEP/TIME ZONE DIMMER Button
- PAUSE/SNOOZE/DIMMER Button
- SET/TUNE DOWN Buttons
- VOLUME-DOWN Button
- SET/TUNE UP Button
- SOURCE (FM, Bluetooth, AUX) Button
- VOLUME+ UP Button
- AC Adapter
- FM Antenna (cable)
- BACKUP BATTERY Compartment (located on back of unit)
- Night Light On/Off Button
- USB Charge Out
- AUX IN Jack
- ALARM 2/MEMORY (FM station)
- TIME SET/FM Frequency Display

 
Note: The image shown here is for illustrative purposes only and may be subject to change.

Setting the Time Zone

Initial Default Setting at Clock Mode

The first time you connect your new SmartSet® clock radio to the AC outlet the internal computer will automatically set the time correctly for the Eastern Time Zone, which is the initial default setting. The display will scan for a few seconds and then show the correct Day and Time in the Eastern zone. If you live in the Eastern Time zone, there's nothing else to do. Your clock is set correctly and running. If you do not live in the Eastern Time zone you must change the default zone display to your own zone. You only do this one time and the SmartSet® will remember the new default zone setting and will always return to that setting after power interruption.

- There are 7 time zones programmed into your SmartSet® clock radio as follows:
- ZONE 1 -Atlantic Time
 - ZONE 2 -Eastern Time (Default Setting)
 - ZONE 3 -Central Time
 - ZONE 4 -Mountain Time
 - ZONE 5 -Pacific Time
 - ZONE 6 -Yukon Time
 - ZONE 7 -Hawaiian Time

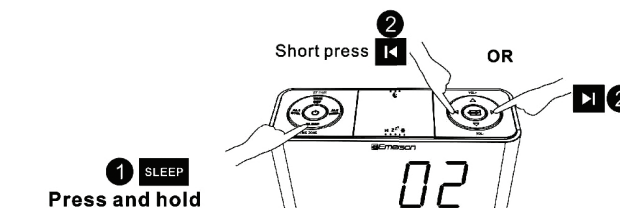


Note: Time Zone and Time Setting can only be adjusted in standby mode, where the function of Radio, Bluetooth, and AUX are disabled (Indicators of 'MH', 'BT' and 'AUX' are OFF).

Setting the Time

Year, Date and Time Display

 To display Year, Date and Time sequentially, short press TIME SET once for each

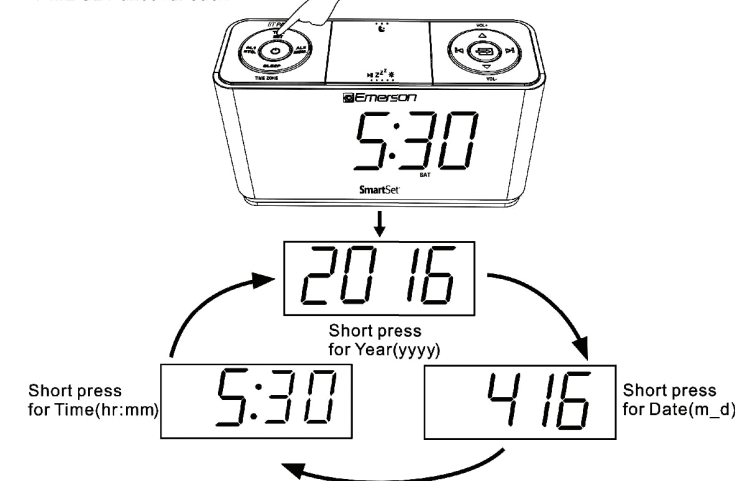

Manual Time Adjustments

- Year ● Date ● Time
- 1 Press and Hold "TIME SET" until the Year Display blinks. Then release the button.
- 2 Press "▲" or "▼" to adjust Year
- 3 Press "TIME SET" and the Month Display will blink
- 4 Press "▲" or "▼" to adjust Month
- 5 Press "TIME SET" and the Date Display will blink
- 6 Press "▲" or "▼" to adjust Date
- 7 Press "TIME SET" and the Hour Display will blink
- 8 Press "▲" or "▼" to adjust Hour
- 9 Press "TIME SET" and the Minutes Display will blink
- 10 Press "▲" or "▼" to adjust Minutes
- 11 Press "TIME SET" to finish time adjustments session

Note: To skip manual adjustments, keep it idle for 5 seconds to resume to clock display mode.

Daylight Saving and Leap Year Adjustments

All Daylight Saving and Leap Year adjustment are made automatically by the SmartSet® internal computer as follow:

Start of Daylight Saving time:

At 2:00 AM on the 2nd Sunday in March, the clock will automatically advance to 3:00 AM

End of Daylight Saving time:

At 3:00 AM on the 1st Sunday in November, the clock will automatically reset to 2:00 AM


Leap Year:

At 12:00 Midnight on February 28th, the calendar display will change to "2 29".

Setting the Alarm

Alarm can only be set in standby mode where the function of Radio, Bluetooth, and AUX are disabled (i.e. indicators of "MHz", "BT", and "AUX" are OFF)

 Adjusting the Wake up times

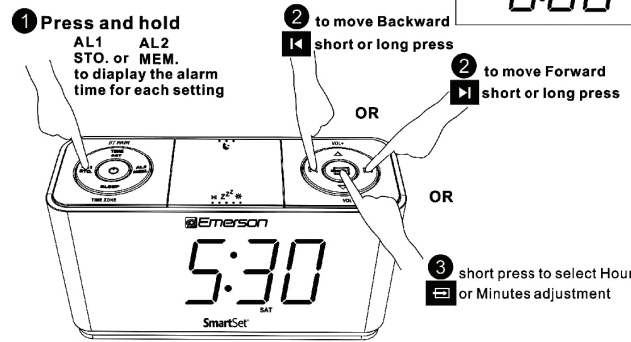

Adjusting Alarm Week Mode

Press and Hold "AL1" or "AL2", then press "▲" or "▼" to adjust: Weekdays (Monday to Friday), Weekends (Saturday and Sunday) or Everydays (Monday to Sunday)



Short press AL1 or AL2 to turn ON the Alarm Mode:

When Buzzer lights on, the wake up Buzzer alarm will be ON.

When Music lights on, the wake up Radio alarm will be ON.

 
To completely turn off the alarm, short press AL1 or AL2 until the Buzzer or Radio light is OFF.

Wake To Radio and Alarm Volume Setting

- Press POWER button to turn the unit ON.
- Press SOURCE button to select FM Radio mode.
- Tune to or recall from Memory the station that you wish to hear when the alarm comes ON.
- Press Vol+ or Vol- to set the maximum radio volume at which the alarm will reach gradually at wake up time.
- Default alarm volume is U08 for radio volume set up between U00-U08 (before the unit turned OFF to standby mode).
- For a louder alarm, set up radio volume above U08 before the unit turned OFF.

Snooze Alarm

When the Alarm comes ON, press SNOOZE button to pause it for 9 minutes. Snooze Alarm will not repeat after one hour. To turn off Snooze Alarm mode, press the POWER button once.

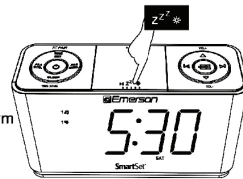


Listening to FM Radio

Press the Power button to turn ON the unit and press SOURCE button to change to Radio Mode ("MHz" On)

Power on:

A: Switch to Radio Mode (Press SOURCE button)

 B: Tuning to FM Station (Either press Tune Up or Tune Down to your desired station)

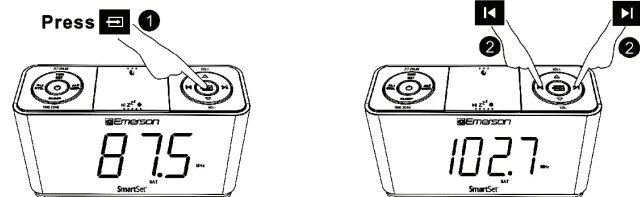


C: Auto Searching/Scanning FM Stations (Press the Tune Up or Turn Down button for 2 seconds and release)

Searching will stop at a station with acceptable reception




 D: Storing Favorable Station to Memory (20 stations can be stored)

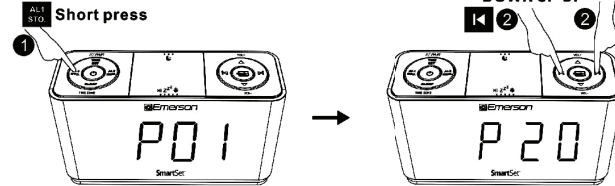

- At Radio Mode, Press Tune Down or Tune Up button to search your desired station.
- Press the AL1/STO. button, Program Number "P01" will be blinking on the display, press Tune Down or Tune Up to change the program number from "P01" to "P20", once you selected the desired program number, press the AL1/STO. again and the favorable station will be stored to the selected program number.

 
E: Recall Favorable Station to Memory

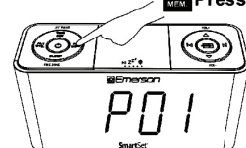

- Press the AL2/MEM button, Program number will be shown on the display, press Tune Down or Tune Up to select your stored program number and listen to your favorable station.
- Note: Keep the clock radio away from other electronic devices to avoid radio interference. For better reception, fully extend and adjust the position of the FM antenna (cable)

Pairing Bluetooth Speaker

 
- Press the POWER button to turn the unit ON
- Press the SOURCE button to select Bluetooth (bt) mode ("BT" flashes for pairing)
- Enable your Bluetooth device and select CKS1507 from its Available/ Paired device list. After pairing successfully, the unit will prompt and "BT" will become solid
- Automatic connection with your Bluetooth devices is possible if they have been paired successfully with this unit before.
- After paired, you can play your music through this Bass Boosted Bluetooth Speaker.

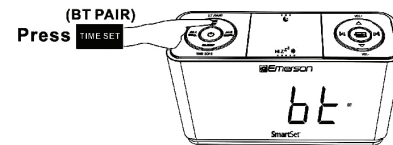

Sleeping to Music Timer

Press the Power button to turn ON the unit, and press SOURCE button to select either FM Radio, Bluetooth or AUX mode to play radio or music

 
Sleep mode setting

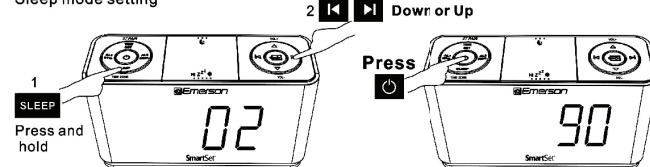

- Press and hold the SLEEP button. The display will show the sleep timer.
- Press Up or Down button to choose your desired sleep timer (02-90 minutes).
- Release all buttons, the sleep timer will start counting down and turn off the unit when the desired sleep timer elapsed.
- To display the sleep timer during count down process, press the SLEEP button.
- To cancel the sleep timer during count down process, press the POWER button to shut off the unit.


3- Level Dimmer Control

 The brightness of the clock display can be set at High/Medium/Low level in standby, Radio and AUX modes with a press of zzz button

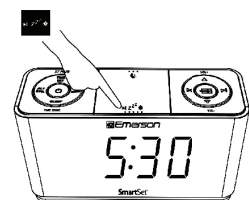


Night Lighting

 Press the NIGHT LIGHT button to turn the blue nightlight ON or OFF when needed

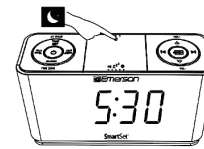


Enjoying Audio Source via AUX IN Jack

 Press the POWER button to turn the unit ON Press SOURCE button until "AUX" appears on LED display, connect your audio or mobile device and play music through the unit with the 3.5mm earphone jack.

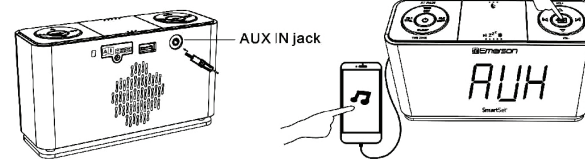

USB for Charging

 Output 5V up to 1.5A for charging mobile phone or portable digital audio player.


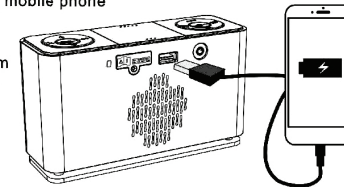


Note: Charging current drawn from the unit may vary due to different USB charging cable condition or battery charging characteristics

Changing the Lithium Battery



  - When the LOW BATT indicator "Flashes", you should change the battery that is used for backup clock and alarm setting as
- It will be 'Off' when you have changed the battery in correct instructions.

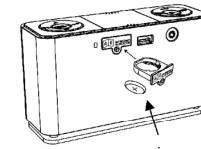

The battery backup is intended for short power outages only. The unit's primary functions cannot run on the battery backup alone. This unit uses a button cell battery that will last up to 1 year and maintains the time.

WARNING

DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE. DO NOT INGEST BATTERY. CHEMICAL BURN HAZARD

The apparatus must not be exposed to dripping or splashing and objects filled with liquids, such as vases, must not be placed on the apparatus.



This marking indicates that this product should not be disposed of with other household wastes throughout the country. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle this unit responsibly so as to promote the re-use of material resources. To return your used device, please use return and collection systems or contact the retailer where the product was purchased as they know how to safely recycle this product.

Care and Maintenance

Care Of Cabinets

If the cabinet becomes dusty, wipe it with a soft cloth. If the cabinet becomes smudged or dirty, clean it with a soft, slightly dampened cloth. Never allow water or any liquid to get inside the cabinet. Never use any abrasive cleaners or cleaning pads as these will damage the finish of your radio.

Lithium Battery Precautions

- Dispose of the old battery properly. Do not leave it lying around where a young child or pet could play with or swallow it. If the battery is swallowed, contact a physician immediately.
- The battery may explode if mistreated. Do not attempt to recharge it or disassemble it. Do not dispose of the old battery in a fire.

REFURBISHED PRODUCT LIMITED THIRTY DAY WARRANTY

The **Refurbished Product Service Center** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of THIRTY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the **Refurbished Product Service Center** will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center
13225 Marquardt Avenue Santa Fe Springs, CA 90670

WARRANTY REPAIR INFORMATION

If you need service on your unit during the 30 day warranty period; please go to www.ConsumerServiceRefurbish.com or call the Refurbished Product Service Center at 562-946-3531 to obtain the required claim number. Once you obtain your claim number, pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt.

Send the unit freight prepaid and insured to:

Refurbished Product Service Center,
Att: Customer Service Department 13225 Marquardt Avenue Santa Fe Springs, CA 90670

Your unit will be promptly exchanged and returned to you.

We will refuse to accept delivery of the returned unit unless the assigned claim number appears on the outside of the shipping carton.

Owner's Information

(Keep for your permanent records)

NAME: _____

ADDRESS: _____

CITY: _____ STATE: _____ ZIP CODE: _____

PHONE: _____ E-MAIL: _____

MODEL: _____ SERIAL NO.: _____

Printed in Mexico

SC: 02.15.2018

OBPN: CKS1507-20170408-04

PAGS: TAB

SHNMDL:CKS1507_B

804108515

