

# SONY

## Sound Bar 804106572

### WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

The unit is not disconnected from the mains as long as it is connected to the AC outlet, even if the unit itself has been turned off.

To reduce the risk of fire, do not cover the ventilation opening of the appliance with newspapers, tablecloths, curtains, etc.

Do not expose the appliance to naked flame sources (for example, lighted candles).

To reduce the risk of fire or electric shock, do not expose this appliance to dripping or splashing, and do not place objects filled with liquids, such as vases, on the appliance.

As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

As the main plug of AC power adapter is used to disconnect the AC power adapter from the mains, connect it to an easily accessible AC outlet. Should you notice an abnormality in it, disconnect it from the AC outlet immediately.

### Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

Do not expose batteries or appliances with battery-installed to excessive heat, such as sunshine and fire. Indoor use only.

### For the Bar Speaker

The nameplate and date of manufacture are located on the bottom of the Bar Speaker.

### For the AC adapter

Labels for AC adapter Model No. and Serial No. are located at the bottom of AC adapter.

### For the customers in the U.S.A.

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Properly shielded and grounded cables and connectors must be used for connection to host computers and/or peripherals in order to meet FCC emission limits.

**CAUTION**  
You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

This equipment must not be co-located or operated in conjunction with any other antenna or transmitter. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

**For the customers in Canada**  
Properly shielded and grounded cables and connectors must be used for connection to host computers and/or peripherals.

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

13) Unplug this apparatus during lightning storms or when unused for long periods of time.

14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

The following FCC statement applies only to the version of this model manufactured for sale in the U.S.A. Other versions may not comply with FCC technical regulations.

**NOTE:**  
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

### About these operating instructions

- The instructions in these Operating Instructions describe the controls on the remote control.
- Some illustrations are presented as conceptual drawings, and may be different from the actual products.
- The default settings are underlined on each feature description.

 
### What's in the Box

- Bar Speaker
  - AC adapter
  - Subwoofer
  - AC power cord (mains lead)
  - Remote control
  - Optical digital cable
- (Batteries not included)

### Guide to Parts and Controls

Details are omitted from the illustrations.

#### Bar Speaker (Main Unit)

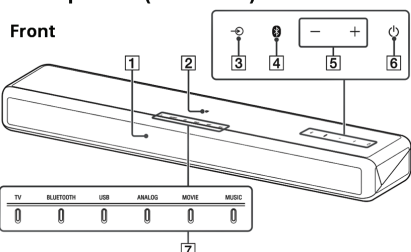

- 1 Remote control sensor**  
Point the remote control at the remote control sensor to operate the system.
- 2 N-Mark**  
When using the NFC function, touch your NFC-compatible device to the mark.
- 3 (input select) button**
- 4 BLUETOOTH PAIRING button (page 20)**
- 5 +/- (volume) buttons**
- 6 (power) button**  
Turns on the system or sets it to standby mode.
- 7 Indicators**  
For details, see "About the indicators on the main unit"

### About the indicators on the main unit

 
Lighting and flashing of the indicator(s) on the main unit indicate the input or status of the input device.

Indicators	Status
TV	<ul style="list-style-type: none"> <li>• Lights: TV input is selected.</li> <li>• Flashes once: While changing the volume/subwoofer volume.</li> </ul>
BLUETOOTH	<ul style="list-style-type: none"> <li>• Lights in blue: BLUETOOTH connection is established (BLUETOOTH input is selected).</li> <li>• Flashes once: While changing the volume/subwoofer volume.</li> <li>• Flashes quickly in blue: During pairing standby status.</li> <li>• Flashes in blue: BLUETOOTH connection is being attempted.</li> </ul>
USB	<ul style="list-style-type: none"> <li>• Lights: USB input is selected.</li> <li>• Flashes once: While changing the volume/subwoofer volume.</li> <li>• Flashes quickly: While reading data of the connected USB device.</li> <li>• Flashes twice repeatedly: When connecting an unsupported device.</li> </ul>
ANALOG	<ul style="list-style-type: none"> <li>• Lights: Analog input is selected.</li> <li>• Flashes once: While changing the volume/subwoofer volume.</li> </ul>
MOVIE MUSIC	<ul style="list-style-type: none"> <li>• Light(s): Sound effect is selected.</li> </ul>

The indicators flash when turning on/off the function setting or operating the remote control.

Indicators	Status
USB ANALOG	<ul style="list-style-type: none"> <li>• Flash twice: One of the following functions is set to on. <ul style="list-style-type: none"> <li>- Dolby DRC</li> <li>- BLUETOOTH standby</li> <li>- Auto standby</li> <li>- Sofa mode</li> <li>- Attenuation</li> </ul> </li> </ul>
USB	<ul style="list-style-type: none"> <li>• Flashes twice: One of the following functions is set to off. <ul style="list-style-type: none"> <li>- Dolby DRC</li> <li>- BLUETOOTH standby</li> <li>- Auto standby</li> <li>- Sofa mode</li> <li>- Attenuation</li> </ul> </li> </ul>
MOVIE MUSIC	<ul style="list-style-type: none"> <li>• Flash twice: The audio channel is set to Main or one of the following functions is set to on. <ul style="list-style-type: none"> <li>- Night mode</li> <li>- Voice mode</li> </ul> </li> <li>• Light for 2 seconds and turn off: The sound effect is set to CLEAR AUDIO+.</li> <li>• Flash alternately: The subwoofer is attempting to connect to the system with the Secure Link function.</li> </ul>
MOVIE	<ul style="list-style-type: none"> <li>• Flashes twice: The audio channel is set to Sub or one of the following functions is set to off. <ul style="list-style-type: none"> <li>- Night mode</li> <li>- Voice mode</li> </ul> </li> </ul>
MUSIC	<ul style="list-style-type: none"> <li>• Flashes twice: The audio channel is set to Main/Sub.</li> </ul>
TV USB ANALOG	<ul style="list-style-type: none"> <li>• Flash three times: The volume/subwoofer volume level is set to maximum/minimum.</li> <li>• Flash repeatedly: The sound is muted.</li> </ul>
TV BLUETOOTH USB ANALOG MOVIE MUSIC	<ul style="list-style-type: none"> <li>• Flash for 10 seconds and the system is turned off: The protection feature is activated.</li> <li>• Flash slowly: The system enters standby mode by the auto standby function.</li> </ul>

### Subwoofer

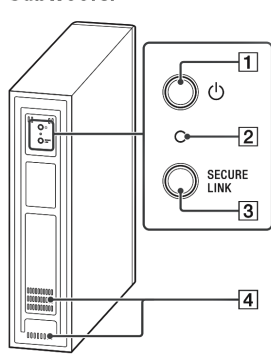


- 1 (power) button**  
Turns on the subwoofer or sets it to standby mode.
- 2 Power indicator**
  - Lights in red: The subwoofer is in standby mode
  - Lights in green: The subwoofer is connected to the system
  - Lights in orange: The subwoofer is connected to the system with the Secure Link function
  - Flashes in green: The subwoofer is attempting to connect to the system
  - Flashes in orange: The subwoofer is attempting to connect to the system with the Secure Link function
  - Flashes in red: The protection feature of the subwoofer is activated.
- 3 SECURE LINK button**
- 4 Ventilation holes**  
For safety, do not block the ventilation holes.

### Remote Control

 Some buttons function differently depending on how long the button is pressed. The icons below indicate how long to press the button.


- : Press the button.
- : Press and hold the button for five seconds.

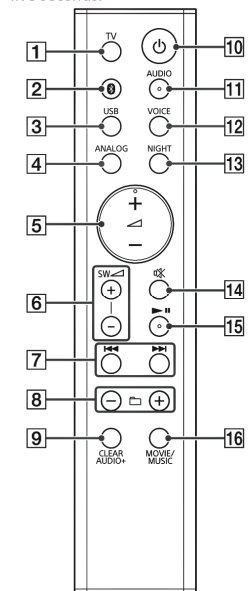

- 1 TV**  
Selects the TV connected to the TV IN (OPTICAL) jack for output sound.
- 2 BLUETOOTH**  
Activates the BLUETOOTH function on the system.
- 3 USB**  
Selects the USB connected to the (USB) port for output sound.
- 4 ANALOG**
  - : Selects the TV connected to the ANALOG IN jack for output sound.
  - : Turns on/off the audio attenuation function.
- 5 +/- (volume) +/-**  
Adjusts the volume.
- 6 SW +/- (subwoofer volume) +/- (page 19)**  
Adjusts the volume of the subwoofer.
- 7 (previous/next)**  
Go to the beginning of the previous or next file.
- 8 (select)**  
Switches between previous and next folder to be played for USB playback.
- 9 CLEAR AUDIO+**
  - : Selects CLEAR AUDIO+ for the sound effect.
  - : Activates the secure link mode.
- 10 (power)**  
Turns on the system or sets it to standby mode.
- 11 AUDIO\***
  - : Selects the audio channel for Dolby Digital multiplex broadcast.
  - : Turns on/off the Dolby DRC function.
- 12 VOICE**
  - : Turns on/off the voice mode.
  - : Turns on/off the sofa mode.
- 13 NIGHT**
  - : Turns on/off the night mode.
  - : Turns on/off the BLUE TOOTH standby mode.
- 14 (muting)**  
Turns off the sound temporarily.
- 15 (play/pause)\***  
Pauses or resumes playback.
- 16 MOVIE/MUSIC**
  - : Selects MOVIE or MUSIC for the sound effect.
  - : Turns on/off the auto standby function.


\* The AUDIO, (play/pause), and +/- buttons have a tactile dot. Use it as a guide during operation.

### Listening to the Sound Listening to a TV and Other Devices

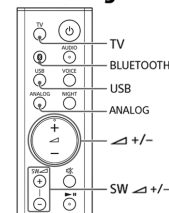 


- 1 Press TV, ANALOG, BLUETOOTH, or USB to select the input that the desired device is connected.**

 The indicator of the selected input on the main unit lights up.

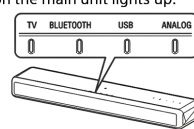


### Listening to Music on a USB Device

 You can play music files stored on a connected USB device. For playable types of files, see "Playable Types of Files" (page 33).

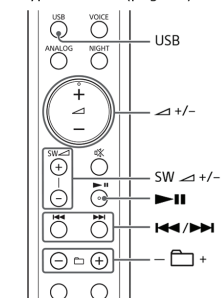

 - 1 Connect the USB device to the (USB) port.**

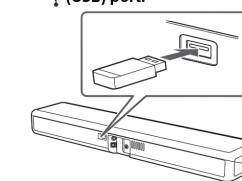

- 2 Press USB.**
- 3 Press (play/pause).**

- 4 Press (previous) + (next) to switch between previous and next folder to be played.**

You can go to the beginning of the previous or next file by using (previous) + (next) on the remote control.

**TV**  
TV that is connected to the TV IN (OPTICAL) jack

**ANALOG**  
TV that is connected to the ANALOG IN jack

**BLUETOOTH**  
BLUETOOTH device that supports A2DP. For details, see "Listening to Music/Sound with the BLUETOOTH Function"


**USB**  
USB device that is connected to the (USB) port. For details, see "Listening to Music on a USB Device".

**Tip**  
If you press (input select) on the main unit, the device changes cyclically as follows. TV → BLUETOOTH → USB → ANALOG

### Playback Order of Music

 If there is a folder on the USB device, music files are played in order from the music files on the first hierarchy.

The playback order of music files differs depending on the file system of the USB device.

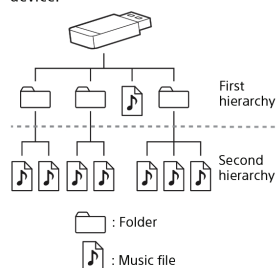


File system	Playback order of the folder and music file
FAT32	Recorded date and time order (old to new)
NTFS	Folder or file name order

**Tip**  
You can select the playback method by using SongPal.

### Selecting the Sound Effect
 
### Setting the Sound Effect that is Tailored to Sound Sources

You can easily enjoy pre-programmed sound effects that are tailored to different kinds of sound sources.

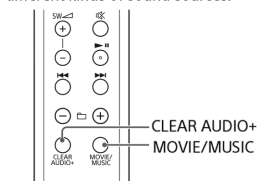

Press CLEAR AUDIO+ or MOVIE/MUSIC to select the sound effects. When selecting MOVIE or MUSIC, press MOVIE/MUSIC repeatedly.


**CLEAR AUDIO+**  
You can enjoy the sound with Sony-recommended sound field. Sound field is automatically optimized according to playback content and function. The MOVIE and MUSIC indicators light up for 2 seconds and turn off.

**MOVIE**  
Sounds are played back with surround effects, and they are realistic and powerful, making them suitable for movies. The MOVIE indicator lights up.

**MUSIC**  
Sound effects are optimized for listening to music. The MUSIC indicator lights up.

### Enjoying Clear Sound with Low Volume at Midnight (NIGHT)

 You can compresses sound in accordance with the information contained in the content by setting the night mode to on. Sound is output at low volume with minimum loss of fidelity and clarity of dialogue.

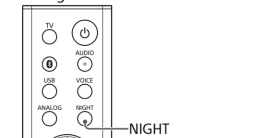

Press NIGHT to set the function to on or off.


**Night mode on**  
The MOVIE and MUSIC indicators flash twice.

**Night mode off**  
The MOVIE indicator flashes twice.

**Note**  
When you turn the system off, the night mode is set to off automatically.

### Making Dialogues Clearer (VOICE)

 
You can make dialogs clearer by setting the voice mode to on.

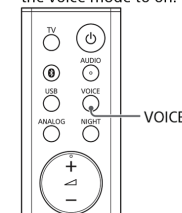

Press VOICE to set the function to on or off.

**Voice mode on**  
The MOVIE and MUSIC indicators flash twice.

 **Voice mode off**  
The MOVIE indicator flashes twice.

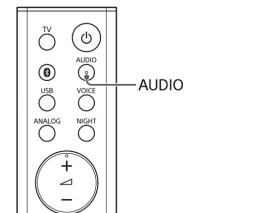


Hold down AUDIO for 5 seconds to set the function to on or off.

**Dolby DRC on**  
The USB and ANALOG indicators flash twice.

**Dolby DRC off**  
The USB indicator flashes twice.

### Adjusting the Volume of the Subwoofer

 The subwoofer is designed for playback of bass or low frequency sound.

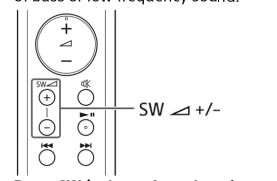

Press SW (subwoofer volume) +/- to adjust the volume of the subwoofer.

**Note**  
When the input source does not contain much bass sound, such as in TV programs, the bass sound from the subwoofer may be difficult to hear.

### Making Sound with Low Volume Easy to Hear by Compressing Dynamic Range

This function works only when playing the Dolby Digital signal of the device that is connected to the TV IN (OPTICAL) jack. When you set Dolby DRC (Dynamic Range Control) to on, dynamic range of the audio signal (range between the maximum and minimum volume) is compressed and sound with low volume is easy to hear.

 
 







# SONY®

## Sound Bar

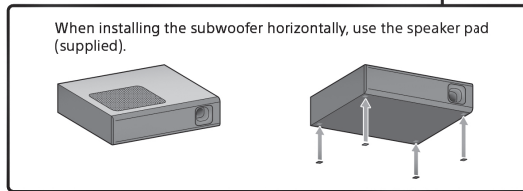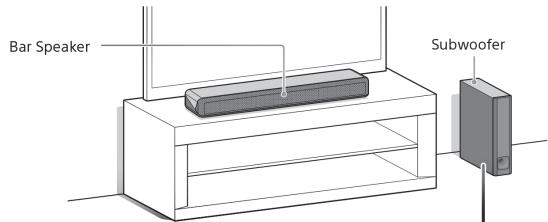

### What's in the box


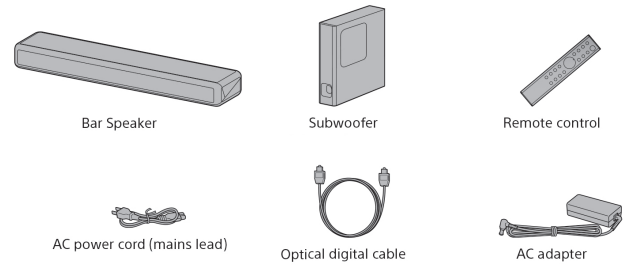 


### To set up the remote control



# 1 Connecting with a TV

  
Is there an optical digital jack on your TV?

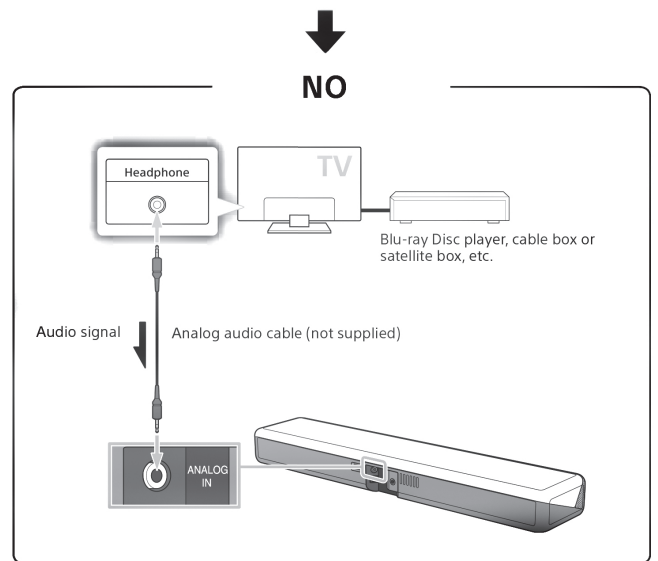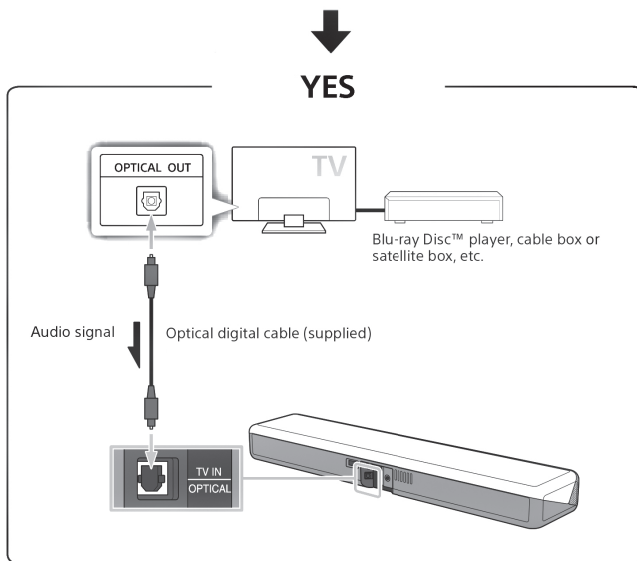


**Note**


- If the TV's headphone jack also serves as an audio output jack, check the TV's audio output settings. For details, refer to the TV's operating instructions.
- Make sure that the cables are firmly inserted.
 
## 2 Turning on the system

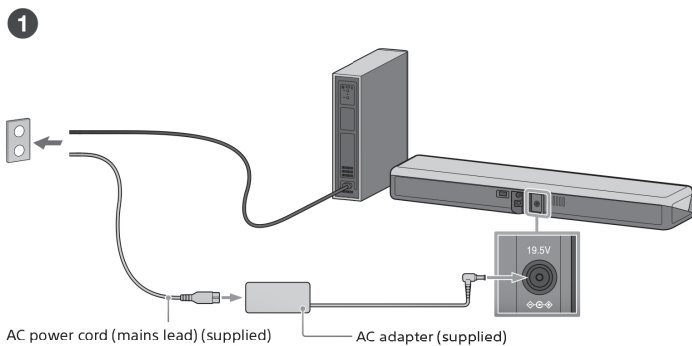

 AC power cord (mains lead) (supplied) AC adapter (supplied)

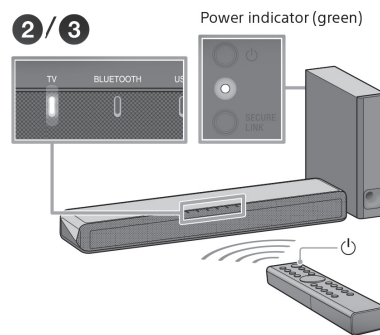


- 1 Connect the AC adapter and AC power cord (mains lead), then connect the AC adapter to the Bar Speaker. Connect the AC power cords (mains leads) of the Bar Speaker and subwoofer to the AC outlets (mains).
- 2 Press  (power) on the remote control of the system. An input indicator lights up.
- 3 Confirm that the power indicator of the subwoofer is lit in green. If not, refer to "Subwoofer" or "Troubleshooting" in the Operating Instructions (separate document).

### Note

 
- Do not place magnetic cards on the system or near the system.
- Do not place metal objects other than a TV around the system. Wireless functions may become unstable.

### To install the subwoofer under a sofa

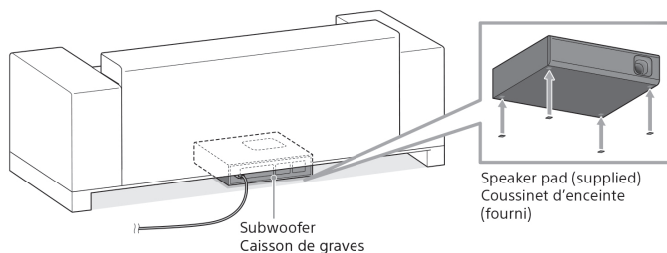




 - 1 Put the speaker pads on the subwoofer, then place the subwoofer under a sofa with the speaker facing upward.
- 2 Hold down VOICE on the remote control of the system for 5 seconds. The USB and ANALOG indicators flash twice, then the sofa mode is activated. The sound quality is changed to suit when the subwoofer is installed under a sofa.
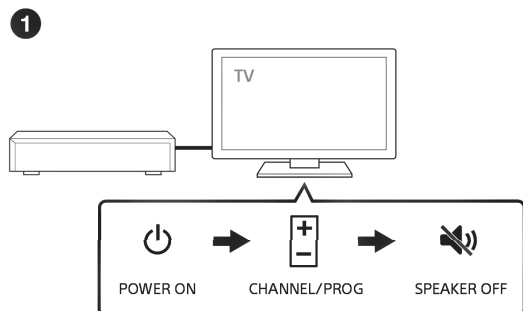
## 3 Listening to the sound

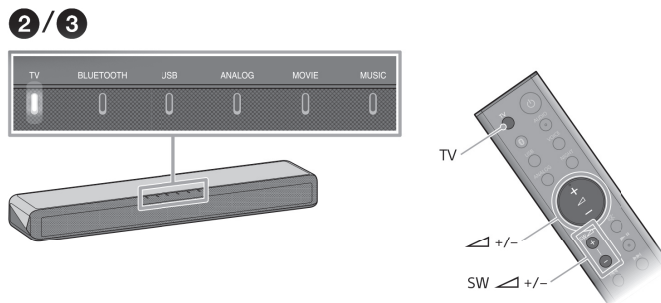 

- 1 Turn on the TV, then select the desired program by operating the TV. When sound comes from the TV speakers, try one of the following to silence the TV speakers. For details, refer to the TV's operating instructions.
  - Change the TV setting to output the sound from external speakers.
  - Turn the TV volume down as minimal as possible.



- 2 Press TV on the remote control of the system to turn on the TV indicator. If you connected your TV to the ANALOG jack in step 1, press ANALOG on the remote control of the system.
- 3 Adjust the volume. Adjust the volume by pressing  +/- on the remote control of the system. Adjust the volume of the subwoofer by pressing SW  +/- on the remote control of the system.

