



EMERIL LAGASSE

BLENDER & BEYOND PLUS™



Please read this manual carefully before operating your unit and retain for future reference.

Owner's Manual

SAVE THESE INSTRUCTIONS – FOR HOUSEHOLD USE ONLY

MODEL: HB2248/HB2248S POWER: DC 7.4V

When using electrical appliances, basic safety precautions should always be followed. Do not use the Emeril Lagasse™ Blender & Beyond Plus™ until you have read this manual thoroughly.

814100115



"Recipe book not included"



BLENDER & BEYOND PLUS™

Before You Begin

The **Emeril Lagasse Blender & Beyond Plus™** will provide you many years of delicious family meals and memories around the dinner table. But before you begin, it's very important that you read this entire manual, making certain that you are totally familiar with this appliance's operation and precautions.

Unit Specifications

Model Number	Battery Type	Battery Voltage	Speed (Min.-Max.)	Blending Jar Capacity	USB Type
HB2248S	18650 2000mAh	7.4V DC	10,000–15,000 r/min	800 mL	C
HB2248	18650 2000mAh	7.4V DC	10,000–15,000 r/min	800 mL	C

IMPORTANT SAFEGUARDS



WARNING

**PREVENT INJURIES! CAREFULLY
READ ALL INSTRUCTIONS
BEFORE USE!**

When using electrical appliances, basic safety precautions should be followed, including the following:

1. Read all instructions before using.
2. To protect yourself from electric shock, never immerse the appliance or the power cord in water or other liquids.
3. Avoid contact with moving parts.
4. Do not operate any appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
5. The use of attachments not recommended or sold by the manufacturer may cause fire, injury, or electric shock.
6. Do not use outdoors.
7. Do not let the power cord hang over the edge of the table or counter or touch hot surfaces, including the stove.
8. The blades are sharp. Handle carefully.
9. The appliance will not work with a 220-volt power supply and should not be used with a converter. Using the appliance with a converter could damage the appliance, the converter, and the outlet. Using a converter will invalidate the guarantee and any protection plan policy.
10. Do not plug the appliance into the power supply until it is fully assembled.
11. This appliance is not intended for use by children or by people with reduced physical, sensory, or mental capabilities or lack of experience and knowledge. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance.
12. Close supervision is necessary when any appliance is used by or near children.
13. Keep hands and utensils out of the container while blending to reduce the risk of severe injury to persons or damage to the appliance. A scraper may be used but must be used only when the appliance is not running.
14. Remove the beaters from the appliance before washing.
15. Keep hands and utensils away from moving blades or discs while processing food to reduce the risk of severe injury to people or damage to the food processor.
16. A scraper may be used but must be used only when the food processor is not running.

IMPORTANT SAFEGUARDS

17. To reduce the risk of injury, never place the cutting blade or discs on base without first putting the bowl properly in place. Be certain the cover is securely locked in place before operating the appliance. Never feed food by hand. Always use the food pusher.
18. Do not fill the bowl above the maximum marked capacity to avoid risk of injury due to damage to the cover or bowl.
19. Keep hands and utensils away from the cutting blade while chopping food to reduce the risk of severe injury to people or damage to the food chopper. A scraper may be used but only when the food chopper is not running.
20. Do not attempt to defeat the cover interlock mechanism.
21. Keep your hands, hair, and clothing – as well as spatulas and other utensils – away from beaters during operation to reduce the risk of injury to persons and/or damage to the appliance.

Electrical Safety

22. Do not use an extension cord. Plug the charger directly into an electrical outlet. Use only with the charger provided with the appliance. Do not attempt to use this charger with any other product. Likewise, do not attempt to charge this appliance with any other charger.
23. This appliance should be serviced only by qualified service technicians. Contact a Service Center.
24. Failure to follow these instructions can result in death, fire, or electrical shock.
25. **DO NOT** clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating risks of electric shock.
26. This appliance is for home use only. If the appliance is used improperly or for professional or semi-professional purposes or if it is not used according to the instructions in the user manual, the guarantee becomes invalid and HPC Brands will not be held liable for damages.
27. Do not incinerate this appliance even if it is severely damaged. The batteries can explode in a fire.
28. Use only with a Listed Class 2 Power Unit.
29. **SAVE THESE INSTRUCTIONS.**

**SAVE THIS
INSTRUCTION MANUAL.
FOR HOUSEHOLD USE ONLY.**

Parts & Accessories



- A.** Variable Speed Controller
- B.** Indicator Lights
- C.** Unlock Button
- D.** Power Button
- E.** Motor Housing
- F.** Angle Adjustment Button (on the back)
- G.** Blending Shaft
- H.** Blending Guard*
- I.** Storage Guard
- J.** Whisk Holder
- K.** Whisk

- L.** Beater Gear Box
- M.** Beaters
- N.** USB/AC Adaptor
- O.** USB-C Power Cord
- P.** Charging Base

Accessory type and quantity may vary depending on the model.

Instructions for Use

Before First Use

1. Read all material.
2. Unpack all listed contents from the packaging. Please make sure that your appliance has been shipped with the components that you ordered. Some accessories listed may be sold separately. Check everything carefully before use. If any part is missing or damaged, do not use this product. Contact a Service Contact.
3. Remove all packing materials from the appliance. Remove any clear or blue protective film on the components before use. Wash the components with soap and water.

Charging the Appliance

1. The appliance can be charged either by loading it into the Charging Base or by plugging a USB-C charger into the appliance.
2. When charging the appliance, the Indicator Lights show the appliance's power level:
 - a) Three Indicator Lights: 100% power.
 - b) Two Indicator Lights: 75% power.
 - c) One Indicator Light: 40% power.
 - d) When the last Indicator Light is flashing, the battery power is less than 30% and should be recharged soon.



Instructions for Use

General Use

- Make sure the appliance is fully charged prior to use.
- To start the appliance, first press the Unlock Button. The Indicator Lights will turn red. Then, press and hold the Power Button. The Indicator Lights will turn blue. If you release the Power Button, the appliance will stop operating but remain ready to use for 10 seconds. While the Indicator Lights are blue, you can release and press the Power Button as needed, such as to pulse. After 10 seconds, the Indicator Lights will turn off. In this state, you will need to press the Unlock Button again before pressing the Power Button to continue using the appliance.
- Use the Variable Speed Controller to set the speed of the appliance. Set the Variable Speed Controller to a low speed before starting the appliance. Once the appliance is running, adjust the speed as needed.
NOTE: During use, it is normal for suction to increase at the bottom of the container.

- When blending is complete, release the Power Button before removing the appliance from the mixture.
- The recommended time of use for the appliance is 1 minute of continuous use.

Indicator Lights

When you press the Unlock Button, one Indicator Light will turn red. When you press the Power Button within 10 seconds, the Indicator Lights will turn blue. The number of lights displayed indicates the appliance's battery charge (see the "Charging the Appliance" section).


Operating Tips

- Cut solid foods into ½-inch (13 mm) pieces for easier mixing or chopping.
- Use an up and down motion for blending and pureeing.
- If using the blender directly in a saucepan, be sure to remove the pan from the heat before using the blender.

Adjusting the Appliance's Orientation

The appliance can be angled to make different activities easier. To adjust the orientation of the appliance:

1. Press the Angle Adjustment Button.
2. Rotate the bottom half of the appliance until the appliance clicks into place in the desired orientation.
3. The appliance can be rotated to three different angles:
180°: Ideal for immersion blending.
135°: Ideal for whisk blending.
90°: Ideal for beating.

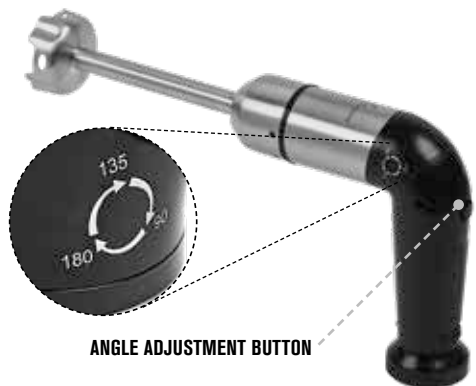

ANGLE ADJUSTMENT BUTTON

Using the Accessories

Using the Beaters

1. Attach the Beaters to the Beater Gear Box.
2. Attach the Beater Gear Box to the Motor Housing and twist until they lock into place.
3. Lower the appliance into the vessel containing your ingredients. Use the Variable Speed Controller to select a speed. Press the Unlock Button and then press and hold the Power Button to turn on the appliance.
4. When you are done, release the Power Button to stop. After 10 seconds, the Indicator Lights will turn off.



Using the Accessories

Using the Whisk

1. Attach the Whisk to the Whisk Holder and then the Motor Housing and twist until they lock into place.
2. Lower the appliance into the vessel containing your ingredients. Use the Variable Speed Controller to select a speed. Press the Unlock Button and then press and hold the Power Button to turn on the appliance.
3. When you are done, release the Power Button to stop. After 10 seconds, the Indicator Lights will turn off.



Care & Cleaning

Cleaning

- Power off and unplug the appliance before cleaning.
- All blades are very sharp. Handle carefully.
- Use only a damp cloth to clean the Motor Housing and Chopper Bowl Lid.
- Do not immerse the Motor Housing in water.
- Remove the Blade Guard before cleaning the Blender Shaft.

- After processing salty food, rinse the parts that were used immediately.
- When processing colorful food, the plastic parts of the appliance can become discolored. Wipe these parts with vegetable oil before cleaning.

Storage

- Always place the plastic guard on the Chopper Blade before storing. Store the appliance and its parts in a clean, dry place.

PRINTED IN MEXICO
SC: 11.02.23
Ebrd:J.M
SHNMDL: HB2248S_B
OBPN:EMERIL-BBP_IB_WM_ENG_V2_220627



814100115