



OWNER'S GUIDE COLD PRESS JUICER

"Recipe book is not included"

804106502

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ CAREFULLY BEFORE USE • FOR HOUSEHOLD USE ONLY

WARNING

To reduce the risk of injury, fire, electrical shock or property damage, basic safety precautions must always be followed, including the following numbered warnings and subsequent instructions. Do not use appliance for other than intended use.

- 1 Read all instructions prior to using the appliance and its accessories.
- 2 Carefully observe and follow all warnings and instructions. This unit contains electrical connections and moving parts that potentially present risk to the user.
- 3 **DO NOT** submerge the motor base or control panel in water or other liquids. **DO NOT** spray motor base or control panel with any liquid.
- 4 Take inventory of all contents to ensure you have all parts needed to properly and safely operate your appliance.
- 5 Always make sure pulp spout is securely in place before motor is turned on. **DO NOT** unfasten parts while juicer is in operation.
- 6 Be sure to turn the appliance off after each use. Make sure the motor stops completely before disassembling.
- 7 Turn the appliance **OFF**, then unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning. To unplug, grasp the plug by the body and pull from the outlet. **NEVER** unplug by grasping and pulling the flexible cord.
- 8 Before use, wash all parts that may contact food. Follow washing instructions covered in this instruction manual.
- 9 Before each use, inspect auger for damage. If a auger is bent or damage is suspected, contact a service center.
- 10 **DO NOT** use this appliance outdoors. It is designed for indoor household use only.
- 11 This appliance has a polarized plug (one prong is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** modify the plug in any way.
- 12 **DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. This appliance has no user-serviceable parts. If damaged, contact a service center.
- 13 This appliance has important markings on the plug blade. The entire supply cord is not suitable for replacement. If damaged, please contact a service center.

- 14 Extension cords should **NOT** be used with this appliance.
- 15 To protect against the risk of electric shock, **DO NOT** submerge the appliance or allow the power cord to contact any form of liquid.
- 16 **DO NOT** allow the cord to hang over the edges of tables or counters. The cord may become snagged and pull the appliance off the work surface.
- 17 **DO NOT** allow the unit or the cord to contact hot surfaces, including stoves and other heating appliances.
- 18 **ALWAYS** use the appliance on a dry and level surface.
- 19 **DO NOT** allow children to operate this appliance or use as a toy. Close supervision is necessary when any appliance is used near children.
- 20 This appliance is **NOT** intended to be used by people with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 21 **ONLY** use attachments and accessories that are provided with the product or are recommended by SharkNinja. The use of attachments, including canning jars, not recommended or sold by SharkNinja may cause fire, electric shock, or injury.
- 22 **DO NOT** put your fingers or other objects into the juicer opening while it is in operation. If food becomes lodged in opening, use the tamper or another piece of fruit or vegetable to push it down. When this method is not possible, turn the motor off and disassemble juicer to remove the remaining food.
- 23 Keep hands, hair, and clothing out of the container when loading and operating.
- 24 During operation and handling of the appliance, avoid contact with moving parts.
- 25 **DO NOT** use the appliance if the rotating sieve is damaged.
- 26 **DO NOT** operate the appliance without the pulp container in place.
- 27 **DO NOT** microwave container or accessories provided with the appliance.
- 28 **NEVER** leave the appliance unattended while in use.

- 29 **DO NOT** juice hot liquids. Doing so may result in pressure buildup and steam exposure that can pose a risk of the user being burned.
- 30 **NEVER** operate the appliance without lids and caps in place. **DO NOT** attempt to defeat the interlock mechanism. Ensure attachments are properly installed before operation.
- 31 Before operation, ensure all utensils are removed from container. Failure to remove utensils can cause container to shatter and potentially result in personal injury and property damage.
- 32 **DO NOT** attempt to remove the feed chute chamber from the motor base while the auger is still spinning. Allow the appliance to come to a complete stop before removing attachments.
- 33 If the appliance is overloaded, the unit will temporarily disable the motor. Wait approximately 2 minutes before using again.

- 34 **DO NOT** juice hot ingredients.
- 35 Remove the seeds and pits from such as mangoes or plums, as well as peels and tough skins from fruits such as oranges, lemons, and limes, as they could damage the unit.
- 36 **DO NOT** add water to the feed chute while the unit is operating to clean the unit.
- 37 **DO NOT** submerge the motor base or control panel in water or other liquids.
- 38 **DO NOT** spray motor base or control panel with any liquid.
- 39 **DO NOT** attempt to sharpen auger.
- 40 Turn off the appliance and unplug the motor base before cleaning.
- 41 **DO NOT** add frozen fruit, frozen vegetables, or ice to the juicer.
- 42 Consumers with sensitivity to pulp may wish to strain their juice as a precaution.

 
 
TECHNICAL SPECIFICATIONS

Voltage: 120V~, 60Hz

SAVE THESE INSTRUCTIONS

PARTS

- A Cleaning Brush
- B Tamper
- C Food Tray
- D Feed Chute Chamber with Anti-Drip Lever
- E Auger
- F Black Filter (no pulp)
- G Gray Filter (some pulp) (not available with all models)
- H Orange Filter (lots of pulp)
- I Pulp Spout
- J Juice Jug
- K Pulp Container
- L Motor Base (power cord not shown)

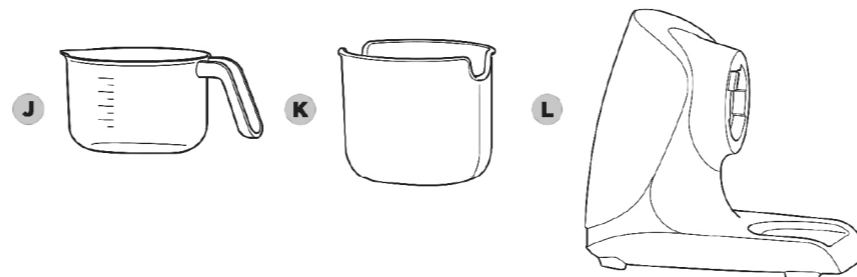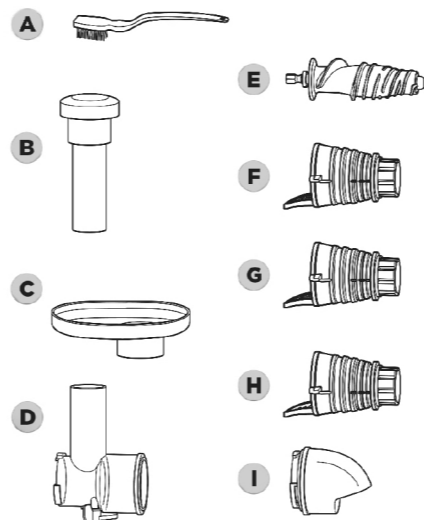

"NOTE: Accessories may vary depending on the model. Refer to quick guide, if available. The images shown here are for illustrative purposes only and may be subject to change."

BEFORE FIRST USE

IMPORTANT: Review all warnings on before proceeding.

NOTE: All attachments are BPA free and dishwasher safe.

- 1 Remove all packaging materials from the unit.
- 2 Wash parts in warm, soapy, water, then thoroughly rinse and air-dry all parts.
- 3 Wipe control panel with a soft cloth. Allow it to dry completely before using.

FEATURES

USING THE CONTROL PANEL

 


START/STOP
Press once to start continuous running up to 12 minutes; press again to stop.

REVERSE
If the feed chute chamber becomes blocked or ingredients are not processing, press and hold REVERSE. There will be a beep and a brief pause, then the auger will rotate in the opposite direction. Release REVERSE to stop. Repeat as needed. Press START/STOP to resume normal operation.

USING THE FILTERS FOR PULP CONTROL

Control the amount of pulp by choosing the desired filter.

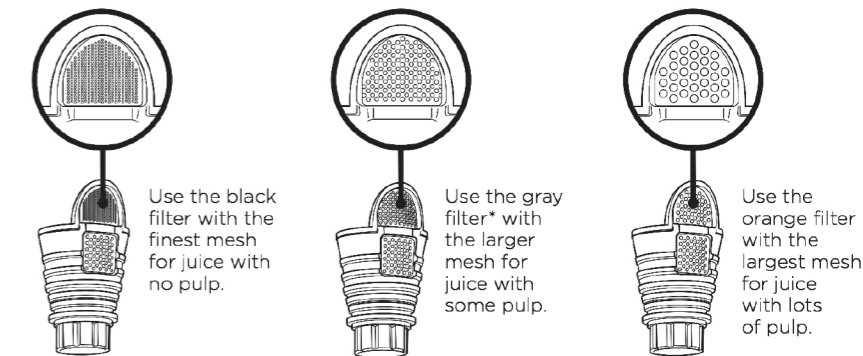


*not available with all models

TIP: Depending on the seasonality of ingredients, you may experience lower juice and pulp yield while using the No-Pulp filter. If this occurs, we recommend using the Some Pulp filter.


USING THE JUICER

IMPORTANT: Review all warnings on before proceeding.

 - 1 Plug in motor base and place on a clean, dry, level surface such as a countertop or table.
 - Align the metal portion of the filter with the bottom of the auger.
- 2 Insert the auger into the feed chute chamber, then attach the desired filter onto the auger, with the metal portion of the filter on the bottom of the auger.
- 3 Install the pulp spout in the feed chute chamber, on top of the filter, by installing at an angle then turning counterclockwise to lock in place.
- 4 Install the assembled feed chute chamber on the motor base at an angle, then turn counterclockwise until it clicks into place.

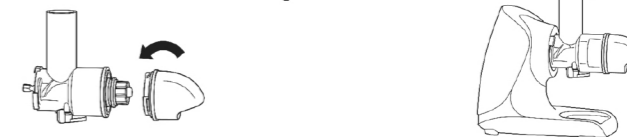

 - 5** Install the food tray on the top of the feed chute.

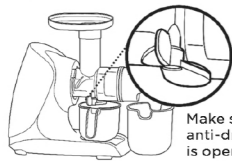


Make sure the anti-drip lever is open before juicing.

- 6** Place the pulp container under the pulp spout, then place the juice jug under the anti-drip lever on the feed chute chamber.


IMPORTANT: DO NOT add frozen fruits and vegetables or ice to the unit.

 NOTE: If the feed chute chamber becomes blocked or ingredients are not processing, press and hold REVERSE. There will be a beep and a brief pause, then the auger will rotate in the opposite direction. Release REVERSE to stop. Repeat as needed. Press START/STOP to resume normal operation.

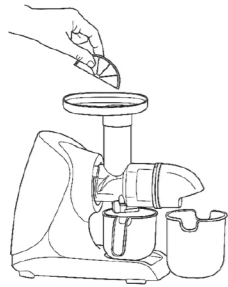


- 7** Select START/STOP, then gradually add ingredients to the feed chute. For best results, allow juicer to process each ingredient before adding more to the feed chute. Use the tamper to push ingredients down through the feed chute, as needed.

 - 8** When juicing is complete, select START/STOP, then close the anti-drip lever. Stir juice and serve.

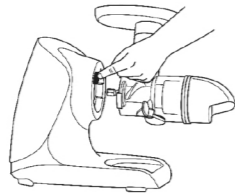

 - 9** To disassemble, press and hold the RELEASE button while turning the feed chute chamber clockwise and remove from motor base.

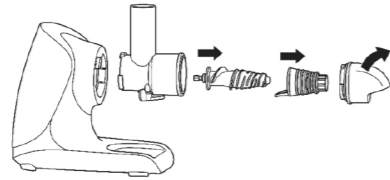

- 10** Remove the pulp spout from the feed chute chamber by turning clockwise. Then, remove the filter and auger.

 
- 11** Unplug the unit when finished. Refer to the Care & Maintenance section for cleaning and storage instructions.

CARE & MAINTENANCE

CLEANING

IMPORTANT: DO NOT add water to the feed chute while the unit is operating to clean the unit.

- **Hand-Washing**
Separate all parts and wash in warm, soapy water with a soft cloth. Thoroughly rinse and air-dry all parts.
- **Dishwasher**
All parts, except the motor base, are dishwasher safe.
- **Motor Base**
Unplug the motor base before cleaning. Wipe with a clean, damp cloth.
DO NOT use abrasive cloths, pads, or brushes to clean the base.
- **Using a Cleaning Brush**
Use a cleaning brush to clean hard-to-reach places, as well as remove excess residue.



Cleaning Brush (not supplied)

Use the end of the cleaning brush to clear any buildup left over after juicing.



(not supplied)

Use the bristle side of the cleaning brush to clean the filter, if needed.

STORING

For cord storage, wrap cord with hook-and-loop fastener near the back of the motor base.

DO NOT wrap the cord around the bottom of the base for storage.

Store the auger and filter assembled in the feed chute chamber with the pulp spout installed. Place the juice jug into the pulp container for easy storage.

OVERLOADING THE UNIT

This unit features a unique safety system that prevents damage to the motor and drive system should you inadvertently overload the motor. If the unit is overloaded, the motor will be temporarily disabled. Should this occur, wait 2 minutes, then press START/STOP to start the unit.

If your unit needs servicing, please contact a service center.



Dishwasher

All parts, except the motor base, are dishwasher safe.



Hand-Washing

Wash parts in warm, soapy water. Use the included cleaning brush for hard-to-clean areas, such as the filter.

TROUBLESHOOTING GUIDE

WARNING: To reduce the risk of shock and unintended operation, unplug unit before troubleshooting.

The REVERSE program is not operating.

- After pressing and holding REVERSE, there will be a beep and a brief pause, then the auger will rotate in the opposite direction. Release REVERSE to stop. Repeat as needed. Press START/STOP to resume normal operation.

There is a buildup of pulp in the feed chute chamber.

- There may be a clog in the pulp spout. Press START/STOP to stop the unit, then remove the pulp spout. Use the end of the cleaning brush to clear the clog, then reinstall the pulp spout to the feed chute chamber. Resume juicing.
- For best results, allow juicer to process each ingredient before adding more to the feed chute. Use the tamper to push ingredients down through the feed chute, as needed.

The unit stopped working and is beeping.

- The unit was overloaded with ingredients. Wait 2 minutes then press START/STOP to start the unit.

Can I juice fruit with seeds and pits in it?

- No. Seeds and pits should be removed from the fruit prior to juicing. For example, remove the seeds from cherries and the pit from a plum.

Can I juice frozen fruits and vegetables or add ice?

- No, do not use frozen fruit, frozen vegetables, or ice with this unit.

The unit makes a squeaking noise when I juice certain ingredients.

- When the auger is breaking down fibrous ingredients like apples, celery, herbs and leafy greens, the unit will sometimes make this noise. This is normal and not a cause for concern.

Juicing 101

Use the freshest and ripest fruits and vegetables, and wash them prior to juicing. Always turn on the juicer before adding ingredients to the feed chute. Add ingredients gradually, making sure all of them have been processed/moved through the feed chute chamber before adding more.

PEEL VS. NO PEEL



REMOVE SKINS AND RINDS
from ingredients such as citrus fruits, melons, pineapples, dragon fruit, mangoes, pomegranates, beets, ginger, papaya, and root vegetables.



THE PEEL OR SKIN CAN REMAIN ON
for ingredients such as apples, pears, peaches, plums, cucumbers, and carrots.

PREP

For best results, cut ingredients in 2-inch pieces.



REMOVE STEMS
from apples (no need to remove the core or seeds). Remove stems from herbs, if desired.



REMOVE LARGE PITS AND SEEDS
from ingredients such as mangoes, plums, peaches, cherries, papayas, lemons, melons, and peppers.

REMINDER



DO NOT PROCESS INGREDIENTS
that do not contain juice, such as bananas and avocados.



DO NOT PROCESS FROZEN
fruits and vegetables or ice.

SAVE PULP FOR RECIPES



USE THE PULP
for other recipes, such as quick bread, instead of throwing it away.

REFURBISHED PRODUCT LIMITED NINETY DAYS WARRANTY

The **Refurbished Product Service Center** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of NINETY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the **Refurbished Product Service Center** will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center
13225 Marquardt Avenue Santa Fe Springs, CA 90670.

WARRANTY REPAIR INFORMATION

If you need service on your unit and this product requires repair during the 90 days warranty period; please go to www.ConsumerServiceRefurbish.com or call the **Refurbished Product Service Center** at 562-946-3531 to obtain the required return authorization (RA) number. Pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt and a letter describing the problem. Send the unit freight prepaid and insured to:

Refurbished Product Service Center,
Att: Customer Service Department 13225 Marquardt Avenue Santa Fe Springs, CA 90670

Your unit will be promptly repaired and returned to you. We will refuse to accept delivery of the returned unit unless the assigned RA number appears on the outside of the shipping carton.

Owner's Information
(Keep for your permanent records)

NAME: _____
ADDRESS: _____
CITY: _____ STATE: _____ ZIP CODE: _____
PHONE: _____ E-MAIL: _____
MODEL: _____ SERIAL NO.: _____

WARNING: DO NOT place appliance on hot surfaces, near a hot gas or electric burner, in a heated oven, or on a stovetop.



SharkNinja Operating LLC

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

NINJA is a registered trademarks of Shark Ninja Operating LLC.

For SharkNinja U.S. patent information, visit sharkninja.com/uspatents/
© 2020 SharkNinja Operating LLC

Printed in Mexico / Sc: 07-08-2021 - Pgs.: TAB
Obpn: JC100Series_IB_MP_Mv9_201209
Shnmdl: JC101_B / Elbrd: J.E.

804106502



NINJA

 
COLD PRESS JUICER

QUICK START GUIDE

Assembly

Please make sure to read the enclosed ninja® Owner's guide prior to using your unit.

What's in the Box

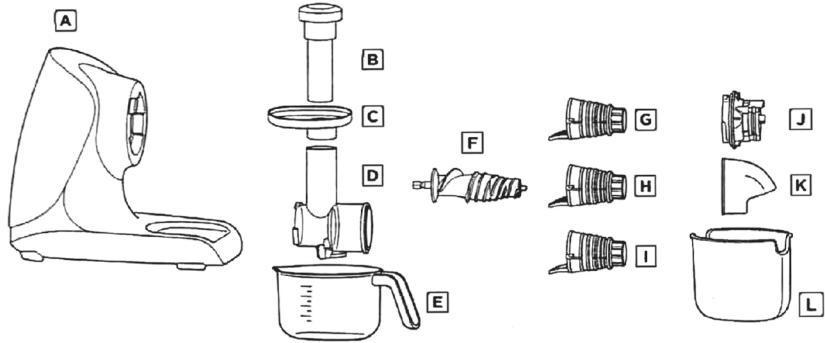

- | | | | |
|-----------------------------|---------------------------------|--|---------------------------|
| A Motor Base | E Juice Jug | H Gray Filter (some pulp) (not available with all models) | J Inner Pulp Spout |
| B Tamper | F Auger | I Orange Filter (lots of pulp) | K Outer Pulp Spout |
| C Food Tray | G Black Filter (no pulp) | | L Pulp Container |
| D Feed Chute Chamber | | | |

NOTE: The feed chute chamber (D), auger (F), gray filter (H), and 2-part pulp spout (J,K) are pre-assembled. Before first use, disassemble and clean all parts, then follow the assembly instructions.

The images shown here are for illustrative purposes only and may be subject to change.

Using the Control Panel

 
START/STOP
Press once to start continuous running up to 12 minutes; press again to stop.




REVERSE
If the feed chute chamber becomes blocked or ingredients are not processing, press and hold REVERSE. There will be a beep and a brief pause, then the auger will rotate in the opposite direction. Release REVERSE to stop. Repeat as needed. Press START/STOP to resume normal operation.

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.


Illustrations may differ from actual product. We are constantly striving to improve our products; change.

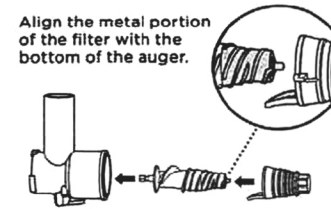

 
1.
Insert the auger in the feed chute chamber, then attach the desired filter onto the auger.

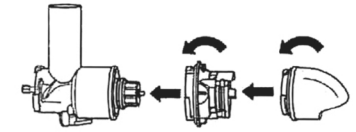

 
2.
Attach the inner pulp spout to the feed chute chamber by installing at an angle on top of the filter, then turning counterclockwise to lock in place. Ensure the word Ninja is facing up. Then attach the outer pulp spout by installing at an angle on top of the inner pulp spout and turning counterclockwise to lock in place.

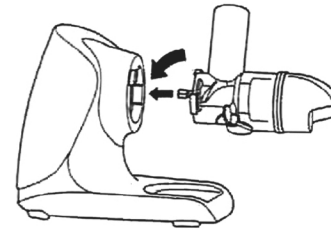

 
3.
Install the assembled feed chute chamber on the motor base at an angle, then turn counterclockwise until it clicks into place.

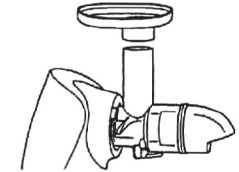

 4.
Install the food tray on the top of the feed chute.

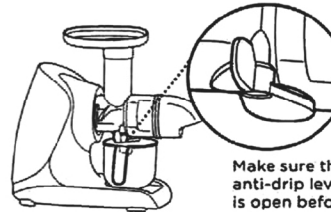

 
5.
Place the juice jug under the anti-drip lever on the feed chute chamber.

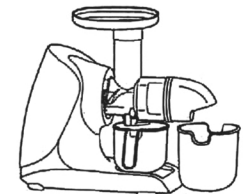

6.
Place the pulp container under the pulp spout.


Using the Filters for Pulp Control

 Control the amount of pulp by choosing the desired filter.

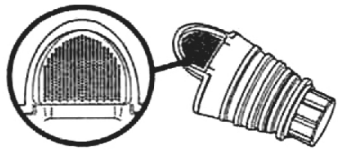

NO PULP

 
Use the black filter with the finest mesh for juice with no pulp.

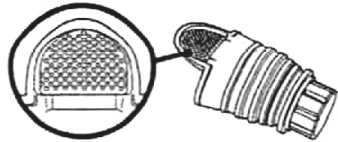

SOME PULP

Use the gray filter* with the larger mesh for juice with some pulp.

 *Not available with all models

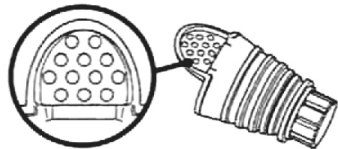


LOTS OF PULP

Use the orange filter with the largest mesh for juice with lots of pulp.

For best results, we recommend using the **Gray (Some Pulp)** or **Orange (Lots of Pulp)** filter when processing soft fibrous fruits like berries, seeded melons, and pineapple.


Depending on the seasonality of ingredients, you may experience lower juice and pulp yield when using the **Black (No Pulp)** filter. If this occurs, try using the **Gray (Some Pulp)** filter.

 Using the Juicer

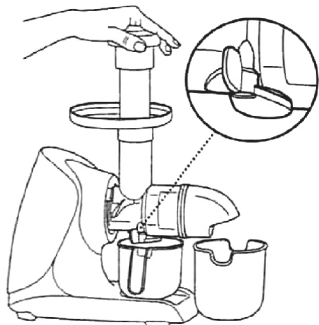


1. Make sure the anti-drip lever is open before juicing.
2. Press START/STOP, then remove the tamper and gradually add ingredients to the feed chute. For best results, allow juicer to process each ingredient before adding more. Use the tamper to push ingredients down into feed chute as needed. When done, press START/STOP to stop the unit.
3. Close the anti-drip lever so juice won't drip onto the motor base. Remove juice jug from unit, stir juice, and serve.

 Disassembly

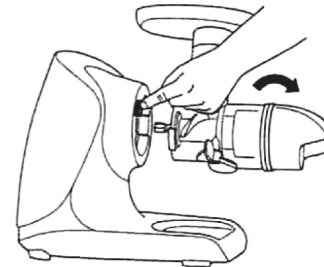

1.

 Press and HOLD the RELEASE button while turning the feed chute chamber clockwise and remove from motor base.

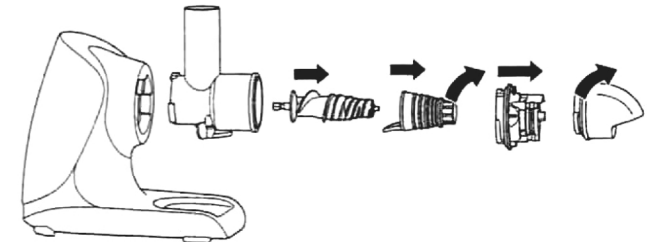

2.

Remove the pulp spout from the feed chute chamber by turning clockwise to remove the outer pulp spout, then twist the inner pulp spout clockwise to remove. Remove the filter and auger by gently pulling out of the feed chute.

3.

Unplug the unit when finished. If moving the unit, grab from the bottom of the base.

Cleaning

IMPORTANT: DO NOT add water to the feed chute while the unit is operating to clean the unit.



Dishwasher

All parts, except the motor base, are dishwasher safe.



Hand-Washing

Wash parts in warm, soapy water.

804006502A



PRINTED IN MEXICO / SC:20-07-2022
OBPN: JC100Series_QSG_MP_Mv21_2010617
2P / Elbrd:J.E. / SHNMDL: JC100_B