



Stand Mixer


(Recipe book not included)

814100103

Please read this manual carefully before operating your unit and retain for future reference.



Parts

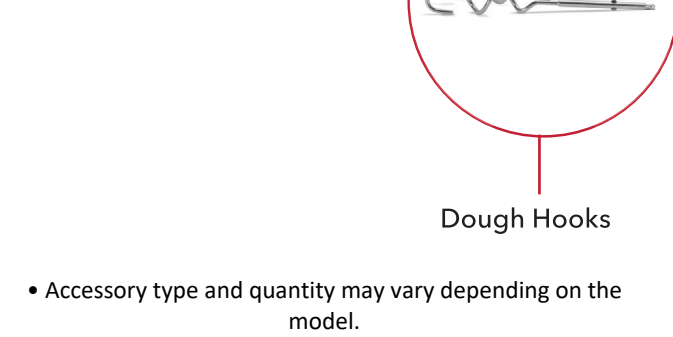


Dough Hooks

• Accessory type and quantity may vary depending on the model.



Bowl Shift Level

• The image shown here is for illustrative purposes only and may be subject to change.

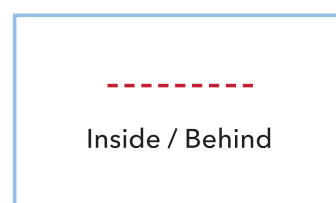

*NOTE: There is a Left and Right Beater and Dough Hook. They must be inserted into the Left and Right Beater Shafts respectively.

Before First Use

Make sure the Everyday Mixer and all of its components are clean prior to assembly and use.
ATTENTION: To prevent damage to the appliance, the Beaters and Dough Hooks should NOT be used together.

Tips & Tricks

- Your Stand Mixer works best with small batches. Too much mix will negatively affect the performance of the Mixer.
- Certain doughs and batters may get stuck against the sides or wrapped around the Beaters. Use the Bowl Shift Lever to help solve this problem.
- The Mixing Bowl is designed specifically for this product. Do not attempt to use another mixing bowl.
- There is a Left and Right Beater and Dough Hook. They must be inserted into the Left and Right Beater Shafts respectively.
- Do not use the Mixer on any setting for more than 10 minutes at a time as the motor may overheat. Allow motor to cool between consecutive uses.
- Your Mixer should only be used to mix soft ingredients such as flour, cream, eggs, or creamy liquids. To avoid damaging your Mixer, do not attempt to mix hard ingredients.

Use

1.



Place the Main Base on a clean and stable surface. Position the Mixing Bowl onto the Rotating Plate. Hold the Rotating Plate in place and turn the Mixing Bowl clockwise until it locks into place (photo A).

2.



Hold down the Tilt Release Button and push the Motor Head upwards. Release button to lock in place (photo B).

3.



Insert the right and left Beater accordingly into the Beater Shaft. Push the Beater until it clicks into place (photo C). **NOTE:** Beater pairs must be used together and should not be mixed with Dough Hooks.

4.



Press the Tilt Release Button to push the Motor Head down. Your Everyday Mixer is ready for use!

5.



WARNING: Do not put hands or utensils inside the Mixing Bowl while the appliance is on and the Beaters/Dough Hooks are moving. Make sure the machine is OFF and unplugged before proceeding. Make sure the Mixer is cleaned and placed on a dry and stable surface prior to using.

6.



Pour ingredients into the Mixing Bowl. Do not fill the Mixing Bowl beyond capacity. If recipe requires flour, pour any liquids and flour into the Mixing Bowl prior to turning on the Mixer.

7.



Make sure the Speed Control is set to the Off or "0" setting first before plugging the Mixer in. Shift the Speed Control to the required speed: 1-6. Refer to the Speed Settings Guide when deciding which speed is appropriate for your recipe.

The image shown here is for illustrative purposes only and may be subject to change.

Cleaning

Clean your Mixer thoroughly before using. Make sure to turn your Mixer to the "0" or (OFF) setting before unplugging and cleaning. Both the Mixing Bowl and Beaters/Dough Hooks are dishwasher safe. After each use, the Mixer should be cleaned properly.

WARNING: Do not submerge the motor in water or any liquid. The Main Base is not dishwasher safe.

- DISASSEMBLY & CLEANING**
- Turn the Mixer to the "0" (Off) setting before unplugging and cleaning.
 - Tilt the Motor Head upwards and press the Eject Button to remove Beaters/Dough Hooks.
 - Turn the Mixing Bowl counterclockwise until it detaches from the Main Base.
 - Wash both Mixing Bowl and Beaters/Dough Hooks in warm, soapy water.
 - Wipe down the Main Base with a damp dish cloth.

NOTE:

In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so, you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

Technical Specs :

Voltage : 120
Wattage : 250



Speed Settings

Beaters: Use only for liquids. Great for sauces, creams, and meringues, or any other liquid mixtures. Some recipes may require you to start mixing with Beaters then switch to Dough Hooks once dry ingredients are added.
Dough Hooks: Use for non-liquid mixes. Great for butters, batters, doughs, frostings, mashed potatoes and mousse or any other non-liquid mixture. Some recipes may require you to start mixing with Beaters then switch to Dough Hooks once dry ingredients are added.

Recipe	Speed	Time	Notes
Dough	1	1.5/2 min	Wet/dry ingredients
Banana bread	2	2 min	Wet ingredients
Sweetened whipped cream	4	4/4.25 min	Medium/stiff peaks
Meringue	6	4/5/6 min	Soft/medium/stiff peaks
Buttercream	4	2.5/2.5 min	Butter/powdered sugar

IMPORTANT SAFEGUARDS: READ AND SAVE THESE INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including:

- **READ ALL INSTRUCTIONS.**

- Remove all bags and packaging from appliance before use.
- Only use the appliance on a stable, dry surface.
- Make sure the appliance is cleaned thoroughly before using.
- To protect against electrical shock, do not immerse the cord, plug, or appliance in water or any other liquid. If the unit accidentally falls or gets immersed in water, unplug the appliance immediately. Do not reach into the water.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience of knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance is not a toy. Do not let children use this appliance. Close supervision is necessary when any kitchen appliance is used by or near children.
- Always be sure to unplug the appliance from the outlet prior to moving, cleaning, storage, and when not in use.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the appliance can result in property damage or even in personal injury.
- Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord. If the Mixer begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair the appliance yourself.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact a service center.
- For maintenance other than cleaning, please contact a service center.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Make sure the appliance is turned to the "0" (off) position before plugging or unplugging the cord from the wall.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- **WARNING:** Do not use the Mixer on any setting for more than 10 minutes at a time as the motor may overheat. Allow motor to cool between consecutive uses.
- This appliance should only be used to mix soft ingredients such as flour, cream, eggs, or creamy liquids. To avoid damaging your Mixer, do not attempt to mix hard ingredients.
- Avoid contact with moving parts. To reduce the risk of personal injury or property damage, do not put your hands, hair, clothing near or in the Mixer during use.
- Do not remove any parts while the appliance is in use or plugged in.
- Do not leave the appliance unattended while in use.
- The use of accessory attachments not provided by the manufacturer is not recommended and may cause injuries.
- All parts and components included with the Mixer are compatible with this product only. Do not use these parts with other products.
- Do not use outdoors. This appliance is designed for household use only.
- Do not let the cord hang over the edge of the table or counter or touch hot surfaces.
- Do not place on or near a hot gas burner, electric burner, or in a heated oven.
- Do not use the appliance other than its intended use.
- If a part such as a wire or plug is damaged or the Mixer malfunctions, stop the operation immediately. Contact a service center.
- This appliance has important markings on the plug blade
- Never add to container while appliance is operating
- Container must be properly in place before operating appliance.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- A short power supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

HOUSEHOLD USE ONLY. SAVE THESE INSTRUCTIONS.

PRINTED IN MEXICO

SC: 12.13.2023 Elbrd: J.M

OBPN:RCSM200_20220418_V6

814100103

SHNMDL: RCSM200GBSK02_W

