

IMPORTANT SAFEGUARDS

HOUSEHOLD USE ONLY • READ ALL INSTRUCTIONS BEFORE USE

When using electrical appliances, basic safety precautions should always be followed, including the following:

⚠ WARNING

- 1 Read all instructions prior to using the oven and its accessories.
- 2 To eliminate a choking hazard for young children, discard all packaging materials immediately upon unpacking.
- 3 This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- 4 Take inventory of all contents to ensure you have all parts needed to properly and safely operate your oven.
- 5 **NEVER** leave the oven unattended while in use.
- 6 **NEVER** use outlet below counter.
- 7 **DO NOT** let cord hang over edges of tables or counters or touch hot surfaces, including stoves and other heating ovens.
- 8 Keep the appliance and its cord out of reach of children. Do not allow the appliance to be used by children. Close supervision is necessary when used near children.
- 9 **DO NOT** use an extension cord. A short power-supply cord is used to reduce the risk of children grabbing the cord or becoming entangled and to reduce the risk of people tripping over a longer cord.
- 10 **DO NOT** place appliance on a stovetop or hot surface or near a gas, electric, or heated oven.
- 11 **DO NOT** place any object directly onto the heating elements and **DO NOT** cover crumb tray or any part of the oven with metal foil. This will cause the oven to overheat or cause a fire.
- 12 To protect against electrical shock **DO NOT** immerse cord, plugs, or main unit housing in water or other liquid.
- 13 **DO NOT** use the oven with damage to the power cord or plug. Regularly inspect the oven and power cord. If the oven malfunctions or has been damaged in any way, immediately stop use and contact a service center.
- 14 **DO NOT** cover the air intake vents or air outlet vents while unit is operating. Doing so will prevent even cooking and may damage the unit or cause it to overheat.
- 15 **DO NOT** insert anything in the intake and ventilation slots and do not obstruct them.
- 16 **DO NOT** use accessory and attachments not recommended or sold by SharkNinja.
- 17 **DO NOT** place items on top of surface while unit is operating except for authorized recommended Ninja accessories.
- 18 Before placing any accessories into the oven ensure they are clean and dry.
- 19 Intended for countertop use only. **DO NOT** place the oven near the edge of a countertop. Ensure the surface is level, clean and dry.
- 20 This oven is for household use only **DO NOT** use outdoors. **DO NOT** use in moving vehicles or boats.
- 21 **DO NOT** use this oven for anything other than its intended use. Misuse may cause injury.
- 22 **DO NOT** store any materials, other than supplied accessories, in this oven when not in use.
- 23 When using this oven, provide adequate space above and on all sides for air circulation.
- 24 A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, or the like when in operation. **DO NOT** place anything on the oven during operation.
- 25 This oven has a tempered glass door and is more resistant to breakage. Avoid scratching door surface or nicking edges.
- 26 **DO NOT** use the oven without the wire rack or air fry basket installed.
- 27 **DO NOT** spray any type of aerosol spray or flavoring inside the oven while cooking.
- 28 Use caution when inserting and removing anything from the oven, especially when hot.
- 29 **DO NOT** use parchment on Broil or above the recommended manufacturers instructions.
- 30 Voltages can vary, affecting the performance of your product. To prevent possible illness, use an external thermometer to check that your food is cooked to the temperatures recommended.
- 31 Prevent food contact with heating elements. Excessive food loads may cause personal injury or property damage or affect the safe use of the oven.
- 32 **DO NOT** place any of the following materials in the oven: paper, cardboard, plastic, roasting bags and the like.
- 33 Extreme caution should be exercised when using containers constructed of any materials other than metal or glass.
- 34 **DO NOT** touch hot surfaces. Oven surfaces are hot during and after operation. To prevent burns or personal injury, **ALWAYS** use protective hot pads or insulated oven mitts and use available handles and knobs.
- 35 Spilled food can cause serious burns. Extreme caution must be used when the oven contains hot food. Improper use may result in personal injury.
- 36 Please refer to the Cleaning & Maintenance section for regular maintenance of the oven.
- 37 Cleaning and user maintenance shall not be made by children.
- 38 Press the power button to turn oven off and allow to cool completely before cleaning, moving and flipping for storage.
- 39 Unplug from outlet when not in use. To unplug, grasp the plug by the body and pull from the outlet. Never unplug by grasping and pulling the flexible cord.
- 40 **DO NOT** clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, causing a risk of electrical shock.
- 41 **DO NOT** use the oven as a source of heat or for drying.
- 42 This appliance has important markings on the plug blade. The entire supply cord is not suitable for replacement. If damaged, please contact a service center.

- Indicates to read and review instructions to understand operation and use of product.
- Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored.
- Take care to avoid contact with hot surface. Always use hand protection to avoid burns.
- For indoor and household use only.

SAVE THESE INSTRUCTIONS

NINJA

"Recipe book not included"



 
 
 
FOODI® DIGITAL PRO AIR FRY OVEN
OWNER'S GUIDE

814100059

Please read this manual carefully before operating your unit and retain for future reference.

PARTS

- A Main Unit**
Attached power cord not shown.
- B Air Fry Basket**
Use in the top rail position for Air Fry and Dehydrate. Hand-wash recommended.
- C Sheet Pan**
Always layer on top of wire rack. Hand-wash recommended.
- D Wire Rack**
Slide into bottom rails for Toast and Bagel. Hand-wash recommended.
- E Removable Crumb Tray**
Always place below the bottom heating element. Hand-wash only.

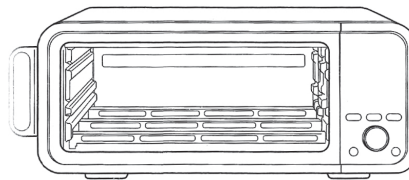


TIP: There is a hook on the left side of the bottom rails of the oven. This mechanism is designed to stabilize the wire rack when pulling out of oven partially.

Accessory type and quantity may vary depending on the model.

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

 ACCESSORY STORAGE PLACEMENT

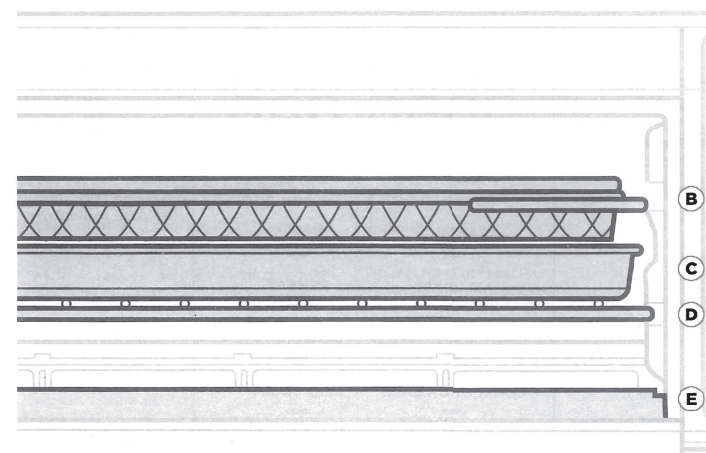


BEFORE FIRST USE

- 1 Remove and discard any packaging material and tape from the unit.
- 2 Remove all accessories from the package and read this manual carefully. Please pay particular attention to operational instructions, warnings, and important safeguards to avoid any injury or property damage.
- 3 Wash the air fry basket, sheet pan, wire rack, and removable crumb tray in warm, soapy water, then rinse and dry thoroughly with non-abrasive sponge. **DO NOT** place the sheet pan in the dishwasher.
- 4 **NEVER** submerge the main unit in water or place in dishwasher.

We recommend placing the wire rack, sheet pan, and air fry basket inside the oven and running it on Air Fry at 450°F for 20 minutes without adding food. Make sure the area is well ventilated. This removes any packaging residue and odor traces that may be present. This is completely safe and not detrimental to the performance of the oven.

NOTE: For longest use, we recommend hand-washing the accessories. The air fry basket and wire rack can be put in the dishwasher, but this may cause them to wear more quickly over time.

 USING THE CONTROL PANEL

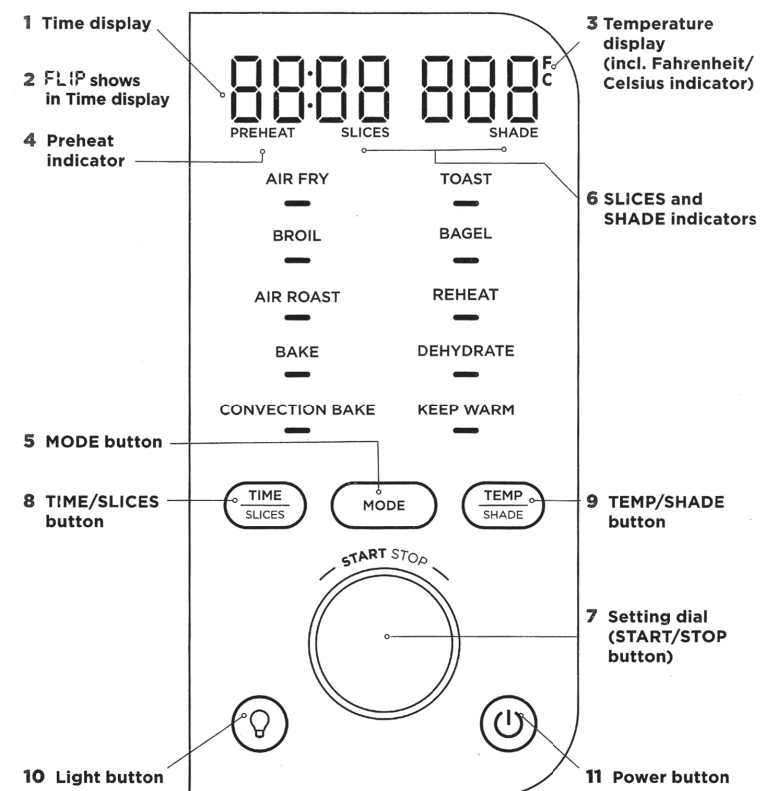

FUNCTIONS

- AIR FRY:** Make fast, extra-crispy foods—such as chicken wings, French fries, and chicken nuggets—with little to no added oil.
- BROIL:** Broils meat and fish and evenly browns the tops of casseroles.
- AIR ROAST:** Achieve a crispy outside and perfectly cooked inside for full-sized sheet pan meals, thicker proteins, and roasted veggies.
- BAKE:** Evenly bakes cookies, brownies, cakes, and more.
- CONVECTION BAKE:** Evenly bakes cookies, cakes, brownies, and other goods faster.
- TOAST:** Evenly toasts up to 9 slices of bread to your perfect level of darkness.
- BAGEL:** Perfectly toast up to 6 bagel halves when they're placed cut-side up on the wire rack.
- REHEAT:** Heat leftovers without over cooking.
- DEHYDRATE:** Dehydrates meats, fruits, and vegetables for healthy snacks.
- KEEP WARM:** Keeps food warm up to 2 hours.

NOTE: The images shown here are for illustrative purposes only and may be subject to change, the actual descriptions of control panel and their locations may vary depending on the model.

CONTROL PANEL DISPLAY & OPERATING BUTTONS

- 1 **Time display:** Shows the cook time. The time will count down when cooking is in progress.
- 2 **FLIP** will appear on the time display when the unit is cool enough to flip up for storage or cleaning.
- 3 **Temperature display:** Shows the cook temperature.
- 4 **PREHEAT:** Illuminates when the unit is preheating.

NOTE: Time and temperature will always default to the cook time and temperature that was set the last time the oven was in use. On first use, the default time and temperature should be adjusted for your cook cycle.

- 5 **MODE button:** Press to enable selection of a cooking function, then rotate dial to cycle through. Press MODE button again to confirm selection.
- 6 **SLICES and SHADE** will illuminate when using the Toast or Bagel function.
- 7 **Setting dial (START/STOP button):** Push to start or pause cooking, or rotate to adjust settings.
- 8 **TIME/SLICES button:** To select a cook time, press the TIME/SLICES button, then use the dial to adjust the time. Press TIME/SLICES button again to confirm. When using the Toast or Bagel function, this button will adjust the number of slices instead of the time. If cooking for 1 hour or less; the clock will count down by minutes and seconds. If cooking for more than 1 hour, the clock will count down by hours and minutes.
- 9 **TEMP/SHADE button:** To adjust temperature, press the TEMP/SHADE button and use the dial to adjust the temperature. Press TEMP/SHADE button again to confirm. When using the Toast or Bagel function, this button will adjust the darkness (SHADE) level instead of the temperature.

NOTE: The cook time and temperature may be adjusted at any time during the cooking cycle.

NOTE: To switch from Fahrenheit to Celsius, press and hold the TEMP/SHADE button for 5 seconds while the unit is not in cook mode.

 
- 10 **(Light) button:** Press to turn the oven's interior light on and off. Light will automatically turn on when 1 minute of cook time remains.
- 11 **(Power) button:** Press to turn the unit on and off.

USING YOUR FOODI® DIGITAL PRO AIR FRY OVEN


POWER CORD MANAGEMENT

Our cord-management system is designed so it will not interfere with the oven's flip-away functionality.

Option 1 Outlet on the left

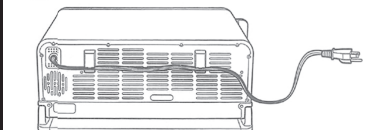

Option 2 Outlet behind the oven

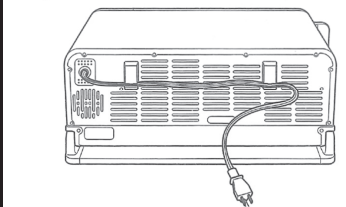 

HOW TO REDUCE SMOKE

When cooking greasy, drippy foods with the Air Fry Basket, place the SearPlate on the bottom rails to catch the drippings.



- Recommended:** Canola, Refined coconut, Avocado, Vegetable, Grapeseed
- Not recommended:** Olive oil, Butter, Margarine

- The unit may produce smoke when cooking on a hotter setting than what is recommended. Avoid exceeding 400°F when using oils to limit smoke.
- When using cooking spray, **DO NOT** spray it on the interior side walls or heating elements of the unit. Cooking spray may reduce life of product.

