

 
# ARCTIC AIR Pure Chill XL

Evaporative Air Cooler

804106966

Please read this manual carefully before operating your unit and retain for future reference.


## WHAT'S INCLUDED:

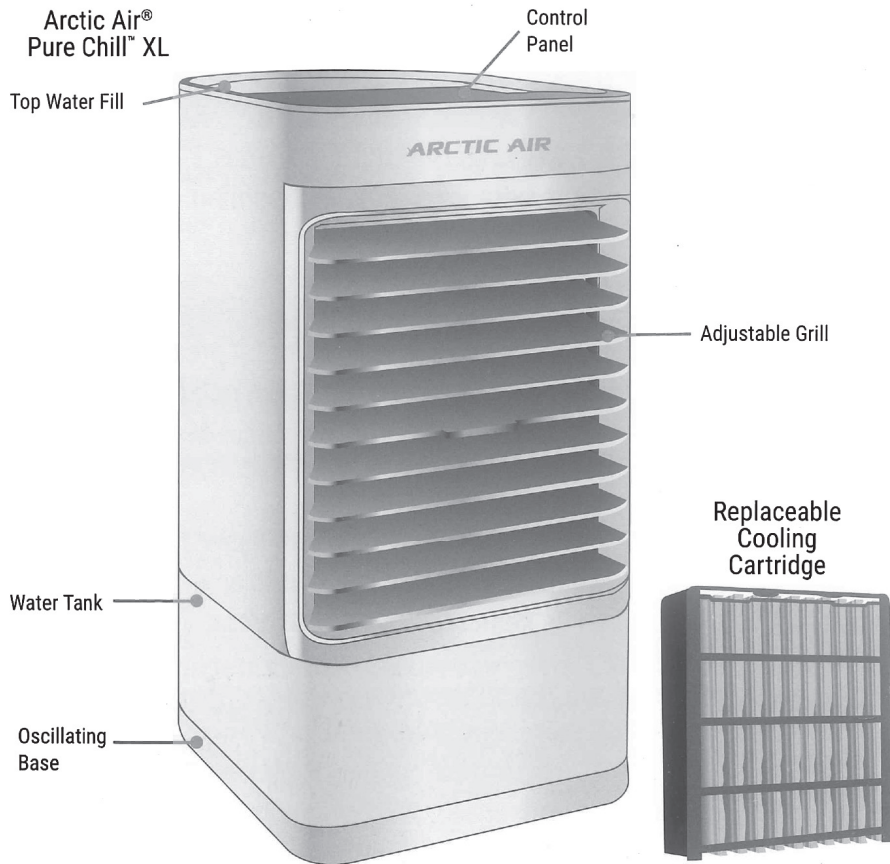

Accessory type and quantity may vary depending on the model.

## USAGE:
 
### FILLING THE TANK

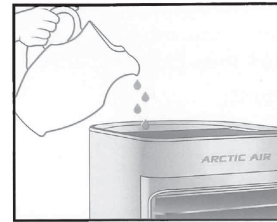


Using a pitcher or other container, fill the water tank by gently pouring water into the opening until level reaches near the top. You can check by looking at the side of the tank.

**For Best Results, use cold water.**


### FAN SPEED



Arctic Air® Pure Chill™ XL has 3 fan speeds - High, Medium, and Low. To set desired speed, press the  button on the top control panel.

 
### TURBO MODE



Press the  button to start TURBO mode for maximum airflow and cooling.



### LIGHT SETTINGS




Choose your light color by pressing  button. You can choose between solid colors or a color-cycle mode. *Color order: Blue, Red, White, Teal, Purple, Green, Color Cycle*


### TIMER



 You can set an auto-off timer for 2, 6, 8, or 12 hours. Simply press the  button until your duration is selected. To cancel, press  until no longer lit.

### OSCILLATION



Arctic Air® Pure Chill™ XL also has wide-coverage oscillation built-in. Press the  button once for continuous oscillation, or press again to stop the unit where it is currently is.

**NOTE:** The images shown here are for illustrative purposes only and may be subject to change, the actual descriptions of control panel and their locations may vary depending on the model.

PRINTED IN MEXICO Elbrd: J.M SC: 04-24-2024  
OBPN: AAPCXL-IM-01-1221-200 SHDML: 21099\_B

804106966




## MAINTENANCE:



 
### CARTRIDGE

To access cartridge, remove front grill by sliding finger behind left and right side of grill, as seen in drawing. Using the slot at the top of the cartridge, pull the cartridge towards you and remove.


We recommend weekly cleaning of your Arctic Air® Pure Chill™ XL and cartridge to keep in best working condition, and replacing the cartridge every 3-6 months.

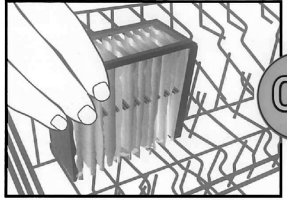

 **DISHWASHER:** Place cartridge in the top-rack of your dishwasher & run cycle normally. Remove and let air dry.

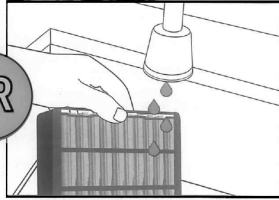

 **HAND WASH:** Hand wash gently with warm water & soap. Shake out excess water & let air dry.

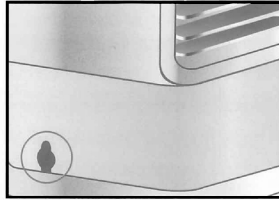

**TO PREPARE FOR CLEANING:** Run Arctic Air® Pure Chill™ XL until all water has emptied from the water tank, or use the drain plug on the left side of the unit, as shown in the drawing. Open the plug, hold unit over a sink, and let water drain out. Be sure to close plug tightly when finished to avoid spilling.

The images shown here are for illustrative purposes only and may be subject to change.

**IMPORTANT:** If you see mold on the cartridge or notice a musty smell, stop and clean the cartridge before further use. Soak the cartridge with equal parts clean water and white vinegar – allow to sit for 45-60 minutes. Rinse with warm water, wring out and let air dry.

### UNIT CLEANING

- To prepare for cleaning, run Arctic Air® Pure Chill™ XL until all water has emptied from the water tank, or hold Arctic Air® Pure Chill™ XL over a sink and carefully dump out to avoid splashing or spilling.
- If you notice water tank is dirty, use a small, bendable brush (i.e. toothbrush, bottle brush, etc) and carefully clean the inside of the tank until clean. Rinse clean with warm water.

 
## WARNINGS:

- Do not carry Arctic Air® Pure Chill™ XL when filled with water. Some water may remain in unit even if tank is empty.
- Use only clean water. If needed, use distilled water.
- Please read and follow regular maintenance as recommended in "Maintenance" section of this guide.
- Arctic Air® Pure Chill™ XL works best in non-polluted areas. Large dust/dirt particles may reduce lifetime of unit.
- We recommend use only in dry locations. If using in a moist area or environment, take care not to get water on external areas of the product.
- If a leak or spill occurs on the surface of device, unplug Arctic Air® Pure Chill™ XL and let it dry for 24 hours. Then, use as normal.
- Do not place in direct sunlight for extended periods of time.
- Before not using Arctic Air® Pure Chill™ XL for extended periods of time, empty the water tank, turn unit on, and set to highest fan speed for at least 4 hours. This will dry out then cartridge and inside of your unit.
- Only use the original power adapter and cord supplied in package.
- Do not touch the power supply or power cord with wet hands.


- Unplug Arctic Air® Pure Chill™ XL when cleaning, removing/replacing cartridge, or moving the device.
- For best results, place Arctic Air® Pure Chill™ XL on a higher surface like a table or countertop.
- Do not place Arctic Air® Pure Chill™ XL near a heater or any electrical equipment.
- Do not place the device in passageways or high traffic areas where there is a possibility of tripping or knocking it over.
- Do not allow any foreign objects inside Arctic Air® Pure Chill™ XL.
- Do not place items on top Arctic Air® Pure Chill™ XL.
- Do not block the front and back grills of the device.
- Do not turn the device upside down.
- Do not submerge the Arctic Air® Pure Chill™ XL under water or other liquids.
- Do not place Arctic Air® Pure Chill™ XL near open flames or fire sources.
- People with limited physical, visual or mental abilities or lacking proper experience and/or knowledge should never use the device without supervision of those responsible for their safety or those capable of assistance in using the device.
- The device can be switched off completely only when disconnected from the power supply.
- The manufacturer does not bear any responsibility for any damage from failure to comply with this product guide.
- A replaceable water cartridge is designed specifically for this product. If your cartridge has been broken or damaged, you can purchase a replacement.

ONTEL® ASSUMES NO RESPONSIBILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF THE PRODUCT. IN PURCHASING AND USING THIS PRODUCT, YOU ASSUME ALL RESPONSIBILITY FOR CLEANING THE PRODUCT AND MONITORING THE PRODUCT FOR MOLD. ADDITIONALLY, ONTEL® SPECIFICALLY DISCLAIMS ALL EXPRESSED WARRANTIES NOT OTHERWISE SET FORTH HEREIN AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION OF THE FACE HEREOF.


## FOR BEST RESULTS:

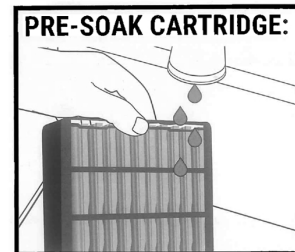

 
To **ACTIVATE COOLING**, soak your cartridge under running cold-water.

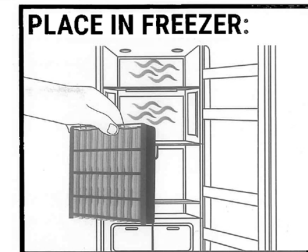

 For **MAXIMUM COOLING**, place a wet cartridge in the freezer until frozen.

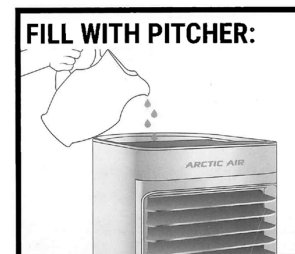

 Place on flat surface & fill tank from a water pitcher. **For best results** use cold water and/or ice cubes.

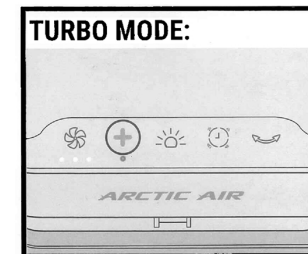

Press **+** to start **TURBO MODE** for maximum fan power and cooling.

**DO NOT USE ARCTIC AIR® PURE CHILL™ XL WITHOUT CARTRIDGE.  
WATER MAY LEAK OUT ONTO FLOOR.**

Please Note: You may notice some condensation forming on the front grill. This is normal.

**FOR HOUSEHOLD USE ONLY**