

**SAFETY INFORMATION**

**IMPORTANT SAFETY INFORMATION  
READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE**

**▲WARNING** For your safety, the information in this manual must be followed to minimize the risk of fire, electric shock or personal injury.

- Use this appliance only for its intended purpose as described in this Owner's Manual.
- This air conditioner must be properly installed in accordance with the Installation Instructions before it is used.
- Never unplug your air conditioner by pulling on the power cord. Always grip plug firmly and pull straight out from the receptacle.
- Replace immediately all electric service cords that have become frayed or otherwise damaged. A damaged power supply cord must be replaced with a new power supply cord obtained from the manufacturer and not repaired. Do not use a cord that shows cracks or abrasion damage along its length or at either the plug or connector end.
- Turn the unit OFF and unplug your air conditioner before cleaning.
- For your safety...do not store or use combustible materials, gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.
- If the receptacle does not match the plug, the receptacle must be changed out by a qualified electrician.



**▲WARNING** Risk of Fire or Explosion. This unit contains flammable refrigerant. Additional safety precautions must be followed.

- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- Do not pierce or burn refrigerant tubing. Be aware that refrigerants may not contain an odor.
- Keep ventilation openings clear of obstruction.
- When handling, installing, and operating the appliance, care should be taken to avoid damage to the refrigerant tubing.
- Do not drill holes in the unit.
- Maintenance, cleaning, and service should only be performed by technicians properly trained and qualified in the use of flammable refrigerants.
- GE Appliances does not support any servicing of the air conditioner.
- Dispose of air conditioner in accordance with Federal and Local Regulations. Flammable refrigerants require special disposal procedures. Contact your local authorities for the environmentally safe disposal of your air conditioner.

**▲WARNING** USE OF EXTENSION CORDS

**RISK OF FIRE. Could cause serious injury or death.**

- DO NOT use an extension cord with this Window Air Conditioner.

- DO NOT use surge protectors or multi-outlet adaptors with this Window Air Conditioner.

**HOW TO CONNECT ELECTRICITY**

Do not, under any circumstances, cut or remove the third (ground) prong from the power cord. For personal safety, this appliance must be properly grounded.

**DO NOT use an adapter plug with this appliance.**

The power cord of this appliance is equipped with a 3-prong (grounding) plug which mates with a standard 3-prong (grounding) wall outlet to minimize the possibility of electric shock hazard from this appliance.

Power cord includes a current interrupter device. A test and reset button is provided on the plug case. The device should be tested on a periodic basis by first pressing the **TEST** button and then the **RESET** button while plugged into the outlet. If the **TEST** button does not trip or if the **RESET** button will not stay engaged, discontinue use of the air conditioner and contact a qualified service technician.

Have the wall outlet and circuit checked by a qualified electrician to make sure the outlet is properly grounded.

Where a 2-prong wall outlet is encountered, it is your personal responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet.

The air conditioner should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating plate.

This provides the best performance and also prevents overloading house wiring circuits which could cause a fire hazard from overheated wires.

See the Installation Instructions, **Electrical Requirements** section for specific electrical connection requirements.

**READ AND SAVE THESE INSTRUCTIONS**

**USING THE AIR CONDITIONER**

**Controls**


**Do Not Operate in Freezing Outdoor Conditions**

This cool-only air conditioner was not designed for freezing outdoor conditions. It must not be used in freezing outdoor conditions.

Features and appearance will vary.


Lights next to the touch pads on the air conditioner control panel indicate the selected settings.

**Air Conditioner Controls**

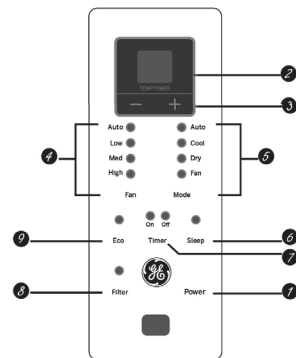

**NOTE:** The display always shows the setting temperature except when in Fan Only mode.

**Remote Control**

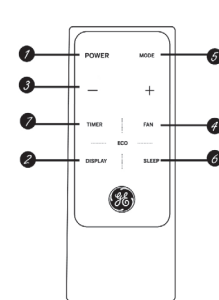

The remote control vary depend of model: The buttons on remote control may have a different name or location than the remote control shows in this manual.

The actual descriptions of control panel and their locations may vary depending on the model.

**1 Power Pad**  
Turns air conditioner on and off. When turned on, the display will show the setting temperature. The unit will initiate automatically the ECO function under Cool, Dry, and Auto modes.

**NOTE:** If the unit shuts off unexpectedly due to a power outage, it will restart with the previous function setting automatically when the power comes back on.

**2 Display/Display Pad**  
The display on the unit shows the setting temperature.

Display default behavior: The unit display will stay on all the time if the Display pad on the remote control is not pressed.

Press the Display pad on the remote control, the display on the unit will turn off immediately. The user interface on the unit will then illuminate for 5 seconds when any button is pressed on the user interface or on the remote control. Press the Display pad on the remote control again, the display on the unit will revert back to the default behavior.

**3 Temp Increase + /Decrease – Pads**  
Use to change the temperature setting up or down. Press or hold either the **Increase + / Decrease –** pads until the desired temperature is shown on the display. This temperature will be automatically maintained anywhere between 62°F (17°C) and 86°F (30°C). If you want the display to read the actual room temperature, see Fan Only section.

**4 Fan Pad**  
Press **Fan** pad to select the Fan speed - **Auto, Low, Med or High**. Each time the pad is pressed, the fan speed mode is shifted. For some models, the fan speed can not be adjusted.

**5 Mode Pad**  
To choose operating mode, press **Mode** pad. Each time you press the pad, a mode is selected in a sequence that goes from **Auto, Cool, Dry, and Fan**. The indicator light beside will be illuminated and remained on once the mode is selected. The unit will initiate automatically the **Eco** function under **Cool, Dry, and Auto** modes. See Eco Mode section for detailed instructions.

**6 Sleep Pad**  
The **SLEEP** mode sets the unit to gradually change settings over an 8 hour period to allow for some increased energy efficiency during sleep hours.

The **SLEEP** mode is available only in **AUTO** and **COOL** settings.

Press the **SLEEP** mode pad and its light will illuminate. The air conditioner will automatically change the fan speed to **AUTO**.

In **COOL** mode, the fan will stay in the **AUTO** speed setting for 8 hours from the time the **SLEEP** mode pad was pressed. The air conditioner will also raise the set point 2°F in 30 minutes and 2°F more in another 30 minutes where it will remain for the next 7 hours. After 8 hours, the air conditioner will resume the settings that were in place before the **SLEEP** mode pad was pressed.

While the unit is in **SLEEP** mode, pressing the **SLEEP** pad again will return it to the settings that were in place before the **SLEEP** mode pad was pressed.

**7 Timer Pad**  
Press **Timer** pad, the **Timer On** or **Timer Off** indicator light illuminates. It indicates the Auto Start or Auto Stop program is initiated. For some units, keep pressing the **Timer** pad will cancel the timer settings.

Press or hold the **Increase + /Decrease –** pads to change the Auto time by 0.5 hour increments, up to 10 hours, then at 1 hour increments up to 24 hours. The control will count down the time remaining until start.

The selected time will register in 5 seconds, and the system will automatically revert back to display the previous temperature setting or room temperature when the unit is on (when the unit is off, there is no display.)

Turning the unit On or Off at any time or adjusting the timer setting to 0.0 will cancel the Auto Start/ Stop timed program.

**8 Filter Pad**  
Press **Filter** pad to initiate this feature. This feature is a reminder to clean the Air Filter for more efficient operation. The LED(light) will illuminate after 250 hours of operation. To reset after cleaning the filter, press the **Filter** pad and the light will go off.

**9 Eco Pad**  
Press **Eco** pad to initiate this function. This function is available on **COOL, DRY, AUTO** (only **AUTO-COOLING** and **AUTO-FAN**) modes. The fan will continue to run for 3 minutes after the compressor shuts off. The fan then cycles on for 2 minutes at 10 minute intervals until the room temperature is above the set temperature, at which time the compressor turns back on and cooling starts.

**NOTE:** The default temperature reading on the display is degree Fahrenheit (°F). To change the display to degree Celsius (°C), press the Temp Increase + and Temp Decrease – buttons together and hold for 3 seconds. Repeat the process to change back to degree Fahrenheit (°F)

**Remote Control**

- To ensure proper operation, aim the remote control at the signal receiver on the air conditioner.
- Make sure nothing is between the air conditioner and the remote control that could block the signal.
- The remote control signal has a range of up to 20 feet.
- Make sure batteries are fresh and installed correctly as indicated on the remote control.

**Cool Mode**

Use the Cool mode at **Low, Med, High** or **Auto Fan** Speed for cooling. Use the **Temperature Increase + / Decrease –** pads to set the desired temperature between 62°F and 86°F in 1°F increments.

An electronic thermostat is used to maintain the room temperature. The compressor will cycle on and off to keep the room at the set level of comfort. Set the thermostat at a lower number and the indoor air will become cooler. Set the thermostat at a higher number and the indoor air will become warmer.

**NOTE:** If the air conditioner is off and is then turned on while set to a Cool setting or if turned from a fan setting to a Cool setting, it may take approximately 3 minutes for the compressor to start and cooling to begin.

**Cooling Descriptions**

**For Normal Cooling**—Select the **Cool** mode and **High** or **Med** fan with a middle set temperature.

**For Maximum Cooling**—Select the **Cool** mode and **High** fan with a lower set temperature.

**For Quieter and Nighttime Cooling**—Select the **Cool** mode and **Low** fan with a middle set temperature.

**Auto Mode**

When you set the air conditioner in **AUTO** mode, it will automatically select cooling or fan only operation depending on what temperature you have selected and the room temperature. The air conditioner will control

room temperature automatically round the temperature point set by you.

In this mode, the fan speed cannot be adjusted, it starts automatically at a speed according to the room temperature.

**Fan Only Mode**

Use the **Fan Only** Mode at **Low, Med** or **High** fan speed to provide air circulation and filtering without cooling. Since fan-only settings do not provide cooling, a Set temperature cannot be entered. The room temperature will appear in the display.

**Dry Mode**

 
In this mode, the air conditioner will generally operate in the form of a dehumidifier. Since the conditioned space is a closed or sealed area, some degree of cooling will continue. On Dry mode, the fan speed is controlled at Low automatically.

**Power Outage Recovery Feature**

In the case of a power outage or interruption, the unit will automatically restart in the settings last used after the power is restored. If the **Delay 1–24hr** feature was set, it will resume countdown. You may need to set a new time if desired.

**Air Direction**

Use the lever to adjust the air direction left and right only.



**CARE AND CLEANING**

**Grille and Case**

Turn the air conditioner off and remove the plug from the wall outlet before cleaning.

To clean, use water and a mild detergent. Do not use bleach or abrasives.

**Air Filter**

The air filter behind the front grille should be checked and cleaned at least every 30 days or more often if necessary.

**To remove:**


Pull the tab on the right side of the unit until the filter is out.

**To remove:**

Open the inlet grille by pulling downward on the tabs at the top upper corners of the inlet grille until the grille is in a 45° position. Remove the filter.


Clean the filter with warm, soapy water. Rinse and let the filter dry before replacing it. Your filter is also dishwasher safe, top rack and straight placement in dishwasher is recommended.

**▲CAUTION** DO NOT operate the air conditioner without a filter because dirt and lint will clog it and reduce performance.

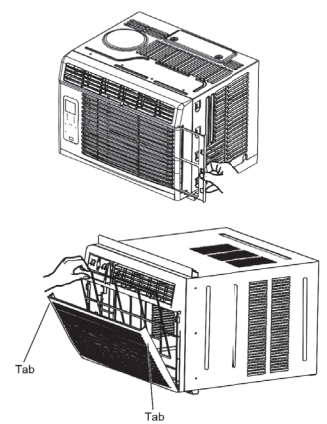

**Outdoor Coils**

 The coils on the outdoor side of the air conditioner should be checked regularly. If they are clogged with dirt or soot, they may be professionally cleaned.



**How to Insert the Battery in the Remote Control**

1. Remove the battery cover by sliding it according to the arrow direction.
2. Insert new battery, making sure that the (+) and (–) of battery are installed correctly.
3. Reattach the cover by sliding it back into position.

**NOTES:**

- Use 1 lithium button cell.
- Remove the battery from the remote control if the system is not going to be used for a long time.



# INSTALLATION INSTRUCTIONS

## BEFORE YOU BEGIN

Read these instructions completely and carefully.

- **IMPORTANT** — Save these instructions for local inspector's use.
- **IMPORTANT** — Observe all governing codes and ordinances.
- **Note to Installer** — Be sure to leave these instructions with the Consumer.
- **Note to Consumer** — Keep these instructions for future reference.
- **Skill level** — Installation of this appliance requires basic mechanical skills.
- **Completion time** — Approximately 1 hour
- We recommend that two people install this product.
- Proper installation is the responsibility of the installer.
- Product failure due to improper installation is not covered under the Warranty.
- You **MUST** use all supplied parts and use proper installation procedures as described in these instructions when installing this air conditioner.

## ELECTRICAL REQUIREMENTS

Some models require a 115/120-volt AC, 60-Hz grounded outlet protected with a 15-amp time-delay fuse or circuit breaker.

The 3-prong grounding plug minimizes the possibility of electric shock hazard. If the wall outlet you plan to use is only a 2-prong outlet, it is your responsibility to have it replaced with a properly grounded 3-prong wall outlet.


### CAUTION

Do not, under any circumstances, cut or remove the third (ground) prong from the power cord.

Do not change the plug on the power cord of this air conditioner.


Aluminum house wiring may present special problems—consult a qualified electrician.

## TOOLS YOU WILL NEED (NOT SUPPLIED)

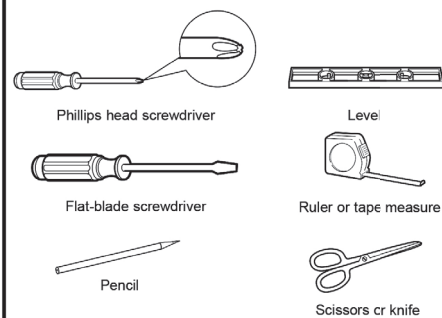

Power cord includes a current interrupter device. A test and reset button is provided on the plug case. The device should be tested on a periodic basis by first pressing the **TEST** button and then the **RESET** button while plugged into the outlet. If the **TEST** button does not trip or if the **RESET** button will not stay engaged, discontinue use of the air conditioner and contact a qualified service technician.


## PARTS INCLUDED (Appearance may vary)

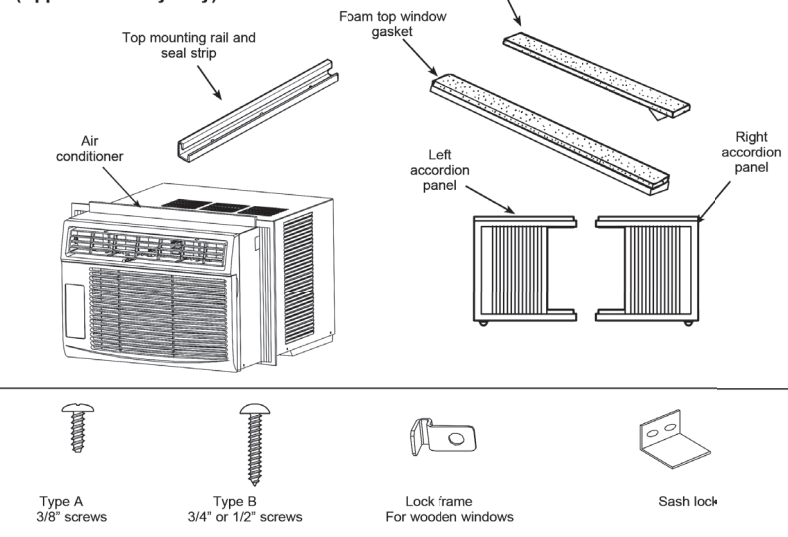

• Accessory type, appearance and quantity may vary depending on the model.

## 1. WINDOW REQUIREMENTS

- These instructions are for a standard double-hung window. You will need to modify them for other types of windows.
- The air conditioner can be installed without the accordion panels if needed to fit in a narrow window. See the window opening dimensions.
- All supporting parts must be secured to firm wood, masonry or metal.
- The electrical outlet must be within reach of the power cord.
- Follow the dimensions in the table and illustration for your model.

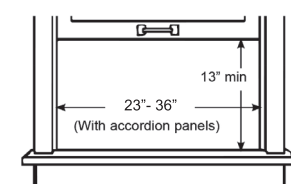

## 2. STORM WINDOW REQUIREMENTS


A storm window frame will not allow the air conditioner to tilt toward the outside, and will keep it from draining properly.

To adjust for this, attach a piece of wood to the sill.

**WOOD PIECES**  
WIDTH: 2"  
LENGTH: Long enough to fit inside the window frame.

**THICKNESS:** To determine the thickness, place a piece of wood on the sill to make it 1/2" higher than the top of the storm window frame or the vinyl frame.


Attach securely with nails or screws provided by the installer.

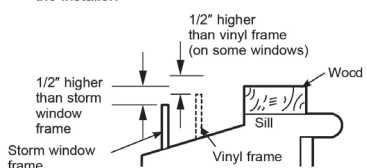


• The image shown here is for illustrative purposes only and may be subject to change.

## 3. PREPARE THE AIR CONDITIONER

- A. Install the top mounting rail with 4 Type A screws from the outside of the case.

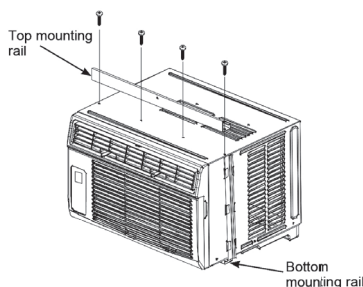


 - B. Hold the accordion panel in one hand and gently pull back to free the open end.



- C. Slide the free end of the accordion pane into the side panel rails. Slide the panel down. Be sure to leave enough space to slip the top and bottom of the frame into the rails on the cabinet.


**NOTE:** There is a right and a left accordion panel. Be sure to use the proper panel for each side.

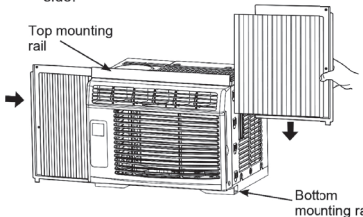

- D. Slide the left and right accordion panels into the top and bottom mounting rails.

## 4. PREPARE THE WINDOW

Cut the window seal (2 long strips) to the proper length. Peel off the backing and attach the seal to the underside of the window sash.

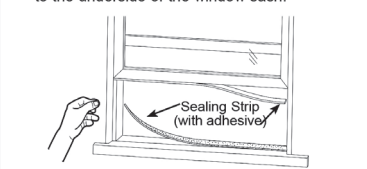

## 5. INSTALL THE AIR CONDITIONER IN THE WINDOW

- A. For wooden windows:  
Drive 1/2 (12.7 mm) locking screws through the frame lock and into the sill.  
**NOTE:** To prevent window sill from splitting, drill 1/8 (3mm) pilot holes before driving screws. Drive 1/2 (12.7mm) locking screws through frame holes into window sash.

- B. For Vinyl-Clad windows:



### IMPORTANT INFORMATION

**Do not drill holes in the product. Drilling holes in the product can cause the air conditioner to not function properly.**

## TROUBLESHOOTING

Problem	Possible Causes	What To Do
Air conditioner does not start	The air conditioner is unplugged.	Make sure the air conditioner plug is pushed completely into the outlet.
	The fuse is blown/circuit breaker is tripped.	Check the house fuse/circuit breaker box and replace the fuse or reset the breaker.
	Power failure.	The unit will automatically restart in the settings last used after the power is restored. There is a protective time delay (approximately 3 minutes) to prevent tripping of the compressor overload. For this reason, the unit may not start normal cooling for 3 minutes after it is turned back on.
	The current interrupter device is tripped.	Press the <b>RESET</b> button located on the power cord plug. If the <b>RESET</b> button will not stay engaged, discontinue use of the air conditioner and contact a qualified service technician.
Air conditioner does not cool as it should	Airflow is restricted.	Make sure there are no curtains, blinds or furniture blocking the front of the air conditioner.
	The temp control may not be set correctly.	On models with touch pads: In the <b>Cool</b> mode, press the <b>Decrease -</b> pad. On models with control knobs, turn the temperature knob to a higher number.
	The air filter is dirty.	Clean the filter at least every 30 days. See the <b>Care and Cleaning</b> section.
	The room may have been hot.	When the air conditioner is first turned on, you need to allow time for the room to cool down.
Air conditioner freezing up	Cold air is escaping. Cooling coils have iced up.	Check for open furnace registers and cold air returns. See <b>"Air conditioner freezing up"</b> below.
	Ice blocks the air flow and stops the air conditioner from cooling the room.	On models with control knobs, set the mode control at <b>High Fan</b> or <b>High Cool</b> with the <b>Temp</b> at 1 or 2. On models with touch pads, set the controls at <b>High Fan</b> or <b>High Cool</b> and set the thermostat to a higher temperature.
The remote control is not working	The batteries are inserted incorrectly. The batteries may be dead.	Check the position of the batteries. They should be inserted in the opposite (+) and (-) direction. Replace the batteries.
Water drips outside	Hot, humid weather.	This is normal.
Water drips indoors	The air conditioner is not tilted to the outside.	For proper water disposal, make sure the air conditioner slants slightly from the case front to the rear.
Water collects in base pan	Moisture removed from air and drains into base pan.	This is normal for a short period in areas with little humidity; normal for a longer period in very humid areas.

## 5. INSTALL THE AIR CONDITIONER IN THE WINDOW (Cont.)

- C. Install Support Bracket  
Place the frame lock between the frame extensions and the window sill as shown.



## 6. INSTALL SUPPORT BRACKET AND FOAM TOP WINDOW GASKET

### CAUTION


- A. To prevent broken glass or damage to windows, on vinyl or other similarly constructed windows, attach the window locking bracket to the window side jamb with one Type B screw.

- B. Cut the foam top window gasket to the window width.

- C. Stuff the foam between the glass and the window to prevent air and insects from getting into the room.  
**NOTE:** If the gasket (not supplied) does not fit your window, obtain appropriate material locally to provide a proper installation seal.

## Normal Operating Sounds

- You may hear a pinging noise caused by water being picked up and thrown against the condenser on rainy days or when the humidity is high. This design feature helps remove moisture and improve efficiency.
- Water droplets being thrown against the outside coils can make a pinging noise. This helps cool the condenser. You can reduce this noise by removing the water hole seal located on the lower right side of the unit. Remove the screw to remove the seal. Removing this seal will lower the Energy Efficiency of your unit. **NOTE:** Do not drill hole in the base pan.
- You may hear the thermostat click when the compressor cycles on and off.
- Water will collect in the base pan during high humidity or on rainy days. The water may overflow and drip from the outdoor side of the unit.
- The fan may run even when the compressor does not.

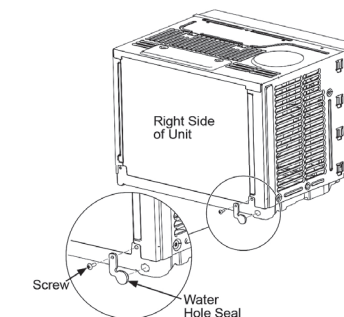

## REFURBISHED PRODUCT LIMITED THIRTY DAY WARRANTY

The **Refurbished Product Service Center** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of THIRTY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the **Refurbished Product Service Center** will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

**Refurbished Product Service Center**  
13225 Marquardt Avenue Santa Fe Springs, CA 90670

## WARRANTY REPAIR INFORMATION

If you need service on your unit during the 30 day warranty period; please go to [www.ConsumerServiceRefurbish.com](http://www.ConsumerServiceRefurbish.com) or call the Refurbished Product Service Center at 562-946-3531 to obtain the required claim number. Once you obtain your claim number, pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt.

Send the unit freight prepaid and insured to:

**Refurbished Product Service Center,**  
**Att: Customer Service Department 13225 Marquardt Avenue Santa Fe Springs, CA 90670**

Your unit will be promptly exchanged and returned to you. We will refuse to accept delivery of the returned unit unless the assigned claim number appears on the outside of the shipping carton.

**Owner's Information**  
(Keep for your permanent records)

NAME: \_\_\_\_\_  
ADDRESS: \_\_\_\_\_  
CITY: \_\_\_\_\_ STATE: \_\_\_\_\_ ZIP CODE: \_\_\_\_\_  
PHONE: \_\_\_\_\_ E-MAIL: \_\_\_\_\_  
MODEL: \_\_\_\_\_ SERIAL NO.: \_\_\_\_\_

804109863



PRINTED IN MEXICO / SC:10-07-2020 / Elbrd: J.E  
OBPN: 49-5000437 Rev.0 09-19 GEA  
TAB / SHNMDL:AKQ06LZ\_B