

Important safeguard

- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The appliance shall be installed in accordance with national wiring regulations.

As the appliance is powered by electricity, the possibility of electrical shock cannot be excluded. The following safety precautions must therefore be followed:

- After removing the packaging, check the condition of the appliance. If in doubt, do not use the appliance and contact professionally qualified personnel.
- Before use, always check the condition of the power cord.
- It is dangerous to modify or alter the characteristics of the appliance in any way.
- This appliance must be connected to an efficient "grounding" system. Have the electrical system checked by a qualified electrician.
- Before each cleaning or maintenance operation, always disconnect the plug from the power outlet.
- Never submerge the appliance in water.
- Do not use the appliance outdoors.
- Do not obstruct the entrances and exits of air.
- When the appliance is connected to the mains, keep the following safety rules in mind:
 - Do not touch the appliance with wet or damp hands;
 - Do not use the appliance with bare or wet feet;
 - Do not pull on the power cord or appliance to detach the plug from the power outlet;
 - Do not move the appliance by pulling the power cable.
 - Keep the appliance far from the reach of children;
 - Do not insert foreign bodies into the appliance;
 - Do not insert metal objects into the apertures. Danger! Rotating parts; contact with the internal fan could cause electric shock or injury.
- do not leave the appliance exposed to atmospheric agents;
- If you wish to permanently eliminate the appliance, after disconnecting the plug from the power outlet it is recommended to make it unusable by severing the power cord.
- In the event of a fault and/or malfunction, turn the appliance off without tampering with it. For all repairs, contact an authorized technical service center only and request the use of original spare parts and accessories.
- Avoid the use of power cord extensions.

Designated use

This appliance must be used exclusively in domestic environment and for the intended purpose for which it was designed. All other uses are considered improper and therefore hazardous. The manufacturer shall not be held liable for any damage caused by improper, erroneous and irresponsible use, and/or due to repairs made by unqualified personnel.

Installing the appliance

- The appliance must be installed in compliance

with national standards regulating electrical systems.

- Do not operate your air conditioner in a wet room such as a bathroom or laundry room.
- Do not install the appliance in rooms containing gas, oil or sulphur or near sources of heat.
- Do not use the appliance on sloping surfaces.
- Keep the appliance at least 20" (50 cm) away from flammable substances (alcohol, etc.) or pressurized containers (e.g. aerosol cans).
- Do not rest objects on top of the appliance.
- When transporting, the appliance must be kept upright. If this is not possible secure the unit at an angle, do not lie it horizontally.
- Before transporting the unit, drain the unit.
- After transportation, wait at least 6 hours before switching the unit on.

Environmental information

- The materials used for packaging can be recycled. You are therefore recommended to dispose of them in special differentiated waste collection containers.

Specific information regarding appliances with R32 refrigerant gas

- Thoroughly read all of the warnings.
- When defrosting and cleaning the appliance, do not use any tools other than those recommended by the manufacturing company.
- The appliance shall be stored in a well-ventilated area;
- The appliance shall be stored in a room without continuously operating open flames (for example an operating gas appliance) and ignition sources (for example an operating electric heater).
- Do not burn any part of the appliance.
- Refrigerant gases can be odorless.
- This appliance contains R32 refrigerant gas. (For more details on the refrigerant, see back cover).
- Do not puncture any part of the refrigerant circuit.
- The servicing shall be performed only as recommended by the manufacturer.
- The appliance must be stored in a safe place in order to prevent damage to the unit.
- Individuals who operate or work on the refrigerant circuit must have the appropriate certification issued by an accredited organization that ensures competence in handling refrigerants according to a specific evaluation recognized by associations in the industry.
- Repairs must be performed based on the recommendations from the manufacturing company. Maintenance and repairs that require the assistance of other qualified personnel must be performed under the supervision of an individual specified in the use of flammable refrigerants.

1. GENERAL INFORMATION

1.1 Instruction for Use

Read all the Instruction for Use carefully before using the appliance. Failure to follow this Instruction for Use may result in burns or damage to the appliance. The manufacturer is not liable for damage deriving from failure to respect this Instruction for Use. WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Please note:

These safety warnings are valid for all De'Longhi air conditioners.

804106770

PAC EM

PORTABLE AIR CONDITIONER

Instructions for use. Keep these instructions

ELECTRIC CHARACTERISTICS

115V ~60 Hz



It's important to read this manual prior to using your new product for the first time.

If the appliance is passed to other persons, they must also be provided with this Instruction for Use. This appliance is fitted with a special safety device. When the compressor switches off, this device prevents it from switching on again for at least 3/4 minutes.

2. BEFORE USE

Important!

Store the packaging material (plastic bags, styrofoam) far from the reach of children. CHOKING HAZARD. The appliance might contain small parts. Some of those small parts might be required to get disassembled during cleaning and maintenance operations. Handle with care and keep small parts out of reach of children.

2.1 Checking the appliance

After removing the packaging, make sure the product is complete and undamaged and that all accessories are present. Do not use the appliance if it is visibly damaged, contact a Service Center.

2.2 Securing drain

Be sure both upper (A10) and lower (A11) drain plugs are attached and tightly secured to the unit to prevent water leakage.

Save these instructions
This product is for household use only

INTRODUCTION

Thank you for choosing a De'Longhi product. Please take a few moments to read the instructions to avoid risks or damage to the appliance.

 
DESCRIPTION

Description of the appliance


- | | |
|-----------------------------|------------------------------------|
| A1 Air outlet grille | A9 Power supply cable |
| A2 Control panel | A10 Upper drainage outlet with cap |
| A3 Handles | A11 Lower drainage outlet with cap |
| A4 Wheels | A12 Remote control signal receiver |
| A5 Filter | A13 Remote control compartment |
| A6 Air intake grille | |
| A7 Air exhaust hose housing | |
| A8 Air intake grille | |

Description of accessories

- | |
|--|
| B1 Air exhaust hose |
| B2 Hose adapter |
| B3 Adapter for extendable window bracket/ window |
| B4 Extendable window bracket with screws |
| B5 Drainage hose |
| B6 Self adhesive strips foam |
| B7 Non adhesive strip foam |
| B8 Remote control |

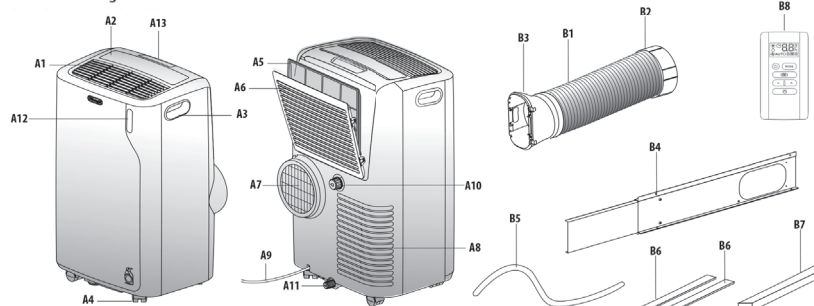

CONTROL PANEL

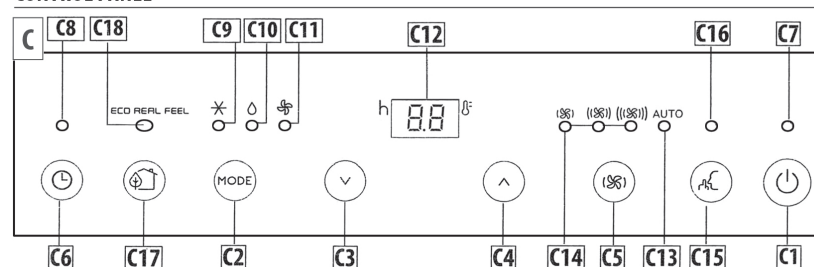 

DESCRIPTION OF THE CONTROL PANEL (C)

- | | |
|--|--|
| C1 ON/STAND-BY (on/off) button | C12 Set temperature values, program on/off timer |
| C2 Mode selection key (air conditioning, dehumidifying, fan) | C13 Auto ventilation speed indicator |
| C3 Decrease key | C14 Ventilation speed indicator (min, med, max) |
| C4 Increase key | C15 Arctic Whisper button |
| C5 Ventilation speed selection key | C16 Arctic Whisper indicator |
| C6 Timer button | C17 Eco Real Feel button |
| C7 Stand-by indicator | C18 Eco Real Feel indicator |
| C8 Timer indicator | |
| C9 Air conditioning mode indicator | |
| C10 Dehumidifying mode indicator | |
| C11 Fan mode indicator | |

Note: The image shown here is for illustrative purposes only and may be subject to change. The actual number of accessories may vary depending on the model.

ELECTRICAL CONNECTION

Before plugging into the outlet, check the following:

- the outlet voltage is the same as that indicated on the plate on the back of the appliance;
- the socket and electrical line are sized to support the load required;
- the socket is the proper type for the plug, otherwise, replace the socket;
- the socket is connected to an efficient grounding system. The manufacturer is not responsible in the event of non-compliance with these injury prevention standards.
- The power cable must only be replaced by specialized technicians.**

USE

 
The instructions below will enable you to prepare your air conditioner for operation as efficiently as possible. Before use, make sure the air intake and outlet grilles are unobstructed.

Maintain a minimum distance of 2ft/60 cm from walls and obstacles. In air conditioning and dehumidification mode the air exhaust hose (B1) must be applied (see figure 1).

Please note: This appliance is provided with an auto-evaporation feature for condensate removal during cooling and dehumidifying mode.

AIR CONDITIONING INSTALLATION

For optimal results see the figures below for the suggested minimum distances.

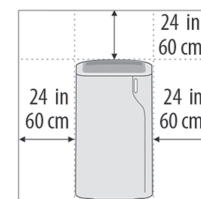


NOTE: Phillips head screwdriver required for installation of window kit.

DOUBLE-HUNG WINDOW

If you have a double-hung window proceed as follows:

 - Fit the air exhaust hose (B1) in the relevant housing located on the rear side of the appliance (fig. 1).
- Depending on the need, place the self adhesive strips foam or non adhesive strip foam on the window as shown in figure 2.
- Cut the adhesive strip foam to the desired length and place it on the window.
- Position the extendable window bracket on the window sill and fully extend the extendable window bracket inside the window frame (fig.3). The portion of the window bracket with the greater depth should be placed along the bottom.
- Adjust the extendable window bracket and then fix the length with two screws (fig. 4) (If the extendable window bracket is too large, it is possible to cut the plastic using a saw).
- Hook the adapter for extendable window (B3) to the window bracket as shown in fig. 5 inserting the bottom of the adapter first then pushing in the top to secure into place.

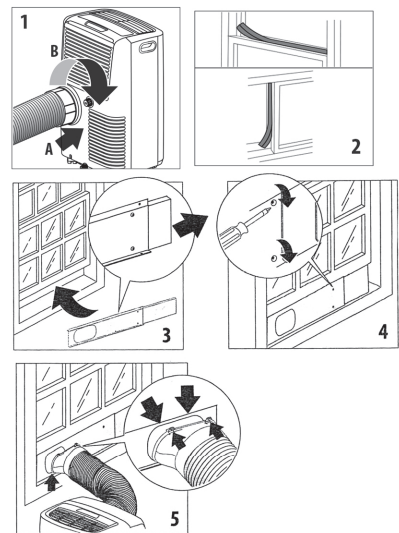

TURNING THE APPLIANCE ON AND OFF

Before connecting the plug to the power outlet, make sure that the drainage hose caps (A10) (A11) located on the back of the appliance are correctly inserted. Once plugged into the power

outlet, the stand-by indicator lights up. Press the (C1) key to turn on the appliance. When the appliance turns on it will be activated with the last function set before it was shut off. To turn the appliance off, press the (C1) key.

 
Please note: If start-up is not continued, after a few minutes the display light dims in order to reduce energy consumption.

Please note: Never turn off the air conditioner by simply pulling the plug. Press the (C1) key in order to put your air conditioner in stand-by and wait a few minutes before pulling the plug. In this manner, the appliance can perform operating status checks.

MODE SELECTION

To select the desired operating mode, press repeatedly the MODE key (C2) until the desired function is selected.

* AIR CONDITIONING MODE

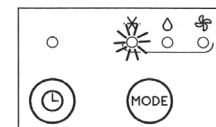

This is ideal for hot and humid weather when the room needs to be both cooled and dehumidified.

To correctly set this mode:

- Press repeatedly the MODE key (C2) until the air conditioning * indicator (C9) appears. The display (C12) will show the desired temperature.
- To change the temperature to be reached, press the (C3) or (C4) key.
- Select the desired fan speed by pressing the (C5) (C5) key.

The speeds available are:

(C5) **Minimum air flow:** when maximum quiet operation is desired.

((C5)) **Medium air flow:** when the noise level needs to be low but with a good comfort level.

 
((((C5))) **Maximum air flow:** to reach the desired temperature as soon as possible.

AUTO

The appliance automatically chooses the best fan speed based on the temperature selected and the environmental conditions.


The most suitable temperatures during the summer range from 75 to 80°F (24 to 27°C). However, setting the temperature significantly lower than the outdoor temperature is not recommended.

ARCTIC WHISPER FUNCTION

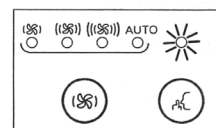

By activating this function in air conditioning mode, the noise of the appliance is further reduced. To activate it, press the button (C15), the indicator (C16) turns on.

 ECO REAL FEEL FUNCTION

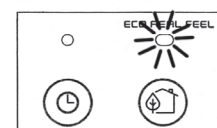

ECO REAL FEEL is a De'Longhi technology that checks the relative humidity and regulates the temperature at the same time. These are the two most important elements for comfort.

Compare to traditional air conditioning, ECO REAL FEEL maintains comfort conditions over time, automatically modulating the compressor and fan speed. To activate the function, press the (C17) key. The "ECO REAL FEEL" status indicator (C18) becomes white for approx. 1 min. to indicate that the appliance is checking the room conditions. After a while the "ECO REAL FEEL" status indicator (C18) changes color as it approaches comfort conditions.



 
GREEN LIGHT: Environmental conditions satisfactory for most people, almost perfect.

BLUE LIGHT: Best comfort level. Perfect!

Please note:

- Comfort is subjective. Consequently, different individuals can judge the same environmental conditions differently.
- In particularly severe environmental conditions (large room size, high outdoor temperature or humidity, little room insulation, many people or large thermal loads in the room, exposure to the sun, etc.), the appliance may not be able to reach comfort conditions.

DEHUMIDIFYING MODE

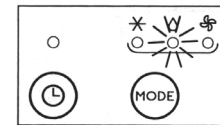


This is ideal for reducing humidity in the room (spring and autumn, damp rooms, rainy periods, etc). For this type of use, the appliance must be set up the same as for air conditioning mode. That is, the air exhaust hose (B1) must be fitted to the appliance to allow the humidity to be discharged outside.

To correctly set this mode:


- Press repeatedly the MODE key (C2) until the dehumidifying ◊ indicator (C10) appears.
- The appliance will automatically choose the best air flow. It cannot be adjusted manually. Also, temperature cannot be selected in dehumidifier mode so digital display will not appear.

Note: In case of high ambient humidity, it is possible to drain the condensate continuously by applying the hose supplied (B5) to the upper drainage hose (A10) and thus allowing the water to flow into a container. Remove the external AND internal caps before connecting the hose (see Fig. 6B). Pay attention the water does not overflow onto the floor and the drainage tube is not obstructed (Fig. 6A).

 To correctly set this mode:

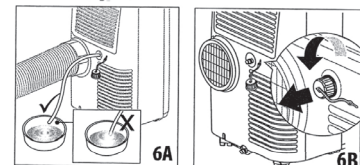

FAN MODE

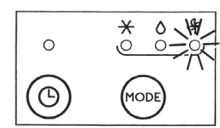 

When using this mode, the air exhaust hose (B1) does not need to be attached to the appliance.

To correctly set this mode:

- Press repeatedly the MODE (C2) key until the fan (C) indicator appears.
- Press repeatedly the (C5) (C5) key to select the desired air flow.

The air flows available are:

(C5) **Minimum air flow:** when maximum quiet operation is desired.

 
((C5)) **Medium air flow:** when the noise level needs to be low but with a good comfort level.

((((C5))) **Maximum air flow:** for maximum performance.

SELECTING THE TEMPERATURE SCALE

The temperature can be displayed in °C or °F. To change the temperature unit of measure select the air conditioning mode then press both the decrease (C3) and increase (C4) keys at the same time for about 3 seconds. You must follow these steps on both the unit itself AND the remote control.

SETTING THE TIMER

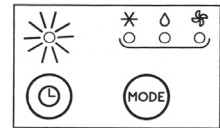

The timer allows the delayed start up or shut down of the appliance. This function will prevent wasting electricity by optimizing the operating periods.

How to program delayed shut down

- While the appliance is on in any operating mode, delayed shut down can be programmed.
- Press the Timer button (C6): the timer indicator (C8) and hours light up.
- Use the buttons √ (C3) or ^ (C4) to set the number of hours until the appliance should shut down.

A few seconds after the timer is set, the setting is acquired, the display shows the operating mode and the timer indicator stays lit. At the preset time, the air conditioner goes into standby. To cancel the timer program, press the timer button (C6) twice. The timer indicator (C8) will go off.

 
How to program delayed start up

- Plug in the appliance and set to stand-by.
- Press the timer button (C6): the timer indicator (C8) and hours light up.
- Set with the buttons √ (C3) or ^ (C4) the number of hours after which you want the appliance to start to operate.
- The appliance will start to operate in the same operating mode that was previously set.

Start up can be programmed at any time within the next 24 hours that follow. A few seconds after the timer is set, the setting is acquired. The timer indicator stays lit and the display returns to standby. To cancel the timer program, press the timer button (C6) twice. The timer indicator (C8) will go off.


OPERATION USING THE REMOTE CONTROL

- Aim the remote control at the receiver (A12) on the air conditioner. The maximum distance between the remote control and the appliance is 23ft/ 7 metres (with no obstacles between the remote and the receiver).
- The remote control should be handled with extreme care, without dropping it or exposing it to direct sunlight and keeping it away from heat sources.



OPERATING FROM THE REMOTE CONTROL INSERTING OR REPLACING THE BATTERIES

 - Remove the cover on the rear of the remote control;
- Insert or replace the batteries with two new LR03 "AAA" 1.5V batteries, inserting them correctly (see the directions inside the battery compartment) (see figure 7);
- Replace the cover.



Batteries not supplied

 
BATTERY WARNINGS

- Always purchase the correct size and grade of battery most suitable for the intended use.
- When batteries of different brand or type are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from product during periods of non-use. Battery leakage can cause corrosion and damage to this product.
- Remove used batteries promptly.

For recycling and disposal of batteries to protect the environment, please check the internet or your local phone directory for local recycling centers and / or follow local government regulations.

DESCRIPTION OF THE REMOTE CONTROL

- D1.** ON/STANDBY button
- D5.** Decrease button
- D2.** MODE button
- D6.** Timer button
- D3.** Fan speed selection button
- D7.** ARCTIC WHISPER button
- D4.** Increase button
- D8.** ECO REAL FEEL button

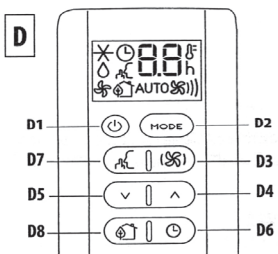

TURNING THE APPLIANCE ON/OFF USING THE REMOTE CONTROL

- Plug into the outlet.
- Press the ON/STAND-BY button (D1). When turned on, the air conditioner starts operating in the same mode as when it was turned off.
- Press the ON/STAND-BY button (D1) again to switch the appliance off.

Please note: Never switch the appliance off by removing the plug. Always switch it off by pressing the ON/STAND-BY button (D1) and waiting a few minutes before removing the plug. The appliance will only perform the standard checks if the appliance is switched off following this process.

Pressing any button the remote control will automatically sync to the unit itself and whatever appears on the remote control display will now also appear on the unit display.

SELECTING THE OPERATING MODES

The operating modes available on the remote control through the MODE button (D2) correspond to those on the appliance control panel (C).

SELECTING THE TEMPERATURES

In air conditioning mode press ^ (D4) or √ (D5) button to select the desired temperature.

SELECTING THE AIR FLOW

In air conditioning mode press (S) button (D3) to select the desired air flow. The air flows available are:

- (S)** **Minimum air flow:** when maximum quiet operation is desired.
- ((S))** **Medium air flow:** when the noise level needs to be low but with a good comfort level.
- ((((S)))** **Maximum air flow:** for maximum performance.

AUTO **Auto air flow:** the appliance automatically chooses the air flow based on the temperature selected and the environmental conditions. This selection is only available in air conditioning mode.

SELECTING THE TEMPERATURE SCALE

The temperature can be displayed in °C or °F. To change temperature unit of measure select the air conditioning mode then press both the decrease √ (D5) and increase ^ (D4) keys for about 3 seconds.

SETTING THE TIMER

The timer allows the delayed start up or shut down of the appliance. This function will prevent wasting electricity by optimizing the operating periods.

How to program delayed shut down

- While the appliance is on in any operating mode, delayed shut down can be programmed.
- Press the timer button (D6), the timer symbol is displayed and the hours light up.
- Press the √ (D5) and ^ (D4) buttons until the desired number of hours to shut down appears on the display.

A few seconds after the timer is set, the setting is acquired, the display shows the operating mode and the timer symbol stays lit. Once the set time is elapsed, the air conditioner goes into standby. To cancel the timer program, press the (D6) timer button (D6) twice. The timer indicator will go off.

How to program delayed start up

- Plug in the appliance and set to standby.
- Press the timer button (D6), the timer symbol is displayed and the hours light up.
- Press the √ (D5) and ^ (D4) buttons until the desired number of hours to start up appears. Start up can be programmed at anytime within the next 24 hours.

When the set time is elapsed, the appliance will start to operate in the same operating mode that was previously set.

To cancel the timer program, press the (D6) timer button (D6) twice. The timer indicator will go off.

Note:

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These

limits are designed to provide reasonable protection against harmful interference in a residential installation.

- This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This Class B digital apparatus complies with Canadian (AN ICES-3 (B) / NMB-3 (B)).

FCC Responsible party:

De Longhi America
Upper Saddle River NJ 07452
201-919-1000

TIPS FOR CORRECT USE

To ensure optimal results from your air conditioner, follow these recommendations:

- Close the windows and doors in the room to be air conditioned. When installing the air conditioner semi-permanently, you should leave a door slightly open (as little as 0.4 in/1cm) to guarantee proper ventilation.
- Never use the appliance in very damp rooms (laundries for example).
- Protect the room from direct exposure to the sun by partially closing curtains and/or blinds to make the appliance much more economical to run.
- Never use the appliance outdoors.
- Make sure there are no heat sources in the room.
- Make sure the air conditioner is standing on a level surface.



don't cover the appliance

- Never rest objects of any kind on the air conditioner.
- Never obstruct the air intake or air outlet flap.

CLEANING

Before cleaning or maintenance, turn the appliance off by pressing the (D1) button, then unplug from the outlet.

 
CLEANING THE CABINET

You should clean the appliance with a slightly damp cloth then dry with a dry cloth. For safety reasons, never wash the air conditioner with water.

Attention! Never use alcohol or solvents to clean the appliance. Never spray insecticide liquids or similar.


CLEANING THE AIR FILTER

To maintain the efficiency of the air conditioner, it is recommended to clean the dust filter after every week of use. The filter is located near the intake grille and the grille is located on the filter housing. To clean the filter, it must be removed as shown in figure 8. Then, remove filter from air inlet grille (A6) as shown in figure 10.

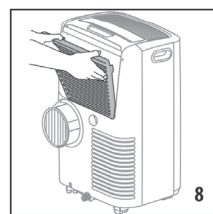


Use a vacuum cleaner to remove any dust. If it is very dirty, submerge it in warm water and rinse it several times (fig. 9).

 Note: The image shown here is for illustrative purposes only and may be subject to change.

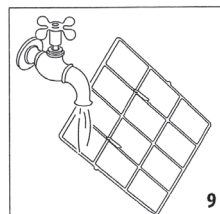

The water temperature must be kept below 104°F/ 40°C. After washing the filter, allow it to dry.

 To replace, put the filter back in its housing (fig. 10).

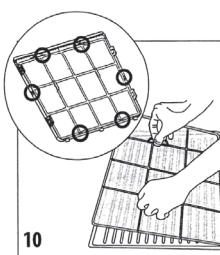


CHECKS AT THE BEGINNING OF THE SEASON


Make sure the power cable and socket are in perfect condition and make sure the ground system is sufficient. Comply strictly with the installation standards.

END OF SEASON OPERATIONS

 To completely drain the water from the internal circuit, remove the cap from the lower drainage hose, turning it counter clockwise, and pulling it to remove the internal cap (figure 11).

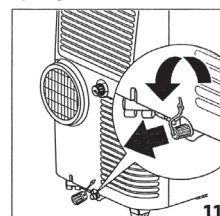

 Drain the water completely into a basin (fig.12). When it is totally drained, replace the caps, making sure they are closed. Clean the filter as indicated previously. The filter must be dry before reinserting it.

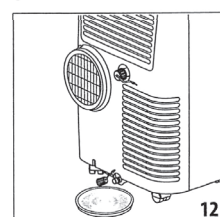

TECHNICAL SPECIFICATIONS

Power supply voltage	see rating label on the product
Max. absorbed power during air conditioning	"
Refrigerant	"
Cooling capacity	"

LIMIT CONDITIONS

Room temperature for air conditioning	64° - 95°F (18° - 35°C)
---------------------------------------	----------------------------

Transporting, loading, cleaning, recovery and disposal of the refrigerant must only be performed by technical service centers authorized by the manufacturing company. The appliance must only be disposed by specialized personnel authorized by the municipality in which you live.

Attention! TO AVOID DAMAGE TO THE UNIT:

NEVER TRANSPORT OR TURN THE APPLIANCE UPSIDE DOWN OR ON ITS SIDE. IF THIS OCCURS, WAIT 6 HOURS BEFORE TURNING THE APPLIANCE ON, 24 HOURS IS RECOMMENDED. After the unit has been on its side, oil needs to return to the compressor to ensure proper function. Without allowing the unit this time (6-24 hours) the unit may function for only a short time, and then the compressor will break down from lack of oil.

SELF-DIAGNOSIS

The appliance has a self diagnosis system to identify a number of warning/malfunctions. Error messages are displayed on the appliance display.

IF ... IS DISPLAYED,	IF ... IS DISPLAYED,	IF ... IS DISPLAYED,
 "Low Temperature" (Frost prevention) ..WHAT SHOULD I DO? The appliance is fitted with a frost protection device to avoid excessive formation of ice. The appliance starts up again automatically when the defrosting process is completed.	 "Probe Failure" (Probe damaged) ..WHAT SHOULD I DO? If this is displayed, requires service. Contact a Service center.	 "High Level" (Internal tray full) WHAT SHOULD I DO? Empty the internal tank following the instructions in the section "End of season operations".

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The air conditioner does not come on	it is not plugged into the outlet	plug into the outlet
	there is no current	wait for power to be restored
The air conditioner works for a short time only	LCDI plug on the power cord could be tripped	push reset button on LCDI plug
	there are bends or kinks in the air exhaust hose	position the air hose correctly, keeping it as short and free of curves as possible to avoid bottlenecks
The air conditioner works, but does not cool the room	something is preventing the air from being discharged	check and remove any obstacles obstructing air discharge
	windows, doors and/or curtains open	close doors, windows and curtains, bearing in mind the "TIPS FOR CORRECT USE" given above
	there are heat sources in the room (e.g. oven, etc.)	eliminate the heat sources
	the air exhaust hose is detached from the appliance	fit the air exhaust hose in the housing at the back of the appliance (fig. 1).
During operation, there is an unpleasant smell in the room	filter clogged	clean or replace the filter as described above
	filter clogged	clean the filter as described above
The air conditioner does not operate immediately after restarting it	an internal safety device prevents the appliance from being restarted until three/four minutes have elapsed since it was last turned off	wait approximately three minutes and try again. This delay is part of normal operation.
"HL" frequently appears on the display	high ambient humidity	we suggest you to apply the hose supplied (B5) to the upper drainage hose (A10) and thus allowing the water to flow into a container. Pay attention the water does not overflow onto the floor.
The scripts Lt/PF/HL appear on display.	the appliance has a self diagnosis system to identify a number of malfunctions.	see the SELF-DIAGNOSIS chapter
There is no display showing in my remote control	Batteries are exhausted	Replace batteries
There are two dashes (-) appearing on remote control but it is not working	Remote is not "ON"	Press ON/OFF key on remote control

REFURBISHED PRODUCT LIMITED THIRTY DAY WARRANTY

The **Refurbished Product Service Center** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of THIRTY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the **Refurbished Product Service Center** will repair or, at its option, replace defective unit/parts with new or original materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and/or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center
13225 Marquardt Avenue Santa Fe Springs, CA 90670

WARRANTY REPAIR INFORMATION

If you need service on your unit during the 30 day warranty period; please go to www.ConsumerServiceRefurbish.com or call the Refurbished Product Service Center at 562-946-3531 to obtain the required claim number. Once you obtain your claim number, pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt.

Send the unit freight prepaid and insured to:

Refurbished Product Service Center,
Att: Customer Service Department 13225 Marquardt Avenue Santa Fe Springs, CA 90670

Your unit will be promptly exchanged and returned to you.

We will refuse to accept delivery of the returned unit unless the assigned claim number appears on the outside of the shipping carton.

Owner's Information
(Keep for your permanent records)

NAME: _____

ADDRESS: _____

CITY: _____ STATE: _____

ZIP CODE: _____ PHONE: _____

E-MAIL: _____

MODEL: _____

SERIAL NO.: _____

PRINTED IN MEXICO SC:07.11.2022

OBPN: 5715117762_00_1021

SHNMDL: PACEM375WRC6ALLG_B

PAGS: TAB

ELBR: M.C.

