

Beautiful™ Kitchenware



"Recipe book not included"

2-Slice Toaster with
Touch-Activated Display

Instruction Manual

804106824

Please read this manual carefully before operating your unit and retain for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. READ ALL INSTRUCTIONS.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plugs, or appliance in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Close supervision is necessary when any appliance is used by or near children.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact Service Center.
NOTE: DO NOT ATTEMPT TO REPAIR THE UNIT YOURSELF. THIS WILL VOID THE WARRANTY.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. To disconnect, press **⏻** or CANCEL. Then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Oversize foods, metal foil packages, or utensils must not be inserted in a Toaster as they may involve a risk of fire or electric shock.
15. A fire may occur if Toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
16. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
17. Do not attempt to dislodge food when the Toaster is plugged in.

FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS

ADDITIONAL IMPORTANT SAFEGUARDS

CAUTION HOT SURFACES: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.

1. A person who has not read and understood all operating, toasting, and safety instructions is not qualified to operate this appliance. All users of this appliance must read and understand this instruction manual before operating or cleaning this appliance.
2. If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water!

3. When using this appliance, provide adequate air space above and on all sides for air circulation. Do not operate this appliance while it is touching or near curtains, wall coverings, clothing, dishtowels or other flammable materials.
4. To reduce the risk of fire, do not leave this appliance unattended during use.
5. If this appliance begins to malfunction during use, immediately press **⏻** or CANCEL and unplug the cord. Do not use or attempt to repair a malfunctioning appliance! Contact Service Center.
6. The cord to this appliance should only be plugged directly into a 120V AC electrical wall outlet.
7. Do not use this appliance in an unstable position.
8. Use the Toaster on a hard, flat surface. Do not place it near a flame or heat or on a soft surface (such as carpet). Avoid placing it where it may tip over during use. Dropping the Toaster could cause it to malfunction.

NOTE: This Toaster is equipped with Anti-Jam feature. If any toast or toaster food gets jammed, the Toaster will shut OFF automatically.

WARNING: ELECTRICAL SHOCK HAZARD. Never attempt to dislodge food inside the Toaster while the Toaster is plugged in. Doing so could cause an electrical shock hazard or a risk of fire.

CAUTION: This appliance is hot during operation and retains heat for some time after turning off. Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning. Do not place anything on top of the Toaster while it is operating or while it is hot.

CAUTION!

- DO NOT toast pastries with runny fillings or frosting.
- DO NOT toast torn slices of bread.
- DO NOT place buttered bread or wrapped food into the Toaster.
- DO NOT toast small-size breads, mini-baguettes, breadsticks, etc.

NOTES ON THE PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

NOTES ON THE CORD

- a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long detachable power-supply cord or extension cord is used:
 - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance;
 - 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord; and
 - 3) The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

PLASTICIZER WARNING

CAUTION: To prevent Plasticizers from migrating to the finish of the counter top or table top or other furniture, place NON-PLASTIC coasters or place mats between the appliance and the finish of the counter top or table top. Failure to do so may cause the finish to darken; permanent blemishes may occur, or stains can appear.

ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

PRINTED IN MEXICO

Elbrd: J.M. SC: 06-27-2024

OBPN: N/A SHDML: TA1741UL_B

804106824



Instructions

Getting To Know Your 2-Slice Toaster

Product may vary slightly from illustration

1. Toasting Slots/Carriages
2. High Lift Toasting Lever
3. Automatic Centering Guides
4. Slide Out Crumb Tray (not shown)
5. Touch-Activated Display Control Panel
6. Polarized Plug (not shown)
7. Cord Storage (not shown)
8. Non-Skid Feet (not shown)



Accessory type and quantity may vary depending on the model.

Touch-Activated Display Control Panel

A screen that only shows up when you need it.

NOTE: The images shown here are for illustrative purposes only and may be subject to change, the actual descriptions of control panel and their locations may vary depending on the model.



1. Power button
2. BAGEL
3. FROZEN
4. REHEAT
5. CANCEL
6. + and - Buttons
7. 7 Bar Browning Level Indicator



- When the Toaster is plugged in, a tone will sound, the control panel will illuminate for 1 second, then turn off. The Power button will pulse slowly on and off.
- When Power is pressed, a tone will sound, and the control panel will illuminate and remain active for 20 seconds.
- Press Power to STOP any operation, to raise the toasting carriages and turn the Toaster OFF.



- Slice bagels or English muffins in half; place one half in each toasting slot with the cut sides facing the center of the toasting slots.
- Bagels and English muffins toast perfectly without burning the outsides.



- Set browning indicator to the desired toast color. Toasting time is altered to give the same degree of browning achieved with unfrozen bread.



- Provides up to 30 seconds of low heat to previously toasted foods.



- Press CANCEL at any time to interrupt the toasting cycle, to raise the toasting carriages and turn the Toaster OFF.



- The + and - buttons control browning level. from 1 (1 bar) LIGHT to 7 (7 bars) DARK. While toasting, the browning level indicator bars will pulse and count down to a single bar before the toasting lever rises and the Toaster turns OFF.
- Press + to increase browning from 1 (1 bar) LIGHT to 7 (7 bars) DARK.
- Press - to reduce browning from 7 (7 bars) DARK to 1 (1 bar) LIGHT.

NOTE: The last chosen browning level will remain active for the next batch.

Before Using for the First Time

1. Remove all packaging materials including those that may be inside the toasting slots.
2. Wipe the exterior with a damp cloth. Dry thoroughly. Do not use abrasive cleaners.
3. Do not place the Toaster, cord or plug in water.
4. Make sure the crumb tray is locked into position at the back of the Toaster.(Figure 1)
5. Unwrap the power cord from cord storage area on underside of the Toaster and plug into a 120V AC electrical outlet. Following the OPERATION instructions, run 2 cycles of toast without bread before the first use.

NOTE: Toaster may emit a thin smoke on the initial use. This is normal and not detrimental to the performance of the Toaster.



Figure 1

Operation

1. Make sure crumb tray is locked into position at the back of the Toaster. (Figure 1)
2. Check to be sure no bread or other objects are inside the toasting slots. Place the Toaster on a flat, level, heat resistant surface.
3. Remove all protective wrappings from food before placing into the toasting slot(s).
IMPORTANT: Avoid toasting torn bread slices or small pieces of toaster food that may get lodged in toasting slot(s).
4. Plug the power cord into a 120V AC electrical outlet. A tone will sound, the control panel will illuminate for 1 second, then turn off.
5. The Power button will pulse slowly on and off until use.

The images shown here are for illustrative purposes only and may be subject to change.

Figure 2



Figure 3



Figure 4



Figure 5



Toast, Bagel, Frozen

NOTE: Use either toasting slot when toasting only 1 piece of bread or toaster food. Always use slices or foods that fit freely into toasting slots.

1. Add bread, bagels, English muffins, toaster foods, frozen bread or bagels to the toasting slots (Figure 2). Press the pulsing Power button.
2. For the toaster function, just lower the lever to begin toasting.
3. Adjust the browning level from 4 (4 bars) MEDIUM by pressing + or -.(Figure 3)
4. Press BAGEL or FROZEN (Figure 4). A tone will sound. The Power button, CANCEL button and any FUNCTION button will illuminate when active. All other buttons vanish when not in use.
5. Lower the toasting lever to begin toasting (Figure 5).
6. While toasting, the chosen browning level lighted bars will pulse and count down to a single light as the cycle progresses.

NOTE: The browning level indicator will act as a progressive timer to show you how much time remains until the toasting cycle will be completed.

7. At the end of the toasting cycle, 2 audible tones will sound; and toasting carriages will rise automatically.
8. Remove bread or toaster food from the toasting slot(s). Use care as the top of the Toaster will still be hot.
CAUTION: Never use a fork or sharp-edged utensil to remove toast, because that may damage the heating element or cause injury.
NOTE: After 20 seconds of inactivity, the control panel will darken, Power button will pulse slowly on and off and the Toaster will advance to sleep mode.
9. Unplug the Toaster from the wall outlet when not in use and before cleaning.

Reheat

1. Add bread, bagels, English muffins, toaster foods, frozen bread or bagels to the toasting slots (Figure 1). Press the pulsing Power button.
2. Press REHEAT. A tone will sound. The Power button, CANCEL button and REHEAT button will illuminate. All other buttons vanish when not in use.
3. Lower the toasting lever to begin toasting (Figure 4).
4. At the end of the toasting cycle, 2 audible tones will sound; and toasting carriages will rise automatically.

Function Selection Guide

INGREDIENT	BROWNING BARS	NOTES
Toaster Pastry	4 (4 bars) MEDIUM*	CAUTION! DO NOT toast pastries with runny fillings or frosting.
Non-Frozen Shelf Pastry	2 (2 bars) or 1 (1 bar) LIGHT	CAUTION: For best results, follow the instructions printed on the pastry package.
Thicker Convenience Foods	4 (4 bars) MEDIUM to 7 (7 bars) DARK	If the package does not have specific browning instructions, use default CAUTION: Never leave Toaster unattended when toasting pastries.

Removing Lodged Foods

NOTE: This Toaster is equipped with Anti-Jam feature. If any toast or toaster food gets jammed, the Toaster will shut OFF automatically.

1. If, after toasting, a piece of bread or any other toaster food becomes lodged in either of the toasting slots, unplug the Toaster and allow it to cool.
2. Turn the Toaster upside down and shake the food loose.
CAUTION: To avoid injury or damage to the heating element, NEVER use a fork or sharp-edged utensil to remove toast or toaster food.

Beautiful Toasting Tips

- Remove all protective wrappings from food before placing into the toasting slot(s).
- For best results, clean the crumb tray frequently. See "Care & Cleaning Instructions" in this instruction manual.
- Do not block top openings. Do not place any object over any top opening.
- Do not add butter to breads, pita, bagels or English muffins. Melted butter may cause fire.
- When toasting more than one slice of bread, use slices of similar size, thickness and freshness.
- Stale bread, thin bread or sweet bread products, such as tea cakes and fruit loaf, brown quickly and should be lightly toasted.

User Maintenance Instructions

This appliance requires little maintenance. It contains no user-serviceable parts. Any servicing requiring disassembly other than cleaning must be performed by a qualified appliance repair technician.

Care & Cleaning Instructions

CAUTION: Do not immerse the Toaster, cord, or plug in water or any other liquid.
CAUTION: Be sure the Toaster is unplugged before cleaning.

1. CRUMB TRAY: Push to release the crumb tray from the back of the Toaster. (Figure 1) Wipe the crumb tray with a clean, damp cloth. Replace crumb tray. Push firmly until an audible click is heard as the crumb tray is fully inserted and locked into place in the bottom of the Toaster.
2. EXTERIOR: Wipe the Toaster's stainless steel exterior with a clean, damp cloth.
Do not use abrasive cleaners. Do not put cord, or plug in water or liquid.

Storing Instructions

1. Unplug unit, allow to cool. Clean before storing.
2. Store Toaster in its box in a clean, dry place.
3. Never store Toaster while it is hot or still plugged in.
4. Never wrap cord tightly around the appliance, use the cord storage area on the bottom of the Toaster.
5. Be sure crumb tray is pushed all the way into the back of the Toaster. (Figure 1)
6. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.