

PHILIPS

5 series

Roku TV

QUICK GUIDE [805001355]

Please read this manual carefully before operating your unit and retain for future reference.

1 Using the remote

How to install the batteries in the remote (Batteries not included)

Open the battery cover by firmly sliding down. Insert 2 AAA (1.5 V) batteries matching the polarity indicated inside battery compartment of the remote.

1

2

3

TV

[Remote control sensor]

1

2

3

4

5

6

7

8

9*

10

11

12

13

(Batteries not included)

1 Power

Turn TV on and off

2 Back

Return to previous screen

3 OK

Select an option from a menu

4 Instant replay

Replay the last few seconds of streaming video

5 RWD scan

Rewind streaming video, scroll left one page at a time

6 Home

Return to Roku Home screen

7 Directional keypad

Move up or down; The left arrow will bring up the antenna TV channel list or Smart Guide. The left and right arrow are used for Live TV Pause to select scenes.

8 Sleep

Set the sleep timer

9 Options

Access to picture settings, move streaming channel icons and more

10 FWD scan

Fast forward streaming video, scroll right one page at a time. This button is also used to fast forward paused live TV using Live TV Pause.

11 Play / Pause

Start or pause playback. This button is also used to activate and use the Live TV Pause feature when a 16 GB USB drive is attached to the TV.

12 Featured channel shortcut

Lets you directly access featured channels

13 Volume / Mute

Increase / Decrease volume and mutes the TV sound

* The  gives you easy access to picture settings, display options and more. Try it on every screen.

2 Prepare to activate your smart TV

What you need (not included)

• **Wireless router**
(needed to connect your TV to the Internet)

• **Computer, tablet, or smartphone**
(needed for setup)

• **Internet connection**
(needed for streaming)

• **Roku account**
(needed to access entertainment across thousands of streaming channels)

Key things to know: A paid subscription or other payments may be required for some streaming channel content. Channel availability is subject to change and varies by country.

Your Roku account

During guided setup, you will be prompted to create your Roku account online. See more information below.

- Roku accounts are free, and while a valid credit card number is not required to create your account, providing your credit card information makes renting and purchasing entertainment from the Roku Channel Store fast and convenient.
- If you choose to save a payment method, you will be able to seamlessly rent content, download channels and subscribe to services without having to enter your credit card information each time.
- A unique PIN can be added to the account to prevent unauthorized purchases.

Tip: Roku does not charge for activation support – **beware of scams.**

3 Plug in and turn on TV

Connect the AC power cord to the AC outlet. Press the power button on the TV’s remote.

4 Follow the on-screen instructions

PHILIPS | Roku TV | Language

Let’s get started >

English
Deutsch
Español
Français

PHILIPS | Roku TV | Set up environment

< Set up for home use
Set up for store use

1. Once your Roku TV powers on, follow the on-screen instructions. Your Roku TV will walk you through initial setup and help connect to your preferred wireless network.
2. Your TV will automatically detect wireless networks in your area. Have your network name and password handy and follow the easy on-screen instructions.
 - If you are not ready to connect your TV to a wireless network, you can still use it as a regular TV by selecting “Connect to the Internet later”.

To download your copy of the complete Owner’s Manual:

<http://consumerservicerefurbish.com>

Click on: **Download Owners Manual**
On Manufacturer or Brand, select: **TV**
On Product Type, select: **PHILIPS**
On Model Number, select:**43PFL5756F7A**

5 Download the Roku mobile app (optional)

The free Roku mobile app allows you to use your mobile device as a fully functioning remote with voice search and keyboard.

- Download the Roku mobile app on your smartphone or tablet through Google Play or Apple App Store.
- Simply search for “Roku app” and choose the “Roku” app provided by Roku Inc.
- Follow the on-screen prompts and you are on your way.

6 Connect antenna or cable (optional)

With the tuner built-in you can connect your TV to antenna or cable (free cable only, does not work with cable TV using a set-top box) and enjoy over-the-air entertainment.

PHILIPS | Roku TV

12:45 PM | Roku

Home
TV Guide
Movies
TV Shows
Streaming Channels
Settings

CABLE BOX

Game Console

Live TV

Live TV tile

1. When the setup wizard is complete, select the Live TV tile from the home screen.

2. Follow the on-screen instructions.

3. Whenever you want to watch local broadcast TV, select this tile.

• User interface may vary.

Tip: While in the antenna TV input, you can use your remote to access additional features.

- D-Pad left: Pressing this key brings up the smart guide, a list of antenna TV channels.
- Play/Pause: Pause live TV for up to 90 minutes when a 16 GB USB drive is connected.
- RWD scan and FWD scan: Allows you to fast forward and rewind while using the Live TV Pause feature.
- D-Pad left and right: Allows you to scroll through the paused Live TV and select scenes.

7 Connection overview

• The cables mentioned in this guide is not supplied with your unit.

Wall Mount

Wall mount bracket kit

43PFL5756/F7	Brand: SANUS	Model #: AST16	Screw dimension: M4 x 1.378" (35 mm)
--------------	--------------	----------------	--------------------------------------

• Compatible wall bracket kits are available from third party vendors and will allow mounting of the TV on the wall.

• The recommended wall mount bracket kit (sold separately) allows the mounting of the TV on the wall.

• For detailed information on installing the wall mount, refer to the wall mount instruction book.

• Funai Corporation is not responsible for any damage to the product or injury to yourself or others if you elect to install the TV wall mount bracket or mount the TV onto the bracket on your own.

• The wall mount bracket must be installed by experts.

When installing the unit on the wall, allow this much space.

Top: 11.8" (30 cm)

Left and right side: 5.9" (15 cm)

Bottom: 3.9" (10 cm)

Funai Corporation is not liable for these types of accidents or injuries noted below.

• Install the wall mount bracket on a sturdy vertical wall.

• If installed onto a ceiling or slanted wall, the TV and wall mount bracket may fall which could result in a severe injury.

• Do not use screws that are longer or shorter than their specified length. If screws too long are used this may cause mechanical or electrical damage inside the TV set.

• If screws too short are used this may cause the TV set to fall.

• Do not fasten the screws by excessive force. This may damage the product or cause the product to fall, leading to injury.

• For safety reasons use 2 people to mount the TV onto a wall mounting bracket.

• Do not mount the TV onto the wall mounting bracket while your TV is plugged in or Turned On. It may result in an electrical shock injury.

8 Troubleshooting

Category	Problem	Tip
Power	No power	• Ensure that the AC outlet supplies the proper voltage. Plug another electrical appliance into the AC outlet to ensure that the AC outlet operates normally. • If a power failure occurs, unplug the AC power cord for 1 minute to allow the unit to reset itself.
Remote	Remote buttons are not functional.	• Re-insert or replace the AAA batteries with their polarities (+/-) as indicated on the remote battery area.
Network	Cannot connect the network.	• Check if your router and/or modem is properly connected. • Check if the Ethernet cable connection between the TV and your router or modem is properly secured. • Power cycle the router and/or modem. • Check your network settings.
	Slow Data Connection or buffering.	• Check the settings between your router and ISP modem or gateway (if applicable). • Connect to a stable wireless connection from home wireless or wired network. • The use of mobile hot spots or public wireless connections is not recommended.
Picture on HDMI Input	Television has sound with no picture or abnormal picture.	• HDMI EDID Version setting is set to a different mode than your source device. • Change the resolution output of your source device.
Sound on HDMI with external devices	Television has no sound.	• Please check to be sure the device is connected to the HDMI 2 (ARC) input on the TV.

License

Funai Corporation, Inc. hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open source code packages, on an "AS IS" basis, used in this product for which such offer is requested by the respective licenses. This offer is valid up to three years after the product purchase to anyone in receipt of this information. To obtain source code, please contact Funai Corporation, Inc. You should write to Funai Service Corporation OSS Request, 2425 Spiegel Drive, Groveport, OH 43125, USA. Funai Corporation, Inc. disclaims any and all warranties and representations with respect to such software and related source code including quality, reliability, usability, and accuracy, and further disclaim all express, implied, statutory or otherwise, including without limitation, any implied warranties of title, non-infringement, merchantability, or fitness for a particular purpose. Funai Corporation, Inc. shall not be liable to make any corrections to the open source software or source code or to provide any support or assistance with respect to it. Funai Corporation, Inc. disclaims any and all liability arising out of or in connection with the use of this software and/or source code.

READ THIS FIRST



PLEASE KEEP PACKING MATERIALS FOR FUTURE TRANSPORTATION!

DO NOT RETURN TO STORE

We are ready to help! Contact us first with any questions

For installing the stands, see the back of this sheet. The information is intended for regular installation of this TV (not for wall mount installation).

1 Getting started

! Please read the entire instructions once before following them step by step.

A wide open space is recommended for assembly.

Be careful not to injure your fingers and keep children away during assembly.

A Phillips-head screwdriver is required to fasten the stands to the TV set.

(TOOL NOT INCLUDED)

 
 


It is recommended that two or more people remove the TV set from the box.

2 What's in the box



ST4 x 0.787" (20 mm)



! Thin TVs can easily bend. To avoid damage to this TV and its screen, it **MUST NOT** be carried in a horizontal position when being moved.

 


• Accessory type and quantity may vary depending on the model.

• The remote control vary depend of model: The buttons on the remote control may have a different name or location than the remote control shows in this manual.

3 Unpacking

①

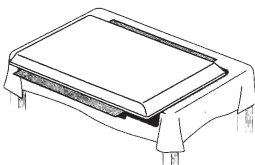


! Carefully lay the TV set, with the screen side down, on the front cardboard as shown in the figure.

43" TV
Téléviseur 43"

Cover a table top with a cloth or blanket to avoid damage to the TV screen, Hold both sides of the TV set to place on the table.


4 Installing the stands

 ①

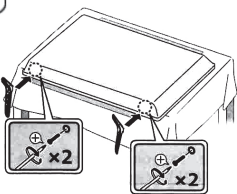


! Fasten the stands to the TV with 4 screws (included). While fastening the screws, hold the stand to prevent it from falling.

 ②

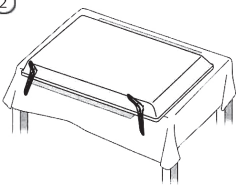


Both stands now be securely fastened.

 
5 Lifting the TV set

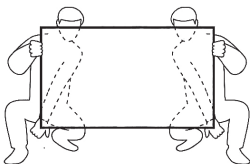

 6 Connecting the power and antenna, cable or satellite

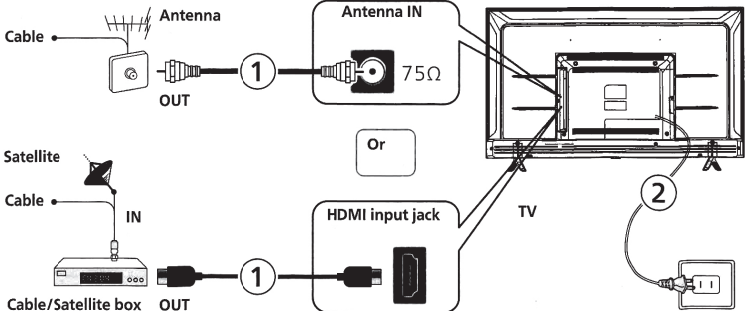

7 Connection overview

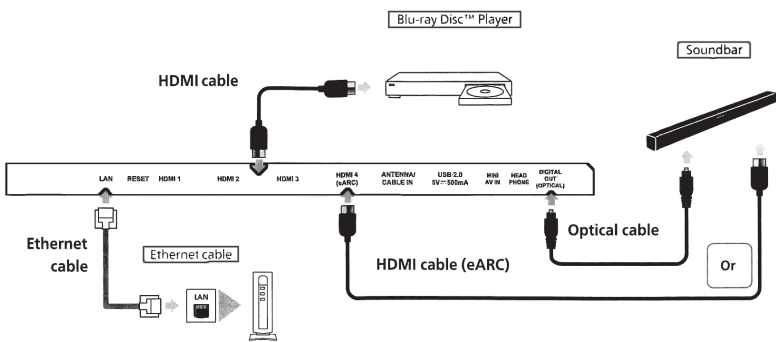 

Wall Mount

Wall mount bracket kit

43PFL5756/F7	Brand: SANUS	Model #: AST16	Screw dimension: M4 x 1.378" (35 mm)
--------------	--------------	----------------	--------------------------------------

Compatible wall bracket kits are available from third party vendors and will allow mounting of the TV on the wall.
The recommended wall mount bracket kit (sold separately) allows the mounting of the TV on the wall.
For detailed information on installing the wall mount, refer to the wall mount instruction book.
Funai Corporation is not responsible for any damage to the product or injury to yourself or others if you elect to install the TV wall mount bracket or mount the TV onto the bracket on your own.
The wall mount bracket must be installed by experts.

When installing the unit on the wall, allow this much space.

Top: 11.8" (30 cm)
Left and right side: 5.9" (15 cm)
Bottom: 3.9" (10 cm)

Funai Corporation is not liable for these types of accidents or injuries noted below.

- Install the wall mount bracket on a sturdy vertical wall.
- If installed onto a ceiling or slanted wall, the TV and wall mount bracket may fall which could result in a severe injury.
- Do not use screws that are longer or shorter than their specified length. If screws too long are used this may cause mechanical or electrical damage inside the TV set.
- If screws too short are used this may cause the TV set to fall.
- Do not fasten the screws by excessive force. This may damage the product or cause the product to fall, leading to injury.
- For safety reasons use 2 people to mount the TV onto a wall mounting bracket.
- Do not mount the TV onto the wall mounting bracket while your TV is plugged in or Turned On. It may result in an electrical shock injury.

• The image shown here is for illustrative purposes only and may be subject to change.

• The cables mentioned in this guide is not supplied with your unit.

