

8 Troubleshooting

Category	Problem	Tip
Power	No power	• Ensure that the AC outlet supplies the proper voltage. Plug another electrical appliance into the AC outlet to ensure that the AC outlet operates normally. • If a power failure occurs, unplug the AC power cord for 1 minute to allow the unit to reset itself.
Remote	Remote buttons are not functional.	• Re-insert or replace the AAA batteries with their polarities (+/-) as indicated on the remote battery area.
Network	Cannot connect the network.	• Check if your router and/or modem is properly connected. • Check if the Ethernet cable connection between the TV and your router or modem is properly secured. • Power cycle the router and/or modem. • Check your network settings.
	Slow Data Connection or buffering.	• Check the settings between your router and ISP modem or gateway (if applicable). • Connect to a stable wireless connection from home wireless or wired network. • The use of mobile hot spots or public wireless connections is not recommended.

Picture on HDMI Input	Television has sound with no picture or abnormal picture.	• HDMI EDID Version setting is set to a different mode than your source device. • Change the resolution output of your source device.
Sound on HDMI with external devices	Television has no sound.	• Please check to be sure the device is connected to the HDMI 2 (ARC) input on the TV.

Copyright

All other registered and unregistered trademarks are the property of their respective owners.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

Portions of this software are copyright © The FreeType Project (www.freetype.org). The American Academy of Pediatrics discourages television viewing for children younger than two years of age. Some features may require an always-on broadband internet connection, firmware update and / or a minimum bandwidth.

Internet services vary by location. Funai Corporation Inc. does not warrant access to the portal or to any of the services, content, software and advertising. Funai Corporation Inc. may, in its sole discretion, add or remove access to any specific services, content, software and advertising at any time. Although Funai Corporation Inc. will strive to provide a good selection of services, content or software, Funai Corporation Inc. does not warrant continued access to any specific services, and content or software.



READ THIS FIRST



PLEASE KEEP PACKING MATERIALS FOR FUTURE TRANSPORTATION!

DO NOT RETURN TO STORE

We are ready to help! Contact us first with any questions

For installing the stands, see the back of this sheet. The information is intended for regular installation of this TV (not for wall mount installation).

1 Getting started

! Please read the entire instructions once before following them step by step.

A wide open space is recommended for assembly.

A Phillips-head screwdriver is required to fasten the stands to the TV set.

Be careful not to injure your fingers and keep children away during assembly.

It is recommended that two or more people remove the TV set from the box.

2 What's in the box

ST5 x 1.378" (35 mm)

! Thin TVs can easily bend. To avoid damage to this TV and its screen, it **MUST NOT** be carried in a horizontal position when being moved.

• Accessory type and quantity may vary depending on the model.

3 Unpacking

1 50/55" TV

2

Carefully lay the TV set, with the screen side down, on the front cardboard as shown in the figure.

Cover a table top with a cloth or blanket to avoid damage to the TV screen. Hold both sides of the TV set to place on the table.

4 Installing the stands

 
1

! Fasten the stands to the TV with 4 screws (included). While fastening the screws, hold the stand to prevent it from falling.


2

Both stands now be securely fastened.


5 Lifting the TV set

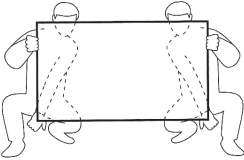

 6 Connecting the power and antenna, cable or satellite

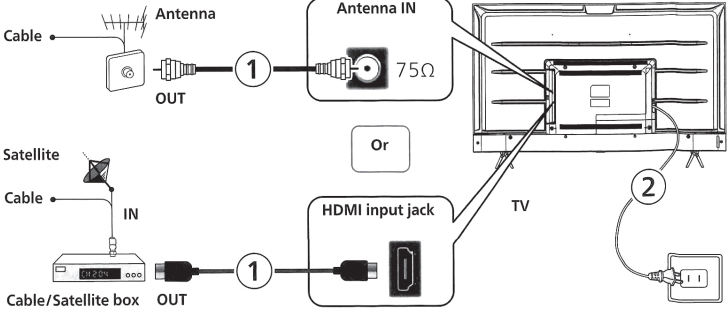

7 Connection overview

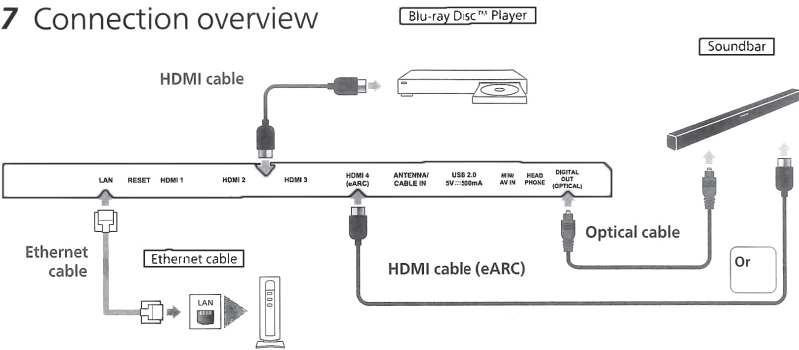 

Wall Mount

Wall mount bracket kit

50PUL7973/F6, 50PUL7973/F7 55PUL7973/F6, 55PUL7973/F7	Brand: SANUS	Model #: VLT6-B1	Screw dimension: M6 x 1.378" (35 mm)
--	--------------	------------------	---

- Compatible wall bracket kits are available from third party vendors and will allow mounting of the TV on the wall.
- The recommended wall mount bracket kit (sold separately) allows the mounting of the TV on the wall.
- For detailed information on installing the wall mount, refer to the wall mount instruction book.
- Funai Corporation is not responsible for any damage to the product or injury to yourself or others if you elect to install the TV wall mount bracket or mount the TV onto the bracket on your own.
- The wall mount bracket must be installed by experts.

When installing the unit on the wall, allow this much space.

Top:	11.8" (30 cm)
Left and right side:	5.9" (15 cm)
Bottom:	3.9" (10 cm)

Funai Corporation is not liable for these types of accidents or injuries noted below.

- Install the wall mount bracket on a sturdy vertical wall.
- If installed onto a ceiling or slanted wall, the TV and wall mount bracket may fall which could result in a severe injury.
- Do not use screws that are longer or shorter than their specified length. If screws too long are used this may cause mechanical or electrical damage inside the TV set.
- If screws too short are used this may cause the TV set to fall.
- Do not fasten the screws by excessive force. This may damage the product or cause the product to fall, leading to injury.
- For safety reasons use 2 people to mount the TV onto a wall mounting bracket.
- Do not mount the TV onto the wall mounting bracket while your TV is plugged in or Turned On. It may result in an electrical shock injury.

- The image shown here is for illustrative purposes only and may be subject to change.
- The cables mentioned in this guide is not supplied with your unit.

