

SONY Home Theatre System

Please read this manual carefully before operating your unit and retain for future reference.

804106640

WARNING

Do not install the speaker system in a confined space, such as a bookcase or built-in cabinet.

To reduce the risk of fire, do not cover the ventilation opening of the speaker system with newspapers, tablecloths, curtains, etc.

Do not expose the speaker system to naked flame sources (for example, lighted candles).

To reduce the risk of fire or electric shock, do not expose this speaker system to dripping or splashing, and do not place objects filled with liquids, such as vases, on the speaker system.

The speaker system is not disconnected from the mains as long as it is connected to the AC outlet, even if the speaker system itself has been turned off.

As the mains plug is used to disconnect the speaker system from the mains, connect the speaker system to an easily accessible AC outlet. Should you notice an abnormality in the speaker system, disconnect the mains plug from the AC outlet immediately.

CAUTION

Risk of explosion if the battery is replaced by an incorrect type. Do not expose batteries or appliances with battery-installed to excessive heat, such as sunshine and fire.

Do not place this product close to medical devices.

This product (including accessories) has magnet(s) which may interfere with pacemakers, programmable shunt valves for hydrocephalus treatment, or other medical devices. Do not place this

product close to persons who use such medical devices. Consult your doctor before using this product if you use any such medical device.

Recommended cables

Properly shielded and grounded cables and connectors must be used for connection to host computers and/or peripherals.

For the bar speaker and surround speakers

The nameplates are located on the bottom of the bar speaker and surround speakers.

This equipment has been tested and found to comply with the limits set out in the EMC regulation using a connection cable shorter than 3 meters.


About Manuals of the Speaker System

- The instructions in these manuals describe the controls on the remote control.
- Some illustrations are presented as conceptual drawings, and may be different from the actual products.
- Characters in brackets [] appear on the front panel display.

What's in the Box

Refer to Startup Guide (separate document).


What You Can Do with the Speaker System

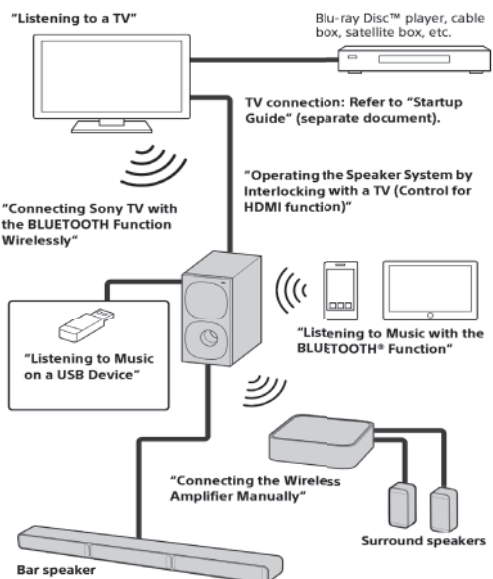

Guide to Parts and Controls

Subwoofer


Front

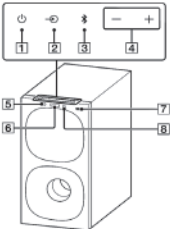

- Power button**
Turns on the speaker system or sets it to standby mode.
- Input select button**
Selects the input for playback on the speaker system.
- BLUETOOTH button**
- +/- (volume) buttons**
- BLUETOOTH indicator**
 - Lights in blue: BLUETOOTH connection has been established.
 - Flashes slowly in blue repeatedly: BLUETOOTH connection is being attempted.
 - Flashes twice in blue repeatedly: During pairing standby status.

- Front panel display**
- USB port**
- Remote control sensor**
Point the remote control at the remote control sensor to operate the speaker system.


Rear

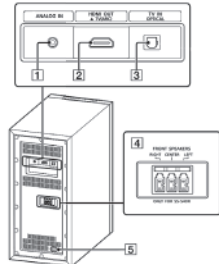

- ANALOG IN jack**
- HDMI OUT (TV (ARC)) jack**
Connect a TV that has an HDMI input jack with an HDMI cable. The speaker system is compatible with Audio Return Channel (ARC). ARC is the function that sends TV sound to an AV device such as the speaker system from the TV's HDMI jack.
- TV IN (OPTICAL) jack**
- FRONT SPEAKERS jacks**
- AC inlet**


Wireless Amplifier

Front

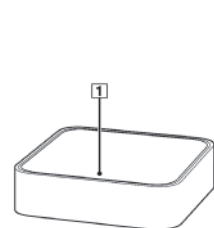

- Power indicator**
Displays the connecting status between the subwoofer and wireless amplifier, and power condition of the wireless amplifier.
 - Red
 - Lights up: The wireless amplifier is in standby mode.
 - Green
 - Lights up: The wireless amplifier is connected to the subwoofer.
 - Flashes slowly: The wireless amplifier is attempting to connect to the subwoofer.
 - Amber
 - Lights up: The wireless amplifier is connected to the subwoofer via manual connection.


Rear

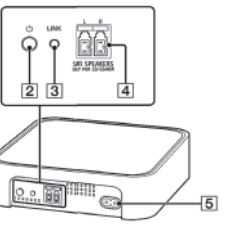

- LINK**
 - Flashes slowly: The wireless amplifier is attempting to connect to the subwoofer via manual connection.
 - Flashes twice repeatedly: The wireless amplifier is in pairing standby status via manual connection.
 - Flashes quickly: The software is updating.
 - Turns off
 - The wireless amplifier is turned off.
- Power button**
Turns on or off the wireless amplifier.
- LINK button**
- SUR SPEAKERS jacks**
- AC inlet**

The image shown here is for illustrative purposes only and may be subject to change. The actual descriptions of control panel and their locations may vary depending on the model.

Remote Control

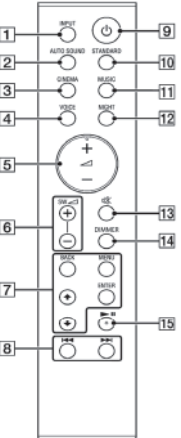

(Batteries not supplied)

- INPUT**
Selects the input source. Each time you press INPUT, the input source changes cyclically as follows: [TV] → [ANALOG] → [BT] → [USB]
- AUTO SOUND**
Selects AUTO SOUND for the sound mode.
- CINEMA**
Selects CINEMA for the sound mode.
- VOICE**
Turns on/off the voice mode.
- Volume +/-**
Adjusts the volume.
- SW (subwoofer volume) +/-**
Adjusts the subwoofer volume.

- MENU**
Turns on/off the setting menu in the front panel display.
 - Enter the setting menu items. Selects the content on the TV screen for USB playback.
- ENTER**
Enters the selection. Plays the content that is selected by +/- for USB playback.
- BACK**
Returns to the previous display. Selects the upper layer for USB playback.
- Previous/next**
Selects the previous/next track or file.
 - Hold down to search backward or forward for USB playback.
- Power**
Turns on the speaker system or sets it to standby mode.
- STANDARD**
Selects STANDARD for the sound mode.
- MUSIC**
Selects MUSIC for the sound mode.
- NIGHT**
Turns on/off the night mode.
- Muting**
Mutes the sound temporarily. Pressing the button while muting cancels muting.
- DIMMER**
- Play/pause**
Plays, pauses, or resumes playback.
 - The +/- and Play/pause buttons have a tactile dot. Use it as a guide during operation.

About the replacement of batteries for the remote control
When the speaker system does not respond by operating with the remote control, replace two batteries with new batteries.

The remote control vary depend of model: The buttons on remote control may have a different name or location than the remote control shows in this manual.

 
Installation and Connection

Basic Installation and Connection

Refer to Startup Guide (separate document).

Mounting the Speaker System on a Wall



You can mount the bar speaker, surround speakers, and wireless amplifier on a wall.



- Notes**
- Prepare screws (not supplied) that are suitable for the wall material and strength. As a plasterboard wall is especially fragile, attach the screws securely in the wall beam. Install the speakers or wireless amplifier horizontally, hung by screws in studs in a continuous flat section of the wall.
 - Have the installation done by a Sony dealer or licensed contractor and pay special attention to safety during the installation.
 - Sony shall not be held responsible for accidents or damage caused by improper installation, insufficient wall strength, improper screw installation or natural disaster, etc.


Mounting the Bar Speaker on a Wall

  - Prepare two screws (not supplied) that are suitable for the wall mount holes on the rear of the bar speaker.**



Hole on the rear of the bar speaker


- Stick WALL MOUNT TEMPLATE (supplied) on a wall.**

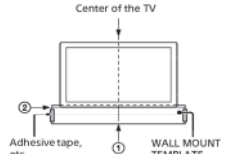


- Align TV CENTER LINE (1) of WALL MOUNT TEMPLATE with the center line of your TV.

- Align TV BOTTOM LINE (2) of WALL MOUNT TEMPLATE with the bottom of your TV, then stick WALL MOUNT TEMPLATE on a wall by using a commercially available adhesive tape, etc.

- Fasten the screws into the marks (3) on SCREW LINE (3) of WALL MOUNT TEMPLATE as in the illustration below.

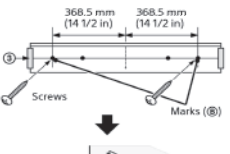

- Remove WALL MOUNT TEMPLATE.

 


- Remove WALL MOUNT TEMPLATE.

Connecting the Wireless Amplifier Manually

The wireless amplifier is connected to the subwoofer automatically when they are turned on.

If you cannot connect the wireless amplifier to the subwoofer automatically, or you use multiple wireless products and want to specify the subwoofer that is connected wirelessly to the wireless amplifier, perform the manual connection.

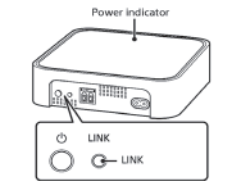


- Hang the bar speaker on the screws.**
Align the holes on the rear of the bar speaker with the screws, then hang the bar speaker on the two screws.



Notes
When sticking WALL MOUNT TEMPLATE, smooth it out fully.



Mounting the Surround Speakers on a Wall

 - Prepare a screw (not supplied) for each speaker that is suitable for the wall mount hole on the rear of the surround speaker.**



Hole on the rear of the surround speaker

  - Fasten the screw on a wall as in the illustration below.**





Hole on the rear of the bar speaker

- Hang the surround speaker on the screw.**
Align the hole on the rear of the surround speaker with the screw, then hang the surround speaker on the screw.





Mounting the Wireless Amplifier on a Wall

  - Prepare two screws (not supplied) that are suitable for the wall mount holes on the bottom of the wireless amplifier.**




Hole on the bottom of the wireless amplifier

  - Fasten the screws on a wall as in the illustration below.**



 - Hang the wireless amplifier on the screws.**
Align the holes on the bottom of the wireless amplifier with the screws, then hang the wireless amplifier on the two screws.



Connecting Sony TV with the BLUETOOTH Function Wirelessly

When using Sony TV* with the BLUETOOTH function, you can listen to sound of the TV or device that is connected to the TV by connecting the speaker system and TV wirelessly.

* The TV needs to be compatible with A2DP (Advanced Audio Distribution Profile) of the BLUETOOTH profile.



Note
If connecting the speaker system and TV by using the BLUETOOTH function, you cannot display the USB playback screen on the TV screen.

To use all the functions of the speaker system, connect the speaker system and TV with an HDMI cable. For details about connections and operations to listen to TV sound by connecting with an HDMI cable, refer to Startup Guide (separate document).

Listening to TV Sound by Connecting the Speaker System and TV Wirelessly

You need to perform pairing of the speaker system and TV by using the BLUETOOTH function. Pairing is the process required to mutually register the information on BLUETOOTH devices to be connected wirelessly in advance.



- Turn on the TV.**
- Turn on the speaker system.**
- Press and hold the BLUETOOTH button on the subwoofer and INPUT on the remote control simultaneously for 5 seconds.**
The speaker system enters the pairing mode. [PAIRING] appears in the front panel display, and the BLUETOOTH indicator flashes twice in blue repeatedly.



- On the TV, search the speaker system by performing the pairing operation.**
The list of the BLUETOOTH devices that are searched appears on the TV screen.

For the operation method to pair the BLUETOOTH device to the TV, refer to the operating instructions of the TV.

- Pair the speaker system and TV by selecting "HT-S40R" from the list on the TV screen.**

Make sure that the BLUETOOTH indicator on the subwoofer lights in blue and [TV-BT] appears in the front panel display.
A connection between the speaker system and TV has been established.

- Select the program or input of the device by using the TV remote control.**
The sound of the displayed image on the TV screen is output from the speaker system.

- Adjust the volume of the speaker system by using the TV remote control.**
When pressing the muting button on the TV remote control, the sound is muted temporarily.

Notes

- If the TV sound is not output from the speaker system, select the TV input by pressing INPUT and check the status of the front panel display and indicators on the subwoofer.
- [TV-BT] appears in the front panel display: The speaker system and TV are connected and TV sound is output from the speaker system.
- The BLUETOOTH indicator flashes twice repeatedly and [PAIRING] appears in the front panel display: Perform pairing on the TV.
- [TV] appears in the front panel display: Perform steps from the start.
- When you connect the speaker system and TV with an HDMI cable, the BLUETOOTH connection is canceled. To connect the speaker system and TV with the BLUETOOTH function again, disconnect the HDMI cable, then perform the connecting operation from the start.
- While the speaker system is connecting the TV with the BLUETOOTH function and [AUTO SOUND] is selected for the sound mode, [STANDARD] is selected for the sound mode.

Listening to Sound of the Paired TV

You can turn the speaker system on/off, adjust the volume, and mute the sound by using the TV remote control when connecting the TV to the speaker system wirelessly.

- Turn on the TV with the TV remote control.**
The speaker system is turned on by interlocking with the TV power, and TV sound is output from the speaker system.
- Select the program or input of the device by using the TV remote control.**
The sound of the displayed image on the TV screen is output from the speaker system.
- Adjust the volume of the speaker system by using the TV remote control.**
When pressing the muting button on the TV remote control, the sound is muted temporarily.

Note
If you select the input other than [TV] on the remote control supplied with the speaker system, the TV sound is not output from the speaker system. To output the TV sound, select the TV input by pressing INPUT.

Tip
When the TV is turned off, the speaker system is also turned off by interlocking with the TV power.

Listening to Music/Sound

Listening to a TV

- Press INPUT repeatedly to select [TV] in the front panel display.**
- Adjust the volume.**
 - Adjust the volume by pressing +/-.
 - Adjust the subwoofer volume by pressing SW +/-.

Notes

- When you connect the TV to both the HDMI OUT (TV (ARC)) and TV IN (OPTICAL) jacks, the jack for audio input is selected depending on which audio signal is input first.
- When the input source does not contain much bass sound, such as in TV programs, the bass sound from the subwoofer may be difficult to hear.


Tip
You can also select the input by pressing [C] on the subwoofer.

Listening to Music on a USB Device

Notes

- To view the USB content list on the TV screen, make sure you connect the speaker system to the TV using an HDMI cable (not supplied).
- Change the input of the TV to the input to which the speaker system is connected.

- Connect the USB device to the USB port.**

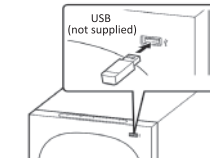

- Press INPUT repeatedly to select [USB] in the front panel display.**
[READ] appears in the front panel display and the speaker system starts reading data of the USB device. When the reading of data is completed, the USB content list appears on the TV screen.

- Press +/- to select the content you want, then press ENTER.**
The selected content starts playing. You can go to the upper layer by pressing BACK.

- Adjust the volume.**
 - Adjust the volume by pressing +/-.
 - Adjust the subwoofer volume by pressing SW +/-.

Note
When the input source does not contain much bass sound, such as in TV programs, the bass sound from the subwoofer may be difficult to hear.

To select the play mode

You can select the play mode for USB playback, such as repeat play or random play, from the setting menu.

- Press MENU.**
[CURRENT STATUS] appears in the front panel display.

- Press +/-/ENTER to select [USB] - [REPEAT].**

- Press +/-/ENTER to select the play mode.**
 - [OFF]: Repeat off. Plays back all tracks.
 - [ONE]: Repeats one track.
 - [FOLDER]: Repeats all tracks in the current folder.
 - [RANDOM]: Repeats all tracks in the current folder in random order.
 - [ALL]: Repeats all tracks.

- Press MENU to exit the setting menu.**

Other operations

To	Do this
Pause or resume playback	Press Play/Pause
Select the previous or next track	Press Previous/Next
Search backward or forward (rewind/fast forward)	Press and hold Previous/Next

Notes

- Do not remove the USB device during operation. To avoid data corruption or damage to the USB device, turn the speaker system off before connecting or removing the USB device.
- [INVALID USB] appears in the front panel display if you connect an unsupported or broken USB device.
- Depending on the file format, rewind and fast forward may not work.

Information of USB Device on the TV Screen

- Playing time
- Total playing time
- Bit rate
- Playback status
- Rewind/fast forward speed
- Play mode
- Selected file index/Total files in the folder

The following messages appear on the TV screen depending on the status of the USB device.

- [File Unsupported] Appears for 2 seconds at the bottom left side when an unsupported file is skipped.
- [Device Not Support]
 - A USB device is not supported.
 - Device inserted is a non-USB device, a bad USB device, or a USB device that has no files on it.
- [No USB]
 - No USB device is inserted.
- [Waiting]
 - The speaker system is searching the USB device.
- [This device is empty]
 - There are no playable files in the USB device.

Notes

- Depending on the playback source, some information may not be displayed.
- Depending on the play mode, the information displayed may differ.

Listening to Music with the BLUETOOTH® Function

Listening to Music by Pairing the Mobile Device that is Connected for the First Time

To use the BLUETOOTH function, you need to perform pairing of the speaker system and mobile device in advance.

- Press and hold the BLUETOOTH button on the subwoofer for 2 seconds.**
The speaker system enters the pairing mode. [PAIRING] appears in the front panel display, and the BLUETOOTH indicator flashes twice in blue repeatedly.

Note
If you select the input other than [TV] on the remote control supplied with the speaker system, the TV sound is not output from the speaker system. To output the TV sound, select the TV input by pressing INPUT.

Tip
When the TV is turned off, the speaker system is also turned off by interlocking with the TV power.

Listening to Music/Sound

Listening to a TV

- Press INPUT repeatedly to select [TV] in the front panel display.**
- Adjust the volume.**
 - Adjust the volume by pressing +/-.
 - Adjust the subwoofer volume by pressing SW +/-.

Notes

- When you connect the TV to both the HDMI OUT (TV (ARC)) and TV IN (OPTICAL) jacks, the jack for audio input is selected depending on which audio signal is input first.
- When the input source does not contain much bass sound, such as in TV programs, the bass sound from the subwoofer may be difficult to hear.

Tip
You can also select the input by pressing [C] on the subwoofer.

- Adjust the volume.**
 - Adjust the volume by pressing +/-.
 - Adjust the subwoofer volume by pressing SW +/-.

Notes

- Mobile devices: 9
- Sony TV with the BLUETOOTH function: 1

If a new device is paired after pairing the above number of devices, the oldest connected device will be replaced by the new one.

Perform pairing for the second and subsequent mobile devices.

When the input source does not contain much bass sound, such as in TV programs, the bass sound from the subwoofer may be difficult to hear.

Tips

- You can check the connection status of the BLUETOOTH function by checking the BLUETOOTH indicator status.
- While the BLUETOOTH input is being selected, the speaker system enters the pairing mode by pressing the BLUETOOTH button on the subwoofer shortly.

Listening to Music from the Paired Device

- Turn the BLUETOOTH function of the mobile device on.**
- Press INPUT repeatedly to select [BT] or shortly press the BLUETOOTH button on the subwoofer.**
The BLUETOOTH indicator flashes and the speaker system automatically connects to the BLUETOOTH device it was most recently connected to.

- Make sure that the BLUETOOTH indicator lights in blue.**
A connection between the speaker system and mobile device has been established.

- Start audio playback with the music app on the connected mobile device.**
Sound is output from the speaker system.

- Adjust the volume.**
 - Adjust the volume by pressing +/-.
 - Adjust the subwoofer volume by pressing SW +/-.

Note
When the input source does not contain much bass sound, such as in TV programs, the bass sound from the subwoofer may be difficult to hear.

Tip
When the connection is not established, select "HT-S40R" on the mobile device.

 
To disconnect the mobile device

Perform any of the following items.

- Disable the BLUETOOTH function on the mobile device.
- Set [BT] - [POWER] to [OFF].
- Turn off the speaker system or mobile device.

Listening to Music on an Audio Device Connected with a Stereo Mini Cable

- Connect an audio device to the ANALOG IN jack.**



- Press INPUT repeatedly to select [ANALOG] in the front panel display.**

- Start music playback by operating the connected audio device.**
Sound is output from the speaker system.

- Adjust the volume.**
 - Adjust the volume by pressing +/-.
 - Adjust the subwoofer volume by pressing SW +/-.

Note
When the input source does not contain much bass sound, such as in TV programs, the bass sound from the subwoofer may be difficult to hear.

Adjusting the Sound Quality

Setting the Sound Effect that is Tailored to Sound

Enjoying Clear Sound with Low Volume at Midnight (NIGHT)

- Press **NIGHT** to set the function on or off.

Front panel display	Function
[N.ON]	Outputs the sound at low volume with minimum loss of fidelity and clarity of dialog.
[N.OFF]	Deactivates the night mode function.

Note
When you turn the speaker system off, this setting is set to [N.OFF] automatically.

Checking the Current Sound Settings

You can check the settings of the sound, night, and voice modes and current stream information.

- Press **MENU**.
[CURRENT STATUS] appears in the front panel display, then press **ENTER**.
- Press **↕** repeatedly to select the item you want.
The current setting appears in the following order.
Sound mode → Voice mode → Night mode → Stream information
The current setting appears in the reverse order by pressing **↕**.
- Press **MENU** to exit the setting menu.

Using the Speaker System by Interlocking with a TV

Operating the Speaker System by Interlocking with a TV (Control for HDMI function)

Connecting a TV compatible with the Control for HDMI function using an HDMI cable enables you to interlock the speaker system operation such as power on/off or volume adjustment with a TV.

About the Control for HDMI function

The Control for HDMI function is a function that enables operation of devices connected with an HDMI (High-Definition Multimedia Interface) cable by interlocking each other. Although this function works for devices compatible with the Control for HDMI function, it may not work if connecting devices other than those manufactured by Sony.

Changing the Settings

Using the Setting Menu

You can set the following items with the setting menu. Your settings are retained even if you disconnect the AC power cord (mains lead).

- Press **MENU** to enter the setting menu mode.
The setting menu item appears in the front panel display.
- Press **↕** repeatedly to select the item, then press **ENTER**.
You can select the following items.
[CURRENT STATUS] (Checking the current status)
[SPEAKER] (Speaker settings)
[AUDIO] (Audio settings)
[HDMI] (HDMI settings)
[BT] (BLUETOOTH settings)
[USB] (USB settings)
[SYSTEM] (Speaker system settings)
[RESET] (Resetting the speaker system)
[UPDATE] (Updating the speaker system)
- Press **↕** repeatedly to select the setting, then press **ENTER**.
To return to the upper layer, press **BACK**.
- Press **MENU** to exit the setting menu mode.

Setting menu items		
Items	Function	
[CURRENT STATUS] (Checking the current status)	[AUTO SOUND]/[STANDARD]/[CINEMA]/[MUSIC] (Sound mode)	These items are not setting menu items. You can check the settings of the sound, night, and voice modes and current stream information. For details about operation, see "Checking the Current Sound Settings".
	[Vo. ON]/[Vo.OFF] (Voice mode)	
	[N.ON]/[N.OFF] (Night mode)	
	[NO INFO.]/[LPCM]/[DOLBY DIGITAL] (Stream information)	
[SPEAKER] (Speaker settings)	[MULTI SPEAKER]	• [ON]: Outputs the sound from all the speakers, regardless of the number of audio channels for the playback source. • [OFF]: Outputs the sound from the selected speakers that correspond to the audio channel for the playback source.
	[SUR.L.DISTANCE]/[SUR.R.DISTANCE] (Surround speaker distance)	Adjusts the distance from the setting position to the surround speaker (left or right) from 1.0 meter to 6.0 meters (0.1 meter intervals) (from 3.0 feet to 20.0 feet (3 inch intervals)).
	[DISTANCE UNIT]	Note You can change measurement units (meters or feet) on [DISTANCE UNIT]. Changes measurement units (meters or feet) for [SUR.L.DISTANCE]/[SUR.R.DISTANCE]. • [METER]: Meter display • [FEET]: Feet display
	[SUR.L.LEVEL]/[SUR.R.LEVEL] (Surround speaker level) [TEST TONE]	Adjusts the sound level of the surround speaker (left or right) from -8.0 dB to 0.0 dB (0.5 dB intervals). Note Be sure to set [TEST TONE] to [ON] for easy adjustment. • [ON]: Outputs the test tone from each speaker in sequence. [OFF]: Turns off the test tone. Note The test tone is not output even though [TEST TONE] is set to [ON] while [SPEAKER] is selected. Select an input other than [USB].
[AUDIO] (Audio settings)	[LINK]	• [START]: Performs the manual connection of the wireless amplifier to the subwoofer. For details, see "Connecting the Wireless Amplifier Manually". To cancel the manual connection, press BACK . • [CANCEL]: Returns to the upper layer [LINK]. Unlink for enjoying movies at low sound volume. DRC applies to Dolby Digital sources. • [ON]: Compresses sound according to the information in the content. • [OFF]: Sound is not compressed.
	[A.VOL.] (Audio volume)	Adjusts the volume automatically depending on the input level from a connected device. • [ON]: Adjusts the volume automatically • [OFF]: Off
	[DUAL] (Dual mono)	You can enjoy multiplex broadcast sound when the speaker system receives a Dolby Digital multiplex broadcast signal. • [MAIN]: Sound of the main language will be output. • [SUB]: Sound of the sub language will be output. • [M/S]: Mixed sound of both the main and sub languages will be output. Note To receive a Dolby Digital signal, you need to connect a TV or other device to the TV IN (OPTICAL) jack with an optical digital cable or the HDMI OUT [TV (ARC)] jack with an HDMI cable.
	[HDMI] (HDMI settings)	• [ON]: Enables the Control for HDMI function. Devices connected with an HDMI cable can operate each other. [OFF]: Disables the Control for HDMI function. You can set whether the playback sound is input from an HDMI cable or optical digital cable. • [AUTO]: Plays the sound that is detected from either an HDMI cable or optical digital cable. When you connect either an HDMI cable or optical digital cable, the speaker system plays by selecting the connected cable for the TV input. • [OPTICAL]: Plays the sound from the TV IN (OPTICAL) jack for the TV input.
[BT] (BLUETOOTH settings)	[POWER]	• [ON]: Turns the BLUETOOTH function on. • [OFF]: Turns the BLUETOOTH function off. Note When the BLUETOOTH function is set to off, the BLUETOOTH input is skipped while selecting input by pressing INPUT.
	[STANDBY]	When the speaker system has pairing information, you can turn the speaker system on and listen to music from the BLUETOOTH device, even when the speaker system is in standby mode, by setting the BLUETOOTH standby mode to on. • [ON]: Enables the BLUETOOTH standby mode. • [OFF]: Disables the BLUETOOTH standby mode.
	[USB] (USB settings)	Note While the BLUETOOTH standby mode is on, standby power consumption increases. • [REPEAT]: Repeat play mode • [ONE]: Repeats one track. • [FOLDER]: Repeats all tracks in the current folder. • [RANDOM]: Repeats all tracks in the current folder in random order. • [ALL]: Repeats all tracks.
	[SYSTEM] (Speaker system settings)	• [ON]: Turns on the auto standby function. When you do not operate the speaker system for about 20 minutes, the speaker system enters standby mode automatically. [OFF]: Off. • [VERSION] (Version information) The current firmware version information of the speaker system appears in the front panel display.
[RESET] (Resetting the speaker system)	[ALL RESET]	You can reset the speaker system setting to the factory default. For details, see "Resetting the Speaker System".
	[UPDATE] (Updating the speaker system)	You can start software update after connecting the USB memory on which the software update file is stored to the speaker system. When there is a software update available, we will notify you on the following website: • For customers in America: https://www.sony.com/am/support Note Before updating, make sure that the wireless amplifier is turned on and connected to the subwoofer.
	[CANCEL]	Returns to the upper layer [UPDATE].

Preparing to Operate by Interlocking with a TV

Enable the Control for HDMI function settings of the TV connected to the speaker system with an HDMI cable. The default setting of the Control for HDMI function of the speaker system is [ON].

- When connecting a device such as a Blu-ray Disc player to a TV with an HDMI cable, enable its Control for HDMI function.
- To enable the Control for HDMI function of a TV or Blu-ray Disc player, refer to their operating instructions.
- If you enable the Control for HDMI ("BRAVIA" sync) function when using a TV manufactured by Sony, the Control for HDMI function of the speaker system is also enabled automatically.

Performing Power Operation or Volume Adjustment by a TV Remote Control

When performing TV power operation or volume adjustment by a TV remote control, the speaker system power operation or volume adjustment is interlocked.



Power interlocking

When you turn on or off the TV, the speaker system will turn on or off automatically.
Note
If you turn off the speaker system before turning off the TV, the speaker system may not turn on automatically even though you turn on the TV next time. In this case, perform the following operation.
– Select the speaker system for the sound output device in the TV menu.
– When using Sony TV, turn on the speaker system while the TV is turned on.

Volume adjustment

The TV sound that you are watching is output from the speaker system automatically. You can adjust the speaker system volume by the TV remote control.

Other Interlocking Function

One-Touch Play Function

When you play content on a Blu-ray Disc player or "PlayStation4," etc. connected to the TV, the speaker system and TV are turned on automatically.
Tip
You can change the Control for HDMI function setting on [HDMI] - [CONTROL FOR HDMI] in the setting menu.
• If you enable the Control for HDMI ("BRAVIA" sync) function when using a TV manufactured by Sony, the Control for HDMI function of the speaker system is also enabled automatically.

Changing the Brightness of the Front Panel Display and Indicators (DIMMER)

You can change the brightness of the following.

- Front panel display
- BLUETOOTH indicator
- Power indicator on the wireless amplifier

- Press **DIMMER** repeatedly to select the desired setting.

Front panel display	Function
[BRIGHT]	The front panel display and indicators light brightly.
[DARK]	The front panel display and indicators light darkly.
[OFF]	The front panel display is turned off.

Note
The front panel display is turned off when [OFF] is selected. It turns on automatically when you press any button, then turns off again if you do not operate the speaker system for about 10 seconds. However, in some cases, the front panel display may not turn off. In this case, the brightness of the front panel display is same as [DARK].

Troubleshooting

Troubleshooting

If the speaker system does not work properly, handle it in the following order.

- Search for the cause and solution of the issue using this troubleshooting.
- Reset the speaker system.
All the settings of the speaker system return to their initial status. For details, see "Resetting the Speaker System".

Power

The speaker system does not power up.

- Check that the AC power cord (mains lead) is connected securely.
- Disconnect the AC power cord (mains lead) from the wall outlet (mains), and then reconnect after several minutes.

The speaker system is turned off automatically.

- The auto standby function is working. Set [SYSTEM] - [AUTO STANDBY] to [OFF].

The speaker system does not turn on even when the TV is turned on.

- Set [HDMI] - [CONTROL FOR HDMI] to [ON]. The TV remote control must be connected to the Control for HDMI function. For details, refer to the operating instructions of your TV.
- Check the speaker settings of the TV. The speaker system power syncs with the speaker settings of the TV. For details, refer to the operating instructions of your TV.

- Depending on the TV, if the sound was output from the speakers of the TV the previous time, the speaker system may not turn on by interlocking with the TV power even when the TV is turned on.

The speaker system turns off when the TV is turned off.

- Check the setting of the Control for HDMI function. When the Control for HDMI function is set to on and the input of the speaker system is the TV input, the speaker system turns off automatically when you turn off the TV.
- Check the setting of the Control for HDMI function. When you turn off the TV, the speaker system turns off automatically only if the input of the speaker system is TV input. The TV must support the Control for HDMI function. For details, refer to the operating instructions of your TV.

The speaker system does not turn off even when the TV is turned off.

- Check the setting of the Control for HDMI function. When you turn off the TV, the speaker system turns off automatically only if the input of the speaker system is TV input. The TV must support the Control for HDMI function. For details, refer to the operating instructions of your TV.

Picture

There is no picture or the picture is not output correctly.

- Select the appropriate input.
- When there is no picture while the TV input is selected, select the TV channel that you want using the TV remote control.
- Disconnect an HDMI cable, then connect it again. Make sure that the cable is firmly inserted.

Sound

The speaker system cannot connect to a TV with the BLUETOOTH function.

- When you connect the speaker system and TV with an HDMI cable, the BLUETOOTH connection is canceled. Disconnect the HDMI cable, and then reconnect the speaker system operation from the start.

No TV sound is output from the speaker system.

- Check the type and connection of an HDMI cable or optical digital cable that is connected to the speaker system and the TV (refer to the supplied Startup Guide).
- Disconnect the cables that are connected between the TV and the speaker system, then connect them firmly again. Disconnect the AC power cord of the speaker system, and then connect the speaker system from the wall outlets (mains), then connect them again.
- When the speaker system and TV are connected with an HDMI cable only, check the following.
 - The HDMI jack of the connected TV is labeled with "ARC".
 - The Control for HDMI function of the TV is set to on.
 - On the speaker system, the Control for HDMI function is set.

- If your TV is not compatible with Audio Return Channel, connect an optical digital cable (refer to the supplied Startup Guide), if the TV is not compatible with Audio Return Channel, TV sound will not be output from the speaker system even if the speaker system is connected to the TV's HDMI IN jack.

- If the sound of the device that is connected to an optical input jack of the TV is not output, try the following.
 - Connect the cable box or satellite box directly to the TV IN (OPTICAL) jack of the speaker system.

Press INPUT repeatedly to select the TV input.

- Increase the volume on the TV or cancel muting.
- Depending on the order in which you turn on the TV and speaker system, the speaker system may be muted. If this happens, turn on the TV first, then the speaker system.

- Set the speaker setting of the TV (BRAVIA) to Audio System. Refer to the operating instructions of your TV for the TV set up.
- Check the sound output of the TV. Refer to the operating instructions of the TV for the TV set up.
- The speaker system supports the Dolby Digital and PCM audio formats. When you play back an unsupported format, set the digital audio input setting of the TV (BRAVIA) to "PCM." For details, refer to the operating instructions of your TV.

The sound is output from both the speaker system and TV.

- Change the audio output setting of the TV so that the TV sound is output from the external speaker.
- Set the TV volume to minimum.

No sound or only a very low-level sound is heard from the subwoofer.

- Make sure the AC power cord (mains lead) of the subwoofer is connected properly (refer to the supplied Startup Guide).
- Press **SW** **↔** on the remote control to increase the subwoofer volume
- A subwoofer is for reproducing bass sound. If the input source contains very little bass sound components (i.e., a TV broadcast), the sound from the subwoofer may be difficult to hear.

- When you play content compatible with copyright protection technology (HDCP), it is not output from the subwoofer.

Saving Power Consumption

To use the speaker system with saving power consumption, change the following settings.

Turning the Speaker System Off by Detecting the Using State

When you set the auto standby function to on, the speaker system enters standby mode automatically when you do not operate the speaker system for about 20 minutes and the speaker system is not receiving an input signal.

- Set [SYSTEM] - [AUTO STANDBY] to [ON].

Saving Power in Standby Mode

To save power consumption during the standby mode, set [BT] - [STANDBY] to [OFF].

Sound of the connected BLUETOOTH mobile device is not output from the speaker system.

- Make sure that the BLUETOOTH indicator on the subwoofer is lit.
- Bring the BLUETOOTH device close to the subwoofer.
- If a device that generates electromagnetic radiation, such as a wireless LAN device, or a microwave oven is nearby, move the device away from the speaker system.
- Move the USB 3.0 device and its cable away from this speaker system.
- Remove any obstacle between the speaker system and the BLUETOOTH device or move the speaker system away from the obstacle.
- Reposition the connected BLUETOOTH device.
- Switch the wireless LAN frequency of any nearby wireless LAN router or PC to 5 GHz range.
- Increase the volume on the connected BLUETOOTH device.

The sound is not in sync with the image.

- When you are watching movies, you may hear the sound with a slight delay from the image.

Remote Control

The remote control of this speaker system does not function.

- Point the remote control at the remote control sensor on the subwoofer.
- Remove any obstacles in the path between the remote control and the subwoofer.
- Replace both batteries in the remote control with new ones, if they are weak.
- Make sure you are pressing the correct button on the remote control.

TV remote control does not work.

- Make sure the bar speaker so that it does not obstruct the remote control sensor of the TV.

Others

The Control for HDMI function does not work properly.

- Check the connection with the speaker system (refer to the supplied Startup Guide).
- Enable the Control for HDMI function on the TV. For details, refer to the operating instructions of your TV.
- Wait a while, and then try again. If you unplug the speaker system, it will take a while before operations can be made. Wait for 15 seconds or longer, and then try again.
- Make sure the devices connected to the speaker system support the Control for HDMI function.
- Enable the Control for HDMI function of the devices connected to the speaker system. For details, refer to the operating instructions of your device.
- The type and number of devices that are connected to the Control for HDMI function are restricted by the HDMI CEC standard as follows:
 - Recording devices (Blu-ray Disc recorder, DVD recorder, etc.): up to 3 devices
 - Playback devices (Blu-ray Disc player, DVD player, etc.): up to 3 devices
 - Tuner-related devices: up to 4 devices
 - Audio system (receiver/heater, etc.): up to 1 device (used by the speaker system)

[PROTECT] appears in the front panel display of the subwoofer, the sound is muted, and buttons on the remote control or subwoofer other than **○** (power) do not work.

- The protection feature is activated. Press **○** (power) to turn the speaker system off and disconnect the AC power cord (mains lead) and check the items below.
 - Make sure that the ventilations of the subwoofer are not covered and turn on the speaker system after a while.
 - When the speaker system is using the USB connection, remove the USB device and turn on the speaker system. If the speaker system operates properly, the current of the connected USB device is over the maximum output current of the speaker system 500 mA, or the USB device may have an abnormality.

The front panel display of the subwoofer is not lit.

- Press DIMMER to set the brightness to [BRIGHT] or [DARK] if set to [OFF].

Sensors of the TV do not work properly.

- The bar speaker may block some sensors (such as the brightness sensor), the remote control receiver of your TV or the emitter for 3D glasses (infrared transmission) of a 3D TV that supports the infrared 3D glass system, or wireless communication. Move the bar speaker away from the TV within a range that allows those parts to operate properly. For the locations of the sensors and remote control receiver, refer to the operating instructions of the TV.

Wireless function (the BLUETOOTH function or wireless amplifier) is unstable.

- Do not place metal objects other than a TV around the speaker system.

 
The speaker system does not work properly ([DEMO] appears in the front panel display).

- The speaker system is in demo mode.

To cancel demo mode, reset the speaker system.

Press and hold **○** (power) and - (volume) on the subwoofer for more than 5 seconds.

When you change to the TV input from the USB input by pressing INPUT, the message appears.



- This screen is an example for English.
- Select the TV program by using the TV remote control.

Resetting the Speaker System

If the speaker system still does not operate properly, reset the speaker system as follows.

- Press **MENU**.
[CURRENT STATUS] appears in the front panel display.
- Press **↕** to select [RESET], then press **ENTER**.
- Press **↕** to select [ALL RESET], then press **ENTER**.
- Press **↕** to select [START], then press **ENTER**.

All the settings return to their initial status.

To cancel resetting

Select [CANCEL] in step 4.

If You Cannot Perform Resetting Using the Setting Menu

Press and hold **○** (power) and - (volume) on the subwoofer for more than 5 seconds.

The settings return to their initial status.

Note
By resetting, the link with the wireless amplifier may be lost. In this case, perform "Connecting the Wireless Amplifier Manually".

Additional Information

Specifications

Subwoofer (SA-W540R)

Amplifier section

POWER OUTPUT (rated)
Front L + Front R: 50 W × 50 W (at 8 ohms, 1 kHz, 1% THD)

POWER OUTPUT (reference)
Front L/Front R/Center: 90 W (per channel at 8 ohms, 1 kHz)

Subwoofer: 180 W (at 4 ohms, 100 Hz)

Inputs	TV IN (OPTICAL)
USB	ANALOG IN
Output	HDMI OUT [TV (ARC)]
HDMI Section	Connector Type A (19pin)
USB section	USB port: 1

BLUETOOTH section

Communication system
BLUETOOTH Specification version 5.0

Output
BLUETOOTH Specification Power Class 1

Maximum communication range
Line of sight approx. 10 m⁽¹⁾

Frequency band
2.4 GHz band (2.400 GHz - 2.4835 GHz)

Maximum output power
< 14 dBm

Modulation method
FHSS (Freq Hopping Spread Spectrum)

Compatible BLUETOOTH profiles⁽²⁾
A2DP (Advanced Audio Distribution Profile)

AVRCP (Audio Video Remote Control Profile)

Supported Codec⁽³⁾
SBC⁽⁴⁾

Transmission range (A2DP)
20 Hz - 20,000 Hz (Sampling frequency 32 kHz, 44.1 kHz, 48 kHz)

⁽¹⁾ The actual range will vary depending on factors such as obstacles between devices, magnetic fields around a microwave oven, static electricity, cordless phone use, reception sensitivity, the operating system, software applications, etc.

⁽²⁾ BLUETOOTH standard profiles indicate the purpose of BLUETOOTH communication between devices.

⁽³⁾ Codec: Audio signal compression and conversion format

⁽⁴⁾ Abbreviation for Subband Codec

Speaker section

Speaker system
Speaker 160 mm cone type

General

Power requirements
220 V - 240 V AC, 50 Hz/60 Hz

Power consumption
On: 55 W

Standby mode: 0.5 W or less (Power Saving mode)

• [CONTROL FOR HDMI] in [HDMI] and [STANDBY] in [BT] are set to [OFF]

Standby mode: 2 W or less* (When [CONTROL FOR HDMI] in [HDMI] and [STANDBY] in [BT] are set to [ON])

* The speaker system will automatically enter Power saving mode when there is no HDMI connection and no BLUETOOTH connection.

Dimensions* (approx.) (w/h/d)
192 mm × 387 mm × 366 mm

* Not including projection portion
Mass (approx.)
7.8 kg

Bar Speaker (SS-S40R)

Speaker system
Full range speaker system, Bass reflex

Speaker 42 mm × 100 mm cone type

Dimensions* (approx.) (w/h/d)
900 mm × 52 mm × 74.5 mm

* Not including projection portion
Mass (approx.)
2 kg

Wireless Amplifier (TA-S40RWR)

POWER OUTPUT (reference)
Surround L/Surround R: 75 W (per channel at 4 ohms, 1 kHz)

Power consumption
On: 20 W

Standby mode: 0.5 W or less

Dimensions* (approx.) (w/h/d)
160 mm × 52 mm × 160 mm

* Not including projection portion
Mass (approx.)
0.8 kg


Surround Speakers (SS-S540N)

Speaker system
Full range speaker system, Bass reflex


Speaker 65 mm cone type

Dimensions* (approx.) (w/h/d)
8

To mount the speaker system on a wall
For details, refer to the Operating Instructions (separate document).

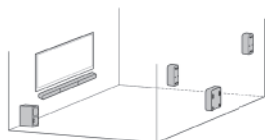

What's in the box

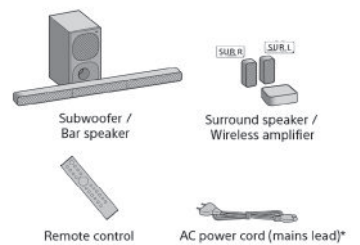

* The shape of the plug differs depending on countries/regions

To set up the remote control




(Batteries not supplied)

804006640

Connect the speakers

Connect the speaker cords to match the color of the FRONT SPEAKERS jacks on the rear of the subwoofer and SUR SPEAKERS jacks on the rear of the wireless amplifier.

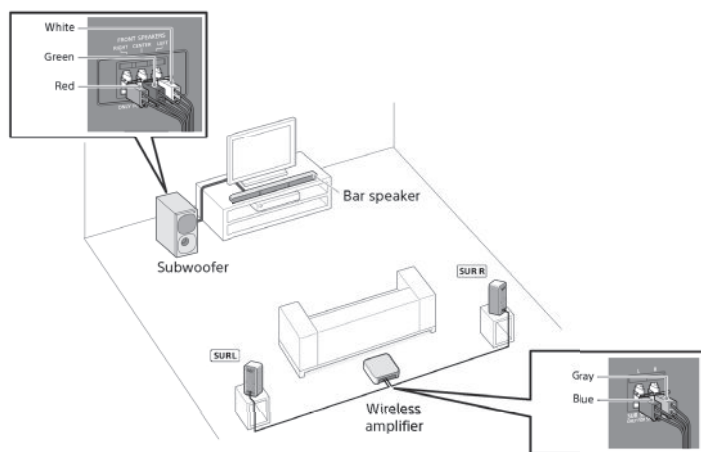

Note

- Disconnect the AC power cords (mains leads) of the TV and devices from the AC outlets (mains) in advance. The AC power cords (mains leads) must be reconnected in step 3.
- Place the subwoofer 5 cm or more away from a TV rack, walls, etc.
- Check the labels on the bottom of each surround speaker to identify "SUR L" (left) and "SUR R" (right).

The image shown here is for illustrative purposes only and may be subject to change.
The actual descriptions of control panel and their locations may vary depending on the model.


The remote control vary depend of model: The buttons on remote control may have a different name or location than the remote control shows in this manual.

The cables mentioned in this guide is not supplied with your unit.

2

Connect with a TV

Is there an HDMI IN jack labeled "ARC" on your TV?

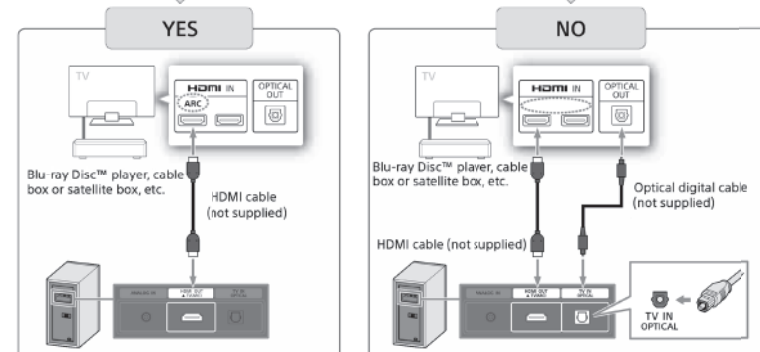


* If your TV does not support the ARC (Audio Return Channel) function, connect the optical digital cable (supplied) to listen to the TV sound.

Note

- Check the shape of the TV IN (OPTICAL) jack on the subwoofer and the optical digital cable's connector, then insert the connector into the jack in the right direction. If you insert the connector in the wrong direction, the connector and jack may be damaged.

3

Connect AC power cords (mains leads) of the TV and the speaker system

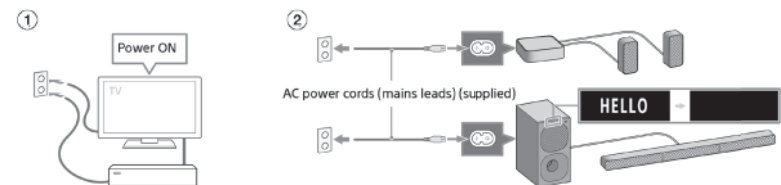


① Connect the AC power cord (mains lead) of the TV and turn on.

② Connect the AC power cords (mains leads) (supplied) to the subwoofer and the wireless amplifier, then connect the cords to the AC outlets (mains).
The remote control of the speaker system does not work until [HELLO] in the front panel display on the subwoofer disappears.

4

Listen to the sound

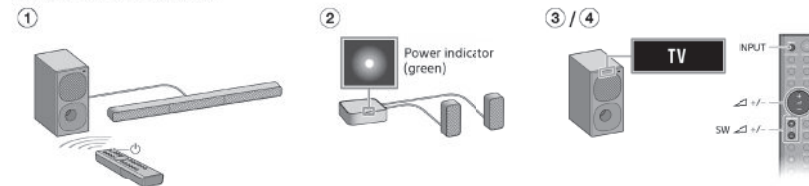

① Press (power) on the remote control of the speaker system.

② Confirm that the power indicator of the wireless amplifier is lit in green.

When the connection with the subwoofer is completed, the power indicator of the wireless amplifier is lit in green.

③ Press INPUT to select [TV] input.

Then select the program you want using the TV remote control.

④ Press to adjust the speaker system volume and press SW to adjust the subwoofer volume.

Note

- Depending on the order in which you turn on the TV and the speaker system, the system may enter muting mode. In this case, turn on the TV first, then the system.

804006640



PRINTED IN MEXICO / SC:27.04.2022

Elbrd: J.E OBPN: *502227311* (3) / 1P / SHNMDL: HTS40R_B