

CHEFMAN®


"Recipe book not included"

Family-Sized Glass Top Warming Tray

Please read this manual carefully before operating your unit and retain for future reference.

Get to Know Your Warming Tray

- | | |
|-----------------------------------|-----------------------------|
| 1. Stainless steel frame | 4. Temperature control knob |
| 2. Tempered glass heating surface | 5. HOT indicator light |
| 3. Cool-touch handles | |

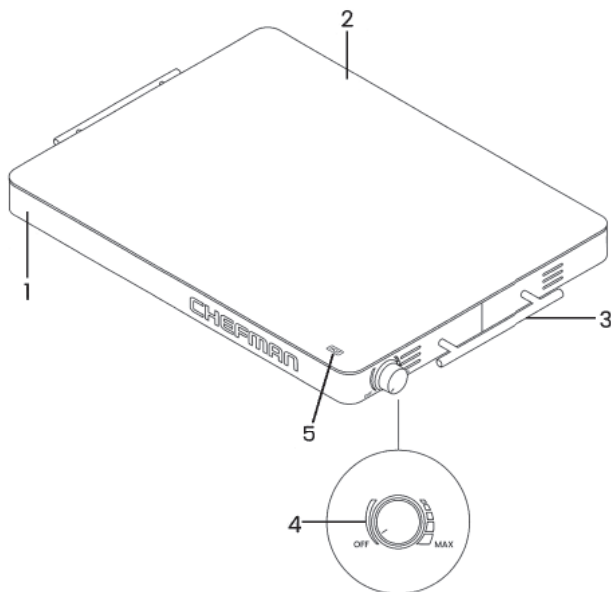

Accessory type and quantity may vary depending on the model.

The actual descriptions of control panel and their locations may vary depending on the model.

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

SAFETY INSTRUCTIONS & IMPORTANT SAFEGUARDS

WARNING: When using electrical appliances, basic safety precautions should always be followed

1. Read all instructions.
2. **Do NOT** touch hot surfaces. Use handles or knobs.
3. To protect against electric shock do not immerse cord, plugs, or unit body in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. **Do NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
7. The use of accessory attachments not recommended by Chefman® may cause injuries.
8. **Do NOT** use outdoors
9. **Do NOT** let cord hang over edge of table or counter, or touch hot surfaces.
10. **Do NOT** place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. To disconnect, turn any control to off, then remove plug from wall outlet.
13. **Do NOT** use appliance for other than intended use.
14. **Do NOT** cook on a broken cooktop. If the cooktop should break, cleaning solutions and spillovers may penetrate the broken cooktop and create a risk of electric shock.
15. Clean cooktop with caution. If a wet sponge is used to wipe spills on a hot cooking area, be careful to avoid steam burns. Some cleaners can produce noxious fumes if applied to a hot surface.
16. Always place the warming tray on a flat, steady surface. Keep at least 8 inches of space between the warming tray and other objects to avoid interruption of airflow around the unit.
17. Only place the unit on heat-resistant surfaces.
18. **Do NOT** place non-heat-resistant objects or containers on the warming tray. This includes plastic containers.
19. This warming tray can be kept on for up to 72 hours. Do not use for prolonged periods of time.
20. **Do NOT** leave the warming tray unattended while in use.
21. **Do NOT** place the warming tray in a dishwasher.
22. **Do NOT** cover the surface or side vents of the warming tray. Covering this unit can cause a fire hazard. Covering the unit with aluminum foil can cause the glass surface to shatter.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

814100457

WARNING: This appliance has a polarized plug (one blade is wider than the other). This plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way or force it into the outlet. This could result in injury or electrical shock.

Short Cord Instructions

A short power-supply cord is provided to reduce the hazards of entanglement or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply extension cord is used:

1. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
2. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

Power Cord Safety Tips

1. Never pull or yank on the cord or the appliance.
2. To insert the plug, grasp it firmly and guide it into the outlet.
3. To disconnect appliance, grasp the plug and remove it from the outlet.
4. Never use the product if the power cord shows signs of excessive wear.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

DO NOT OPERATE APPLIANCE IF THE POWER CORD SHOWS ANY DAMAGE OR IF THE APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.



California Proposition 65:

(Applicable for California Residents only)

WARNING: Cancer and Reproductive Harm

www.P65Warnings.ca.gov

Do not place the appliance on a stovetop or any other heatable surface, even if stovetop is not on. Doing so is a fire hazard.



How to Use the Warming Tray



Before First Use

1. Remove all packaging materials, such as plastic bags and foam inserts.
2. Read and remove all stickers on the unit except for the rating label.
3. Wipe the surface with a damp towel to remove any packaging dust. (Never immerse the warming tray, its cord, or plug in water or any other liquid.)

Warming Instructions

1. Place the tray on a hard, flat, heat-resistant surface near an outlet. Ensure it is at least 8 inches away from all objects and sources of liquid. **WARNING:** Do not place the warming tray on butcher block, wood, recycled material, bamboo, or plastic, as they are not heat resistant. Heat-resistant surfaces include granite, stainless steel, quartz, marble, glass, soapstone, travertine, and limestone.

2. Plug in the tray. Use the temperature control knob to select a heat level, up to the MAX marking. Once a temperature is selected, the HOT indicator light will illuminate. (**NOTE:** The HOT light does not indicate that the surface has fully come to temperature, only that the unit is heating.) **WARNING:** Never cover or wrap the tray in foil, plastic, cloth, or any other material. Doing so blocks airflow, which can cause a fire and can cause the glass top to shatter.
3. Once the tray is warm, place hot or warm food in heat-resistant containers (such as a pot, pan, or tempered glass dish) on the top. Do not place plastic containers on the surface. **CAUTION:** The surface of the tray is HOT. Do not touch the surface with bare hands. Use potholders to handle hot dishes and pans.
4. Never move the tray when it is in use or items are on top of it.
5. When finished using the tray, turn the temperature control knob to OFF, then unplug the tray from the power outlet. Let cool completely before cleaning.

Tips & Troubleshooting

- The warming tray is not a cooking appliance. It is designed to keep already-cooked food warm. It is NOT designed to cook or defrost food.
- Only use containers that are heat resistant on the warming tray. Plastic containers or other materials that are not heat resistant may melt and cause damage to the tray and run a risk of burning or fire.
- Never place any non-heat-resistant items, such as plastic utensils, on or near the tray.
- To retain both heat and moisture, consider covering any foods kept on the tray.
- Use the tray for keeping hot drinks like mulled wine warm during serving.
- Be sure to follow proper food-safety guidelines for keeping and serving warm foods.
- Ceramic, stoneware, and cast-iron cookware may have unfinished, rough bases that can scratch the surface. Avoid using these on the tray, or use with care.
- Check that the bottoms of dishes and pans are clean before placing on the tray; if dirty, they can leave marks on the glass.

Keep It Clean

The glass surface of the warming tray is easy to keep clean.

1. Before cleaning, turn off the unit, unplug it from the power outlet, and let it cool completely.
2. When it is completely cool, clean the warming tray with a mild detergent and a soft, damp cloth. Do not use abrasive cleansers or scouring pads, which can scratch.
3. Never immerse the tray, its cord, or its plug in water or any other liquids. Do not allow water to spill or seep into the tray's frame, or allow the heating elements to come into contact with water.
4. Dry completely with a soft cloth. Store in a cool, dry place.

PRINTED IN MEXICO / Elbrd: J.E. / SC: 05-14-2025

OBPN: RJ22-TC-V3-BLK / SHDML: RJ2TCV32BLKCO_B

8 1 4 1 0 4 5 7

