




Please Read this guide carefully before using the device and keep it for future reference.

Quick Setup Guide

Important!

Use bag to lift TV.
Do not touch screen.

Bag type may vary depending on model.

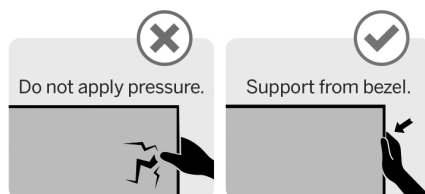

What's in the box

Smart TV, power cable, remote, and TV feet with screws.

What you need (Not included)

Phillips head screwdriver, broadband internet connection, and VIZIO Mobile app.

Accessory type and quantity may vary depending on the model.

Wall mounting your TV?


See the full user manual for wall mount specifications.

(Wall mount kit not included)

1 TV stand setup

Support the TV on both sides and lay on a padded flat surface. Install the TV feet according to the image below.


TV feet may vary depending on model.

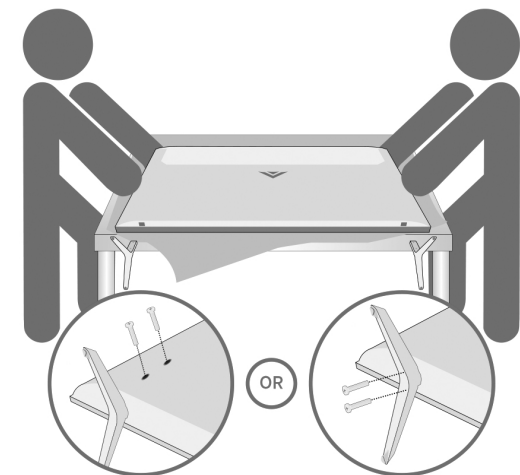

The images shown here are for illustrative purposes only and may be subject to change.

2 TV remote

Insert (2) AAA batteries into the remote control.

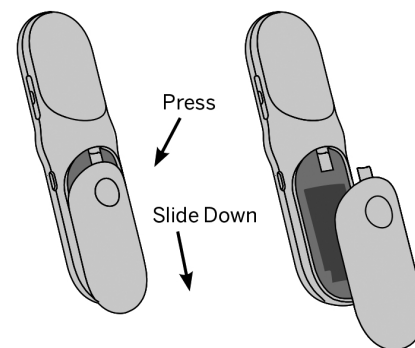


NOTE: The remote control vary depend of model: The buttons on the remote control may have a different name or location than the remote control shows in this manual.

(Batteries not included)

3 Connect

Connect the TV power cable into a wall outlet.

If you have a soundbar, connect it to your TV's HDMI eARC port.

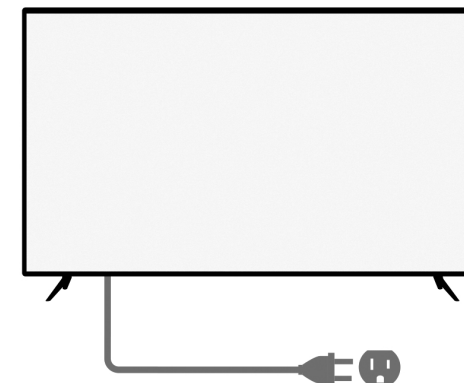


NOTE: The cables mentioned in this manual is not supplied with your unit.

4 On-screen setup


Follow the on-screen instructions to complete your TV setup and enjoy.

See the online user manual for a full walk-through.

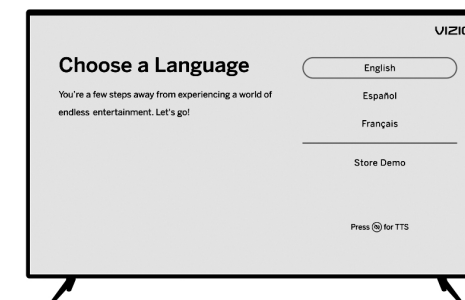

Take control with VIZIO Mobile

The smarter, easier way to control and personalize your TV.

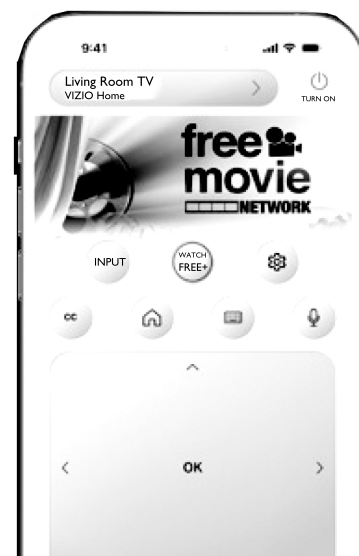

Scan to download

*VIZIO Account required for Smart TV functionality and product updates.



Device control

Launch your favorite apps, movies, and TV shows, as well as powering on/off devices, adjusting volume and more.

Content on command

Use voice to access your favorite apps, movies, and TV shows.

VIZIOgram

Instantly share life's memorable moments to your VIZIO TV.

VIZIO Account

A single place to view subscriptions, track receipts, and update payment methods.

Get to know your Smart TV

Picture mode

Adjust to your perfect picture. Press the settings button  on your VIZIO TV remote and select PICTURE MODE. We recommend BRIGHT.

Customize your apps

Get to your shows faster. Head to your VIZIO Home Screen and find APPS on the sidebar. From APPS navigate to HOME SCREEN APPS to customize.

ClearDialog

Hear every word with the ClearDialog setting. Press the settings button  on your VIZIO TV remote and select ALL SETTINGS > AUDIO > ClearDialog, and choose a level.

Bluetooth headphone support

Pair your Bluetooth headphones. Press the settings button  on your VIZIO TV remote and select PAIR HEADPHONES.

Give a voice to your commands

VIZIO Voice Remote lets you control your favorite content with your voice with the click of a button.



Enjoy exclusive access to 260+ free channels and 6,000+ movies and shows On Demand.

Complete your home theater


Add a VIZIO Soundbar for quick and seamless integration with this TV.

Soundbar Audio Control Menu

Audio settings may be adjusted easily via the on-screen menu, when connected to select VIZIO Soundbars using HDMI.

VIZIO QuickFit

A proprietary mounting solution that enables elegant, tool-free installation of select VIZIO Soundbars with your VIZIO TV.

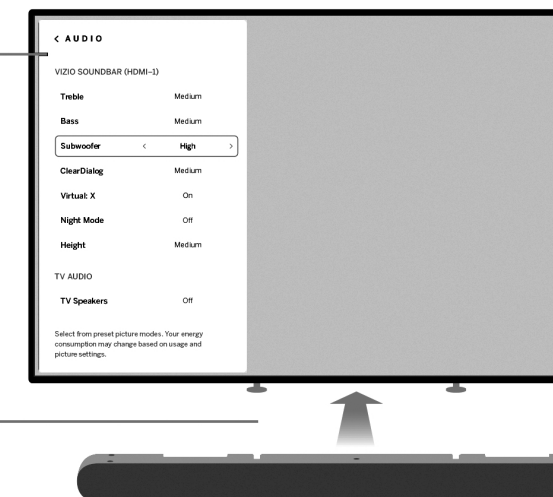

NOTE: The images shown here are for illustrative purposes only and may be subject to change, the actual descriptions of control panel and their locations may vary depending on the model.

Important Product Information

Safety Information



When you see this symbol, please read the accompanying important warning or notice. It is intended to alert you of the presence of important operating instructions.

IMPORTANT SAFETY INSTRUCTIONS

Your Apparatus is designed and manufactured to operate within defined design limits. Misuse may result in electric shock or fire. To prevent your Apparatus from being damaged the following instructions should be observed for the installation, use, and maintenance of your Apparatus. Read the following safety instructions before operating your apparatus. Keep these instructions in a safe place for future reference.

- To reduce the risk of electric shock or component damage, switch off the power before connecting other components to your apparatus.
- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Unplug the power cord before cleaning your apparatus.
- When moving your apparatus from an area of low temperature to an area of high temperature, condensation may form in the apparatus housing. Wait before turning on your apparatus to avoid causing fire, electric shock, or component damage.
- A distance of at least three feet should be maintained between your apparatus and any heat source, such as a radiator, heater, oven, amplifier etc. Do not install your apparatus close to smoke. Operating your apparatus close to smoke or moisture may cause fire or electric shock.
- Slots and openings in the back and bottom of the cabinet are provided for ventilation. To ensure reliable operation of your apparatus and to protect it from overheating, be sure these openings are not blocked or covered. Do not place your apparatus in a bookcase or cabinet unless proper ventilation is provided.
- Never push any object into the slots and openings on your apparatus cabinet. Do not place any objects on the top of your apparatus. Doing so could short circuit parts causing a fire or electric shock. Never spill liquids on your apparatus.
- Your apparatus should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your retailer or local power company.
- Do not apply pressure or throw objects at your apparatus. This may compromise the integrity of the apparatus. The manufacturer's warranty does not cover user abuse or improper installations.
- The power cord must be replaced when using different voltage than the voltage specified. For more information, contact a service center.
- When connected to a power outlet, power is always flowing into your apparatus. To totally disconnect power, unplug the power cord.
- Do not overload power strips and extension cords. Overloading can result in fire or electric shock.
- Use only with the UL-listed wall mount bracket rate for the weight/load of the apparatus.
- The wall socket should be installed near your apparatus and easily accessible.
- Only power of the marked voltage can be used for your apparatus. Any other voltage than the specified voltage may cause fire or electric shock.
- Do not attempt to repair or service your apparatus yourself. Opening or removing the back cover may expose you to high voltages, electric shock, and other hazards. If repair is required, contact your retailer and refer all servicing to qualified service personnel.
- WARNING: Keep your apparatus away from moisture. Do not expose your apparatus to rain or moisture. If water penetrates into your apparatus, unplug the power cord and contact a service center. Continuous use in this case may result in fire or electric shock.
- Do not use your apparatus if any abnormality occurs. If any smoke or odor becomes apparent, unplug the power cord and contact a service center. Do not try to repair your apparatus yourself.
- Avoid using dropped or damaged appliances. If your apparatus is dropped and the housing is damaged, the internal components may function abnormally. Unplug the power cord immediately and contact a service center. Continued use of your Apparatus in this state may cause fire or electric shock.
- Do not install your apparatus in an area with heavy dust or high humidity. Operating your apparatus in environments with heavy dust or high humidity may cause fire or electric shock.

- Follow instructions for moving your apparatus. Ensure that the power cord and any other cables are unplugged before moving your apparatus.
- When unplugging your apparatus, grab the head of the power plug, not the cord. Pulling on the power cord may damage the wires inside the cord and cause fire or electric shock.
- To reduce risk of electric shock, do not touch the connector with wet hands.
- Insert batteries in accordance with instructions. Incorrect polarities may cause the batteries to leak which can damage the remote control or injure the operator. Do not expose batteries to excessive heat such as sunshine, fire or the like.
- If any of the following occurs, contact a service center:
 - The power cord fails or frays.
 - Liquid sprays or any object drops into your apparatus.
 - Your apparatus is exposed to rain or other moisture.
 - Your apparatus is dropped or damaged in any way.
 - The performance of your apparatus changes substantially.
- This apparatus should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on the apparatus.
- The mains plug or appliance coupler is used as the disconnect device, the disconnect device should remain readily operable.
- CAUTION - These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated DANGEROUS VOLTAGE within the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock to persons.
- Please use caution around the apparatus: pulling or pushing on the Apparatus may cause the apparatus to tip or fall over resulting in personal injury and/or property damage.
- WARNING: Exposure to loud sounds can damage your hearing causing hearing loss and tinnitus (ringing or buzzing in the ears). With continued exposure to loud noises, ears may become accustomed to the sound level, which may result in permanent damage to hearing without any noticeable discomfort.
- Install the apparatus where it cannot be pulled, pushed or knocked over.
- Do not allow children to hang onto the product.
- Store the accessories (remote, batteries, etc.) in a location safely out of the reach of children.
- The American Academy of Pediatrics discourages television viewing for children younger than two years of age.
- WARNING - Stability Hazard: A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:
 - ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the television set.
 - ALWAYS use furniture that can safely support the television set.
 - ALWAYS ensure the television set is not overhanging the edge of the supporting furniture.
 - ALWAYS educate children about the dangers of climbing on furniture to reach the television set or its controls.
 - ALWAYS route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
 - NEVER place a television set in an unstable location.
 - NEVER place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
 - NEVER place the television set on cloth or other materials that may be located between the television set and supporting furniture.
 - NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.
- If the existing television set is going to be retained and relocated, the same considerations as above should be applied.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, can result in an explosion;
 - Leaving a battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas;
 - A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.
- WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.

Regulatory Information

FCC Class B Radio Interference Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/Television technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Notice

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits. The manufacturer is not responsible for any radio or Television interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference.

FCC Warning

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

Caution

Always use a power outlet that is properly grounded.

Canada Notice for License-Exempt Radio Apparatus

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device operates on a no-protection no-interference basis. Should the user seek to obtain protection from other radio services operating in the same Television bands, a radio license is required. Please consult Industry Canada's document CPC-2-1-28, Optional Licensing for Low-Power Radio Apparatus in the Television Bands, for details.

This Class B digital apparatus complies with Canadian ICES-003.

For USA/Canada

This equipment should be installed and operated with a minimum distance of 20cm between the antenna and your body. Users must follow the specific operating instructions for Satisfying RF exposure compliance.

For Canada

The device for the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems. The maximum antenna gain permitted (for devices in the 5725-5825 MHz band) to comply with the E.I.R.P. limits specified for point-to-point and non point-to-point operation as appropriate.

Legal Information

Software Licenses

All software is provided subject to a software license agreement(s) and you agree that you will be bound by such license agreement(s) in addition to these terms. Visit <http://www.vizio.com/terms> to learn more. Your use of this product is subject to VIZIO's privacy policy, which may be updated from time to time, and is available to view at <http://www.vizio.com/privacy>.

Export Regulations

Customer acknowledges that the VIZIO products, which include technology and software, are subject to customs and export control laws in the United States ("US"). The products may also be subject to the customs and export control laws and regulations of the country in which the products are manufactured and/or received.

The applications and content of the applications pictured herein or described in accompanying documentation may only be available in certain countries or languages, may require additional fees or subscription charges, and may be subject to future updates, modifications or discontinuation without notice. VIZIO has no control over third party applications or content and assumes no responsibility for the availability or interruption of such applications or content. Additional third party terms, conditions and restrictions apply.

Information in document is subject to change without notice. To review the most updated version of this document and the associated User Manual, go to <http://www.vizio.com>.

© 2023 VIZIO, Inc. All Right Reserved.

This document may not be copied in whole or in part without the written permission of VIZIO, Inc. VIZIO, Inc. has made reasonable efforts to ensure the accuracy of the information provided herein. All product specifications, functionality, features, configurations, performance, design and other product information described herein are subject to change without notice. VIZIO, Inc. is not responsible for typographical, technical, or descriptive errors.

VIZIO, the VIZIO logo, the V logo, and other terms and phrases are trademarks or registered trademarks of VIZIO, Inc.

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS, Inc or under license from DTS Licensing Limited. DTS, DTS-HD, DTS:X, Digital Surround, Virtual:X, TruVolume, the DTS logo, The DTS-HD logo, and the DTS:X logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2021 DTS, Inc. ALL RIGHTS RESERVED.

Your VIZIO product will include one or more listed DTS technologies. Please refer to the user manual to determine which technology is applicable to your product.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

Dolby, Dolby Vision, Dolby Atmos, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 1992-2022 Dolby Laboratories. All rights reserved.

Google, Chromecast built-in, YouTube and related marks and logos are trademarks of Google LLC.

This VIZIO Smart TV is compatible with AirPlay and HomeKit. iOS 12.3 or later or MacOS 10.14.5 or later is required. Apple, AirPlay, and Apple Home are trademarks of Apple Inc., registered in the U.S. and other countries and regions.

Other names of companies, products, and services used may be trademarks, trade names or service marks of others and VIZIO, Inc. disclaims any interest in trademarks, trade names or service marks other than its own. Mention of non-VIZIO products is for informational purposes only.

Recycling

VIZIO takes its role in protecting the environment seriously and encourages responsible recycling across the United States.

Battery Disposal

Caution: This product may be shipped with batteries. Do not dispose of batteries in a fire or with ordinary household waste. Batteries may explode and can cause damage. Replace batteries only with the same or equivalent type of battery recommended by VIZIO. The disposal of batteries may be regulated by your state. For more information on recycling or properly disposing of your batteries, please check with your state or go to www.vizio.com/environment.

Product Recycling

The disposal and recycling of consumer electronic products may be regulated by your state. Always properly dispose of your VIZIO products in accordance with local laws and regulations. For information on how to properly recycle televisions and other consumer electronics, go to www.vizio.com/environment.

Packaging Disposal

VIZIO encourages the recycling of the packaging used for this product. Please break-down all boxes and recycle eligible materials according to local laws and regulations, and waste management guidelines.

PRINTED IN MEXICO

Elbrd: J.M.

OBPN: X41G78DV99722B / SC: 19-08-2024

SHNMDL:V4K55C0801_B / ADD: V4K55M0801_V4K50C0809_V4K65M0804