

SONY

BRAVIA

Please read this manual carefully before operating your unit and retain for future reference.

804106497

Safety Information

Notice for customers in the United States of America

Supplier's Declaration of Conformity

Trade Name: SONY
Model: XBR-85X81CH / XBR-85X80CH / XBR-85X800H / XBR-75X81CH / XBR-75X80CH / XBR-75X800H / XBR-65X81CH / XBR-65X80CH / XBR-65X800H / XBR-55X81CH / XBR-55X80CH / XBR-55X800H / XBR-49X800H / XBR-43X800H

FCC Related Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Pursuant to FCC regulations, you are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Safety and Regulatory

5 GHz bands are restricted to indoor operations only.

Notice for customers in the United States

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20 cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

 
This device and its antenna(s) must not be co-located or operating with any other antenna or transmitter except Grant condition.

NOTE ON AC ADAPTER (models with supplied AC adapter only)

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus. Do not install this equipment in a confined space, such as a bookshelf or similar unit.

- Please ensure that the AC power outlet is installed near the equipment and shall be easily accessible.
- Be sure to use the supplied AC adapter and AC power cord. Otherwise it may cause a malfunction.
- Connect the AC adapter to an easily accessible AC power outlet.
- Do not coil the AC power cord around the AC adapter. The core wire may be cut and/or it may cause a malfunction of the TV.
- Do not touch the AC adapter with wet hands.
- If you notice an abnormality in the AC adapter, disconnect it from the AC power outlet immediately.
- The set is not disconnected from the AC source as long as it is connected to the AC power outlet, even if the set itself has been turned off.
- As the AC adapter will become warm when it is used for a long time, you may feel hot when touching it by hand.



Compatible Wall-Mount Bracket Information (not supplied)

Use the following Sony Wall-Mount Bracket with your TV model.

	Sony TV Model No.
	XBR-75X800H / 65X800H / 55X800H
Sony Wall-Mount Bracket Model No.	SU-WL855*1

Use with other Wall-Mount Brackets*2 may cause instability and could result in property damage or injury.

*1 Only on limited region/country/TV model.

 
*2 For instructions on using the Wall-Mount bracket with your TV please contact a service center.

Before setting up your TV


Some TV models are packaged with a detached Table-Top Stand so you can mount your TV to a wall right away. See "Installing the TV to the Wall" if you want to mount the TV to a wall. If you are not mounting the TV to a wall, you will need to attach the Table-Top Stand. You will need a Phillips screwdriver (not supplied) and the supplied screws to complete the task, refer to the Setup Guide. Be sure to consider the following while setting up your TV:

- Disconnect all cables when carrying the TV.
- Carry the TV with the adequate number of people; larger size TVs require two or more people (three or more people for XBR-85X81CH / 85X80CH / 85X800H).
- Correct hand placement while carrying the TV is very important for safety and to avoid damage.

XBR-85X81CH / 85X80CH / 85X800H

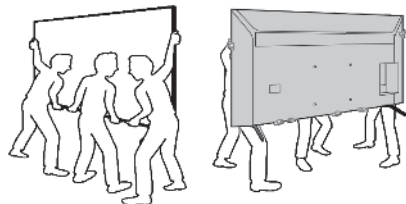

 XBR-75X81CH / 75X80CH / 75X800H / 65X81CH / 65X80CH / 65X800H / 55X81CH / 55X80CH / 55X800H / 49X800H / 43X800H

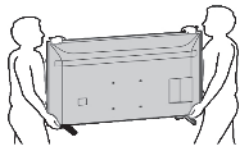

- Ensure your TV has adequate ventilation, refer to the safety documentation.
- For best picture quality, do not expose the screen to direct illumination or sunlight.
- Avoid installing the TV in a room with reflective wall and floor materials.
- Avoid moving the TV from a cold area to a warm area. Sudden room temperature changes may cause moisture condensation. This may cause the TV to show poor picture and/or poor color. Should this occur, allow moisture to evaporate completely before powering the TV on.

Securing the TV



Sony strongly recommends taking measures to prevent the TV from toppling over. Unsecured TVs may topple and result in property damage, serious bodily injury or even death.

Preventing the TV from Toppling

- Secure the TV to a wall and/or Stand.
- Do not allow children to play or climb on furniture and TV sets.
- Avoid placing or hanging items on the TV.
- Never install the TV on:
 - slippery, unstable and/or uneven surfaces.
 - furniture that can easily be used as steps, such as a chest of drawers.
- Install the TV where it cannot be pulled, pushed, or knocked over.
- Install the TV so that the TV's Table-Top Stand does not protrude out from the Stand (not supplied). If the Table-Top Stand protrudes out from the Stand, it may cause TV set to topple over, fall down, and cause personal injury or damage to the TV.

 


- Route all AC power cords and connecting cables so that they are not accessible to curious children.

Recommended Measures to Secure the TV

Consider the following measures when securing your TV to a Stand (not supplied).


- 1 Secure the Stand for the TV. Make sure the Stand can adequately support the weight of the TV. Use two angle braces (not supplied) to secure the Stand. For each angle brace use the appropriate hardware to:
 - Attach one side of the angle brace to the wall stud.
 - Attach the other side to the Stand.

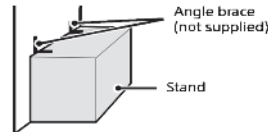

- 2 Secure the TV to the Stand. Use the optional hardware listed as follows (not supplied):
 - M6 machine screws (screwed into the TV's rear cover).
 - A screw or similar (attach it to the Stand).
 - Rope or chain (strong enough to support the weight of the TV). Make sure that there is no excess slack in the rope or chain.

Remote Control and TV

 The remote control shape, location, availability and function of remote control buttons may vary depending on your region/country/TV model.

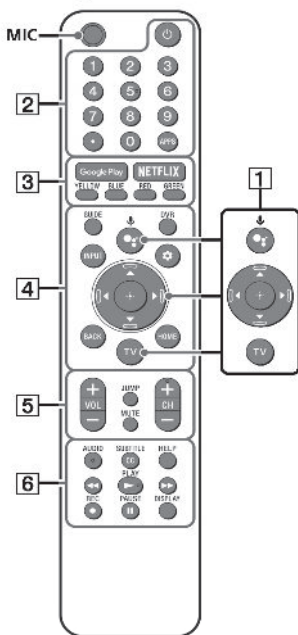

(Batteries not supplied)

- 1 ***: (The Google Assistant) / (Microphone):** Use the Google Assistant*1*2 or voice search*2. For hints on how to control your TV press *: (the Google Assistant)/ (Microphone) button and speak the phrase "voice hints".*1

▲/▼/◀/▶/⊕: On screen menu navigation and selection.

TV: Display TV channel list or switch to input.

- 2 **(TV standby)**

Number buttons

(dot)

APPS: Display a list of installed apps.

- 3 **Google Play / NETFLIX*1 / Color buttons**

The remote control vary depend of model: The buttons on remote control may have a different name or location than the remote control shows in this manual.

- 4 **GUIDE:** Display the digital program guide of TV or Cable/Satellite box*1*3. **DVR:** Display the Rec list of DVR*3. **INPUT:** Display and select the input source, etc.

(Quick settings): Display Quick Settings.

BACK

HOME

- 5 **VOL +/- (Volume)**

JUMP

MUTE*4

CH +/- (Channel)

- 6 **AUDIO:** Select the sound of multilingual source or dual sound (depend on program source). **SUBTITLE/CC**

HELP: Display the Help menu.

 
◀/▶/▶/II

● REC: Record the currently viewed program on DVR*3.

DISPLAY: Display information.


Guidelines for IR Remote Control

- Point your remote control directly at the IR sensor located on your TV.
- Make sure that no objects are blocking the path between the remote control and the IR sensor on your TV.

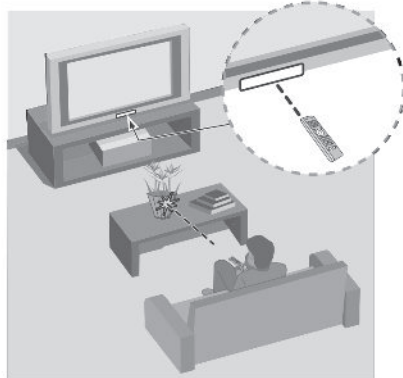

- Fluorescent lamps can interfere with your remote control; try turning off the fluorescent lamps.

 - If you are having problems with the remote control, reinsert or replace your batteries and make sure that they are correctly inserted.

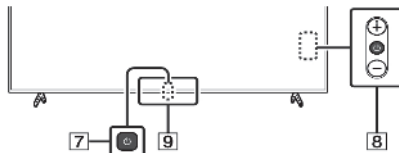

- 7 **(Power) (except XBR-49X800H / 43X800H)**

Note: The images shown here are for illustrative purposes only and may be subject to change. The actual menus may vary depending on the model.

- 8 **(Power)/+/- (XBR-49X800H / 43X800H only)**

- 9 **Remote Control sensor / Light sensor / LED**

- *1 Only on limited region/country/TV model/ language.
- *2 The Google Assistant or voice search requires an Internet connection.
- *3 [Cable/Satellite box setup] setting is required.
- *4 Accessibility shortcut is available by pressing and holding MUTE.



HELP

For more information, refer to the Help Guide.

Installing the TV to the Wall

Using the optional Wall-Mount Bracket (SU-WL855 only)* (not supplied)

To Customers:

For product protection and safety reasons, it is strongly recommends that installation of your TV be performed by it is dealers or licensed contractors. Do not attempt to install it yourself.

 
Wall-Mount Bracket Installation Information

This TV's instruction manual only provides the steps to prepare the TV for Wall-Mount installation before it is installed on the wall. For instructions on Wall-Mount Bracket installation, see the Installation Information (Wall-Mount Bracket) on the it is Customer

Preparing for Wall-Mount Installation


You can use the Wall-Mount Bracket SU-WL855 (not supplied) to install the TV to the wall. Make sure to attach the Table-Top Stand before installing the TV to the wall by referring to the Setup Guide (except XBR-49X800H / 43X800H).

- Prepare the TV for the Wall-Mount Bracket before making cable connections.
- Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight.
- Be sure to entrust the attachment of this product to the wall to it is dealers or licensed contractors and pay adequate attention to safety during the installation. it is not liable for any damage or injury caused by mishandling or improper installation.
- The screws for Wall-Mount Bracket are not supplied.
- The length of the screw for Wall-Mount Bracket differs depending on the Wall-Mount Bracket thickness. Please refer to below illustration.

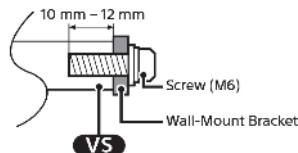

- Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from small children.

 * Only on limited region/country/TV model.

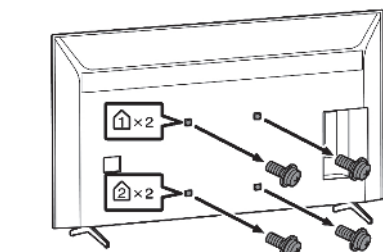

Using the optional Wall-Mount Bracket (Except SU-WL855) (not supplied)

This TV's instruction manual only provides the steps to prepare the TV for Wall-Mount installation before it is installed on the wall.

 
Your TV can be mounted to a wall using a suitable Wall-Mount Bracket (not supplied). If the Table-Top Stand is attached to the TV, the TV may require detaching the Table-Top Stand; see "Detaching the Table-Top Stand from the TV".

Prepare the TV for the Wall-Mount Bracket before making cable connections.


For product protection and safety reasons, it is strongly recommends that installation of your TV on the wall be performed by qualified professionals. Do not attempt to install it yourself.

- Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight.
- The screws for Wall-Mount Bracket are not supplied.
- The length of the screw for Wall-Mount Bracket differs depending on the Wall-Mount Bracket thickness. Please refer to below illustration.

XBR-85X81CH / 85X80CH / 85X800H / 75X81CH / 75X80CH / 75X800H / 65X81CH / 65X80CH / 65X800H / 55X81CH / 55X80CH / 55X800H only

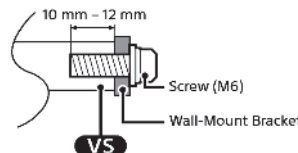


XBR-49X800H / 43X800H only

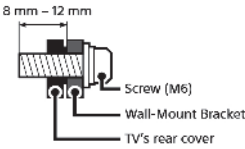 

- Refer to the following table for wall-mount hole pattern.

Model Name	Wall-mount hole pattern
	a × b
XBR-85X81CH / 85X80CH / 85X800H	400 × 400 mm
XBR-75X81CH / 75X80CH / 75X800H	300 × 300 mm
XBR-65X81CH / 65X80CH / 65X800H	300 × 300 mm
XBR-55X81CH / 55X80CH / 55X800H	300 × 300 mm

Model Name	Wall-mount hole pattern
	a × b
XBR-49X800H	200 × 200 mm
XBR-43X800H	100 × 200 mm

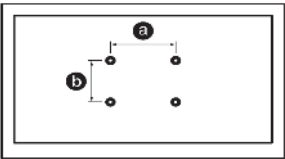 


- Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from small children.

- Note**
- Read the supplied Safety Booklet for additional safety information.
 - For more detailed information, Contact a service center.*

* Only on limited region/country/TV model.

XBR-49X800H / 43X800H only

 Attach the Wall-Mount Bracket (not supplied) using the screws (not supplied).


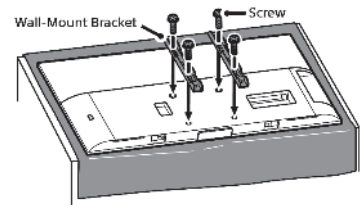


- Note**
- If using an electric screwdriver, set the torque at approximately 1.5 N·m (15 kgf·cm).

Note: The image shown here is for illustrative purposes only and may be subject to change. The actual number of ports and their locations may vary depending on the model.

Detaching the Table-Top Stand from the TV

  - Remove one side of the Table-Top Stand at a time. Firmly hold the Table-Top Stand securely with both hands while the other people lift up the TV.

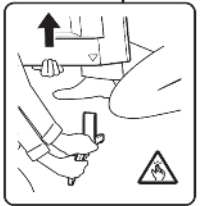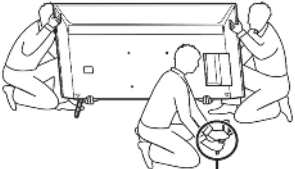


- Repeat the previous step and remove the other side of the Table-Top Stand.

Note

- Three or more people are required to detach the Table-Top Stand.
- Be careful not to use excessive force while detaching the Table-Top Stand from the TV as it may cause the TV set to fall resulting in personal injury or physical damage to the TV.
- Take care when handling the Table-Top Stand to prevent damage to the TV.
- Be careful when lifting the TV as the Table-Top Stand is detached, the Table-Top Stand may topple over and cause personal injury.
- Take care when removing the Table-Top Stand from the TV to prevent it from falling over and damaging the surface that the TV is sitting on.
- Do not remove the Table-Top Stand for any reason other than to install corresponding accessories on the TV.
- Be sure the TV is vertical before turning on. To avoid uneven picture uniformity do not power on the TV with the LCD panel facing down.

XBR-49X800H / 43X800H only

 To detach the Table-Top Stand from the TV, remove the screws.

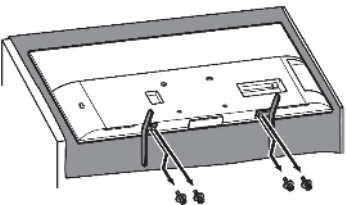

Note

- Do not remove the Table-Top Stand for any reason other than to install corresponding accessories on the TV.
- Be sure the TV is vertical before turning on. To avoid uneven picture uniformity do not power on the TV with the LCD panel facing down.
- When attaching the Table-Top Stand again, be sure to fasten the screws (previously removed) to the original holes on the rear of the TV.
- Place the TV with its screen facing down on a level and stable surface covered with a thick and soft cloth when removing the Table-Top Stand from the TV to prevent damaging the surface of the LCD display.

Troubleshooting

General troubleshooting for issues like: black screen, no sound, frozen picture, TV does not respond, or network is lost, do the following steps.

- Restart your TV by pressing the power button on the remote control for about five seconds. The TV will restart. If the TV does not recover, try unplugging the AC power cord. Then press the power button on the TV, and release it. Wait for two minutes, and plug in the AC power cord.
- Refer to the Help menu by pressing **HELP** on the remote control.
- Connect your TV to the Internet and perform a software update. It is recommends you to keep your TV software updated. Software updates provide new features and performance improvements.
- Perform the factory data reset.

When you plug in the TV, the TV may not be able to turn on for a while even if you press the power button on the remote control or the TV.

It takes time to initialize the system. Wait for about one minute, then operate it again.

How to reset the TV to factory settings

WARNING: The reset will clear all of your customized settings including the parental lock setting.

- You can reset the TV to factory settings by selecting [Factory data reset]. How to select [Factory data reset], refer to the Help Guide.
- To force factory data reset, unplug the AC power cord. Press and hold button on the TV, then plug in the AC power cord. (except XBR-49X800H / 43X800H)
- To force factory data reset, unplug the AC power cord. Press and hold both and buttons on the TV, then plug in the AC power cord. Release both buttons when the LED blinks. (XBR-49X800H / 43X800H only)
- For security purposes, be sure to remove all personal and account information before discarding, selling or passing your TV to someone else by: unlinking/unregistering, signing out of and deactivating all network services as well as factory reset the TV.

The remote control does not function.

- Replace the batteries.

The parental lock password has been forgotten.

- Enter 4357 for the PIN and enter the new PIN.

The restricted profile password has been forgotten.

- Perform the force factory data reset.



For more information on troubleshooting, refer to the Help Guide.

Specifications

System

Television system
NTSC: American TV Standard
ATSC (8VSB Terrestrial): ATSC compliant 8VSB
QAM on cable: ANSI/SCTE 07 2000 (Does not include CableCARD functionality)
Channel coverage
Analog terrestrial: 2 - 69 / Digital terrestrial: 2 - 69
Analog Cable: 1 - 135 / Digital Cable: 1 - 135
Panel system: LCD (Liquid Crystal Display)
Panel, LED Backlight
Speaker output: 10 W + 10 W
Wireless technology
Protocol IEEE 802.11a/b/g/n/ac
Bluetooth® Version 4.2

Input/Output jacks

CABLE/ANTENNA
75 ohm external terminal for RF inputs
VIDEO IN
Video/Audio input (mini jack)
HDMI IN 1/2/3/4 (support 4K resolution, HDCP 2.3-compatible)
Video:
4096 × 2160p (60 Hz)^{*1*2}, 4096 × 2160p (24 Hz)^{*1}, 3840 × 2160p (60 Hz)^{*2}, 3840 × 2160p (24, 30 Hz), 1080p (30, 60 Hz), 1080/24p, 1080i (60 Hz), 720p (30, 60 Hz), 720/24p, 480p, PC Formats^{*3}
Audio:
5.1 channel linear PCM: 32/44.1/48/88.2/96/176.4/192 kHz 16/20/24 bits, Dolby Audio, Dolby Atmos, DTS
ARC (Audio Return Channel) (HDMI IN 3 only)^{*4}
Two channel linear PCM: 48 kHz 16 bits, Dolby Audio, Dolby Atmos, DTS
DIGITAL AUDIO OUT (OPTICAL)
Digital optical jack (Two channel linear PCM: 48 kHz 16 bits, Dolby Audio, DTS)
Stereo mini jack)
Headphone
1, 2
USB port 1 supports High Speed USB (USB 2.0)
USB port 2 supports Super Speed USB (USB 3.1 Gen 1)
LAN
10BASE-T/100BASE-TX connector (Depending on the operating environment of the network, connection speed may differ. The communication rate and quality are not guaranteed.)
Refer to the Help Guide for the supported files and formats in Home Network.
DC IN 19.5 V (XBR-49X800H / XBR-43X800H only)
AC adapter input
REMOTE
RS-232C mini jack, IR IN mini jack
These jacks are for receiving the external control signal.

Dimensions (Approx.) (w × h × d) (mm) / (inches)

with stand (without stand)
XBR-85X81CH / XBR-85X80CH / XBR-85X800H: 1,899 × 1,174 × 442 / 74 1/8 × 46 1/4 × 17 1/2 (1,899 × 1,089 × 71 / 74 1/8 × 42 1/8 × 2 1/8)
XBR-75X81CH / XBR-75X80CH / XBR-75X800H: 1,686 × 1,042 × 414 / 66 1/2 × 41 × 16 3/8 (1,686 × 969 × 72 / 66 1/2 × 38 1/4 × 2 1/8)
XBR-65X81CH / XBR-65X80CH / XBR-65X800H: 1,462 × 905 × 340 / 57 5/8 × 35 3/8 × 13 1/2 (1,462 × 841 × 71 / 57 5/8 × 33 1/8 × 2 1/8)
XBR-55X81CH / XBR-55X80CH / XBR-55X800H: 1,243 × 782 × 340 / 49 × 30 1/8 × 13 1/2 (1,243 × 718 × 71 / 49 × 28 3/8 × 2 1/8)
XBR-49X800H: 1,101 × 704 × 286 / 43 3/8 × 27 3/4 × 11 3/8 (1,101 × 645 × 57 / 43 3/8 × 25 1/2 × 2 1/4)
XBR-43X800H: 970 × 630 × 286 / 38 1/4 × 24 7/8 × 11 3/8 (970 × 570 × 57 / 38 1/4 × 22 1/2 × 2 1/4)

Power and others

Power requirements
Except model with supplied AC adapter
110 V - 240 V AC, 50/60 Hz (U.S.A./120 V AC, 60 Hz)
Models with supplied AC adapter only
19.5 V DC with AC adapter (XBR-49X800H / XBR-43X800H only)
Rating: Input 110 V - 240 V AC, 50/60 Hz (U.S.A./Canada 120 V AC, 60 Hz)

AC adapter electrical ratings^{*5}

XBR-43X800H:
Model: ACDP-100D03, ACDP-100P01
Input: 100 V - 240 V AC, 50/60 Hz, 1.7 A
Output: DC 19.5 V, 5.2 A
XBR-49X800H:
Model: ACDP-120D01, ACDP-120M01
Input: 100 V - 240 V AC, 50/60 Hz, 1.4 A
Output: DC 19.5 V, 6.2 A

Power consumption

In use
XBR-85X81CH / XBR-85X80CH / XBR-85X800H: 367 W
XBR-75X81CH / XBR-75X80CH / XBR-75X800H: 363 W
XBR-65X81CH / XBR-65X80CH / XBR-65X800H: 239 W
XBR-55X81CH / XBR-55X80CH / XBR-55X800H: 196 W
XBR-49X800H: 107 W
XBR-43X800H: 97 W

In standby^{*6*7}

Less than 0.5 W with 120 V AC and less than 0.5 W with 240 V AC

Screen size (measured diagonally) (Approx.)

XBR-85X81CH / XBR-85X80CH / XBR-85X800H: 214.8 cm / 84.6 inches (85" class)
XBR-75X81CH / XBR-75X80CH / XBR-75X800H: 189.3 cm / 74.5 inches (75" class)
XBR-65X81CH / XBR-65X80CH / XBR-65X800H: 163.9 cm / 64.5 inches (65" class)
XBR-55X81CH / XBR-55X80CH / XBR-55X800H: 138.8 cm / 54.6 inches (55" class)
XBR-49X800H: 123.2 cm / 48.5 inches (49" class)
XBR-43X800H: 108.0 cm / 42.5 inches (43" class)

Display resolution

3,840 dots (horizontal) × 2,160 lines (vertical)

Output Rating

USB 1
5 V , 500 mA MAX

USB 2
5 V , 900 mA MAX

wall-mount hole pattern

XBR-85X81CH / XBR-85X80CH / XBR-85X800H: 400 × 400 mm
XBR-75X81CH / XBR-75X80CH / XBR-75X800H: 300 × 300 mm
XBR-65X81CH / XBR-65X80CH / XBR-65X800H: 300 × 300 mm
XBR-55X81CH / XBR-55X80CH / XBR-55X800H: 300 × 300 mm
XBR-49X800H: 200 × 200 mm
XBR-43X800H: 100 × 200 mm

wall-mount screw size (mm)

M6 (length: see "Installing the TV to the Wall".)

Mass (Approx.) (kg) / (lb.)

with stand (without stand)
XBR-85X81CH / XBR-85X80CH / XBR-85X800H: 45.6 / 100.5 (44.1 / 97.2)
XBR-75X81CH / XBR-75X80CH / XBR-75X800H: 32.9 / 72.5 (31.8 / 70.1)
XBR-65X81CH / XBR-65X80CH / XBR-65X800H: 22.6 / 49.8 (21.7 / 47.8)
XBR-55X81CH / XBR-55X80CH / XBR-55X800H: 16.8 / 37.0 (16.0 / 35.3)
XBR-49X800H: 12.1 / 26.7 (11.8 / 25.6)
XBR-43X800H: 9.8 / 21.6 (9.4 / 20.7)

Others

Optional accessories

Wall-Mount Bracket: SU-WL855 (XBR-75X800H / 65X800H / 55X800H only)
Operating temperature: 0 °C – 40 °C / 32 °F - 104 °F

- ^{*1} When 4096 × 2160p is input and [Wide mode] is set to [Normal], the resolution is displayed as 3840 × 2160p. To display 4096 × 2160p, set [Wide mode] setting to [Full 1] or [Full 2].
^{*2} To support 18 Gbps, set [HDMI signal format] to [Enhanced format].
^{*3} Refer to the online Help Guide for details.
^{*4} Connect your audio system to the HDMI IN 3 to route TV audio to your audio system.
^{*5} Refiérase al adaptador ca/cc suministrado.
^{*6} Specified standby power is reached after the TV finishes necessary internal processes.
^{*7} Standby power consumption will increase when your TV is connected to the network.

Note

- Optional accessories availability depends on countries/region/TV model/stock.
- Design and specifications are subject to change without notice.
- Subscriptions for services and applications may be required and additional terms, conditions and/or charges may apply when using the Google Assistant.

Licensing Information

- The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.
- Dolby, Dolby Vision, Dolby Atmos, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012-2018 Dolby Laboratories. All rights reserved.
- Gracenote, the Gracenote logo and logotype, "Powered by Gracenote" logo are either registered trademarks or trademarks of Gracenote, Inc. in the United States and/or other countries.
- Google, Google Play, Chromecast, YouTube, Android TV and other related marks and logos are trademarks of Google LLC.
- For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS, Inc. DTS, the Symbol, DTS and the Symbol together, and Digital Surround are registered trademarks or trademarks of DTS, Inc. in the United States and/or other countries. © DTS, Inc. All Rights Reserved.
- Netflix is a registered trademark of Netflix, Inc.
- TUXERA is a registered trademark of Tuxera Inc. in the US and other countries.
- All other trademarks are the property of their respective owners.

PRINTED IN MEXICO

SC:27-05-2021 / Elbrd: J.E / TAB

OBPN: 5-013-150-14(1)

SHNMDL: XBR65X81CH_B
Add:XBR-85X81CH / 85X80CH / 85X800H / 75X81CH / 75X80CH / 75X800H / 65X80CH / 65X800H / 55X81CH / 55X80CH / 55X800H / 49X800H / 43X800H.

W

 
804106497



SONY® Setup Guide




1

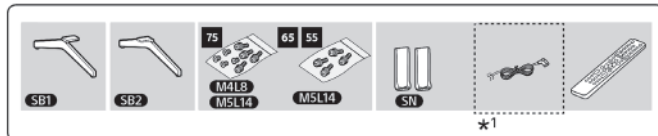


Tools
not supplied

 
2

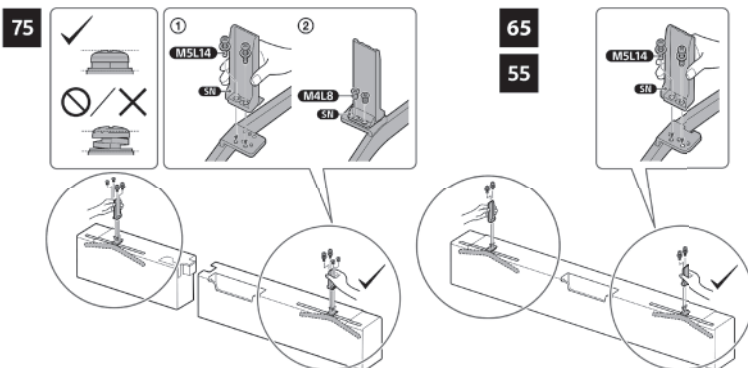


3

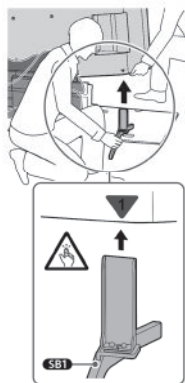 


4

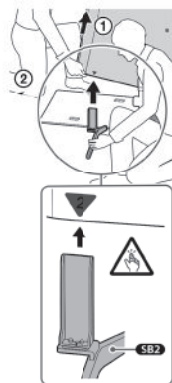 


5

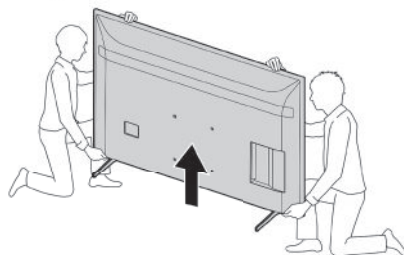 


6

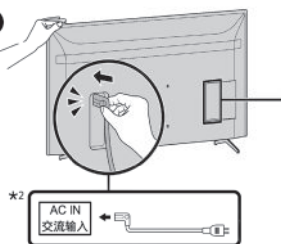 

 
The cables mentioned in
this guide is not supplied
with your unit.

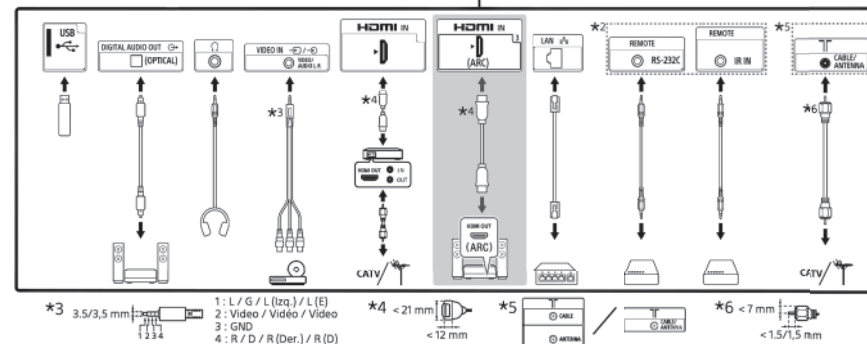

7

 

8

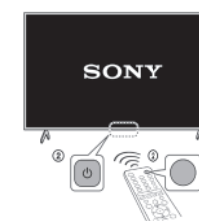 

(Batteries not supplied)

?



The remote control vary depend of model: The buttons on remote control may have a different name or location than the remote control shows in this manual.

The image shown here is for illustrative purposes only and may be subject to change. The actual number of ports and their locations may vary depending on the model.



804006497



804006497

PRINTED IN MEXICO
SC.26-03-2021
SHNMDL: XBR65X81CH_B
OBPN: 5-013-153-12(1)
Elbrd:J.E. / 1P