 


SHARPER IMAGE®

S'MORES MAKER

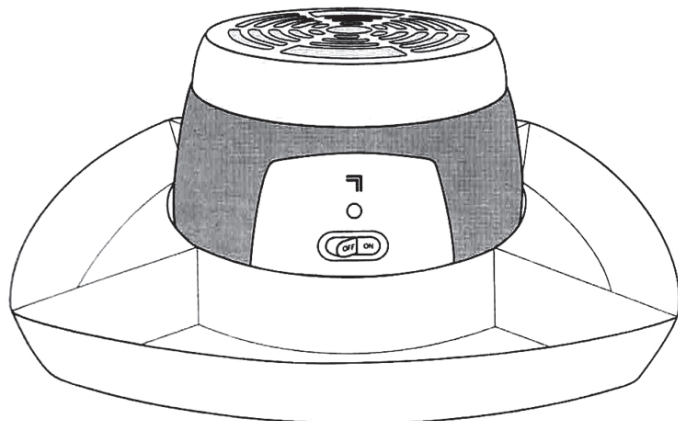

8 1 4 1 0 0 3 2 1

IMPORTANT SAFEGUARDS PLEASE READ BEFORE USE.

- Not a children's item. Adult supervision required at all times during use.
- Remove all packaging from the appliance and heat element.
- Do not leave the appliance unattended during use. Power off and unplug when not in use and before cleaning.
- To protect against electric shock, do not immerse appliance, power cord, or plug in water or other liquids.
- This appliance becomes very hot during use. To avoid burns and injury, never touch hot surfaces of this appliance. Handle with caution.
- After use, allow this appliance to cool completely for a minimum of 20 minutes before cleaning or disassembling.
- Flip the power switch to the off position before unplugging.
- To unplug, hold directly by the plug and pull from the outlet. Do not carry by, pull, or yank the power cord.
- Do not let the power cord hang over the edges of tables or counters.
- Do not let the power cord contact hot surfaces such as gas burners, electric burners, radiators, or the appliance itself.
- Do not use with attachments of any kind other than those that may be included.
- This appliance has no user-serviceable parts. Do not attempt to repair or service.
- Use this appliance only for its intended purpose.
- For indoor use only.
- For household use only.
- Thoroughly inspect all parts before each use. If the parts appear worn, frayed, splintered, cracked, or broken in any manner, discontinue use and discard immediately.

SAVE THESE INSTRUCTIONS.

COOKING SAFETY

- Maintain at least 8 in. (20 cm) of clearance on all sides of the S'mores Maker during use. Do not use this appliance under cabinets or in tightly enclosed spaces.
- Set up in an area that is well ventilated. When powering on the S'mores Maker for the first time, it is normal for the heat element to produce some smoke or odor for approximately 2 minutes. Wait for it to dissipate before roasting your marshmallows.
- Do not overcook marshmallows. Cooking time varies with marshmallow size but typically takes no more than 2 minutes. Overcooked marshmallows may melt and fall onto the grill or heat element.
- If a marshmallow or other food falls onto the grill or heat element, immediately power off the S'mores Maker. Wait at least 20 minutes until all hot surfaces have cooled completely and then clean the appliance. Never continue cooking with any debris on the grill or heat element.


POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

- A short power-supply cord (or detachable power-supply cord) is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- If a longer detachable power-supply cord or extension cord is used:
 - The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
 - If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord.

WHAT YOU GET


- | | |
|-------------------------|-----------------|
| a. S'mores Maker | d. Serving tray |
| b. Grill | e. Skewers |
| c. Heat-element bracket | |

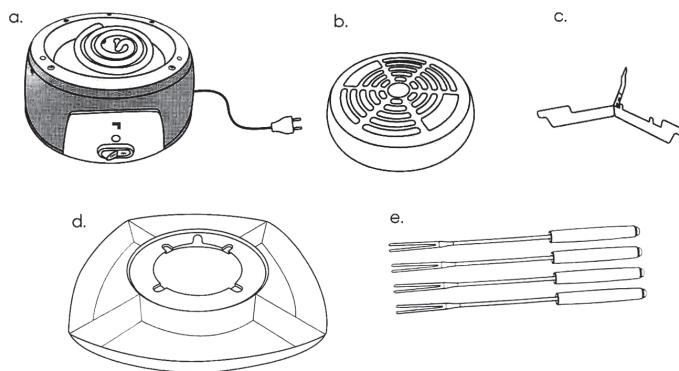

Accessory type and quantity may vary depending on the model.

ASSEMBLY


1. Place the serving tray on a stable, flat surface near a wall outlet, making sure there is at least 8 in. (20 cm) of room on all sides of the serving tray. Do not plug in the power cord yet.
2. Place the S'mores Maker on the serving tray, pressing the power cord into the notch in the serving tray.

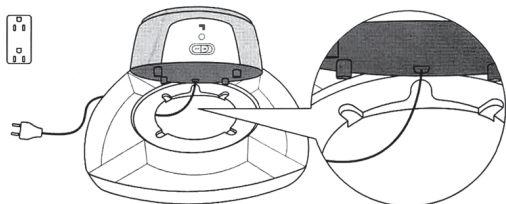

3. With the grill off the S'mores Maker, slide the heat-element bracket under the coil element.



4. Line up the coil element with the slots in the heat-element bracket.

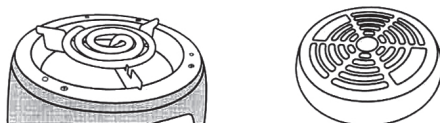

5. Make sure the coil element is fully seated and secured. Place the grill on top of the S'mores Maker ensuring the coil does not touch the grill.
6. Now, plug the power cord into a 120V indoor wall outlet.

HOW TO USE


1. Fill the serving tray with graham crackers, cookies, chocolate bars, marshmallows, etc.
2. Flip the power switch to the on position.
3. Preheat the S'mores Maker for 5 to 10 minutes. The coil element will start to glow red. While waiting, you can prepare your graham crackers or cookies with chocolate and add marshmallows to the end of skewers.

Note: When powering on the S'mores Maker for the first time, it is normal for the coil element to produce some smoke or odor for approximately 2 minutes. Wait for it to dissipate.

4. Hold the skewer by the handle and rotate your marshmallow over the grill until roasted to your satisfaction. Be careful not to overcook your marshmallow.



5. Place the roasted marshmallow on the prepared graham cracker or cookie and use another graham cracker or cookie to pull it off the skewer. Enjoy your delicious s'mores!

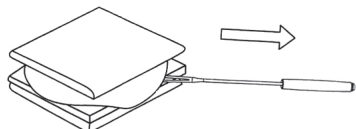

6. When finished roasting marshmallows, flip the power switch to the off position and then unplug the S'mores Maker.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

The appliances are not intended to be operated by means of an external timer or separate remote-control system.



CAUTION: Hot surfaces

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments.
- Farm houses.
- By clients in hotels, motels and other residential type environments.

CARE INSTRUCTIONS

1. Make sure the S'mores Maker is unplugged and cooled completely for a minimum of 20 minutes before cleaning.
2. Remove the grill from the S'mores Maker.
3. Wipe the outside of the S'mores Maker with a damp, non-abrasive cloth. Do not submerge in liquid.
4. Lift the unattached end of the coil element and wipe clean the drip tray. Do not attempt to remove the coil element.
5. Hand wash the grill, serving tray, and skewers.
6. Dry completely before storage.

Important: The S'mores Maker, grill, serving tray and skewers are not dishwasher safe.

The images shown in this manual are for illustrative purposes only and may be subject to change.

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

PRINTED IN MEXICO / Elbrd: J.E. / SC: 11/11/2024_2P
OBPN: 1006340 / SHNMDL: 1017145_B ADD:1006340_B

8 1 4 1 0 0 3 2 1

