




SHARPER IMAGE®

CORDLESS VACUUM STICK AND HANDHELD COMBO

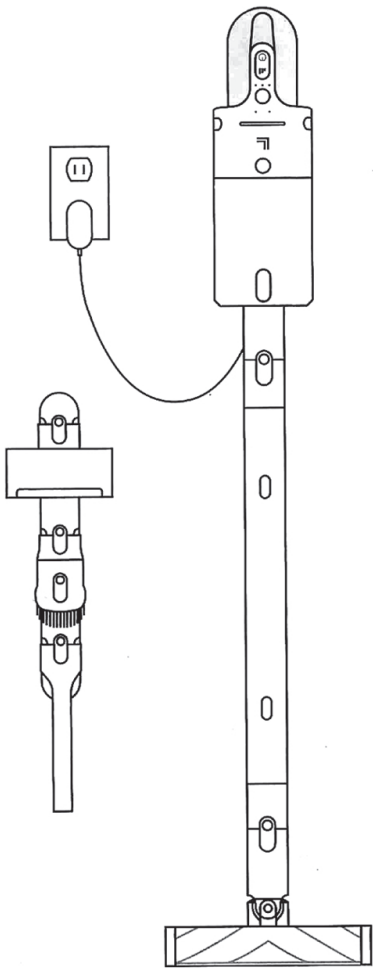

Please read all instructions and warnings prior to use. Keep this manual as it contains important information for future reference.

The images shown in this manual are for illustrative purposes only and may be subject to change.

⚠ DANGER: ELECTRIC APPLIANCE

To reduce the risk of injury, fire, electric shock, and property damage resulting from improper use of this appliance, carefully observe the following instructions.

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ BEFORE USE

- Not a children's item. Keep out of the reach of children.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Place charging base on flat and stable surfaces only.
- Do not carry the charging base by pulling the power adapter cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Keep nozzle away from hair, face, fingers, uncovered feet, and loose clothing.
- Stop use immediately if any opening becomes blocked or if airflow becomes reduced.
- Do not put any object into openings. Keep free of dust, lint, hair, and anything that may reduce air flow.
- Do not leave vacuum unattended while powered on.
- Unplug from outlet when not in charging and before servicing.
- Do not use to vacuum any liquids.
- Do not immerse or expose vacuum to water or other liquids.
- Use caution when vacuuming while standing on stairs, ladders, or step stools. Always ensure you have stable footing and proper balance when using the vacuum. Do not overextend your reach.
- Do not use to vacuum hard or sharp objects that could damage the vacuum, including but not limited to glass, nails, screws, or coins.
- Do not use to vacuum drywall dust or ashes.
- Do not use to vacuum flammable, combustible, toxic, corrosive, or other dangerous materials, chemicals, or solutions, including but not limited to lighter fluid, match heads, chlorine bleach, drain cleaner, etc.
- Do not use to vacuum smoking or burning objects such as hot coals, embers, cigarettes, or matches. Such as gasoline, or use in areas where they may be present.
- Do not insert any objects into any openings in the vacuum other than the included attachments as directed. Use only to vacuum loose debris.
- Do not expose vacuum to high temperatures or heated surfaces. Keep power cord away from hot surfaces.
- Do not use, charge, or store the vacuum below 37.4°F (3°C) or above 104°F (40°C). Ensure the vacuum is at room temperature during use.
- Do not use vacuum with attachments of any kind other than those that may be included. Use only as described in this manual.
- Use only with dustbin and filter properly in place. Replace in original positions after routine maintenance.
- Make sure filter is completely dry after routine maintenance.
- The vacuum includes no serviceable parts. Do not modify or attempt to repair.
- For indoor use only.
- Thoroughly inspect all parts before every use. If any parts appear worn, frayed, splintered, cracked, or broken in any manner, discontinue use and discard immediately.
- Do not use with damaged adapter cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, contact a service center.
- Do not handle power adapter or appliance with wet hands.
- Always turn off this appliance before connecting or disconnecting motorized nozzle.
- For household use only.
- To reduce risk of injury, user must read instruction manual.
- To reduce the risk of electric shock – Do not use outdoor or wet surfaces.
- For use only with K36D270100U Charger.
- For use only with 1017310 battery pack.

⚠ RECHARGEABLE BATTERY WARNINGS

- This product contains batteries that are non-replaceable.
- There is a risk of fire and personal injury if battery is punctured, damaged, or misused. Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- Do not dismantle, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Rechargeable battery is only to be charged by an adult.
- A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Adult supervision is required while charging the battery.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts. In the event of such damage, chargers must not be used until the damage has been repaired.
- Recycle or dispose of battery according to federal, state, and local laws.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
- Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.
- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C (265°F) may cause explosion.
- Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the appliance or the battery pack except as indicated in the instructions for use and care.
- Keep these instructions for future reference.

IMPORTANT: MAINTAINING BATTERY HEALTH

- Your vacuum is designed with a lithium-ion battery pack for cordless convenience, increased vacuuming duration per charge, and frequent use and recharging.
- To maintain charge capacity and prevent battery damage, all lithium-ion batteries must be regularly used and recharged.
- All batteries naturally lose charge when not in use. If you will not be using the vacuum for an extended period, check the vacuum at least every 30 days to ensure the battery is at approximately 50% state of charge. Recharge as needed to maintain a 50% state of charge.
- IMPORTANT: Do NOT store the battery for an extended period with above 66% or below 33% state of charge. An incorrect state of charge during storage could irreparably damage the battery and may result in reduced charge capacity, inability to maintain charge, failure to recharge, or complete inoperability of the vacuum.
- For the health of the battery, always store the vacuum in a cool, dry place. The storage location should have a consistent temperature between 40°F and 70°F (5°C and 20°C) as well as a relative humidity at 70% or lower.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SAVE THESE INSTRUCTIONS

SPECIFICATIONS

Vacuum Cleaner

Model	1017173
Charging Voltage	21.6V
Rated Power	350W
Rated Voltage	21.6V
Battery Capacity	2500mAh
Dustbin Capacity	13.5 oz. (400 mL)

Power Adapter


Model	K36D270100U
Input	100~240~50/60HZ 0.9A
Output	27.0V 1.0A

Rechargeable Lithium-ion Battery pack


Battery model	1017310
Nominal Voltage	21.6VDC
Energy	54Wh
Nominal Capacity	2500mAh
Rated Capacity	54Wh

POWER


1. Plug the small end of the power adapter cord into the power input port on the back of the battery.
Plug the power adapter into a wall outlet.

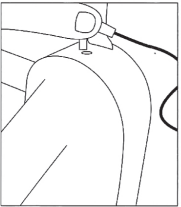

2. You can charge the battery while attached to the vacuum or separately. To remove the battery, place your thumb in the opening of the battery release, press down towards the bottom of the vacuum and then slide the battery off.

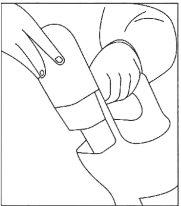

3. Wait for the battery to fully charge before first use. The power status light bar shows the current charge status during use and charging. It will fill with pulsing light as the vacuum charges and will blink white and then turn off when fully charged. It will turn red when power is low. Recharge the battery.

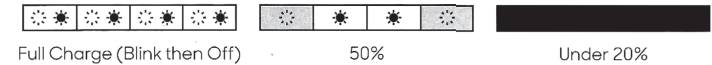


If the battery is being charged separately, the power status light on the battery will blink while charging and will turn off when fully charged.

CONTROLS


- A. Power Button
- B. Power Mode Status
- C. Floor Type Indicator
- D. Dustbin Quick-Empty Button
- E. Power Mode
- F. Floor Type Button
- G. Power Status
- H. Filter Access Button
- I. Attachment Release
- J. MagTools™ Attach Points
- K. Step to Release

1. Press the power button to power on the vacuum. Press the power button again to power off the vacuum.
2. Press the power mode button to cycle through 3 power mode suction levels – low, medium and high. The power mode status lights will indicate the intensity. For max battery life, vacuum using low power mode. Switch to medium or high power only as necessary for stubborn messes.
3. Press the floor type button to switch between carpet mode  and hardwood mode . Motorized brush speed is optimized for performance cleaning on the chosen floor type.

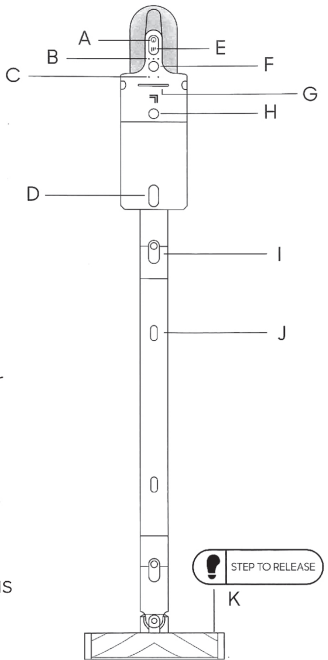


ACCESSORY INSTALLATION

- 1. To use the MagTools™ extension pole, line up the clip side of the pole with the vacuum and click into place.
- 2. To use the AirSweep™ floor brush and attachments, line up the clip side either directly with the vacuum or the end of the MagTools™ extension pole.
- 3. To remove the MagTools™ extension pole, AirSweep™ floor brush or other tools, press the attachment release on the clip and pull to separate.
- 4. Easily store or swap out the crevice tool, motorized pet hair tool and combination tool using the MagTools™ attach points found on the MagTools™ extension pole and MagTools™ accessory wall mount. Simply drop into place or pull free.

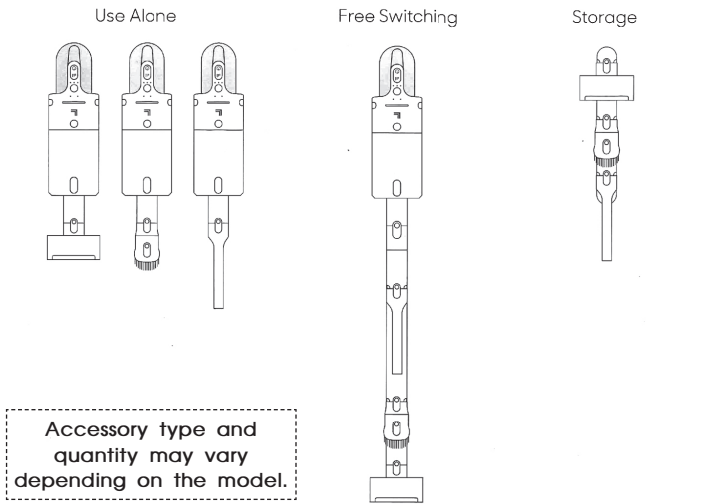

MOUNT INSTALLATION


- 1. Slide the back plates off the vacuum wall mount and MagTools™ accessory wall mount to access the screw holes in each.
- 2. Find an appropriate location for the vacuum wall mount within easy reach of a power outlet and at a height that the vacuum can be stored with the MagTools™ extension pole and AirSweep™ floor brush attached.
- 3. Using a screwdriver and the included mounting hardware, install the back plates for the vacuum wall mount and MagTools™ accessory wall mount.
- 4. Snap the front covers of both wall mounts onto the secure back plates.

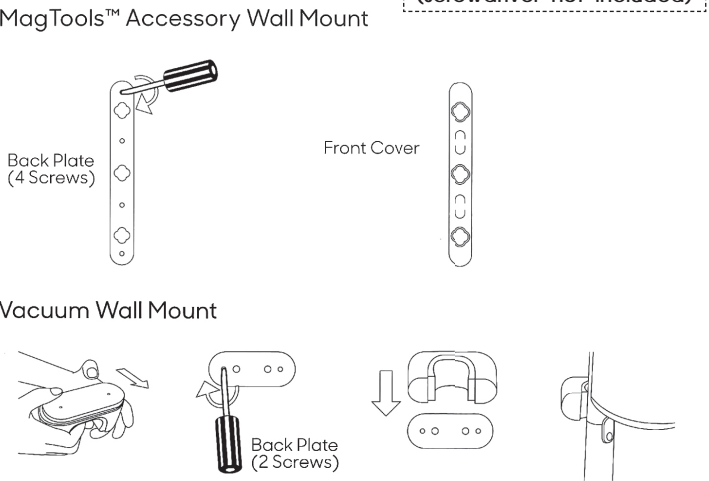

CARE INSTRUCTIONS



EMPTYING DUSTBIN

- 1. For optimum performance, regularly clean the dustbin and HEPA filter.
- 2. To empty the dustbin, power off the vacuum remove the pole and all accessories.
- 3. Hold the vacuum over a garbage can or waste bin. Press the dustbin.quick-empty button to open the dustbin.

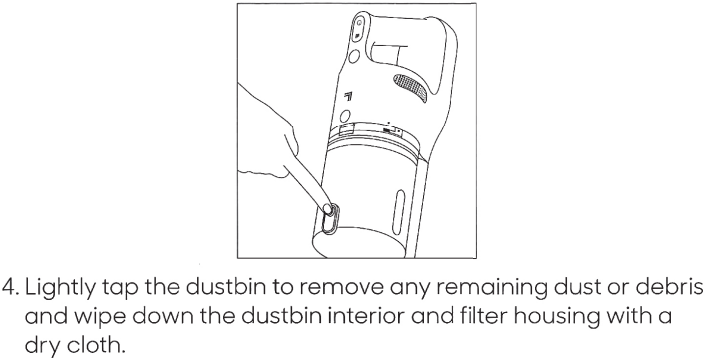

CLEANING HEPA FILTER


- 1. To access the HEPA filter, hold the vacuum securely by the handle and use your other hand to press the filter access button and twist the dustbin counterclockwise.
- 2. Lift the orange handle to remove the filter housing over a garbage can or waste bin and then pull the HEPA filter out of the filter housing by gently squeezing and pulling on the visible end.

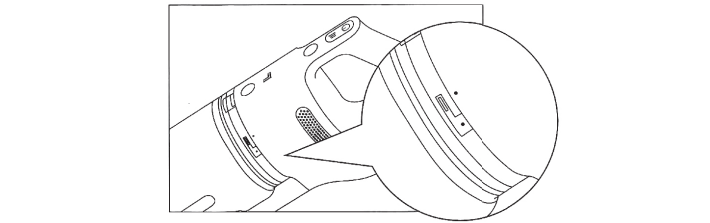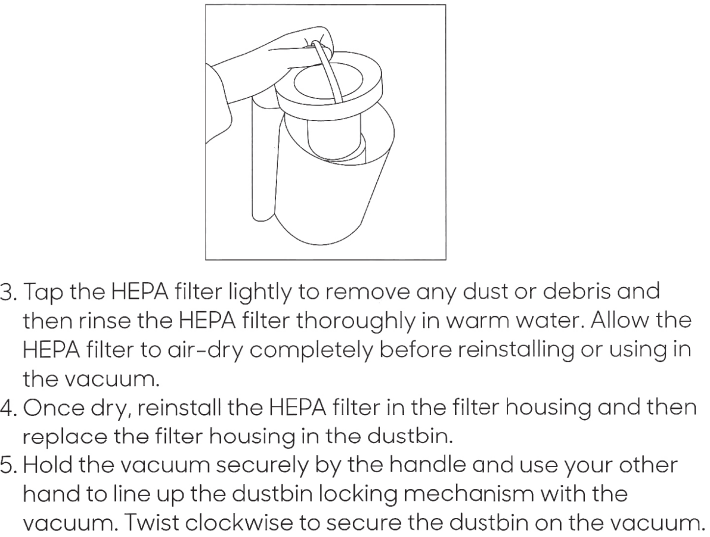

IMPORTANT: Do not use soap or other cleaning solutions on the HEPA filter. Never use the HEPA filter when damp or moist. Do not use the vacuum without the filter in place.


CLEANING AIRSWEEP™ FLOOR BRUSH

- 1. Twist the brush lock clockwise until the dot on the brush lock is aligned with the second dot on the brush housing.

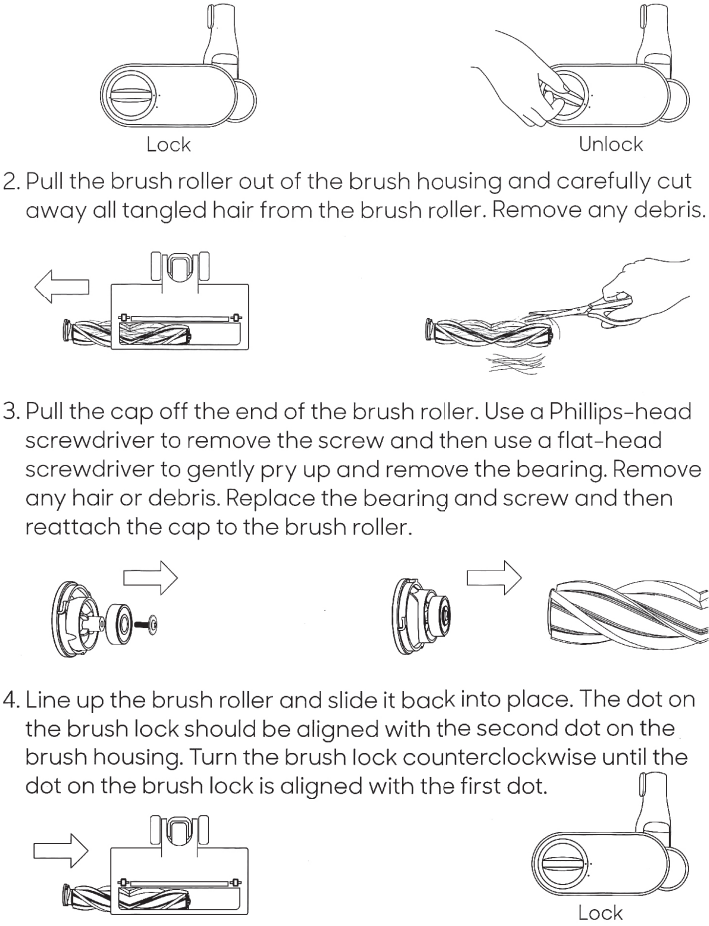

CLEANING MOTORIZED PET HAIR TOOL

- 1. Squeeze the brush release on the bottom of the motorized pet hair tool and then remove the brush roller from the brush housing.

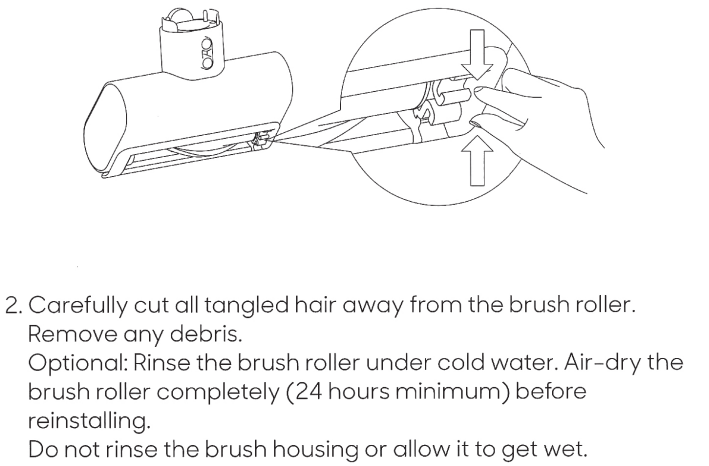


- 3. Line up the brush roller and click it back into place.

TROUBLESHOOTING


Problem	How to Fix
Weak suction or power mode status lights blink red.	1. Empty the dustbin. 2. Clean the HEPA filter. 3. Make sure the dustbin and HEPA filter are installed correctly.
Roller brush not spinning or makes strange noises.	1. Remove any hair wrapped around the brush or brush axel. You may need to use scissors to cut away tightly wrapped hair. 2. Make sure the dustbin and HEPA filter are installed correctly. 3. Detach the pole and reattach the brush directly to the vacuum without the pole. If the brush still does not work correctly, contact a service center.
Battery not holding a charge.	1. Make sure the vacuum is fully charged. 2. Make sure the charger is properly connected. 3. If the lights do not activate during charging, contact a service center.
Battery status red or blinking red.	Charge the battery.



SHARPER IMAGE NAME AND LOGOS (INCLUDING THE 77 LOGO, MAGTOOLS, POWERFLO TECHNOLOGY, AND AIRSWEEP) ARE TRADEMARKS OR REGISTERED TRADEMARKS.

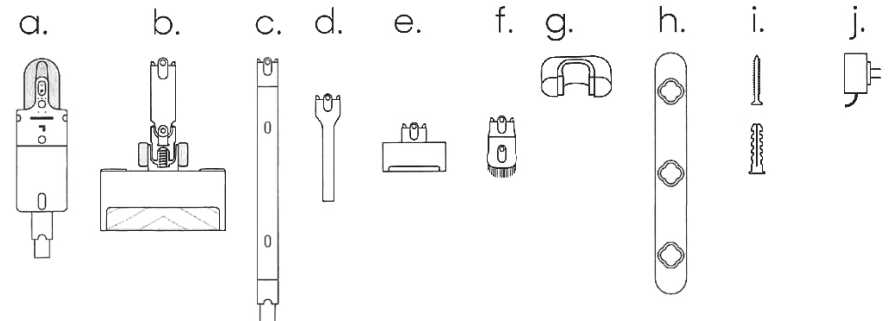


CONTROLS

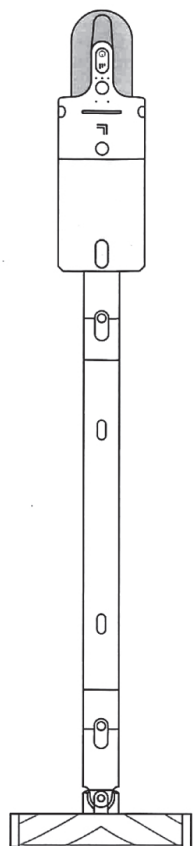


Floor Type
carpet | hardwood

Power Mode
low, medium, high


Power On/Off

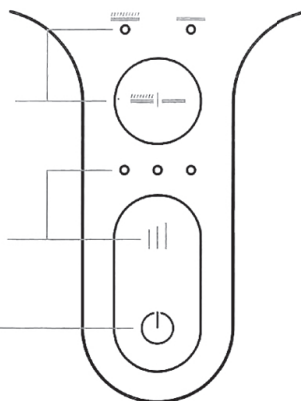

Dustbin Quick-Empty Button

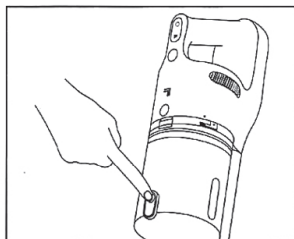

Filter Access Button

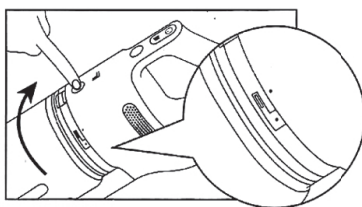

QUICK TIP

For max battery life, vacuum using low power mode. Switch to medium or high power only as necessary for stubborn messes.


NOTE: The images shown in this manual are for illustrative purposes only and may be subject to change, the actual descriptions of control panel and their locations may vary depending on the model.

CAUTIONS


Read all warnings and safety precautions in the included instruction manual before use.



Do not expose to water.



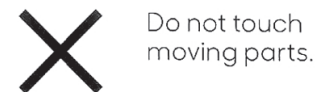


Do not touch moving parts.

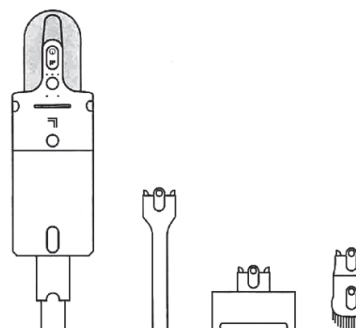

Do not vacuum flammable or sharp objects.

Keep vacuum and power cord away from hot surfaces.

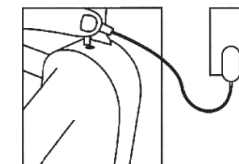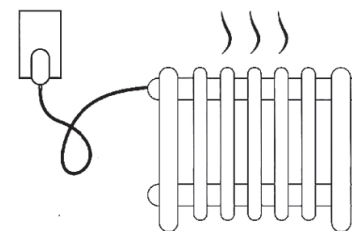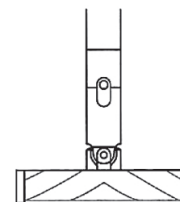

PRINTED IN MEXICO

Elbrd: J.M. / SC: 19-06-2025

OBPN: N/A / SHDML: 1017173_B

8 1 4 0 0 0 3 0 1

