



SHARPER IMAGE®

LUXURI TOWEL WARMER

HEATED COMFORT + AROMATHERAPY

CONGRATULATIONS ON YOUR NEW LUXURY TOWEL WARMER

Please read all instructions and warnings
prior to use.

Keep this manual as it contains important
information for future reference.

CARE INSTRUCTIONS

- After use, always leave the lid open. Allow towel warmer to cool down completely and then wipe away any interior condensation.
- To clean exterior, unplug and wipe with a damp cloth.
- Allow to dry fully before plugging in again.
- Do not submerge in water.
- Do not use detergent or soap when cleaning.

SAFETY WARNINGS: PLEASE READ BEFORE USE

- Not a children's item. Keep out of the reach of children.
- Do not touch interior surfaces of the towel warmer until cool. When powered on, surfaces become hot in as few as 3 minutes.
- Do not use attachments of any kind other than those that may be included.
- Do not leave this item unattended when it is plugged in.
- Always allow item to cool if it becomes too hot.
- Never touch the charging cable or ports with wet hands.
- Do not carry this item by the charging cable or lid.
- For indoor use only.
- Thoroughly inspect products before every use. If the product appears worn, frayed/splintered, cracked, or broken in any manner, discontinue use and discard immediately.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PRINTED IN MEXICO

SC:11-21-2024 / Elbrd: J.M

OBPN:N/A


SHNMDL: 1017220_B

8 1 4 1 0 0 3 2 5



CONTENTS

- Luxury Towel Warmer
- Diffuser disc

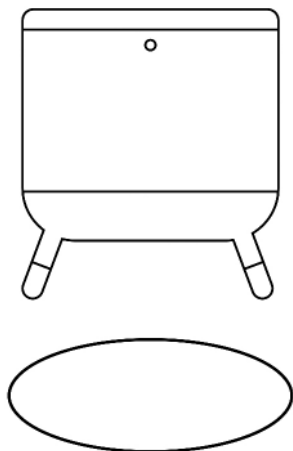

01

Unwrap the cord on the bottom of the towel warmer to the necessary length and lock cord in place.

Plug the cord into a grounded wall outlet.

02

Gently press down on the front of the lid to make it pop up and then lift the lid until fully open.

IMPORTANT: Do not force the lid open past its normal range. Doing so could cause product damage.

03

Fill the interior of the towel warmer with up to 3 bath towels, 2 bath sheets or 1 bathrobe.

Close the lid and press down gently until secured.

TIP: For faster warming, unfold or unroll towels before placing in the towel warmer. For fastest warming, heat a single towel at a time by draping it over the center divider.

04

Press the power button located on the front of the towel warmer.
The power button will illuminate when activated.

The towel warmer **lights will pulse** when warming starts. They will **quit pulsing and remain on** after 10 minutes to indicate your towel should be at the ideal temperature.

05

Wait 10 – 15 minutes for the towels to warm. Towels will continue warming for up to 45 minutes and then the towel warmer will automatically power off.

06

When ready for your hot towel, gently press down on the lid until it pops up and then lift the rest of the way.

Carefully remove your towel and wrap yourself in spa-like bliss.

STANDBY AND OFF

If the lid is lifted during heating, the towel warmer will enter standby mode (the power button will flash).

To turn off the towel warmer, press and hold the power button.

After use, always leave the lid open.

Allow towel warmer to cool down completely and then wipe away any interior condensation.

AROMATHERAPY (OPTIONAL)

Locate the diffuser basket inside the towel warmer and remove it by twisting it counterclockwise.

Add several drops of your preferred essential oil (not included) to a diffuser disc (included).

Insert the diffuser disc into the diffuser basket and reattach to the interior of the towel warmer.

Use the towel warmer as normal.

⚠ CAUTION: Do not touch interior surfaces of the towel warmer until cool.
When powered on, surfaces become hot in as few as 3 minutes..

· Accessory type and quantity may vary depending on the model.

· The images shown in this manual are for illustrative purposes only and may be subject to change.