



* LG LED TV applies LCD screen with LED backlights.

Please read this manual carefully before operating your set and retain it for future reference.

43UP710OZUF	65UP7560AUD	43UP7670PUC	65UP7670PUC	43UP8000PUA	65UP8000PUA
43UP7560AUD	70UP7070PUE	43UP7700PUB	65UP7700PUA	43UP8000PUR	65UP8000PUR
50UP710OZUF	70UP7170ZUC	50UP7670PUC	65UP7700PUB	50UP8000PUA	70UP8070PUA
50UP7560AUD	70UP7570AUD	50UP7700PUB	70UP7670PUB	50UP8000PUR	70UP8070PUR
55UP710OZUF	75UP7070PUD	55UP7670PUC	70UP7770PUB	55UP8000PUA	75UP8070PUA
55UP7560AUD	75UP7170ZUC	55UP7700PUB	75UP7670PUB	55UP8000PUR	75UP8070PUR
65UP710OZUF	75UP7570AUE	60UP7670PUB	75UP7770PUB	60UP8000PUA	82UP8770PUA
		60UP7700PUB		60UP8000PUR	86UP8770PUA

OWNER'S MANUAL

Safety and Reference

LED TV*

804106611A

Important Safety Instruction

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

By using this product, you agree that all disputes between you and LG arising out of or relating in any way to this product (including but not limited to warranty disputes) shall be resolved exclusively through binding arbitration on an individual basis. The terms of the arbitration agreement (including details on the procedure for resolving disputes) is available at www.lg.com/us/arbitration (USA) or www.lg.com/ca_en/arbitration (Canada).

Title

1 Warning! Safety instructions

2 Preparing

- Lifting and moving the TV
- Mounting on the Table
- Mounting to the Wall
- Antenna/Cable

3 Starting TV

- Turning on the TV
- Registering Magic Remote Control

4 Using Remote Control

- Using Magic Remote Control
- Using Remote Control

5 Connections

6 Troubleshooting

7 Specifications

- Open Source Software Notice
- Information
- Licenses

8 Regulatory

Before reading this manual

- Read this manual thoroughly before operating your TV, and keep it for future reference.
- On the website you can download the manual including installation, using, troubleshooting, specifications, license etc and view its contents on your PC or mobile device.

User Guide	For more information about this TV, read the USER GUIDE embedded in the product. To open the USER GUIDE (⊕) → (Ⓜ) → [Support] → [User Guide]
Optional Extras	- Optional extras can be changed or modified for quality improvement without any notification. Contact your dealer for buying these items. These devices work only with certain models. The model name or design may be changed due to the manufacture's circumstances or policies. - Magic Remote Control : MR21GA Check whether your TV model supports Bluetooth in the Wireless Module Specification to verify whether it can be used with the Magic Remote. - A cable to connect antennas and external devices must be purchased separately.
Note	- Product specifications or contents of this manual may be changed without prior notice due to upgrade of product functions. - The items supplied with your product may vary depending upon the model. - Image shown may differ from your TV.

1 Warning! Safety instructions



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.

The symbol is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the device.

WARNING: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

- TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES OR OTHER ITEMS WITH OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES.

Do not place the TV and/or remote control in the following environments:

- Keep the product away from direct sunlight.
- An area with high humidity such as a bathroom
- Near any heat source such as stoves and other devices that produce heat.
- Near kitchen counters or humidifiers where they can easily be exposed to steam or oil.
- An area exposed to rain or wind.
- Do not expose to dripping or splashing and do not place objects filled with liquids, such as vases, cups, etc. on or over the apparatus (e.g., on shelves above the unit).
- Near flammable objects such as gasoline or candles, or expose the TV to direct air conditioning.
- Do not install in excessively dusty places.

Otherwise, this may result in fire, electric shock, combustion/explosion, malfunction or product deformation.

Ventilation

- Install your TV where there is proper ventilation. Do not install in a confined space such as a bookcase.
- Do not install the product on a carpet or cushion.
- Do not block or cover the product with cloth or other materials while unit is plugged in.
- Take care not to touch the ventilation openings. When watching the TV for a long period, the ventilation openings may become hot.

- Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the device.

- Do not move the TV whilst the Power cord is plugged in.
- Do not use a damaged or loosely fitting power cord.
- Be sure to grasp the plug when unplugging the power cord. Do not pull on the power cord to unplug the TV.

Disconnecting the Device from the Main Power

- The power plug is the disconnecting device. In case of an emergency, the power plug must remain readily accessible.

- Do not let your children climb or cling onto the TV. Otherwise, the TV may fall over, which may cause serious injury.

Outdoor Antenna Grounding (Can differ by country):

- If an outdoor antenna is installed, follow the precautions below. An outdoor antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can come in contact with such power lines or circuits as death or serious injury can occur. Be sure the antenna system is grounded to provide some protection against voltage surges and built-up static charges.

Section 810 of the National Electrical Code (NEC) in the U.S.A. provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes and requirements for the grounding electrode. Antenna grounding according to the National Electrical Code, ANSI/NFPA 70

- Grounding** (Except for devices which are not grounded.)
 - TV with a three-prong grounded AC plug must be connected to a three-prong grounded AC outlet. Ensure that you connect the earth ground wire to prevent possible electric shock.

- Never touch this apparatus or antenna during a lightning storm. You may be electrocuted.
- Make sure the power cord is connected securely to the TV and wall socket if not secured damage to the Plug and socket may occur and in extreme cases a fire may break out.

- Do not insert metallic or inflammable objects into the product. If a foreign object is dropped into the product, unplug the power cord and contact the customer service.
- Do not touch the end of the power cord while it is plugged in. You may be electrocuted.

- If any of the following occur, unplug the product immediately and contact a service center.**
 - The product has been damaged.
 - If water or another substance enters the product (like an AC adapter, power cord, or TV).
 - If you smell smoke or other odors coming from the TV
 - When lightning storms or when unused for long periods of time.

- Even the TV is turned off by remote control or button, AC power source is connected to the unit if not unplugged in.

- Do not use high voltage electrical equipment near the TV (e.g., a bug zapper). This may result in product malfunction.
- Do not attempt to modify this product in any way without written authorization from LG Electronics. Accidental fire or electric shock can occur. Contact your local customer service for service or repair. Unauthorized modification could void the user's authority to operate this product.

- Use only an authorized attachments / accessories approved by LG Electronics. Otherwise, this may result in fire, electric shock, malfunction, or product damage.
- Never disassemble the AC adapter or power cord. This may result in fire or electric shock.

- Handle the adapter carefully to avoid dropping or striking it. An impact could damage the adapter.

- To reduce the risk of fire or electrical shock, do not touch the TV with wet hands. If the power cord prongs are wet or covered with dust, dry the power plug completely or wipe dust off.

- Batteries**
 - Store the accessories (battery, etc.) in a safe location out of the reach of children.
 - Do not short circuit, disassemble, or allow the batteries to overheat. Do not dispose of batteries in a fire. Batteries should not be exposed to excessive heat.

- Caution: Risk of fire or explosion if the battery is replaced by an incorrect type.

Moving

- When moving, make sure the product is turned off, unplugged, and all cables have been removed. It may take 2 or more people to carry larger TVs. Do not press or put stress on the front panel of the TV. Otherwise, this may result in product damage, fire hazard or injury.

- Keep the packing anti-moisture material or vinyl packing out of the reach of children.

- Do not allow an impact shock, any objects to fall into the product, and do not drop anything onto the screen.

- Do not press strongly upon the panel with a hand or a sharp object such as a nail, pencil, or pen, or make a scratch on it. It may cause damage to screen.

Cleaning

- When cleaning, unplug the power cord and wipe gently with a soft/dry cloth. Do not spray water or other liquids directly on the TV. Do not clean your TV with chemicals including glass cleaner, any type of air freshener, insecticide, lubricants, wax (car, industrial), abrasive, thinner, benzene, alcohol etc., which can damage the product and/or its panel. Otherwise, this may result in electric shock or product damage.

2 Preparing

Lifting and moving the TV

When moving or lifting the TV, read the following to prevent the TV from being scratched or damaged and for safe transportation regardless of its type and size.

- It is recommended to move the TV in the box or packing material that the TV originally came in.

- Before moving or lifting the TV, disconnect the power cord and all cables.

- When holding the TV, the screen should face away from you to avoid damage.

- Hold the top and bottom of the TV frame firmly. Make sure not to hold the transparent part, speaker, or speaker grille area.

- Use at least two people to move a large TV.

- When transporting the TV by hand, hold the TV as shown in the following illustration.

- When transporting the TV, do not expose the TV to jolts or excessive vibration.

- When transporting the TV, keep the TV upright; never turn the TV on its side or tilt towards the left or right.

 
- When handling the TV, be careful not to damage the protruding buttons.



- Avoid touching the screen at all times, as this may result in damage to the screen.
- Do not place the product on the floor with its front facing down without padding. Failure to do so may result in damage to the screen.
- When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.

Mounting on the Table


- Lift and tilt the TV into its upright position on a table.
 - Leave a minimum of 10 cm (4 inches) space from the wall for proper ventilation.
- Connect the power cord to a wall outlet.

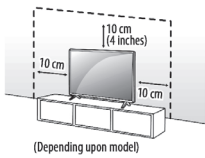

- Do not apply foreign substances (oils, lubricants, etc.) to the screw parts when assembling the product.
- (Doing so may damage the product.)
- If you install the TV on a stand, you need to take actions to prevent the product from overturning. Otherwise, the product may fall over, which may cause injury.
- Do not use any unapproved items to ensure the safety and product life span.
- Any damage or injuries caused by using unapproved items are not covered by the warranty.
- Make sure that the screws are fastened tightly. (If they are not fastened securely enough, the TV may tilt forward after being installed.)
- Do not fasten the screws with excessive force otherwise they may strip and become loose.


Securing TV to the Wall

 - Insert and tighten the eye-bolts, or TV brackets and bolts on the back of the TV.
 - If there are bolts inserted at the eye-bolts position, remove the bolts first.
 - Mount the wall brackets with the bolts to the wall. Match the location of the wall bracket and the eye-bolts on the rear of the TV.
 - Connect the eye-bolts and wall brackets tightly with a sturdy rope. Make sure to keep the rope horizontal with the flat surface.
 - Use a platform or cabinet that is strong and large enough to support the TV securely.
- Brackets, bolts and ropes are not provided. You can obtain additional accessories from your local dealer.

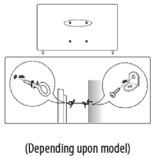


Mounting to the Wall

 An optional wall mount can be used with your LG Television. Consult with your local dealer for a wall mount that supports the VESA standard used by your TV model. Carefully attach the wall mount bracket at the rear of the TV. Install the wall mount bracket on a solid wall perpendicular to the floor. If you are attaching the TV to other building materials, please contact qualified personnel to install the wall mount. Detailed instructions will be included with the wall mount. We recommend that you use an LG brand wall mount. The LG wall mount is easy to adjust or to connect the cables. When you do not use LG's wall mount bracket, use a wall mount bracket where the device is adequately secured to the wall with enough space to allow connectivity to external devices. If you are using a non-adjustable mount, attach the mount to the wall. Attach the cables to the TV first, then attach the TV to the mount.

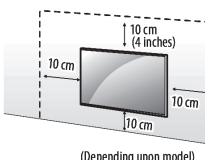

- Remove the stand before installing the TV on a wall mount by performing the stand attachment in reverse.
- For more information of screws and wall mount bracket, refer to the Separate purchase.
- If you intend to mount the product to a wall, attach VESA standard mounting interface (optional parts) to the back of the product. When you install the set to use the wall mounting bracket (optional parts), fix it carefully so as not to drop.
- When mounting a TV on the wall, make sure not to install the TV by hanging the power and signal cables on the back of the TV.
- Do not install this product on a wall if it could be exposed to oil or oil mist. This may damage the product and cause it to fall.
- When installing the wall mounting bracket, it is recommended to cover the stand hole using tape, in order to prevent the influx of dust and insects. (Depending upon model).

 

Wall Mounting Bracket

(Depending upon model)

Make sure to use screws and wall mount bracket that meet the VESA standard. Standard dimensions for the wall mount kits are described in the following table.

	43/50UP76*	55/60/65UP76*
	43/50UP77*	55/60/65UP77*
	43/50UP80*	55/60/65UP80*
Model		
Screws distance (A) (mm)	200	300
Standard screw	M6	M6
Number of screws	2	2
Wall mount bracket (Optional)	WB21LMB	WB21LMB

	43/50UP71*	55UP71*	65UP71*		
	43/50UP75*	55UP75*	65UP75*	70/75UP76*	70/75UP70*
	43/50UP76*	55UP76*	60/65UP76*	70/75UP77*	70/75UP71*
	43/50UP77*	55UP77*	60/65UP77*	70/75UP80*	70/75UP75*
	43/50UP80*	55UP80*	60/65UP80*		82/86UP87*
Model					
VESA (A x B) (mm)	200 x 200	300 x 300	300 x 300	400 x 400	600 x 400
Standard screw	M6	M6	M6	M6	M8
Number of screws	4	4	4	4	4
Wall mount bracket	LSW240B MSW240	OLW480B MSW240	OLW480B	LSW440B	LSW640B

Antenna/Cable

Connect an antenna, cable, or cable box to watch TV while referring to the following. The illustrations may differ from the actual items and an RF cable is optional.

- Make sure not to bend the copper wire of the RF cable.
- Complete all connections between devices, and then connect the power cord to the power outlet to prevent damage to your TV.
- Use a signal splitter to use 2 TVs or more.

- DTV Audio Supported Codec: MPEG, Dolby Digital

- This TV cannot receive Ultra HD (3840 x 2160 pixels) broadcasts directly because the related standards have not been confirmed.

3 Starting TV

Turning on the TV

You can simply operate the TV functions, using the button.



Using button

	Power On (Press)	1) All running apps will close.
	Power Off* (Press and Hold)	2) You can access and adjust the menu by pressing the button when TV is on.
	Menu Control (Press*)	3) You can use the function when you access menu control.
	Menu Selection (Press and Hold*)	

- Note**
 - When the TV is turned on for the first time after being shipped from the factory, initialization of the TV may take approximately one minute.

Adjusting the menu

When the TV is turned on, press the (O) button one time. You can adjust the Menu items using the button.

	Turns the power off.		Changes the input source.
	Adjusts the volume level.		Scrolls through the saved channels.

Note

- Your TV's OSD (On Screen Display) may differ slightly from that shown in this manual.
- The available menus and options may differ from the input source or product model that you are using.
- New features may be added to this TV in the future.
- The device must be easily accessed to a location outlet near the access. Some devices are not made by turning on / off button, turning off the device and unplugging the power cord.

Inserting the battery (bateries not supplied)

(Depending on model)

- When the message [Magic Remote battery is low. Please change the battery.] is displayed, replace the batteries. To install batteries, open the battery cover, replace batteries (1.5 V AA) matching the (+) and (-) ends to the label inside the compartment, and close the battery cover. Be sure to point the magic remote toward the remote control sensor on the TV. To remove the batteries, perform the installation actions in reverse. This remote uses infrared light. When in use, it should be pointed in the direction of the TV's remote sensor.
- To install batteries, open the battery cover, replace batteries (1.5 V AAA) matching the (+) and (-) ends to the label inside the compartment, and close the battery cover. To remove the batteries, perform the installation actions in reverse. This remote uses infrared light. When in use, it should be pointed in the direction of the TV's remote sensor.



- Do not mix new batteries with old batteries. This may cause the batteries to overheat and leak.
- Failure to match the correct polarities of the battery may cause the battery to burst or leak, resulting in fire, personal injury, or ambient pollution.
- This apparatus uses batteries. In your community there might be regulations that require you to dispose of these batteries properly due to environmental considerations. Please contact your local authorities for disposal or recycling information.
- Batteries inside or inside the product shall not be exposed to excessive heat such as sunshine, fire or the like.

Registering Magic Remote Control

How to register the Magic Remote Control

To use the Magic Remote, first pair it with your TV.

- Put batteries into the Magic Remote and turn the TV on.
 - Point the Magic Remote at your TV and press the (O) **Wheel (OK)** on the remote control.
- * If the TV fails to register the Magic Remote, try again after turning the TV off and back on.

How to deregister the Magic Remote Control

Press the (Back) and (Home) buttons at the same time, for five seconds, to unpair the Magic Remote with your TV.

- Press and hold the (Home) and (Q.Settings) buttons for more than 5 seconds to disconnect and re-register the Magic Remote at the same time.



- It is recommended that an Access Point (AP) be located more than 0.2 m (0.65 ft) away from the TV. If the AP is installed closer than 0.2 m (0.65 ft), the Magic remote control may not perform as expected due to frequency interference.

4 Using Remote Control

Using Magic Remote Control

(Depending upon model)

The descriptions in this manual are based on the buttons on the remote control. Please read this manual carefully and use the TV correctly.

	Power Turns the TV on or off.		Number buttons Enters numbers.
	(Dash) Inserts a — between numbers such as 2-1 and 2-2.		More actions Displays more remote control functions.
	Accesses the saved channel list.		SAP (Secondary Audio Program) feature can also be enabled by pressing the ... button.
GUIDE	Accesses the [Guide].		Mute Mutes all sounds.
	Accesses the [Edit Quick Access]. (Edit Quick Access) is a feature that allows you to enter a specified app or Live TV directly by pressing and holding the number buttons.		Mute Accesses the [Accessibility] menu.
	Channel buttons Scrolls through the saved channels.		Voice recognition Network connection is required to use the voice recognition function.
	Home Accesses the Home menu.		Check for recommended content. (Some recommended services may not be available in some countries.)
	Home Launches the last used apps		Voice recognition Speak while pressing and holding the button to use the voice recognition feature.
	Input Changes the input source.		Up/Down/Left/Right Press the up, down, left or right button to scroll the menu. If you press (O) buttons while the pointer is in use, the pointer will disappear from the screen and Magic Remote will operate like a general remote control. To display the pointer on the screen again, shake Magic Remote to the left and right.
	Input Accesses the [Home Dashboard].		Q. Settings Accesses the Quick Settings.
	Wheel (OK) Press the center of (O) button to select a menu. You can change channels by using (O) button.		Back Returns to the previous level.
	Wheel (OK) Accesses the [Magic Explorer]. You can run the [Magic Explorer] feature when the pointer color is changed to purple. If watching a program, press and hold down the pointer onto the video. When using [TV Guide], [Settings], [Sports Alert], or [Art Gallery], press and hold down on the text.		Red button Runs the record function.
			Streaming Service buttons Connects to the Video Streaming Service.



 
804006647

50UP7670PUC 55UP7700PUB 65UP7670PUC
50UP7700PUB 60UP7670PUB 65UP7700PUA
55UP7670PUC 60UP7700PUB 65UP7700PUB

Please read this manual carefully before operating your unit and retain for future reference.




50/55UP76*
50/55UP77*

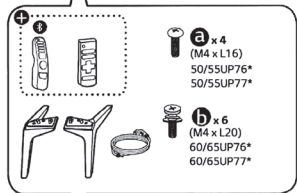


60/65UP76*
60/65UP77*

1

 
2

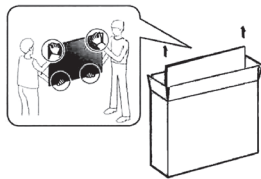

3

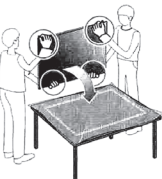 

2

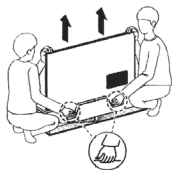 


3




1



 2

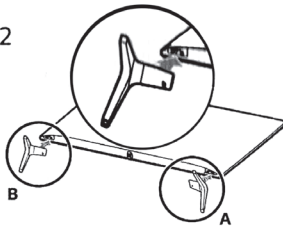


3

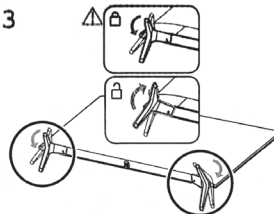 


4-A

 50/55UP76*
50/55UP77*

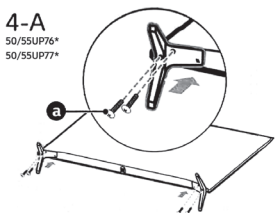


4-B


 
60/65UP76*
60/65UP77*

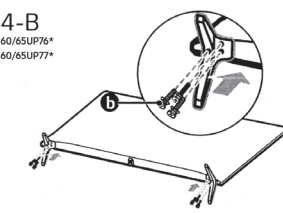

5

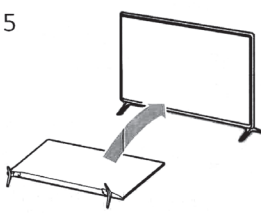 

  
The cables mentioned in this guide is not supplied with your unit.

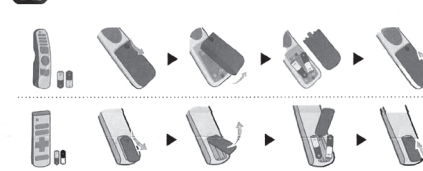

The remote control vary depend of model: The buttons on the remote control may have a different name or location than the remote control shows in this manual.



 A, B, C, D, E : mm (Inches)
F, G : kg (lbs)

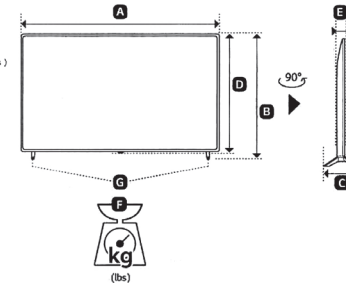

Read Safety and Reference.
Easy Setup Guide
Please read this manual carefully before operating your set and retain it for future reference.

+ : Depending upon model

MODELS	A		B		C		D		E		F		F-G		Power consumption
50UP7670PUC	1,121	1,121	708	708	235	235	651	651	57.1	57.1	11.8	11.8	11.7	11.7	130 W
	(44.1)	(44.1)	(27.8)	(27.8)	(9.2)	(9.2)	(25.6)	(25.6)	(2.2)	(2.2)	(26.0)	(26.0)	(25.7)	(25.7)	
50UP7700PUB	1,121	1,121	713	713	231	231	651	651	57.1	57.1	11.9	11.9	11.7	11.7	130 W
	(44.1)	(44.1)	(28.0)	(28.0)	(9.0)	(9.0)	(25.6)	(25.6)	(2.2)	(2.2)	(26.2)	(26.2)	(25.7)	(25.7)	
55UP7670PUC	1,235	1,235	772	772	235	235	715	715	57.5	57.5	14.1	14.1	14.0	14.0	135 W
	(48.6)	(48.6)	(30.3)	(30.3)	(9.2)	(9.2)	(28.1)	(28.1)	(2.2)	(2.2)	(31.0)	(31.0)	(30.8)	(30.8)	
55UP7700PUB	1,235	1,235	776	776	231	231	715	715	57.5	57.5	14.2	14.2	14.0	14.0	135 W
	(48.6)	(48.6)	(30.5)	(30.5)	(9.0)	(9.0)	(28.1)	(28.1)	(2.2)	(2.2)	(31.3)	(31.3)	(30.8)	(30.8)	
60UP7670PUC	1,356	1,356	852	852	269	269	783	783	57.5	57.5	17.4	17.4	17.1	17.1	150 W
	(53.3)	(53.3)	(33.0)	(33.0)	(11.3)	(11.3)	(33.8)	(33.8)	(2.2)	(2.2)	(41.0)	(41.0)	(40.8)	(40.8)	
60UP7700PUB	1,454	1,454	900	900	255	255	838	838	57.7	57.7	21.7	21.7	21.5	21.5	185 W
	(57.2)	(57.2)	(35.4)	(35.4)	(10.0)	(10.0)	(32.9)	(32.9)	(2.2)	(2.2)	(47.8)	(47.8)	(47.3)	(47.3)	
65UP7670PUA	1,454	1,454	906	906	269	269	838	838	57.7	57.7	21.8	21.8	21.5	21.5	185 W
	(57.2)	(57.2)	(35.6)	(35.6)	(10.5)	(10.5)	(32.9)	(32.9)	(2.2)	(2.2)	(47.8)	(47.8)	(47.3)	(47.3)	
Power requirement:										AC 120V - 50 / 60 Hz					

804006647



PRINTED IN MEXICO / SC:08-11-2021 / 1P / Elbrd:J.E.
OBPN: *MFL717564782106 REV01* / SHNMDL: 50UP7670PUC

Note: The image shown here is for illustrative purposes only and may be subject to change. The actual number of ports and their locations may vary depending on the model.