



BL770 series Mega Kitchen System®

“Recipe book is
not included”

OWNER’S GUIDE

804107989

CAUTION: BE CAREFUL Contains loose, SHARP blades IMPORTANT SAFETY INSTRUCTIONS For Household Use Only

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS BEFORE USING YOUR NINJA® PROFESSIONAL BLENDER.

POLARIZED PLUG

WARNING: To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. **DO NOT modify the plug in any way.**



WARNING:

 
TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- To protect against electrical shock, do not submerge the appliance or allow the power cord to come into contact with water or any other liquid.
- DO NOT** allow young children to operate the appliance or use as a toy. Close supervision is necessary when any appliance is used by or near children.
- Never leave an appliance unattended when in use.
- Turn the appliance Off and remove the power cord from the electrical outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the electrical outlet. Never pull from the power cord.
- DO NOT** abuse the power cord. Never carry the appliance by the power cord or yank it to disconnect from electrical outlet; instead grasp the plug and pull to disconnect.
- DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions, has been dropped or damaged in any manner. This appliance has no serviceable parts.
- DO NOT** let the power cord hang over the edge of table or counter or touch hot surfaces such as the stove.
- Always use appliance on a dry, level surface.
- Keep hands, hair, clothing, as well as utensils out of container while processing to reduce the risk of severe injury to persons or damage to the appliance. A scraper may be used but only when the appliance is not running.
- CAUTION:** Blade assembly is sharp, handle with care. When handling the blade assembly, always hold by the shaft.
- Avoid contact with moving parts.
- DO NOT attempt to sharpen blades.**
- DO NOT** use the appliance if blade assembly is bent or damaged.
- To reduce risk of injury, never place the blade assembly on base without pitcher or bowl properly attached.
- DO NOT** operate this appliance on or near any hot surfaces (such as gas or electric burner or in a heated oven).
- The use of attachments or accessories including canning jars, not recommended by the manufacturer may result in fire, electric shock or personal injury.
- DO NOT** remove the container from the motor base while the appliance is in operation.
- To reduce the risk of injury, **NEVER** operate the appliance without the lid in place; **DO NOT** try to defeat the interlock mechanism; make sure that the attachment is properly installed before operating the appliance.
- DO NOT** expose containers to extreme temperature changes.
- CAUTION: DO NOT BLEND HOT LIQUIDS.**
- DO NOT** overfill.
- Extreme caution must be used when moving an appliance containing hot food, water or other liquids.
- DO NOT** operate the appliance empty.
- To reduce the risk of burns, always allow the appliance to cool before taking off parts and before cleaning.
- If the appliance overheats, a thermal switch will become activated and shut off the motor. To reset, unplug the appliance and let it cool down for approximately 15 minutes before using again.
- In the event that the unit overloads, the control panel lights will flash and the unit will shut down. Unplug the unit and wait 15 minutes to reset.
- THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.** Do not use this appliance for anything other than its intended use. Do not use outdoors.
- The maximum rating is based on the 6-Blade Assembly (pitcher) that drives the greatest power and other recommended attachments may draw significantly less power or current.

▲WARNING: Extension cords are not recommended for use with this product.

SAVE THESE INSTRUCTIONS

Getting To Know Your *Ninja*® Mega Kitchen System

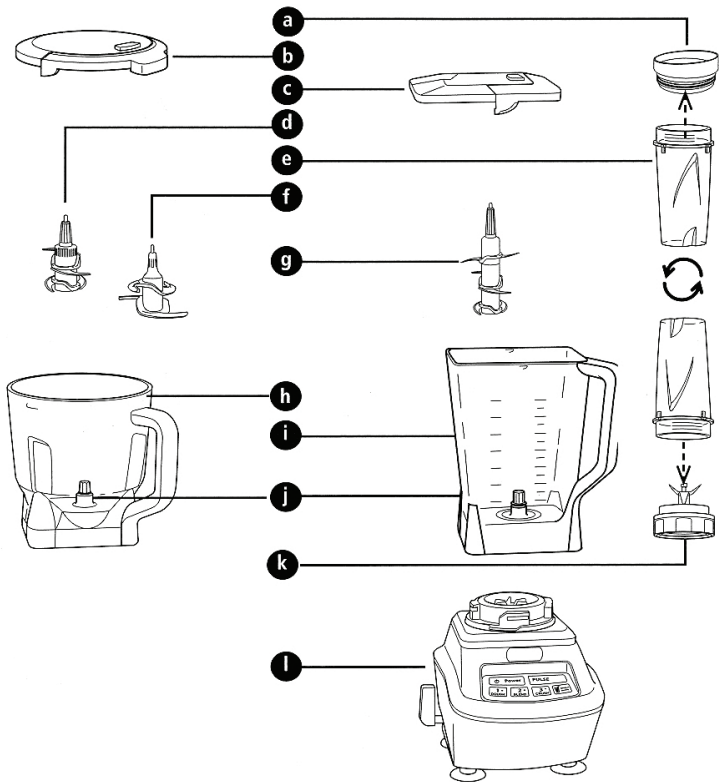

NOTE: Accessories may vary depending on the model. The images shown here are for illustrative purposes only and may be subject to change.

- | | |
|-----------------------------------|--------------------------|
| a To-Go Single Serve Lid (x2) | h 64 oz. Bowl |
| b Bowl Lid with Locking Handle | i 72 oz. Pitcher |
| c Pitcher Lid with Locking Handle | j Gear Shaft |
| d 4-Blade Assembly (bowl) | k Single Serve Blade |
| e Single Serve Drink Cup (x2) | l Motor Base |
| f Dough Blade (bowl) | m Power Cord (not shown) |
| g 6-Blade Assembly (pitcher) | |

NOTE: Attachments are not interchangeable.

Using the Ninja® Mega Kitchen System

PLEASE KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE APPLIANCE:

▲ IMPORTANT: Never add ingredients into the container before placing the attachment in first.

▲ IMPORTANT: Attachments are not interchangeable.

▲ CAUTION: Blades are sharp! Use extreme caution when handling the blade assemblies. Always hold them by the shaft.

▲ IMPORTANT: DO NOT attempt to operate the appliance without the lid on.

▲ IMPORTANT: Never run the appliance empty.

▲ CAUTION: Use extreme caution when processing hot foods to avoid accidental scalding or burns. Do not process food that is hotter than 180°F/82°C. Allow very hot ingredients to cool before processing.

▲ WARNING: Secure the appliance while in use by pressing down on the lid with one hand.

▲ CAUTION: Never remove the container while the appliance is still running.

 
▲ WARNING: Never leave the appliance unattended while in use.

BEFORE FIRST USE

- Remove all packaging material and labels from the appliance.
- Wash the lids, pitcher, bowl, single serve cups and attachments in warm, soapy water with a soft cloth. **Use caution when washing the blade assemblies as the blades are very sharp.**
- Rinse and dry thoroughly.
- The pitcher, bowl, single serve cups, lids and attachments, are all dishwasher safe. It is recommended that the lids and attachments be placed on the top rack. Ensure that the attachments are removed from the containers before placing in the dishwasher.
- Wipe the motor base clean with a damp cloth.

Assembly and Use for the 72 oz. Pitcher

Assembly

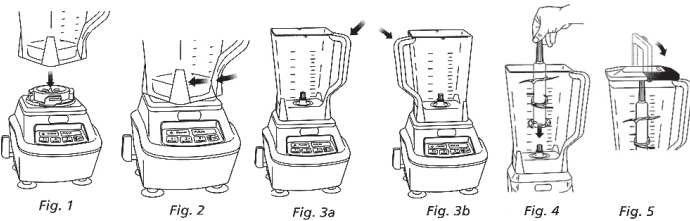

▲ IMPORTANT: Make sure that the motor base is plugged in for use.

- Place the motor base on a clean, dry, level surface such as a counter or table top.
- Align and lower the Pitcher onto the motor base. (Fig. 1) Handle should be aligned slightly to the right of the “LOCK” symbol on the motor base.
- Rotate the pitcher clockwise as far as it will go to lock in place. (Fig. 2)
- The pitcher can be placed on the motor base two ways; the handle can be on the front right corner or the front left corner. (Fig. 3a, Fig. 3b)
- Holding the 6-Blade Assembly by the top of the shaft, place it onto the drive gear inside the pitcher. Ensure that the attachment is seated properly and is standing upright. (Fig. 4) **NOTE:** The blade will fit loosely on the drive gear.
- Add the ingredients to the pitcher, making sure that they do not exceed the highest measured marking line on the side of the pitcher. **NOTE:** If you need to add additional ingredients while the appliance is processing, open the pour spout cap and pour the ingredients in through the opening.
- Plug the power cord into the electrical outlet and press the power button (⏻). **NOTE: As a safety feature, the power button (⏻) will flash and the motor will not work if the pitcher and lid are not installed correctly. When the pitcher and lid are installed properly, the power button (⏻) will be solid, indicating that the appliance is ready for use.**
- Holding the lid by the handle in the upright position, place it on top of the pitcher aligning the arrow (➡) located on the lid with the arrow (⬆) located on the pitcher’s handle. (Fig. 5) Press the handle down until you hear a click.

▲ WARNING: Never leave the appliance unattended while in use.

USE

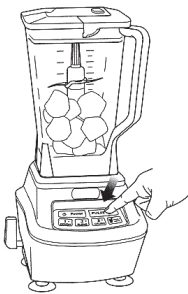 


Fig. 6

REMOVAL

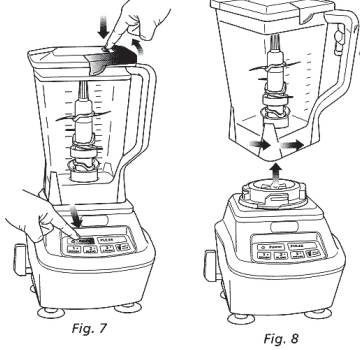 


Fig. 7

Fig. 8

- Select the speed that best suits your needs. (Fig. 6) **NOTE:** Pulse ingredients for even chopping by pressing down in short intervals.
- When you have reached your desired consistency, stop the appliance by pressing the power button (⏻) and wait for the attachment to stop turning. (Fig. 7)
- To remove the lid, press the release button on the lid, pull the lid handle up to a 90° angle and lift the lid off. Turn the pitcher counter clockwise and then lift off the base. (Fig. 7, Fig. 8)
- ▲ CAUTION:** Never insert your hands in the pitcher as the blades are sharp. Always use a spatula to dislodge food that has stuck to the sides of the pitcher.
- Depending on the consistency of the contents in the container, open the pour spout cap and use the spout to empty liquid contents. For thicker consistencies, remove the lid and attachment carefully (by its shaft), then empty contents from the container.
- Make sure that the unit is unplugged when not in use.

Assembly and Use for the Single Serve Cup

▲ WARNING: Never leave the appliance unattended while in use.

ASSEMBLY

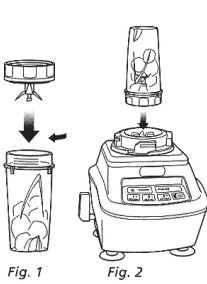 


Fig. 1

Fig. 2

USE



Fig. 3

Fig. 4

REMOVAL

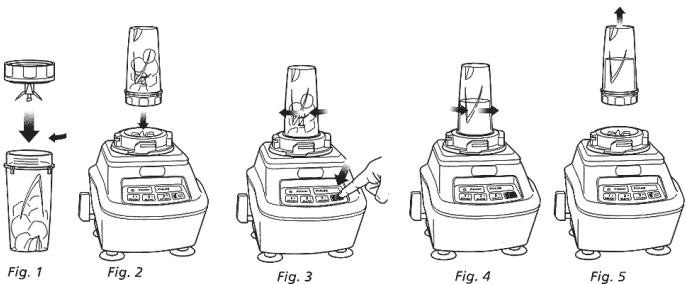 


Fig. 5

💡 For best results, use short “PULSES”... Practice makes perfect!!

▲ IMPORTANT: Make sure that the motor base is plugged in for use.

- Place the motor base on a clean, dry, level surface such as a counter or table top.
- Add ingredients to the single serve cup.
- Place the single serve blade onto the cup and screw it tightly until you have a good seal. (Fig. 1)
- Turn the single serve cup upside down and place it onto the motor base, aligning the tabs on the cup with the motor base. Turn the single serve cup clockwise. (Fig. 2) Turn the power button on, the single serve button will illuminate.
- Press down on the Single Serve button in short intervals to activate. (Fig. 3)
- Once you have reached your desired consistency, turn the power button off. Turn the single serve cup counter clockwise and pull straight up to remove. (Fig. 4) (Fig. 5) **NOTE:** Do not overfill! To avoid spilling, do not add ingredients past the “Max” fill line.
- Turn the cup upright and remove the single serve blade by twisting the blade assembly clockwise.
- Place the To-Go drinking lid onto the single serve drink cup, twist to seal and enjoy!
- Make sure that the motor base is unplugged when not in use.

Assembly and Use for the 64 oz. Bowl

▲ WARNING: Never leave the appliance unattended while in use.

ASSEMBLY

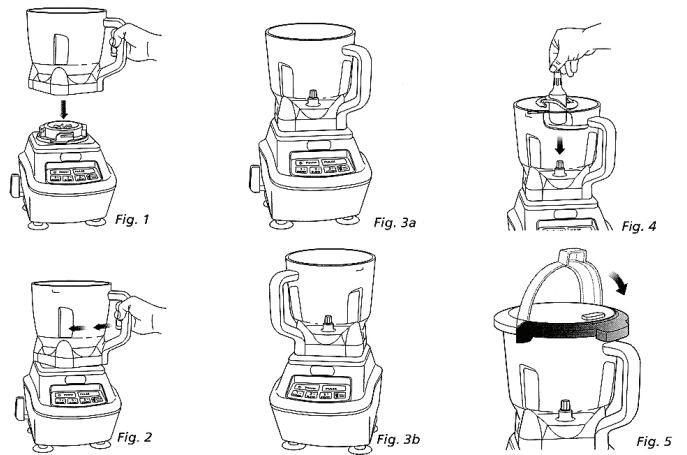 


Fig. 1

Fig. 3a

Fig. 4

Fig. 2

Fig. 3b

Fig. 5

▲ IMPORTANT: Make sure that the motor base is plugged in for use.

- Place the motor base on a clean, dry, level surface such as a counter or table top.
- Align and lower the Bowl onto the motor base. (Fig. 1) Handle should be aligned slightly to the right of the “LOCK” symbol on the motor base.
- Rotate the bowl clockwise as far as it will go to lock in place. (Fig. 2)
- The bowl can be placed on the motor base two ways; the handle can be on the front right corner or the front left corner. (Fig. 3a, Fig. 3b)
- Holding the desired blade by the top of the shaft, place it onto the drive gear inside the bowl. Ensure that the attachment is seated properly and is standing upright. (Fig. 4) **NOTE:** The blade will fit loosely on the drive gear.
- Add the ingredients to the bowl, making sure that they do not exceed the highest measured marking line on the side of the bowl.
- Plug the power cord into the electrical outlet and press the power button (⏻). **NOTE: As a safety feature, the power button (⏻) will flash and the motor will not work if the bowl and lid are not installed correctly. When the bowl and lid are installed properly, the power button (⏻) will be solid, indicating that the appliance is ready for use.**
- Holding the lid by the handle in the upright position, place it on top of the bowl aligning the arrow (➡) located on the lid with the arrow (⬆) located on the bowl’s handle. (Fig. 5) Press the handle down until you hear a click.
- ▲ NOTE:** The 64 oz. bowl is not intended for blending drinks. Do not overfill.

