

Shark

CYCLONE™

 
814100191C

CH701 SERIES



FEATURES

- A Air-Intake Nozzle
- B Dust Cup Release Button
- C Filter
- D Charging Indicator Light
- E On/Off Switch
- F Vacuum Body
- G USB-C Charger
- H Upholstery Tool
- I Crevice Tool*

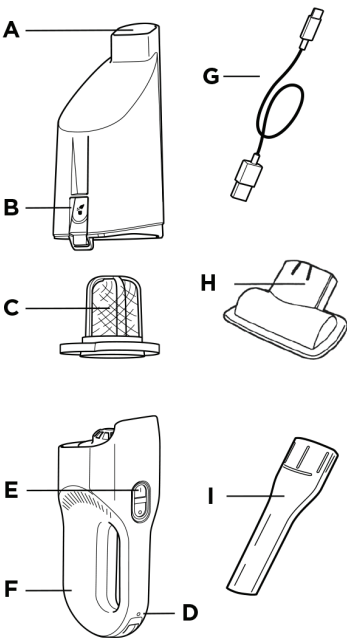

Accessory type and quantity may vary depending on the model.

The images shown in this manual are for illustrative purposes only and may be subject to change.

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS

 **WARNING:** TO REDUCE THE RISK OF INJURY, USER MUST READ INSTRUCTION MANUAL • HOUSEHOLD USE ONLY

WARNING

To reduce the risk of injury, fire, electric shock, and property damage resulting from improper use of the appliance, carefully observe the following instructions. This unit contains electrical connections and moving parts that potentially present risk to the user.

POWER SUPPLY, CHARGING ADAPTER, AND VACUUM CONTAIN ELECTRICAL CONNECTIONS. WHEN USING AN ELECTRICAL APPLIANCE, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

- There are **NO** serviceable parts.
- DO NOT** use to vacuum any liquids.
- DO NOT** immerse in water or other liquids.
- If vacuum is damaged, discontinue use.
- To avoid fire, explosion, or injury, inspect vacuum and charging dock for any damage before use. **DO NOT** use damaged vacuum or charging dock.
- DO NOT** use outdoors or on wet surfaces. Use only on dry surfaces.
- If vacuum cleaner is not working as it should, or has been dropped, damaged, left outdoors, or immersed in water, contact a service center.
- DO NOT** handle charger or vacuum cleaner with wet hands.
- DO NOT** leave vacuum cleaner unattended while powered on.
- Keep vacuum away from heated surfaces.
- Always turn off vacuum before connecting charging adapter.
- DO NOT** incinerate appliance, even if it is severely damaged, as lithium-ion battery may explode in a fire.
- Use only with Listed/Certified Information Technology (Computer) Equipment, Listed/Certified ITE Power Supply, or Listed Class 2 Power Unit.

GENERAL USE

- DO NOT** carry the charger by the cord or yank to disconnect from an outlet; instead grasp the plug and pull to disconnect.
- Keep charger cord away from heated surfaces.
- Use only as described in this manual.
- Keep your work area well lit.
- To avoid unintentional starting, always turn off the vacuum cleaner before picking it up or carrying it, and before attaching or detaching the charger, dust cup, filter, or any accessories.
- DO NOT** put any objects into openings.
- DO NOT** use if any opening is blocked; keep free of dust, lint, hair, or anything that may reduce airflow.
- DO NOT** use without dust cup and filter in place.
- Persons with reduced physical, sensory, or mental capabilities may only use the vacuum with supervision or prior safety instruction and an understanding of the hazards involved. Children may not clean or maintain the vacuum

- without supervision. This vacuum is not a toy.
- DO NOT** use if airflow is restricted; if the air paths become blocked, turn off the vacuum cleaner. Clear all obstructions and power on again.
- Keep nozzle away from hair, face, fingers, uncovered feet, or loose clothing.
- Only use manufacturer's recommended attachments.
- DO NOT** charge at temperatures below 50°F (10°C) or above 104°F (40°C). Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Store the appliance indoors. **DO NOT** use or store it below 37.4°F (3°C). Ensure the appliance is at room temperature before operating.

DUST CUP/FILTER/ACCESSORIES

 
Before turning on the vacuum:

- Make sure filter is thoroughly dry after routine cleaning.
 - Make sure dust cup and filter are in place after routine maintenance.
 - Make sure accessories are free of blockages and keep openings away from face and body.
 - Use only Shark brand filters and accessories.
- #### GENERAL CLEANING
- DO NOT** vacuum up hard or sharp objects such as glass, nails, screws, or coins that could damage the vacuum cleaner.
 - DO NOT** vacuum up drywall dust, fireplace ash, or embers.
 - DO NOT** use as an attachment to power tools for dust collection.
 - DO NOT** vacuum up smoking or burning objects such as hot coals, cigarette butts, or matches.
 - DO NOT** vacuum up flammable or combustible materials (e.g., lighter fluid, gasoline, or kerosene) or use vacuum in areas where they may be present.
 - DO NOT** vacuum up toxic solutions (e.g., chlorine bleach, ammonia, or drain cleaner).
 - DO NOT** use in an enclosed space where vapors are present from paint, paint thinner, moth-proofing substances, flammable dust, or other explosive or toxic materials.
 - DO NOT** immerse vacuum cleaner in water or other liquids.
 - Use extra care when cleaning on stairs.


LITHIUM-ION BATTERY

- The battery is the power source for the appliance. **DO NOT** carry the appliance with your finger on the power button. **DO NOT** charge appliance with the power on.
- Charge only with USB-C connection. Using unapproved sources may cause risk.
- Use appliance only with included lithium-ion battery. Use of any other battery may create a risk of injury and fire.
- Under abusive conditions, liquid may be ejected from the battery. Avoid contact with liquid, as it may cause irritation or burns. If contact occurs, flush with water. If liquid contacts eyes, seek medical help.
- Store the appliance indoors. To maintain battery life, **DO NOT** use or store battery at temperatures below 37.4°F (3°C) or above 104°F (40°C).
- DO NOT** expose appliance to fire or temperature above 266°F (130°C) as it may cause explosion.
- There are **NO** serviceable parts. To ensure safety, **DO NOT** modify or attempt to repair the appliance.
- DO NOT** use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.

CHARGING YOUR SHARK® VACUUM

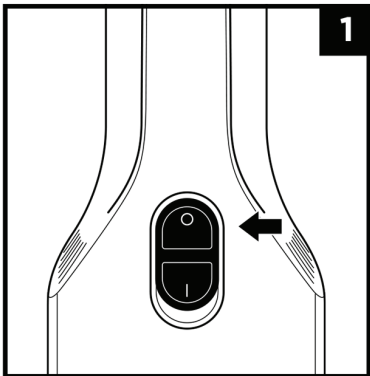



 
- Make sure to switch the unit into the "O" position to power off before charging.

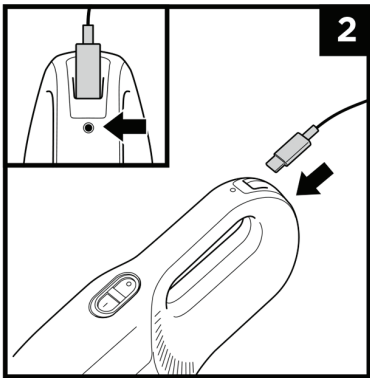

- Plug the USB-C end of the charging cord into the port on the handle. Plug the USB end of the charging cord into a compatible USB outlet cube or adaptor (not included) and plug into a wall outlet.

NOTE: Lithium-ion battery takes approximately 6 hours to charge completely.

   USING YOUR SHARK® VACUUM

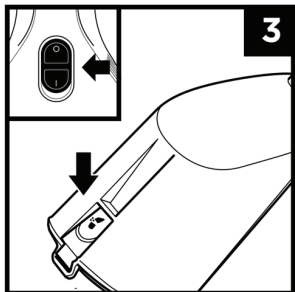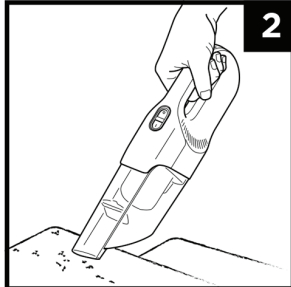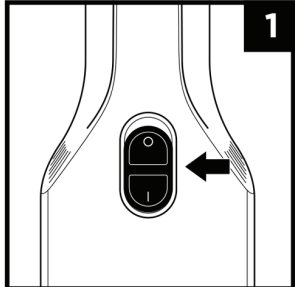

- Slide the switch into "I" position to power on.
- Run the nozzle over the surface to be cleaned.
- To empty the dust cup, first slide the switch into "O" position to power off. Then press the dust cup release button on the back of the hand vac and pull off the dust cup.
- Remove the filter from the dust cup by pulling the tab in the center and then empty the debris into the trash.
- Once debris is emptied, place the filter back in place and reattach the dust cup.

REFURBISHED PRODUCT LIMITED NINETY DAYS WARRANTY

The **Refurbished Product Service Center** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of NINETY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the **Refurbished Product Service Center** will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center
9043 Siempre Viva Rd Suite 110/120, San Diego
CA, 92154

WARRANTY REPAIR INFORMATION

If you need service on your unit and this product requires repair during the 90 days warranty period; please go to **www.ConsumerService-Refurbish.com** or call the **Refurbished Product Service Center** at 562-946-3531 to obtain the required return authorization (RA) number. Pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt and a letter describing the problem. Send the unit freight prepaid and insured to:

Refurbished Product Service Center,
Att: Customer Service Department 9043 Siempre
Viva Rd Suite 110/120, San Diego CA, 92154

Your unit will be promptly repaired and returned to you. We will refuse to accept delivery of the returned unit unless the assigned RA number appears on the outside of the shipping carton.

Owner's Information
(Keep for your permanent records)

NAME: _____

ADDRESS: _____

CITY: _____

STATE: _____

ZIP CODE: _____

PHONE: _____

 
E-MAIL: _____

MODEL: _____

SERIAL NO.: _____

ACCESSORIES

INSERTION AND REMOVAL

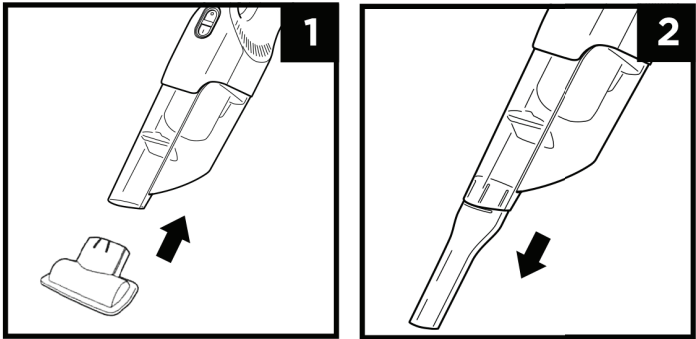

1. To install an accessory, align it with the nozzle, then slide it on.
2. To remove an accessory, slide it straight off the nozzle.

TROUBLESHOOTING

Problem	Solution
The vacuum will not operate	Battery needs to be recharged. Lithium-ion battery takes approximately 6 hours to charge completely. Try using a different electrical outlet to charge.
Vacuum will not pick up or suction is weak	Dust cup is full. Empty the dust cup. The filter needs to be cleaned or replaced. Vacuum needs to be recharged.
Dust is escaping from the vacuum	Empty the dust cup. The filter may be installed incorrectly. Remove the filter, then reinstall it correctly. Check the filter for holes or punctures. The filter will need to be replaced if there is a hole or puncture. An obstruction may be blocking the dust cup lid, keeping it from closing correctly. Clear any obstructions and ensure the lid is completely closed.

BATTERY INDICATOR

Pulsing Light	Low Battery	If the power switch is in the (I) position but the power doesn't turn on and the battery indicator light on the hand vac is pulsing, this means the battery power is too low. Slide the power switch to the (O) position and charge the battery before using the vacuum.
Pulsing Light (while plugged in)	Vacuum Charging	To charge the vacuum, connect charging cord to unit and plug into wall outlet. The light will turn off when the unit is fully charged.
No Light	Fully Charged	When the vacuum is fully charged, the indicator light will turn off. (It takes approximately 6 hours for a full charge).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1 Reorient or relocate the receiving antenna.
- 2 Increase the separation between the equipment and receiver.
- 3 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4 Consult the dealer or an experienced radio/TV technician for help.

 
This Device complies with part 15 of the FCC rules. Operation is subject to the following conditions:

- 1 This device may not cause harmful interference.
- 2 This device must accept any interference received, including interference that may cause undesired operation.


Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

MAINTENANCE


CLEANING THE DUST CUP

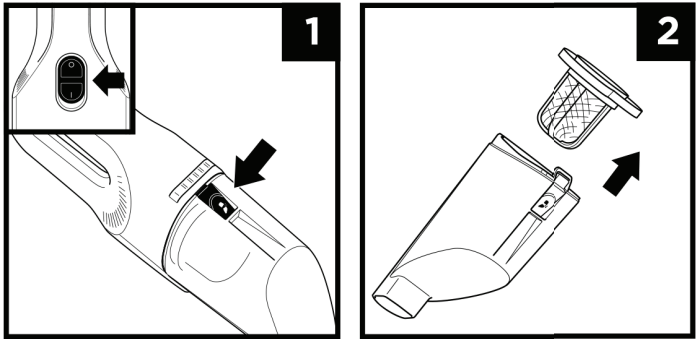

 1. Slide the switch to the "O" position to power off. Press the dust cup release button and pull out the dust cup.
2. Carefully take the filter frame out of the dust cup and remove the filter.

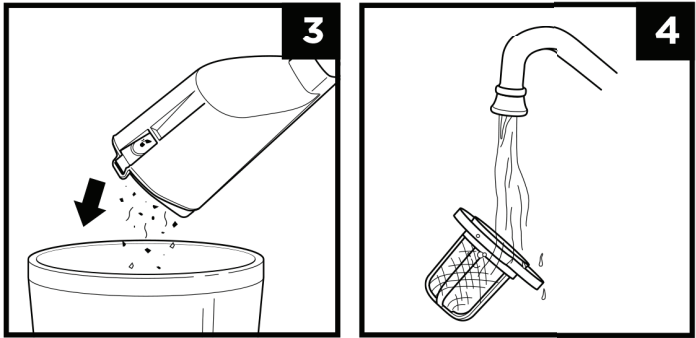

 3. Empty the dust cup into the trash.
4. Hand-rinse the filter in cold water and let it air-dry for at least 24 hours before reinstalling. Air-dry only. **DO NOT** use a hair dryer or clothes dryer.

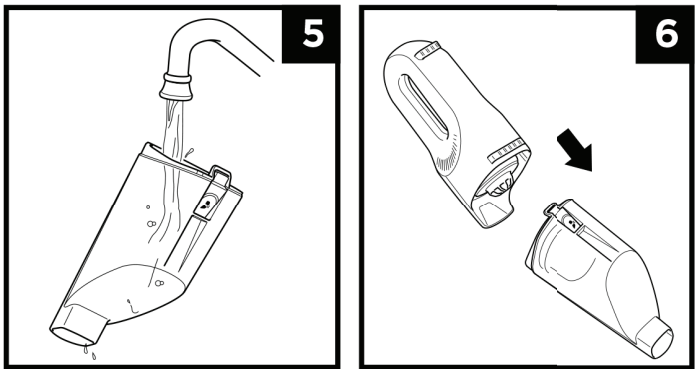

5. To clean the interior of the dust cup, rinse it with water. Place it on its side with the lid open to air-dry for at least 24-48 hours before reinstalling.
6. When the filter is dry, reinstall into the dust cup, then reattach the dust cup to the main body.

DO NOT wash any parts or accessories in a dishwasher.

NOTE: For best results, replace the filter every 6 to 9 months.

The images shown in this manual are for illustrative purposes only and may be subject to change.

BATTERY REMOVAL AND DISPOSAL

This product uses a rechargeable and reusable lithium-ion battery. When the battery no longer holds a charge, it should be removed from the vacuum and recycled. **DO NOT** incinerate or compost the battery.

When your lithium-ion battery needs to be replaced, dispose of it or recycle it in accordance with local ordinances or regulations. In some areas, it is illegal to place spent lithium-ion batteries in the trash or in a municipal solid waste stream. Return spent battery to an authorized recycling center or to retailer for recycling. Contact your local recycling center for information on where to drop off the spent battery.

For more information on battery removal for disposal, please visit sharkclean.com/batterysupport



The RBRC™ (Rechargeable Battery Recycling Corporation) seal on the lithium-ion battery indicates that the costs to recycle the battery at the end of its useful life have already been paid by SharkNinja. In some areas, it is illegal to place spent lithium-ion batteries in the trash or municipal solid waste stream and the RBRC program provides an environmentally conscious alternative.

RBRC, in cooperation with SharkNinja and other battery users, has established programs in the United States and Canada to facilitate the collection of spent lithium-ion batteries. Help protect our environment and conserve natural resources by returning the spent lithium-ion battery to an authorized SharkNinja service center or to your local retailer for recycling. You may also contact your local recycling center for information on where to drop off the spent battery, or call 1-800-798-7398.



SHARK is a registered trademark of SharkNinja Operating LLC.
PETEXTRACT and SHARK CYCLONE are trademarks of SharkNinja Operating LLC.
RBRC is a trademark of Rechargeable Battery Recycling Corporation.

This product may be covered by one or more U.S. patents. See sharkninja.com/patents for more information.

Illustrations may differ from actual product.

TECHNICAL SPECIFICATIONS

CH700 Series: 7.2V==

Charging Adapter part number:
XCHRGCH700

NOTE : In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process.
For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

PRINTED IN MEXICO

Elbrd: J.M. / SC: 20-03-2025

OBPN: N/A / SHDML: CH701_E2GB

814100191C

