

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS BEFORE USE • FOR HOUSEHOLD USE ONLY

	Read and review instructions for operation and use.
	Indicates the presence of a hazard that can cause personal injury, death, or substantial property damage if the warning included with this symbol is ignored.
	For indoor and household use only.
When using electrical appliances, basic safety precautions should always be followed, including the following:	

WARNING
To reduce the risk of injury, fire, electrical shock, or property damage, basic safety precautions must always be followed, including the following numbered warnings and subsequent instructions. Do not use appliance for other than intended use.

- Read all instructions prior to using the appliance and its accessories.
- Carefully observe and follow all warnings and instructions. This unit contains electrical connections and moving parts that potentially present risk to the user.
- DO NOT** submerge the motor base or control panel in water or other liquids.
- DO NOT** spray motor base or control panel with any liquid. Take inventory of all contents to ensure you have all parts needed to properly and safely operate your appliance.
- Always make sure pulp spout is securely in place before motor is turned on. **DO NOT** unfasten parts while juicer is in operation.
- Be sure to turn the appliance off after each use. Make sure the motor stops completely before disassembling.
- Turn the appliance **OFF**, then unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning. To unplug, grasp the plug by the body and pull from the outlet. **NEVER** unplug by grasping and pulling the flexible cord.
- Before use, wash all parts that may contact food. Follow washing instructions covered in this instruction manual.
- Before each use, inspect auger for damage. If auger is bent or damage is suspected, contact a service center.
- DO NOT** use this appliance outdoors. It is designed for indoor household use only.
- This appliance has a polarized plug (one prong is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** modify the plug in any way.
- DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. contact a service center.
- This appliance has important markings on the plug blade. The entire supply cord is not suitable for replacement. If damaged, please contact a service center.
- Extension cords should **NOT** be used with this appliance.
- To protect against the risk of electric shock, **DO NOT** submerge the appliance or allow the power cord to contact any form of liquid.
- DO NOT** allow the cord to hang over the edges of tables or counters. The cord may become snagged and pull the appliance off the work surface.
- DO NOT** allow the unit or the cord to contact hot surfaces, including stoves and other heating appliances.
- ALWAYS** use the appliance on a dry and level surface.
- DO NOT** allow children to operate this appliance or use as a toy. Close supervision is necessary when any appliance is used near children.
- This appliance is **NOT** intended to be used by people with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ONLY** use attachments and accessories that are provided with the product or are recommended by SharkNinja. The use of attachments, including canning jars, not recommended or sold by SharkNinja may cause fire, electric shock, or injury.
- DO NOT** put your fingers or other objects into the juicer opening while it is in operation. If food becomes lodged in opening, use the tamper or another piece of fruit or vegetable to push it down. When this method is not possible, turn the motor off and disassemble juicer to remove the remaining food.
- Keep hands, hair, and clothing out of the container when loading and operating.
- During operation and handling of the appliance, avoid contact with moving parts.
- DO NOT** use the appliance if the rotating sieve is damaged.
- DO NOT** operate the appliance without the pulp container in place.
- DO NOT** microwave container or accessories provided with the appliance.
- NEVER** leave the appliance unattended while in use.
- DO NOT** juice hot liquids. Doing so may result in pressure buildup and steam exposure that can pose a risk of the user being burned.
- NEVER** operate the appliance without lids and caps in place. **DO NOT** attempt to defeat the interlock mechanism. Ensure attachments are properly installed before operation.
- Before operation, ensure all utensils are removed from container. Failure to remove utensils can cause container to shatter and potentially result in personal injury and property damage.
- DO NOT** attempt to remove the feed chute chamber from the motor base while the auger is still spinning. Allow the appliance to come to a complete stop before removing attachments.
- If the appliance is overloaded, the unit will temporarily disable the motor. Wait approximately 2 minutes before using again.
- DO NOT** juice hot ingredients.
- Remove the seeds and pits from fruits such as mangoes or plums, as well as peels and tough skins from fruits such as oranges, lemons, and limes, as they could damage the unit.
- DO NOT** add water to the feed chute while the unit is operating to clean the unit.
- DO NOT** submerge the motor base or control panel in water or other liquids.
- DO NOT** spray motor base or control panel with any liquid.
- DO NOT** attempt to sharpen auger.
- Turn off the appliance and unplug the motor base before cleaning.
- DO NOT** add frozen fruit, frozen vegetables, or ice to the juicer.
- Consumers with sensitivity to pulp may wish to strain their juice as a precaution.

SAVE THESE INSTRUCTIONS

PARTS

NOTE: CLEAN BEFORE USE

A Tamper

B Food Tray

C Feed Chute Chamber with Anti-Drip Lever

D Pulp Spout

E Auger

F Black Filter (less pulp)

G Orange Filter (lots of pulp)

H Motor Base (power cord not shown)

 
I Juice Jug

J Pulp Container

K Cleaning Brush





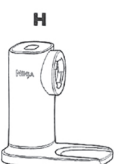

Accessory type and quantity may vary depending on the model.

BEFORE FIRST USE

IMPORTANT: Review all warnings at the beginning of this Owner's Guide before proceeding.

NOTE: All attachments are BPA free and dishwasher safe.

- Remove all packaging materials from the unit.
- Wash parts in warm, soapy water, then thoroughly rinse and air-dry all parts.
- Wipe control panel with a soft cloth. Allow it to dry completely before using.

FEATURES

USING THE CONTROL PANEL



 
START/STOP
Press once to start continuous running up to 12 minutes; press again to stop.




REVERSE
If the feed chute chamber becomes blocked or ingredients are not processing, press and hold **REVERSE**. There will be a beep and a brief pause, then the auger will rotate in the opposite direction. Release **REVERSE** to stop. Repeat as needed. Press **START/STOP** to resume normal operation.

USING THE FILTERS FOR PULP CONTROL

Control the amount of pulp by choosing the appropriate filter.

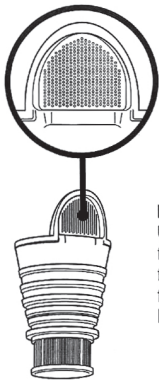

 LESS PULP
Use the Black filter with the finest mesh for juice with less pulp.

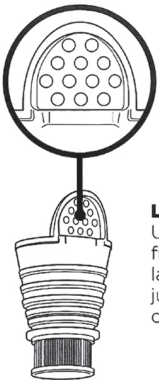

LOTS OF PULP
Use the Orange filter with the largest mesh for juice with lots of pulp.

NOTE: For best results, we recommend using the **Orange (Lots of Pulp) filter** when processing soft fibrous fruits like pears, berries, seeded melons, and pineapple.

IMPORTANT:

- Review all warnings before proceeding.
- **DO NOT** add frozen fruits and vegetables or ice to the unit.

NOTE: If the feed chute chamber becomes blocked or ingredients are not processing, press and hold **REVERSE**. There will be a beep and a brief pause, then the auger will rotate in the opposite direction. Release **REVERSE** to stop. Repeat as needed. Press **START/STOP** to resume normal operation.

- Align the metal portion of the filter with the bottom of the auger.

-

-
- Make sure the anti-drip lever is open before juicing.

-
- A line drawing of a manual coffee press. A hand is shown pressing down on the top handle of the plunger. The plunger is inside a cylindrical body. A cup is positioned below the spout to catch the coffee. The brand name 'FARGA' is visible on the side of the body.

-

-

IMPORTANT: DO NOT attempt to clean the unit by adding water to the feed chute chamber while attached to the motor base.

