

© **element**
• **Roku TV**
4K
ULTRA HD
3840 x 2160 RESOLUTION

To download your copy of the complete
Owner’s Manual:

<http://consumerservicerefurbish.com>

Click on: Download Owners Manual
On Manufacturer or Brand, select: **ELEMENT**
On Product Type, select: **TV**
On Model Number, select: **E2AA32R**

Please read this manual carefully before operating your TV and retain for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- **Read these instructions** – All the safety and operating instructions should be read before this product is operated.
- **Keep these instructions** – The safety and operating instructions should be retained for future reference.
- **Heed all warnings** – All warnings on the appliance and in the operating instructions should be adhered to.
- **Follow all instructions** – All operating and use instructions should be followed.
- **Do not use this apparatus near water** – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
- Clean only with dry cloth.
- **Do not block** any ventilation openings. Install in accordance with the manufacturer's instructions.
- **Do not install** near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Do not defeat** the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- **Protect the power cord** from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- **Only use attachments/accessories** specified by the manufacturer.
- **Use only with the cart, stand, tripod, bracket, or table** specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- **Unplug this apparatus** during lightning storms or when unused for long periods of time.

- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Please keep the unit in a well-ventilated environment.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus should not be exposed to dripping or splashing. Objects filled with liquids, such as vases should not be placed on apparatus.

WARNING: The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

WARNING: No naked flame sources, such as lighted candles, should be placed on the apparatus;

WARNING: The main plug is used as disconnect device, the disconnect device shall remain readily operable.

The use of apparatus in moderate climates. Storage temperatures are 32° to 122°F(0° to 50°C). Working temperatures are 32° to 95°F(0° to 35°C).

WARNING: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

 


This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.


The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

WHAT’S INCLUDED

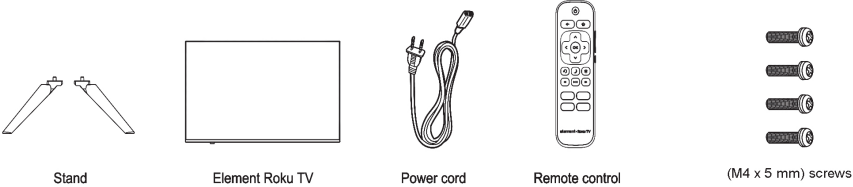


WHAT YOU NEED (not included)

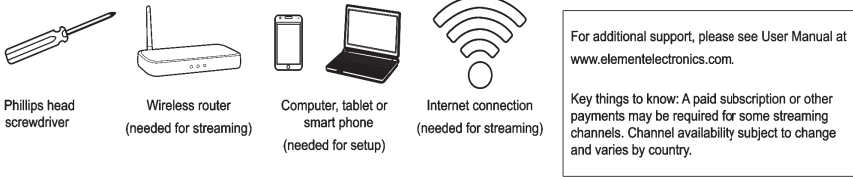 

ATTACH THE WALL MOUNT BRACKET (not included)

 The TV is provided with mounting holes for a VESA approved wall mounting bracket (Not Supplied). Remove the screws holding the base to the base bracket and lift the base away (do not remove the base mounting brackets). Mount the VESA bracket using 4*M6*12 isometric threaded screws (Not Supplied).

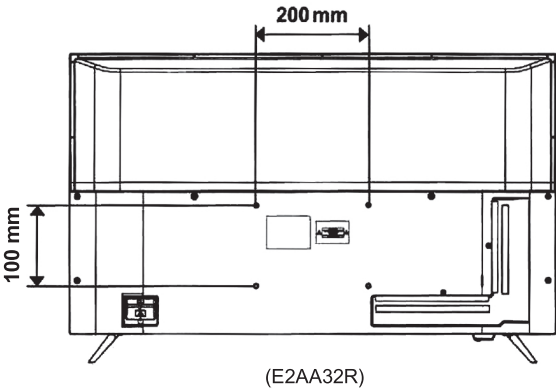

WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
 - Only using furniture that can safely support the television set.
 - Ensuring the television set is not overhanging the edge of the supporting furniture.
 - Not placing the television set on tall furniture(for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
 - Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
 - Educating children about the dangers of climbing on furniture to reach the television set or its controls.
- If your existing television set is being retained and relocated, the same considerations as above should be applied.

i Your new TV is heavy, please consult with professional wall mount installer to perform this installation.

CONNECT DEVICES TO YOUR TV

Check to ensure that you have selected the right cables for the ports and that they are connected securely. Loose connections can affect the quality of the picture image and color. (Cables and External Equipment not included.)


TV label	Port	Cable	External Equipment	Brief Description
RF (75Ω)				Connect an outdoor or indoor antenna.
HDMI				Connect a High Definition Multimedia Interface (HDMI®) cable from an external device.
AV IN	CVBS			Connect a composite video cable and left-right audio cables from an external AV device.
	AUDIO-L			
	AUDIO-R			
OPTICAL				Connect an optical cable from an external digital audio system.
				Connect headphone for audio out of the TV.
LAN				Connect an Ethernet cable to access a network or the Internet. The TV also has a wireless connectivity feature.
USB				Connect a USB device for browsing photos, music and movies. Use a USB drive 16GB or larger for pausing Live TV while watching Antenna TV.* The unit only recognizes a USB Memory Stick.
RESET		Restart or factory reset your TV.		

* Live TV Pause can pause content received on the antenna TV input for up to 90 minutes and requires a 16GB or larger USB drive and a valid Roku account. All data on the USB drive will be deleted prior to use.

* The cables mentioned in this manual are not supplied with your unit.

SETTING UP YOUR TV

 1. Place Batteries in Remote (Batteries Not Supplied)

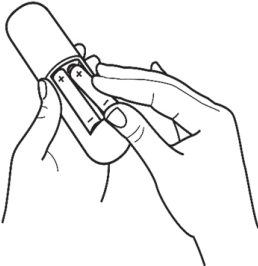


Power your TV remote by inserting the batteries carefully matching (+) and (-) indicated inside the battery compartment.

TIP: Always replace dead batteries with two brand-new batteries from the same manufacturer. Never use damaged batteries.

If your remote gets warm/hot during use, discontinue use and contact a service center.

 2. Plug in and turn on TV

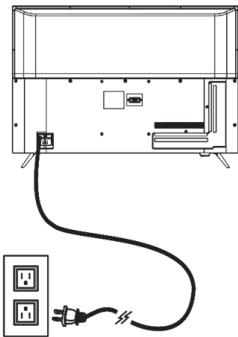

Connect your power cord to the TV, then plug it in to the wall outlet.



Press the power button on your TV remote control.

*Note: The image shown here is for illustrative purposes only and may be subject to change. The actual number of ports and their locations may vary, depending on the model.

805001317



PRINTED IN MEXICO
SC:02-11-2020 / OBP:N/A
SHNMDL:E2AA32R_B
TAB / Elbrd:J.E.

3. Follow the on screen instructions



Once your Roku TV powers on, follow the easy on-screen instructions. Your Roku TV will automatically detect wireless networks in your area, so have your network name and password handy.

Continue following the simple on-screen instructions to complete the initial setup.

If you aren't ready to connect your TV to a wireless network, you can still use it as a regular TV.

4. Activate your smart TV



Activate your Roku TV using your computer, smartphone, or tablet to link to a Roku account. You need a Roku account to activate your Roku TV and access entertainment across thousands of streaming channels.

Note: Roku doesn't charge for activation support - beware of scams.

Roku accounts are free and while a valid credit card number is not required to create a Roku account, saving your credit card information makes renting and purchasing entertainment from the Roku Channel Store fast and convenient.

Once connected to your account, your TV will automatically update with the latest software, and you can start streaming immediately.

FCC NOTES



FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1)This device may not cause harmful interference, and
- (2)This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories.

CONNECTING AN ANTENNA (optional)

With the built-in tuner you can connect your TV to an antenna and enjoy over-the-air entertainment.

- When the setup wizard is complete select the Antenna TV icon from the home screen
- Follow the on-screen instructions.
- Whenever you want to watch antenna TV, select the Antenna icon.
- Live TV Pause feature: Pause up to 90 minutes of live antenna TV when you connect a 16 GB or larger USB drive to your TV.

 
UNIVERSAL REMOTE SETUP

Using your Cable Set-top Box or Satellite Receiver Remote as a Universal Remote.

If you prefer to use your cable set-top box or satellite receiver remote as a Universal Remote, please refer to the manual that your cable or satellite service provided. It includes instructions on how to program their remote to your television. You can find codes that work with your Element Roku TV and the most common cable and satellite provider's universal remote control at www.roku.com/universalremote.

REMOTE CONTROL

The Roku TV remote should feel right at home in your hand. We designed it to be incredibly intuitive for watching TV and navigating on-screen menus.

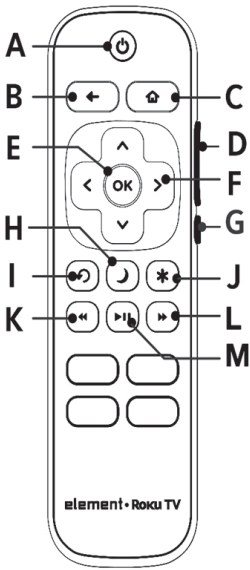

(Remotes may vary)

- A. **POWER** Turn TV on and off
- B. **BACK** Return to previous screen
- C. **HOME** Return to Roku Home screen
- D. **VOLUME** Raise and lower volume
- E. **OK** Select an option from a menu
- F. **UP or DOWN** Move up or down; **LEFT or RIGHT** Move left or right
- G. **MUTE** Mute and restore sound
- H. **SLEEP** Set the sleep timer
- I. **INSTANT REPLAY** Replay the last few seconds of streaming video
- J. **OPTIONS** Access to picture settings, more streaming channel icons and more
- K. **RWD SCAN** Rewind streaming video, scroll left one page at a time
- L. **FWD SCAN** Fast forward streaming video, scroll right one page at a time
- M. **PLAY/PAUSE** Start or pause playback.You can also use this button to activate and use the Live TV Pause feature when a 16GB USB drive is attached to the TV. The Live TV Pause feature requires connecting to the Roku service.

- D . ad Left:** Brings up the Smart Guide (EPG) while watching Antenna TV.
- Play/Pause:** Pauses and resumes Live TV while watching Antenna TV.
- REW:** Rewinds the paused Live TV Pause buffer.
- FF:** Fast forwards the paused Live TV Pause buffer.
- D-Pad Left and D-Pad Right:** Choose scenes while using Live TV Pause.

TIP: The button gives you easy access to picture settings, display options and more. Try it on every screen.

SPECIFICATIONS

Panel Size	31.5 inches diagonally
Display Type	LED
Panel Technology	TFT
TV System	ATSC/NTSC-M
Channel Range	VHF: 2~13
Channel Range	UHF: 14~69
Channel Range	CATV: 1~135
Tuner Type	Frequency synthesized
Display Resolution	1080p
Panel Resolution	1920 x R.G.B. x 1080
Aspect Ratio	16:9
Contrast Ratio-Panel	4000
Response Time (G To G)	6.5 ms
Lamp Life (Typ. Hours)	30,000 hours
Horizontal Viewing Angle (At CR≥10)	160
Vertical Viewing Angle (At CR≥10)	150
Power Supply	100-240V~ 50/60Hz

Design and specifications are subjects to change without prior notice.

REFURBISHED PRODUCT LIMITED NINETY DAYS WARRANTY

The **Refurbished Product Service Center** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of NINETY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the **Refurbished Product Service Center** will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center
13225 Marquardt Avenue Santa Fe Springs, CA 90670.

WARRANTY REPAIR INFORMATION

If you need service on your unit and this product requires repair during the 90 days warranty period; please go to **www.ConsumerServiceRefurbish.com** or call the **Refurbished Product Service Center** at 562-946-3531 to obtain the required return authorization (RA) number. Pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt and a letter describing the problem. Send the unit freight prepaid and insured to:

Refurbished Product Service Center,
Att: Customer Service Department 13225 Marquardt Avenue Santa Fe Springs, CA 90670

Your unit will be promptly repaired and returned to you. We will refuse to accept delivery of the returned unit unless the assigned RA number appears on the outside of the shipping carton.

Owner's Information
(Keep for your permanent records)

NAME: _____

ADDRESS: _____

CITY: _____ STATE: _____ ZIP CODE: _____

PHONE: _____ E-MAIL: _____

MODEL: _____ SERIAL NO.: _____