 



IMPORTANT SAFETY INFORMATION GUIDE

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where it exits from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70-2023 (Section 54 of Canadian Electrical Code, Part 1) provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See following example:

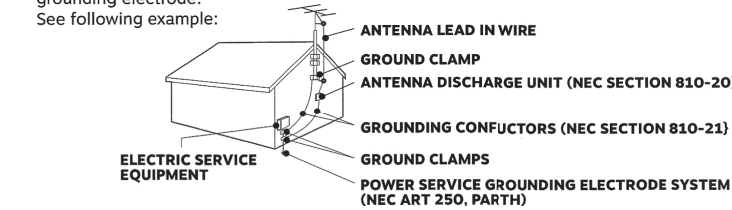

- ⚠ WARNING:** To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. The product should not be exposed to dripping or splashing. Objects filled with liquids, such as vases should not be placed on the product.
- ⚠ WARNING:** The batteries shall not be exposed to excessive heat such as sunshine, fire, or the like.
- ⚠ WARNING:** No naked flame sources, such as lighted candles, should be placed on the product.
- ⚠ WARNING:** To completely disconnect this apparatus from the AC mains, disconnect the power supply cord plug from the AC receptacle. Where the mains plug or appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- ⚠ WARNING:** To reduce the risk of electric shock, do not remove the cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

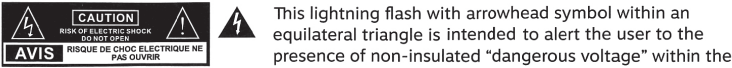

⚠ The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

⏏ This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth. This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potential adverse effects on the environment and human health. As a consumer, you are responsible for ensuring that this product is disposed of properly. Element offers environmentally responsible options to recycle your unwanted consumer electronics device. More information can be found by visiting: www.elementelectronics.com/sustainability

SAFETY INFORMATION

To ensure reliable and safe operation of your new TV, please read carefully all the instructions in this user guide, especially the safety information below.

ELECTRICAL SAFETY

- The TV set should only be connected to a main power supply with voltage that matches the label at the rear of the product.
- To prevent overload, do not share the same power supply socket with too many other electronic components.
- Do not place any connecting wires where they may be stepped on or tripped over.
- Do not place heavy items on them, which may damage the leads.
- Hold the main plug, not the wires, when removing from a socket.
- During a thunderstorm, or when not using the television for extended period of time, turn the power off.
- Pull the plug out immediately, and seek professional help if the main plug or cable is damaged, liquid is spilled onto the set, if accidentally exposed to water or moisture, if anything accidentally penetrates the ventilation slots or if the set does not work normally.
- Do not remove the safety covers. There are no user serviceable parts inside. Damage to the unit caused by non-qualified repair personnel (including, where applicable, the owner) is not covered under the product warranty.

PHYSICAL SAFETY

- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.
- Do not block ventilation slots in the back cover. You may place the TV in a cabinet, but ensure at least 2" (5 cm) clearance all around.
- Do not tap or shake the TV screen, or you may damage the internal circuits.
- Clean the TV with a soft dry cloth. Do not use solvents or petroleum-based fluids.
- Do not install near any heat sources such as indoor radiators or heat registers, outdoor stoves or fire pits, or other apparatus (including amplifiers) that produce heat.

BATTERY SAFETY

- ⚠ CAUTION:** Risk of explosion if the battery is replaced with an incorrect battery type.
- Use consumer grade, non-rechargeable carbon-zinc or alkaline batteries AAA or AA type.
 - Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, can result in an explosion.
 - Exposing a battery to high temperature can result in an explosion or the leakage of flammable liquid or gas.
 - A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.
 - To avoid battery leakage, remove exhausted batteries from the remote control, or when not using for long periods.
 - Do not break open or throw exhausted batteries on a fire.
 - Do not mix old and new batteries.
 - Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.

STABILITY HAZARD

A display may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use mounting methods recommended by the manufacturer of the display.
- ALWAYS educate children about the dangers of climbing on furniture to reach the display or its controls.
- ALWAYS route cords and cables connected to your display so they cannot be tripped over, pulled or grabbed.
- NEVER place a television set in an unstable location.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the display or furniture on which the display is placed.
- ALWAYS use furniture that can safely support the TV in size and weight.
- ALWAYS ensure the TV does not overhang the edge of furniture, and the supporting base is sufficiently wider than the base of the TV.
- NEVER place the TV on tall furniture (such as cupboards or bookcases) without anchoring both the furniture and the TV to a suitable support.
- NEVER place the TV on cloth or other materials that are between the TV set and supporting furniture.

Failure to take these safety precaution may cause the TV to fall causing damage or serious injury. Element accepts no responsibility or liability for any injuries or property damage resulting from improper installation.

The following symptoms are not signs of malfunction but technical limitation. Therefore we disclaim any responsibility for these symptoms.

- LCD Panels are manufactured using an extremely high level of precision technology, however sometimes parts of the screen may be missing picture elements or have luminous spots.
- Do not install the LCD panel near electronic equipment that produces electromagnetic waves. Some equipment placed too near this unit may cause interference.
- There may be interference while using infrared devices such as infrared cordless headphones.

HOW TO HANDLE THE LCD PANEL

- Do not press hard or jolt the LCD panel. It may cause the LCD panel glass to break and injury may occur.
- If the LCD panel is broken, make absolutely sure that you do not touch the liquid in the panel. This may cause skin inflammation. If the liquid gets in your mouth, immediately gargle and consult with your doctor. Also, if the liquid gets in your eyes or touches your skin, consult with your doctor after rinsing for at least 15 minutes or longer in clean water.

POSSIBLE ADVERSE EFFECTS ON LCD PANEL

If a non-moving pattern remains on the LCD panel for long periods of time, the image can become permanently engrained in the LCD panel and cause subtle but permanent ghost images. This type of damage is NOT COVERED BY YOUR WARRANTY. Never leave your LCD panel on for long periods of time while it is displaying the following formats or images:

- Fixed Images, such as stock tickers, video game patterns, TV station logos, and websites.
- Special formats that do not use the entire screen. For example, viewing letterbox style (16:9) media on a normal (4:3) display (black bars at top and bottom of screen); or viewing normal style (4:3) media on a widescreen (16:9) display (black bars on left and right sides of screen).

CONDENSATION

 
Moisture will form in the product if it is brought from cool surroundings into a warm room or if the temperature of the room rises suddenly. When this happens, the performance will be impaired. To prevent this, let the product sit in its new surroundings for about an hour before switching it on, or make sure that the room temperature rises gradually. Condensation may also form during the summer if the product is exposed to breeze from an air conditioner. In such cases, change the location of the product.

MOUNTING YOUR TV (Wall mount kit not included)

Mounting your TV is optional. Do not install the stands if you want to wall mount your TV. Follow the wall mount instructions supplied with your mount for installation details.

Your TV has four mounting holes on the back for a VESA approved wall mounting bracket (not included). The VESA number is the horizontal and vertical measurement of the mounting holes. Only use mounting screws (not included) that are the length and diameter as instructed.

⚠ CAUTION: Your new TV is heavy! If you have any doubts about your ability to safely install your TV, please consult a professional installer.

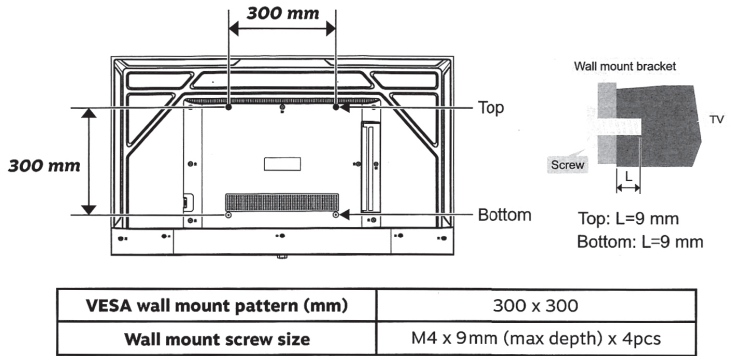

NOTE:

- To prevent internal damage to the TV and ensure it is mounted securely, be sure to use fixing screws (not provided) that are "L" mm in length when measured from the attaching surface of the mounting bracket.
- The length of the screws differ depending on the wall mount bracket model.

CHILD SAFETY NOTICE

THIS MANUFACTURER CARES!

 
The consumer electronics industry is committed to making home entertainment enjoyable and safe.

THE ISSUE

The home entertainment experience is a growing trend and larger flat panel displays are popular purchases. However, flat panel displays are not always supported on the proper stands or installed according to the manufacturer's recommendations. Flat panel displays that are inappropriately situated on dressers, bookcases, shelves, desks, speakers, chests or carts may fall over and cause injury.

TUNE INTO SAFETY

- One size does NOT fit all. Follow the manufacturer's recommendation for the safe installation and use of your flat panel display.
- Carefully read and understand all enclosed instructions for proper use of this product.
- Don't allow children to climb on or play with furniture and television sets.
- Don't place flat panel displays on furniture that can easily be used as steps, such as a chest of drawers.
- Remember that children can become excited while watching a program, especially on a "larger than life" flat panel display. Care should be taken to place or install the display where it cannot be pushed, pulled over, or knocked down.
- Care should be taken to route all cords and cables connected to the panel display so that they cannot be pulled or grabbed by curious children.

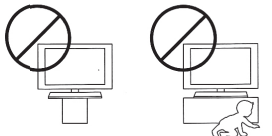

WALL MOUNTING

IF YOU DECIDE TO WALL MOUNT YOUR FLAT PANEL DISPLAY, ALWAYS:

- Use a mount that has been recommended by the display manufacturer and/or listed by an independent laboratory (such as UL, CSA, ETL).
- Follow all instructions supplied by the display and wall mount manufacturers.
- If you have any doubts about your ability to safely install your flat panel display, contact a service center.
- Make sure that the wall where you are mounting the display is appropriate. Some block construction. If you are unsure, contact a professional installer.
- A minimum of two people are required for installation. Flat panel displays can be heavy.

FCC NOTES



FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the Instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RADIATION EXPOSURE STATEMENT

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

SPECIFICATIONS

Panel Size	42.5 inches diagonally
Display Type	LED
Panel Technology	TFT
TV System	ATSC/NTSC-M
Channel Range	VHF: 2~13
Channel Range	UHF: 14~69
Channel Range	CATV: 1~135
Tuner Type	Frequency synthesized
Panel Resolution	3840 × R.G.B. × 2160
Aspect Ratio	16:9
Lamp Life (Typ. Hours)	30,000 hours
Horizontal Viewing Angle (At CR≥ 10)	178° (Typ)
Vertical Viewing Angle (At CR≥ 10)	178° (Typ)
Power Supply	100~240V~
Storage Temperature	-4°F to 131°F(-20°C to 55°C)
Operating Temperature	41°F to 104°F(5°C to 40°C)

Design and specifications are subject to change without prior notice.

LICENSE AND TRADEMARK ACKNOWLEDGEMENT

HDMI® The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Dolby Audio Dolby, Dolby Vision, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 1992–2024 Dolby Laboratories. All rights reserved.

QUICK START GUIDE

WHAT'S INCLUDED

Accessory type and quantity may vary depending on the model.

WHAT YOU'LL NEED (NOT INCLUDED)

CONNECT DEVICES TO YOUR TV

Check to ensure that you have selected the right cables for the ports and that they are connected securely (*cables and external devices not included*). Loose connections can affect your picture and audio quality.

Actual connections may vary by model. Please refer to the actual product to determine your connection options.

NOTE: The cables mentioned in this manual is not supplied with your unit.

SETTING UP YOUR TV

For illustration purposes only. Actual product and number of screws may vary. Please refer to the actual product.

Installing the stands (Wall mount kit not included)

Do not install the stands if you want to wall mount your TV. See your wall mount instructions for mount installation details.

You will need: Phillips screwdriver (not included)

- Place the TV screen-down on a clean, flat, soft surface (e.g.: blanket) to prevent scratches or damage to the screen.
- Use a Phillips screwdriver to attach each stand with the provided screws.
- Place the TV upright on a stable, level surface.

To avoid damages, never carry your TV by holding or putting pressure onto the glass.

Setting up your remote (Batteries not included)

Power your TV remote by batteries carefully matching (+) and (-) indicated inside the battery compartment.

Pairing your remote to a new Xumo TV
Before using your remote, you'll need to pair it with your TV. If you put batteries in your remote within 15 minutes of plugging in your TV for the first time, your remote will automatically pair to your TV. Should you experience any issues, follow the below instructions:

- Pairing your remote to an existing Xumo TV**
- Press the **Power** button
 - Select **Remote > Pair your remote to your TV**
 - Follow the on-screen instructions
 - If pairing fails, turn off your TV and unplug from the power source. Plug TV back in, power on, and try steps 1-3 again.

Pairing your remote to a sound system

- Press the **Power** button
- Select **Remote > Pair your remote and sound system**
- Follow the on-screen instructions.

How to reset your remote

- Hold the **Left** and **Right** buttons for 3 seconds until the light at the top of the remote turns solid green
- Press 9, then 8, then 4 (the light will blink red a few times)
- Hold the **Left** and **Right** buttons for 3 seconds again
- Press 9, then 8, then 1
- Wait for the light at the top of the remote to flash red again
- With your remote control pointed towards your TV, try pressing the **Home** button then other keys to make sure your remote is working properly

Note: Voice control will not work until you pair your remote. Voice commands only work when your TV is connected to the internet.

TIP: Always replace dead batteries with two brand new batteries from the same manufacturer. Never use damaged batteries.

If your remote gets warm/hot during use, discontinue use and contact a service center.

Power button

Plug in and turn on TV

Plug your TV into the wall outlet and press the power button on your remote control. Your TV will display a launch screen showing the Element and Xumo TV logos, followed by the first setup screen.

To review the Xumo TV privacy policy, visit tv.xumo.com/privacy.

Follow the on-screen instructions

When your TV powers on, follow the easy on-screen instructions for setup.

Connecting your TV to the Internet gives you access to all the things that make your TV smart, including apps, voice controls, and more. Your TV will automatically detect wireless networks in your area, so have your network name and password handy. If you aren't ready to connect to a wireless network you can still use it as a regular TV and can connect it later within settings.

NOTE: The images shown in this manual are for illustrative purposes only and may be subject to change, the actual descriptions of control panel and their locations may vary depending on the model.

Activate your TV

To activate your TV you'll need a computer, smartphone or tablet. Once you see the activation code on the TV screen you can visit xumo.com/activate (or simply scan the QR code on-screen with your smart device camera) and follow the on-screen instructions to complete registration. You'll be directed to the home screen when setup is complete.

You may also create a Xumo account with a payment method if you would like to make purchases on your TV. Note: Creating a Xumo account and adding payment details is optional and not required to use your TV.

A paid subscription or other payments may be required for some streaming channels. Channel availability subject to change and varies by country or region.

USING YOUR REMOTE

 
- A Input** Change your TV's input so that you can use connected devices like media players, gaming systems, and sound systems
- B Power** Turn your TV on and off
- C Volume** Make your TV louder or softer
- D Voice Control** Search across your apps and control your TV with just your voice – just press and hold the button, say a command, then release it
- E Mute** Turn your TV sound on and off
- F Settings** Press once to open the Settings menu, or press twice to access your accessibility shortcut
- G More** See more options like program descriptions depending on which screen you're on
- H Navigation Pad** Select up, down, left and right
- I Select** Confirm your selection
- J Last/back** Return to the previous screen
- K Add** Add the TV show or movie you've selected to My List
- L Home** Return to the home screen
- M App shortcuts** Launch the labeled app when your TV is connected to the Internet

NOTE: The remote control vary depend of model: The buttons on the remote control may have a different name or location than the remote control shows in this manual.

CONNECTING AN ANTENNA

With the built-in tuner you can connect your TV to an antenna and enjoy over-the-air entertainment.

- To connect your TV to an antenna, connect a coax cable (not included) into your TV's **ANT** por: and the other end into your device.
- Turn your TV on and press the home button on your remote.
- Select the **Antenna** tile, or open **Settings > Antenna and inputs > Antenna > Scan for channels**
- Follow the on-screen instructions.

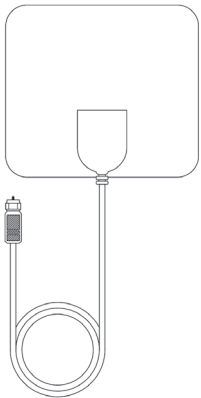

UNIVERSAL REMOTE SETUP

If you prefer to use your cable set-top box or satellite receiver remote as a universal remote, please refer to the manual your cable or satellite service provided. It includes instructions on how to program your remote to your TV.