



Foodi®
GRILL
OWNER'S GUIDE

Recipe book is not included

IMPORTANT SAFEGUARDS

HOUSEHOLD USE ONLY • READ ALL INSTRUCTIONS BEFORE USE

When using electrical appliances, basic safety precautions should always be followed, including the following:

⚠ WARNING

- 1

To eliminate a choking hazard for young children, discard all packaging materials immediately upon unpacking.
- 2

This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- 3

Keep the appliance and its cord out of reach of children. **DO NOT** allow the appliance to be used by children. Close supervision is necessary when used near children.
- 4

To reduce the risk of fire, **DO NOT** place appliance on stovetop or on hot surfaces.
- 5

DO NOT place in heated oven.
- 6

This appliance is for household use only. **DO NOT** use this appliance for anything other than its intended use. **DO NOT** use in moving vehicles or boats. **DO NOT** use outdoors. Misuse may cause injury.
- 7

Ensure the surface is level, clean and dry. **DO NOT** place the appliance near the edge of a countertop during operation.
- 8

ALWAYS ensure the appliance is properly assembled before use.
- 9

When using this appliance, provide at least 6 inches (15.25 cm) of space above and on all sides for air circulation.
- 10

DO NOT use an extension cord. A short power-supply cord is used to reduce the risk of children grabbing the cord or becoming entangled and to reduce the risk of people tripping over a longer cord.
- 11

To protect against electrical shock **DO NOT** immerse cord, plugs, or main unit housing in water or other liquid.
- 12

DO NOT use the appliance if there is damage to the power cord or plug. Regularly inspect the appliance and power cord. If the appliance malfunctions or has been damaged in any way, immediately stop use and call a Service center.
- 13

NEVER use outlet below countertop surface.
- 14

DO NOT place appliance and let cord hang over edges of tables, counters or touch hot surfaces.
- 15

Only use recommended accessories included with this appliance or authorized by SharkNinja. The use of accessories or attachments not recommended by SharkNinja may cause a risk of fire or injury.
- 16

Before placing any accessory into the cooker, ensure they are clean and dry.
- 17

DO NOT use the appliance without the removable cooking pot and splatter shield installed.
- 18

ALWAYS ensure hood is fully closed before operating.
- 19

DO NOT move the appliance when in use.
- 20

DO NOT cover the air intake vent or air outlet vent while unit is operating. Doing so will prevent even cooking and may damage the unit or cause it to overheat.
- 21

DO NOT touch hot surfaces. Appliance surfaces are hot during and after operation. To prevent burns or personal injury, **ALWAYS** use protective hot pads or insulated oven mitts and use available handles and knobs.
- 22

DO NOT touch accessories during or immediately after cooking. The grill grate and basket becomes extremely hot during the cooking process. Avoid physical contact while removing the accessory from the appliance. To prevent burns or personal injury **ALWAYS** use care when interfacing with product. Recommend use of long handed utensil and protective hot pads or insulated oven mitts.
- 23

DO NOT use this appliance for deep-frying.
- 24

The Foodi® Smart Thermometer does **NOT** replace an external food thermometer.
- 25

To prevent possible illness, **ALWAYS** use an external food thermometer to check that your food is cooked to the recommended temperatures
- 26

Should a grease fire occur or the unit emits black smoke, unplug immediately. Wait for smoking to stop before removing any cooking accessories.
- 27

Please refer to the Cleaning & Maintenance section for regular maintenance of the appliance.
- 28

To disconnect, turn unit to “off”, then unplug from socket when not in use and before cleaning.
- 29

Allow to cool before cleaning, dissassembly, putting in or taking off parts and storage.
- 30

DO NOT clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- 31

Cleaning and user maintenance shall not be made by children.
- 32

Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.


	Indicates to read and review instructions to understand operation and use of product.
	Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored.
	Take care to avoid contact with hot surface. Always use hand protection to avoid burns.
	For indoor and household use only.

TECHNICAL SPECIFICATIONS

Voltage: 120V~, 60Hz

SAVE THESE INSTRUCTIONS

PARTS

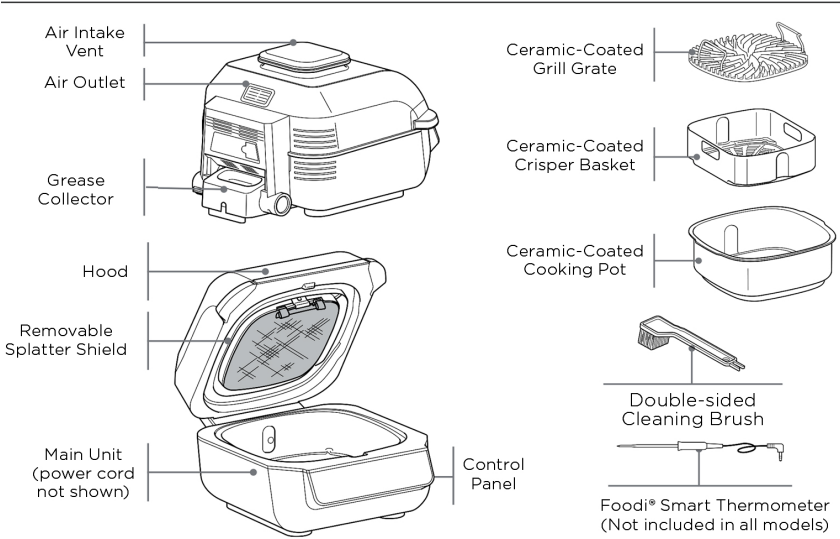

NOTE: CLEAN BEFORE USE

NOTE: Accessories may vary depending on the model. Refer to quick guide, if available.

The images shown here are for illustrative purposes only and may be subject to change.

GETTING TO KNOW THE NINJA® FOODI® GRILL

FUNCTIONS

GRILL: Grill indoors while creating even char, grill marks, and grilled flavor.

AIR CRISP: For crispiness and crunch with little to no oil.

BAKE: Bake cakes, treats, desserts, and more.

ROAST Tenderize meats, roast vegetables, and more.

Broil: Add a crispy finishing touch to meals or melt cheese on sandwiches.

DEHYDRATE: Dehydrate meats, fruits, and vegetables for healthy snacks.

OPERATING BUTTONS

⊙ POWER button: Once the unit is plugged in, press the power ⊙ button to turn on the unit. Pressing it during cooking stops the current cooking function and turns off the unit.

FUNCTION: (not included on all models) Press to scroll through and select functions.

NOTE: To adjust the temperature or time during cooking, press the up and down arrows. The unit will then resume at those settings.

NOTE: Not all functions included on each model.

Left arrows: Use the up ⬆ and down ⬇ arrows to the left of the display to adjust the cooking temperature for any function or, with some models, to set the internal doneness after using PRESET or MANUAL button.

Right arrows: Use the up ⬆ and down ⬇ arrows to the right of the display to adjust the cook time or, with some models, to set the food type when using PRESET.

MANUAL setting: Pressing the thermometer button ⊖ twice switches the display screen so you can manually set the thermometer internal doneness.

PRESET setting: Switches the display screen so you can set the thermometer, food type, and internal doneness.

START/STOP button: After selecting temperature and time, press the START/STOP button to begin cooking.

Standby Mode: If there has been no interaction with the control panel for 10 minutes and the unit is not cooking, the unit will go into Standby Mode and the control panel will dim.

PREHEAT setting: If the unit is preheating, it will be indicated by a progress bar on the display screen. To skip preheat (not recommended), press the ⊙ button while the grill is in preheat state. ADD FOOD will display.

BEFORE FIRST USE

- 1

Remove all packaging material.
- 2

Remove all accessories from the package and read this manual carefully. Please pay particular attention to operational instructions, warnings, and important safeguards to avoid any injury or property damage.
- 3

Wash the grill grate, splatter shield, crisper basket, thermometer, cleaning brush, and cooking pot in warm, soapy water, then rinse and dry thoroughly. All accessories, except the thermometer, are dishwasher safe. **NEVER** clean the main unit or thermometer in the dishwasher.


USING THE NINJA® FOODI® GRILL

SPLATTER SHIELD

Located on the underside of the hood, the splatter shield helps keep the heating element clean. **ALWAYS** ensure the splatter shield is installed when cooking. Failure to use the splatter shield will result in oil buildup on the heating element, which can cause smoking.


Removing the splatter shield

Remove the splatter shield for cleaning after every use. Once the splatter shield has cooled completely, remove it by pushing the upper left tab toward the back of the hood. This will release the splatter shield, allowing you to remove it.

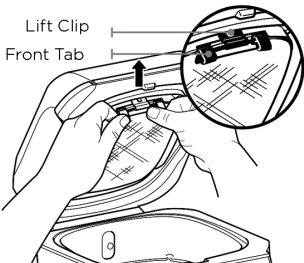

Installing the splatter shield

To install, insert the splatter shield so the grooves on the splatter shield ring match those of the fixed heat shield ring notch on the right. Then gently push the splatter shield upward until it clicks into the tab on the left side.

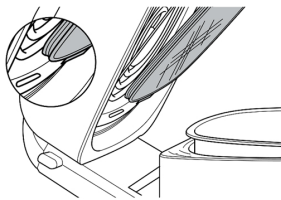

GRILLCONTROL TECHNOLOGY

When using the Grill function, you will need to select the grill grate temperature setting. Below are recommended temperature levels for common ingredients.

LO (400°F)	MED (450°F)	HI (500°F)	MAX (up to 510°F)
• Bacon • Sausages • When using thick BBQ sauce	• Frozen meats • Marinated/ sauced meats	• Steaks • Chicken • Burgers • Hot dogs • Meat kebabs	• Veggies • Fruit • Pizzas • Fresh/ frozen seafood • Veggie Kebabs

NOTE: For less smoke, we recommend using canola, coconut, avocado, grapeseed, or vegetable oil instead of olive oil. Heating oil past its smoke point can impart food with a burnt, acrid flavor.

NOTE: The unit may produce smoke when cooking ingredients on a hotter setting than what is recommended.

Switching to Grill after using another function

If the unit is already warm from using a different function, “ADD FOOD” may appear on the screen immediately. We recommend allowing the grill grate to heat up for at least 6 minutes before placing ingredients on it.

Batch grilling

When grilling more than two consecutive batches of food, it is recommended that you empty the fat/oil from the removable cooking pot. It is also HIGHLY recommended to clean the splatter shield in between uses. This will help prevent grease from burning and causing smoke.

If you would like to skip the Preheat process, press the PREHEAT button.

USING THE FOODI® SMART THERMOMETER (not included in all models)


IMPORTANT: DO NOT place hands near Foodi Smart Thermometer cord when in use to prevent burning or scalding

Before First Use

Make sure the thermometer jack is free of any residue and the cord is free of knots before plugging it into the jack.

1 Plug the thermometer into the jack of the right side of the control panel. Push firmly on the plug until it cannot go into the jack any further. Place the storage compartment back onto the side of the unit.

2 Once the thermometer is plugged into the jack, it will enable and illuminate PRESET and MANUAL. Select the desired cook function by pressing FUNCTION and cook temperature.

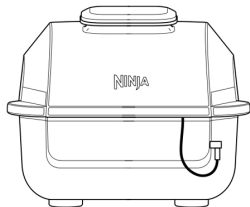

NOTE: Accessories may vary depending on the model.

4 Press the thermometer button ⊖ to fully illuminate PRESET and use the arrows to the right of the display to select your desired food type and the arrows to the left of the display to set the internal doneness of your food (Rare through Well).

NOTE: There is no need to set a cook time, as the unit will automatically turn off the heating element and alert you when your food has finished cooking.

NOTE: Cooking different meats or the same ones to different doneness? Refer to the next for details on programming.



To use the MANUAL function instead of PRESET, press the thermometer button ⊖ again to switch to MANUAL. Use the recommended internal cook temperatures below:

FOOD TYPE:	SET DONENESS TO:
Fish	Medium (130°F)
	Medium Well (140°F)
	Well Done (150°F)
Chicken/Turkey	Well Done (170°F)
Pork	Medium (130°F)
	Medium Well (150°F)
	Well Done (160°F)
Beef/Lamb	Rare (110°F)
	Medium Rare (125°F)
	Medium (130°F)
	Medium Well (145°F)
	Well Done (155°F)

NOTE: Set doneness for BEEF/LAMB are lower than normal recommendations as unit will carry-over cook 5-10°F.

NOTE: Reference USDA guidelines for food-safe temperature recommendations.

5 Place the accessory required (excluding the thermometer) for your selected cook function in the unit and close the hood. Press START/ STOP to begin preheating.

6 While the unit is preheating, insert the thermometer horizontally into the center of the thickest part of the piece of protein. **Refer to the chart on the adjacent page on further thermometer placement instructions.**

7 When the unit has preheated and “ADD FOOD” appears on the screen, open the hood, place food with inserted thermometer in the unit, and close the hood over the thermometer cord.

8 The progress bar at the top of the display will track doneness. It will start flashing at the lowest doneness and progress to the set doneness.

RARE > MED RARE < MED MED WELL WELL

NOTE: When using Roast and Grill, the unit will beep and display FLIP. Flipping is optional, but recommended.

9 The unit will automatically stop when desired doneness is almost reached, as it accounts for carry-over cooking, and “GET FOOD” will display on the screen.



10 Transfer the protein to a plate while “REST” displays on the screen. Thermometer does not need to still be inserted. The protein will continue to carry-over cook to your set doneness, which will take about 3-5 minutes. This is an important step, as not resting could lead to results looking less cooked. Carry-over cook times can vary based on type, cut and size of protein.

USING THE THERMOMETER IN DIFFERENT COOKING SCENARIOS:
Cooking 2 or more proteins of the same size to different levels of doneness:

- Set the Preset feature to the highest desired level of doneness.

NOTE: To check the internal temperature of other pieces of protein, press and hold the thermometer button and insert the thermometer into each piece of meat.


 
NOTE: The thermometer will be HOT. Use either oven mitts or tongs to take the thermometer out of the protein.

- Insert the thermometer in the protein with the higher desired level of doneness.
- After preheating, place proteins inside the grill. When the lower desired level of doneness is reached, remove the protein without thermometer.

- Continue cooking the remaining protein until the next desired level of doneness is reached.
- Cooking 2 or more proteins of different sizes:**
- Insert thermometer in the smaller protein and use the Preset feature to choose the level of doneness.
- When that protein is done cooking, remove it from the unit.
- Using oven mitts, transfer thermometer to the larger protein and use the arrows to the left of the display to choose its level of doneness.

- Cooking 2 or more different types of protein:**
- Insert thermometer in the protein with the lower desired level of doneness.
 - Use the Manual feature to choose the desired internal temperature.
 - When that protein is done cooking, remove it from the unit.
 - Using oven mitts, transfer thermometer to the other protein and use the Manual feature to choose the desired internal temperature.

HOW TO CORRECTLY INSERT THE THERMOMETER

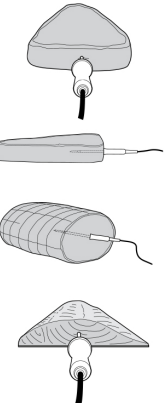FOOD TYPE:	PLACEMENT	CORRECT	INCORRECT
Steaks Pork chops Lamb chops Chicken breasts Burgers Tenderloins Fish fillets	- Insert thermometer horizontally into the center of the thickest part of the meat. - Make sure the thermometer is close to (but not touching) the bone and away from any fat or gristle. - Make sure the tip of the thermometer is inserted straight into the center of the meat, not angled toward the bottom or top of it. NOTE: The thickest part of the fillet may not be the center. It is important that the end of the thermometer hits this area so that desired results are achieved.		
Whole chicken	- Insert thermometer horizontally into the thickest part of the breast, parallel to, but not touching, the bone. - Make sure the tip reaches the center of the thickest part of the breast and doesn't go all the way through the breast into the cavity.		


NOTE: DO NOT use the thermometer with frozen protein or for cuts of meat 1 inch thick or thinner.

COOKING FUNCTIONS

Plug in the unit and press the power Ⓢ button to turn it on.

Grill

- 1** Place the cooking pot in the unit with the indent on the pot aligned with the bump on the main unit. Then place the grill grate in the pot with the handles facing up. Ensure the splatter shield is in place, then close the hood.

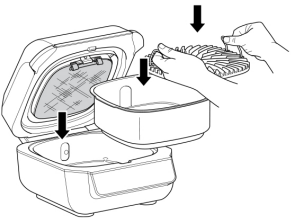

- 2** Press the GRILL button. The default temperature setting will display. Use the set of arrows to the left of the display to adjust the temperature up to MAX.
- 3** If using the Foodi® Smart Thermometer (not included with all models), refer to the Using the Foodi Smart Thermometer section. If not using the thermometer, use the set of arrows to the right of the display to adjust the cook time, in 1-minute increments, up to 30 minutes.
- 4** Press START/STOP to begin preheating. The progress bar will begin illuminating. It will take approximately 10 minutes for the unit to preheat.
- 5** When preheating is complete, the unit will beep and “ADD FOOD” will appear on the display.


NOTE: If your model has a cooking thermometer and you would like to use it to check your food's internal doneness, press the thermometer button ⊖ for 2 seconds and the food's internal temperature will appear on the screen. Press and hold button again to exit mode.

- 6** Open the hood and place ingredients on the grill grate. Once the hood is closed, cooking will begin and the timer will start counting down
- 7** When cook time is complete, the unit will beep and END will appear on the display.

NOTE: If batch cooking, refer to page 8 for instructions.

Air Crisp

- 1** Place cooking pot in the unit with the indent on the pot aligned with the bump on the main unit. Place the crisper basket in the pot. Ensure the splatter shield is in place, then close the hood.

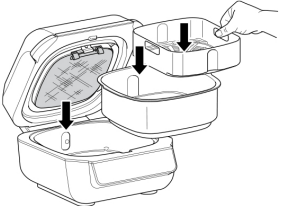

- 2** Press the AIR CRISP button. The default temperature setting will display. Use the set of arrows to the left of the display to adjust the temperature up to 400°F.
- 3** If using the Foodi Smart Thermometer (not included with all models), refer to the Using the Foodi Smart Thermometer section. If not using the thermometer, use the set of arrows to the right of the display to adjust the cook time, in 1-minute increments, up to 1 hour.
- 4** Press START/STOP to begin preheating. The progress bar will begin illuminating. It will take approximately 3 minutes for the unit to preheat.
- 5** When preheating is complete, the unit will beep and “ADD FOOD” will appear on the display.

NOTE: While preheating is strongly recommended for best results, you can skip it by pressing the SKIP PREHEAT button. “ADD FOOD” will appear on the display. Open the hood and place ingredients in the crisper basket. Once the hood is closed, cooking will begin and the timer will start counting down.


- 6** Open the hood and place ingredients in the crisper basket. Once the hood is closed, cooking will begin and the timer will start counting down.

NOTE: If you would like to use Foodi® Smart Thermometer (not included with all models) to check your food's internal doneness, press the thermometer button ⊖ for 2 seconds and the food's internal temperature will appear on the screen. Press and hold button again to exit mode.

- 7** For best results, we recommend shaking ingredients frequently. When you open the hood, the unit will pause. Use silicone-tipped tongs or oven mitts to shake the basket. When done, replace the basket and close the hood. Cooking will automatically resume after hood is closed.
- 8** When cook time is complete, the unit will beep and END will appear on the display.

Roast

- 1** Place cooking pot in the unit with the indent on the pot aligned with the bump on the main unit. Ensure the splatter shield is in place, then close the hood.

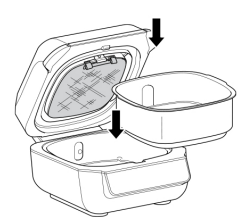

- 2** Press the ROAST button. The default temperature setting will display. Use the set of arrows to the left of the display to adjust the temperature up to 425°F.

NOTE: Convert traditional oven recipes by reducing the temperature by 25°F. Check food frequently to avoid overcooking.

- 3** If using the Foodi Smart Thermometer (not included with all models), refer to the Using the Foodi Smart Thermometer section. If not using the thermometer, use the set of arrows to the right of the display to adjust the cook time, in 1-minute increments up to 1 hour and 5-minute increments from 1 to 4 hours.
- 4** Press START/STOP to begin preheating. The progress bar will begin illuminating. It will take approximately 3 minutes for the unit to preheat.

NOTE: While preheating is strongly recommended for best results, you can skip it by pressing the SKIP PREHEAT button. “ADD FOOD” will appear on the display. Open the hood and place ingredients in the cooking pot. Once the hood is closed, cooking will begin and the timer will start counting down.

- 5** When preheating is complete, the unit will beep and “ADD FOOD” will appear on the display.
- 6** Open the hood and place ingredients in the pot. Once the hood is closed, cooking will begin and the timer will start counting down.

NOTE: If your model has a cooking thermometer and you would like to use it to check your food's internal doneness, press the thermometer button ⊖ for 2 seconds and the food's internal temperature will appear on the screen. Press and hold button again to exit mode.

- 7** When cook time is complete, the unit will beep and END will appear on the display.

Bake

- 1** Place cooking pot in the unit with the indent on the pot aligned with the bump on the main unit. Ensure the splatter shield is in place, then close the hood.
- 2** Press the BAKE button. The default temperature setting will display. Use the set of arrows to the left of the display to adjust the temperature up to 400°F.

NOTE: Convert traditional oven recipes by reducing the temperature by 25°F. Check food frequently to avoid overcooking.

- 3** If using the Foodi® Smart Thermometer (not included with all models), refer to the Using the Foodi Smart Thermometer section. If not using the thermometer, use the set of arrows to the right of the display to adjust the cook time, in 1-minute increments, up to 1 hour and in 5-minutes increments from 1 to 2 hours.
- 4** Press START/STOP to begin preheating. The progress bar will begin illuminating. It will take approximately 3 minutes for the unit to preheat.

NOTE: While preheating is strongly recommended for best results, you can skip it by pressing the SKIP PREHEAT button. “ADD FOOD” will appear on the display. Open the hood and place ingredients in the crisper basket. Once the hood is closed, cooking will begin and the timer will start counting down.

- 5** When preheating is complete, the unit will beep and “ADD FOOD” will appear on the display.
- 6** Open the hood and add ingredients to the pot or set the bake pan directly in the pot, and close the hood to start cooking. Once the hood is closed, cooking will begin and the timer will start counting down.

NOTE: If your model has a cooking thermometer and you would like to use it to check your food's internal doneness, press the thermometer button ⊖ for 2 seconds and the food's internal temperature will appear on the screen. Press and hold button again to exit mode.

- 7** When cook time is complete, the unit will beep and END will appear on the display.

Dehydrate

- 1** Place cooking pot in the unit with the indent on the pot aligned with the bump on the main unit. Place a single layer of ingredients in the pot. Then place the crisper basket in the pot on top of the ingredients and add another layer of ingredients to the basket. Ensure the splatter shield is in place, then close the hood.
- 2** Press the DEHYDRATE button. The default temperature setting will display. Use the set of arrows to the left of the display to adjust the temperature up to 195°F.
- 3** Use the set of arrows to the right of the display to adjust the dehydration time, in 15-minute increments, up to 12 hours.
- 4** Press START/STOP to begin. (The unit does not preheat in Dehydrate mode.)
- 5** When dehydration time is complete, the unit will beep and END will appear on the display.

Broil (Not available on all models)

- 1** Place cooking pot in the unit with the indent on the pot aligned with the bump on the main unit. Place ingredients in the pot. Ensure the splatter shield is in place, then close the hood.
- 2** Press the BROIL button. The default temperature setting will display. Use the set of arrows to the left of the display to adjust the temperature up to 500°F.
- 3** Use the set of arrows to the right of the display to adjust the cook time, in 1-minute increments up to 30 minutes.
- 3** Press START/STOP to begin. (The unit does not preheat in Broil mode.)
- 4** When cook time is complete, the unit will beep and END will appear on the display.

CLEANING YOUR NINJA® FOODI® GRILL

The unit should be cleaned thoroughly after every use. Always let the appliance cool before cleaning.

- Unplug the unit from the wall outlet before cleaning. Keep the hood open after removing your food to allow the unit to cool quicker.
- The cooking pot, grill grate, crisper basket, splatter shield, cleaning brush, and any other included accessories are dishwasher safe, except the thermometer. **DO NOT place the thermometer in the dishwasher.**
- If hand-washing, we recommend using the included cleaning brush to help wash the parts. Use the opposite end of the cleaning brush as a scraper to assist with releasing baked-on sauces or cheese. Air-dry or towel-dry all parts after hand-washing.

NOTE: DO NOT use liquid cleaning solution on or near the thermometer jack. We recommend using compressed air or a cotton swab to avoid damaging the jack.

- If food residue or grease are stuck on the grill grate, splatter shield, or any other removable part, soak in warm soapy water before cleaning.
- Clean the splatter shield after every use. Soaking the splatter shield overnight will help soften the baked-on grease. After soaking, use the cleaning brush to remove the grease from the stainless steel frame and front tabs.
- Deep clean the splatter shield by putting it in a pot of water and boiling it for 10 minutes. Then, rinse with room temperature water and allow to dry completely.
- The Foodi Smart Thermometer and holder are handwash with a damp cloth only. Never place unit or thermometer in dishwasher or submerge in liquid of any kind.

NOTE: NEVER use abrasive tools or cleaners. **NEVER** immerse the main unit in water or any other liquid.

STORAGE TIP: When stacking the coated accessories to store place a cloth or paper towel between each piece to protect the coated surfaces.

TROUBLESHOOTING

- “Add Food” appears on the control panel display.**
The unit has completed preheating and it is now time to add your ingredients.
- “Shut Lid” appears on the control panel display.**
The hood is open and needs to be closed for the selected function to start.
- “Plug In” appears on the control panel display.**
The thermometer is not plugged into the jack on the right side of the control panel. Plug the thermometer in before proceeding. Press the thermometer in until you hear a click.
- “PRBE ERR” appears on the control panel display.**
This means the unit timed out before food reached the set internal temperature. As a protection for the unit, it can run for only certain lengths of time at specific temperatures.
- “E” appears on the control panel display.**
The unit is not functioning properly. Contact a Service center.
- Why is my food overcooked or undercooked even though I used the thermometer?**
It is important to insert the thermometer lengthwise into the thickest part of the ingredient to get the most accurate reading. Make sure to allow food to rest for 3-5 minutes to complete cooking. For more information, refer to the Using the Foodi® Smart Thermometer section.
- Why does the preheat progress bar not start from the beginning?**
When the unit is warm from previously being used, it will not require the full preheating time.
- Can I cancel or override preheating?**
Preheating is highly recommended for best results, but you can skip it by selecting the PREHEAT button after you press the START/STOP button.
- Should I add my ingredients before or after preheating?**
For best results, let the unit preheat before adding ingredients.
- Why is my unit emitting smoke?**
When using the Grill function, always select the recommended temperature setting. Recommended settings can be found in the Quick Start Guide and in the Inspiration Guide. Make sure the splatter shield is installed.
- How do I pause the unit so I can check my food?**
When the hood is opened during a cooking function, the unit will automatically pause.
- Will the thermometer grip melt if it touches the hot grill grate?**
No, the grip is made of a high-temperature silicone that can handle the Ninja® Foodi® Grill's high temperatures.
- My food is burned.**
Do not add food until recommended preheat time is complete. For best results, check progress throughout cooking, and remove food when desired level of brownness has been achieved. Remove food immediately after the cook time is complete to avoid overcooking.
- Why did a circuit breaker trip while using the unit?**
The unit uses 1760 watts of power, so it must be plugged into an outlet on a 15-amp circuit breaker. Using an outlet on a 10-amp breaker will cause the breaker to trip. It is also important that the unit be the only appliance plugged into an outlet when in use. To avoid tripping a breaker, make sure the unit is the only appliance plugged into an outlet on a 15-amp breaker.
- Why does the unit have a 1-9 scale for the Beef Preset?**
Perception of what a specific internal doneness looks like differs from person to person, even restaurant to restaurant. The 1-9 scale provides a wide range of options for each doneness level so you can customize doneness to your liking.

NOTE:
The images shown in this manual are for illustrative purposes only and may be subject to change, the actual descriptions of control panel and their locations may vary depending on the model.

NOTE:
In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.