

 These instructions are part of the appliance. Read all instructions and all safety instructions before operating the appliance.

SAVE THESE INSTRUCTIONS

NOTE: The actual descriptions of control panel and their locations may vary depending on the model.

 
COFFEE PREPARATION



1. Rinse then fill the water tank with drinkable water.



2. Press the Espresso or Lungo button to activate the machine.



Blinking Lights: heating up (25 sec)



Steady Lights: ready

⚠ CAUTION: never lift lever during operation and refer to the safety precautions to avoid possible harm when operating the appliance.


📌 NOTE: during heat up, you can press either coffee button whilst blinking. The coffee will then flow automatically when the machine is ready.



3. Lift the lever completely and insert the capsule.
(Capsule not included)



4. Close the lever and place a cup under the coffee outlet.
(Cup not included)

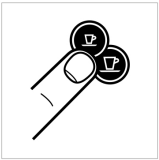


5. Press the Espresso (40 ml /1.35 fl oz) or the Lungo (110 ml 3.7 oz) button to start. Preparation will stop automatically. To stop the coffee flow manually or add more coffee, press again.



6. Remove the cup. Lift and close the lever to eject the capsule into the used capsule container.

PROGRAMMING THE WATER VOLUME

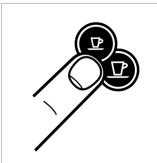


1. Turn the machine on and wait for it to be in ready mode (steady lights).
(Capsule not included)



2. Fill the water tank with potable water and insert the capsule.
(Capsule not included)



3. Place a cup under the coffee outlet.
(Cup not included)

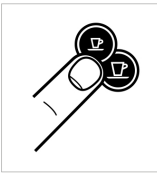

4. Press and hold the Espresso or Lungo button.


5. Release button once the desired volume is served.

6. Water volume level is now stored.

AEROCCINO INSTRUCTIONS OF USE

⚠ CAUTION: Risk of electrical shock and fire! Make sure the under side of the milk frother is dry.

📌 TIP: For optimal milk froth, use whole or semi skimmed milk at refrigerated temperature (about 4-6 °C /39-42.8 F). To guarantee hygiene conditions, use heat treated milk (pasteurized), refrigerated & freshly opened only. Milk which has been frozen will not froth.

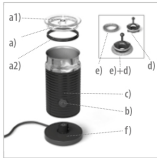


1. Overview: **a)** Lid **a2)** Storage area for frothing spring **b)** Start/stop Button **c)** Milk frother **d)** Mixer (for hot milk) **e)** Frothing spring (for milk froth) **f)** Base.



2. Clean before the first use. Attach the relevant whisk.

⚠ CAUTION: To ensure hygienic conditions and proper maintenance of the equipment, it is highly recommended to not use special enriched milks, powdered reconstituted milks nor flavoured milks. **⚠ CAUTION:** Syrup, sugar, chocolate powder or any other additives should not be added directly in the jug. This may damage the coating during the preparation.

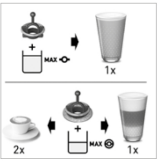


3. Fill milk frother up to one of the two "Max" level indicators.



4. Place the lid on the Aeroccino. For a hot preparation, briefly press button to start. Button lights up Red. Take approx. 70-80 sec. For cold milk froth, keep button pressed for approx. 2 seconds. Button lights up Blue. Takes approx. 60 sec.

⚠ CAUTION: Use only a non-metal spoon to collect the foam in the jug. **⚠ CAUTION:** Clean before the first use and after each use according to the cleaning instructions. **⚠ CAUTION:** Ensure the jug is cold before removing it from the base. Or, if removing with care, rinse with cold water immediately to cool down the jug and avoid burning risks.

CLEANING THE AEROCCINO

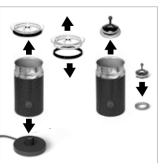


1. Remove the jug from the base, remove seal from lid, remove the whisk, remove the spring from the whisk.



2. Wash inner jug, seal, lid, whisk and spring with detergent and rinse with warm/hot water.



3. Do not put the jug in the dishwasher and do not immerse into water for cleaning purposes, do not water the bottom part of the Aeroccino which contains the electrical plug, but clean the interior of the Aeroccino with detergent and rinse with warm/hot water. Use non-abrasive materials.

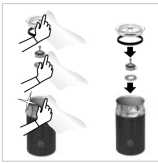


4. Dry all Aeroccino parts with a fresh and clean towel, cloth or paper and reassemble all parts.

⚠ CAUTION: In case base needs to be cleaned unplug it first and use only a damp cloth. Make sure the connector is dry before operating. Do not immerse the base in water neither put in the dishwasher. **⚠ CAUTION:** If the bottom part of the jug is wet, dry it before putting it back in contact with the plug. **⚠ CAUTION:** Only use non-abrasive cleaning materials. Do not use abrasives, sharp objects, brushes: risk of scratches and harm to the jug coating.

EMPTYING THE SYSTEM BEFORE A PERIOD OF NON-USE AND FOR FROST PROTECTION, OR BEFORE A REPAIR


📌 NOTE: your machine will be blocked for 10 minutes after emptying mode.

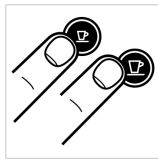


1. To enter the emptying mode, press both the Espresso and Lungo button to turn the machine off.



2. Remove the water tank and open the lever.

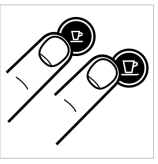


3. Press both the Espresso and Lungo button for 3 seconds.

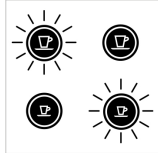


Both LEDs blink alternatively.



4. Close the lever.

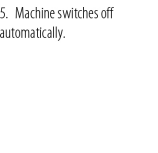

5. Machine switches off automatically.

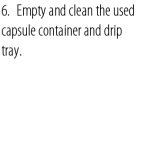


6. Empty and clean the used capsule container and drip tray.


RESET TO FACTORY SETTINGS



1. With the machine off, press and hold down the Lungo button for 5 seconds.

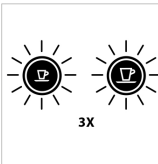

2. LEDs will blink fast 3 times to confirm machine has been reset to factory settings.

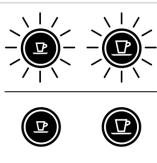


3. LEDs will then continue to blink normally, as heating up, until ready.
Steady lights: machine ready

Factory settings
Espresso Cup: 40 ml
Lungo Cup: 110 ml
Power Off mode: 9 min

CLEANING

⚠ WARNING
Risk of fatal electrical shock and fire.
Never immerse the appliance or part of it in water. Make sure to unplug the machine before cleaning. Do not use any strong cleaning agent or solvent cleaner. Do not use sharp objects, brushes or sharp abrasives. Do not place in a dishwasher.

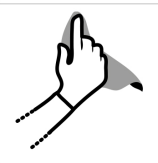

Clean the coffee outlet regularly with a soft damp cloth.



Maintenance unit can be removed in separate pieces for easy cleaning.

TROUBLESHOOTING

No light indicator.	→ Check the mains, plug, voltage, and fuse. In case of problems, contact a service center.
No coffee, no water.	→ First use: fill water tank with warm water (max. 55°C) and run through machine according to instructions. → Water tank is empty. Fill water tank. → Descale if necessary.
Coffee comes out very slowly.	→ Flow speed depends on the coffee variety. → Descale if necessary.
Coffee is not hot enough.	→ Preheat cup. → Descale if necessary.
Capsule area is leaking (water in capsule container).	→ Position capsule correctly. If leakages occur, contact a service center.
Irregular blinking.	→ Send the appliance for repair - Contact a service center.
No coffee, just water runs out (despite inserted capsule).	→ In case of problems, contact a service center.
The jug does not start.	→ Be sure to position the jug correctly on a clean base. Be sure to attach the whisk to the jug correctly.
Quality of milk froth not up to standard.	→ Be sure to use whole or semi-skimmed milk at refrigerated temperature (about 4-6 °C /39-42.8F). → Be sure to use the appropriate whisk and the jug is clean → It is highly recommended to not use special enriched milks, powdered reconstituted milks nor flavoured milks.
Red Button blinking.	→ a) The appliance is too hot. Rinse it under cool water b) Whisk is missing c) Not enough milk. Fill milk frother up to one of the two "max" level.
Milk Overflows.	→ Be sure to use the appropriate whisk and check the corresponding indicator level.

