

# FARBERWARE®

## 4 SLICE DIGITAL TOASTER

"Recipe book not included"



804106902

Please read this manual carefully before operating your unit and retain for future reference.

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- **Read all instructions before use.**
- Do not touch hot surfaces. Use handles or knobs.
- **WARNING** - to protect against electric shock, fire and personal injury:
  - do not immerse cord, plug or appliance in water or other liquids;
  - do not immerse the appliance or any electrical components in water or any other liquids;
  - always switch off and unplug the appliance before cleaning.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from wall outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact a service center.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injuries to persons.
- Do not use outdoors or in a damp area.
- Do not let power cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- To turn off and disconnect, press either **ON/OFF** or **CANCEL** Button, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods, metal foil packages, or metal utensils must not be inserted in the appliance as they may create a fire or risk of electric shock.
- A fire may occur if the appliance is covered or touches flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
- Do not attempt to dislodge food while the appliance is plugged in.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electric shock.
- Do not place any object made of the following materials in the appliance: paper, cardboard, plastic, metal.
- Do not use metal/sharp utensils to remove lodged food, as this may result in personal injuries or damages.
- Never leave the appliance unattended during operation.
- When heating toaster pastries, always use the lightest toast color setting.

• **WARNING:**

- **DO NOT** toast pastries with runny fillings or frosting.
- **DO NOT** toast torn slices of bread.
- **DO NOT** place buttered bread or wrapped food into the toaster. Melted butter will cause fire.
- **DO NOT** toast small-sized bread, mini-baguettes, breadsticks, etc.

## ADDITIONAL SAFEGUARDS

This appliance is for **HOUSEHOLD USE ONLY**.

**WARNING:**

- **DO NOT OPERATE THIS APPLIANCE, IF THE POWER CORD SHOWS DAMAGE OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.**
- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- Longer extension cords are available and may be used if care is exercised in their use.
- If an extension cord is used:
  - The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
  - If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord.
  - The longer cord should be arranged so that it does not drape over the countertop or table top where it can be pulled on by children or tripped over unintentionally.

## GROUNDING PLUG


- This appliance must be grounded while in use. Do not remove or ignore the grounding pin during use.

**WARNING:**


- To ensure continued protection against risk of electric shock, connect to properly grounded outlets only.
- Do not let children handle or put the electrical cord into their mouths.

# SAVE THESE INSTRUCTIONS!


# PARTS

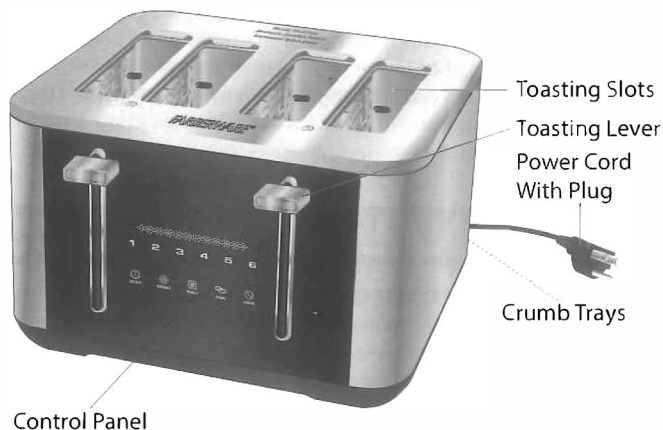

Toasting Time Indicator  
Toasting Browning Level: 1 (light) to 6 (dark)

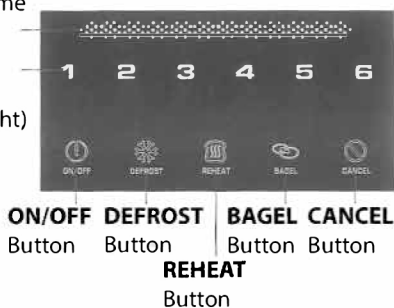

Cord Storage

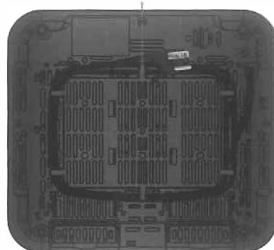

**NOTE:** The images shown here are for illustrative purposes only and may be subject to change, the actual descriptions of control panel and their locations may vary depending on the model.

- The images shown here are for illustrative purposes only and may be subject to change.
- Accessory type and quantity may vary depending on the model.

# OPERATION

## Before first use

- Remove all packaging materials and/or other transportation means.
- Check package content to verify it is complete and undamaged. Do not operate the appliance if the content is incomplete or appears damaged.  
Contact a service center.

## Danger of suffocation!

- Packaging materials are not toys. Always keep plastic bags, foils and foam parts away from babies and children. Packaging material could block airways and prevent breathing.

## NOTE:

- The appliance may produce an odor and/or emit smoke when switched on for the first time, as residues from the production process are eliminated. This is normal and does not indicate a defect or hazard.
- Always use the appliance with the Crumb Trays.
- When using the appliance for the first time, it is recommended to operate it for at least twice on its highest browning setting (↪ Operation), until no odor or smoke is present. During use, ensure ample ventilation.
- Let the appliance cool completely.
- Clean the appliance (↪ Cleaning and Maintenance).

## Using the appliance

This appliance can be used to toast plain fresh or frozen toast/bagels or to reheat previously toasted toasts/bagels. Do not use for any other foods. Never place any objects in the Toasting Slots.



## NOTE:

- The appliance has a rated power of 1600W. Before plugging it into the wall outlet, ensure that the electrical circuit is not overloaded with other appliances. This appliance should always be operated on a separate 120V ~ 60Hz wall outlet.
- Do not connect the appliance to a wall outlet unless it is fully assembled.
- Make sure no food or other objects are inside the Toasting Slots.
- Place the appliance on a clean, flat and heat resistant surface.
- When using the appliance on wooden furniture, use a heat resistant mat to protect the wood from damages. Ensure a minimum distance around the appliance of at least 4 inches to other objects, cupboards and walls.

## WARNING:


- Only use accessories recommended by the manufacturer. Do not use any other accessories with the appliance.
- Do not cover or insert any objects into the air vents.
- Never let the Power Cord come in contact with the housing of the appliance during use.

- Do not toast torn or large/thick toasts/bagels, as it may become lodged in the Toasting Slots.
- Make sure the Crumb Trays are free of food residues and inserted properly (ill. **a**). Never use the appliance without the Crumb Trays.
- Insert the Plug into a wall outlet (ill. **b**). All indicators turn on. After a second, only the **ON/OFF** Button remains on and the appliance enters the standby mode.
- Remove any protective wrappings from toasts/bagels before placing them in the Toasting Slots.

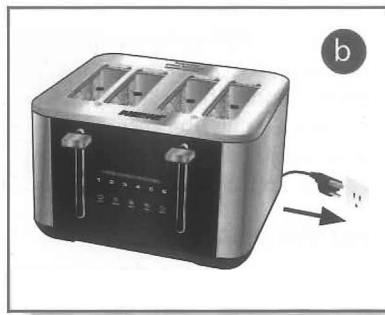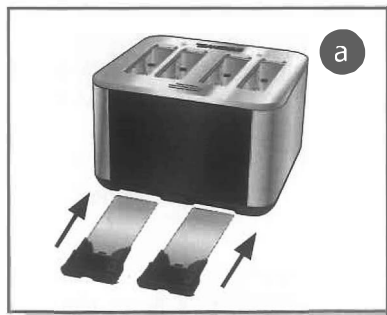

#### NOTE:


- The Control Panel controls both left and right toasting units. The browning level can be selected individually for each toasting unit. And once the function is set, both sides function will be the same. The toasting units can either be used independently from each other or simultaneously.
- Press the **ON/OFF** Button to enter the selection mode (ill. **c**).

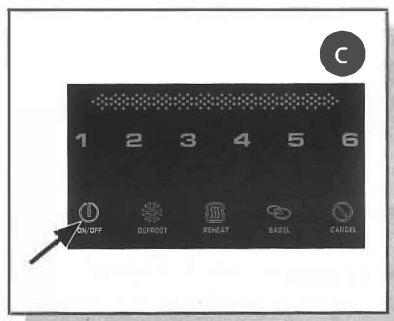

**NOTE:** The images shown here are for illustrative purposes only and may be subject to change, the actual descriptions of control panel and their locations may vary depending on the model.

# OPERATION

- Touch the Control Panel to adjust the browning level (ill. **d**). Choose between level **1** to **6**, according to your preferences. The Display lights turn on to show the selected level. Without selecting a browning level, the browning level is set to 3 by default.
- Press the required function keys(**BAGEL, REHEAT, DEFROST**). See below Function Selection.
- Put the toast/bagel into the Toasting Slot.
- Press the Toasting Lever down, until it locks in place to switch the heating elements on (ill. **e**). All Toasting Time Indicators on the Display switch on at first, and then switch off one by one until completion of the toasting operation.
- The browning level and function can be changed within 3 seconds after the first Toasting Level is pressed down.
- After 3 seconds, can change the browning level for the other side of toasting unit. Then press the Toasting Lever down. The Toasting Time indicators will be reset to full for this later toaster unit. The browning level can be changed within 3 seconds after the second Toasting Lever is pressed down.
- The Toasting Lever and contents of the Toasting Slots will pop up automatically once complete toasting operation.

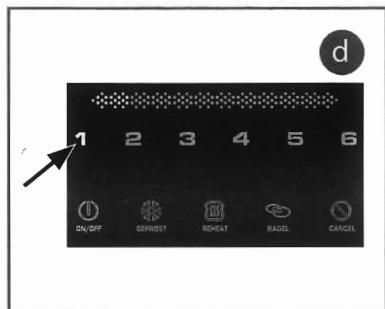

- The Toasting Lever does not remain in the downward position, unless the appliance is connected to an energized wall outlet.
- To interrupt the cycle, press either the **ON/OFF** or **CANCEL** Button. The Toasting Lever and contents of the Toasting Slots pop up. After press the **ON/OFF** Button, the appliance enters the standby mode. After press the **CANCEL** Button, the appliance will enter the standby mode after 5 minutes.
- For next toasting, the browning level setting will be the same per last toasting.
- Do not force the Toasting Lever up. Always press the **ON/OFF** Button to switch the appliance off.

The images shown here are for illustrative purposes only and may be subject to change.

## Danger of burns!

- Always pay special attention when placing or removing accessories from the appliance and/or the contents of the Toasting Slots.
- Toasted food and Toasting Slots get hot, pay attention when removing toasted/reheated food. Use suitable non-metal utensils if required.

Once the toasting cycle is complete, and all Toasting Time Indicators on the Display switched off, the Toasting Lever and contents of the Toasting Slots pop up. Only the **ON/OFF** Button remains on and the appliance enters the standby mode.

### NOTE:

- This appliance is equipped with a lift up function to assist in removing toasted food from the Toasting Slots. Pull the Toasting Lever upwards to lift the toasted food slightly higher for easier removal.
- The appliance keeps the settings used during the last round until the appliance is unplugged or the settings are modified.

Once you have finished using the appliance, remove the Plug from the wall outlet (ill. **f**). The **ON/OFF** Button switches off.



## Defrost function

Use the defrost function to defrost plain frozen toasts/bagels.

- Place the bread slices into the Toasting Slots. Select the required browning level.
- Press the **DEFROST** Button and then press the Toasting Lever down, until it locks in place. The defrost cycle begins.
- Or press the first Toasting Lever down until it locked, and then press the **DEFROST** Button within 3 seconds. The Defrost cycle begins. Press the **DEFROST** Button again within 3 seconds to cancel the Defrost function.
- Once the defrost cycle is complete, the Toasting Lever and contents of the Toasting Slots pop up.

## Reheat function

Use the reheat function to reheat previously toasted plain frozen toasts/bagels.

- Place the previously toasted toasts/bagels into the Toasting Slots. Select the required browning level.
- Press the **REHEAT** Button and then press the Toasting Lever down, until it locks in place. The reheat cycle begins.
- Or press the first Toasting Lever down until it locked, and then press the **REHEAT** Button within 3 seconds. The Reheat cycle begins. Press the **REHEAT** Button again within 3 seconds to cancel the Reheat function.
- Once the reheat cycle is complete, the Toasting Lever and contents of the Toasting Slots pop up.

### NOTE:

- Defrost and Reheat function cannot be used at the same time.

## Bagel function

Use the bagel function to toast bagels.

### NOTE:

- Bagels have to be cut in half. Do not force them into the Toasting Slots.
- Place the inside of the bagel facing the inside of the appliance. Pay attention to the respective position of each bagel half in regards to each Toasting Slot.
- Place the bagel halves into the Toasting Slots. Select the required browning level.
- Press the **BAGEL** Button and then press the Toasting Lever down, until it locks in place. The bagel cycle begins.
- Or press the first Toasting Lever down until it locked, and then press the **BAGEL** Button within 3 seconds. The Bagel cycle begins. Press the **BAGEL** Button within 3 seconds to cancel the Bagel function.
- Once the bagel cycle is complete, the Toasting Lever and contents of the Toasting Slots pop up.

# CLEANING AND MAINTENANCE


Proper maintenance will ensure many years of service from your appliance. Clean the appliance after every use. The appliance contains no user serviceable parts and requires little maintenance. Leave any servicing or repairs to qualified personnel.

### WARNING:


- Always ensure the appliance is switched off. Disconnect the Plug from the wall outlet before cleaning. Allow all parts of the appliance to cool down completely.

**NOTE:**

- Do not immerse the Power Cord With Plug or appliance into water or any other liquids.
- Do not use abrasive cleaners, steel wool or scouring pads (ill. **g**). Dry all parts thoroughly after cleaning, before using or storing the appliance. Ensure that no water enters the appliance housing.

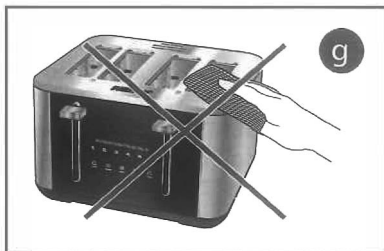


- Clean the surface of the appliance with a damp cloth or sponge and a mild detergent.
- Do not use metal/sharp utensils to remove lodged food, as this may result in personal injuries or damages (ill. **h**).
- To clean the Crumb Trays, remove it from the appliance completely. Dispose of any crumbs. Rinse the Crumb Trays with water and a little detergent. Dry thoroughly with a soft cloth. Reinsert the Crumb Trays carefully.

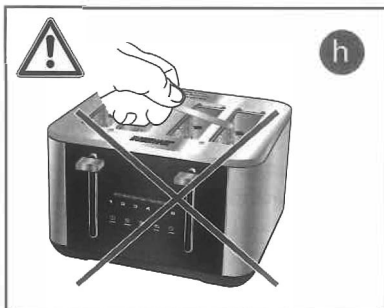**NOTE:**

- Dry all parts and surfaces thoroughly before use. Make sure that all parts and surfaces are completely dry before connecting the appliance to a wall outlet.

**Storage**

- Before storage, always make sure the appliance is completely cool, clean and dry.
- The Power Cord can be stored in the Cord Storage underneath the appliance (ill. **i**).
- It is recommended to store the appliance in a dry place.
- Store the appliance on a stable shelf or in a cupboard. To avoid accidents, ensure that both the appliance and its Power Cord are beyond reach of children or pets.

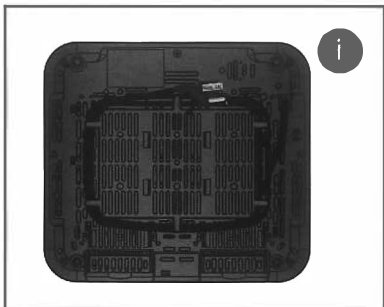

# TROUBLESHOOTING

| Problem                                                                 | Cause                                                                                              | Solution                                                                                                                                                                                                 |
|-------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The appliance is not working                                            | Appliance not plugged in<br>Wall outlet not energized                                              | Insert the Plug into the wall outlet<br>Check fuses and circuit breaker                                                                                                                                  |
| The appliance heats up but the Display and/or Button(s) do not light up | Malfunctioning appliance                                                                           | Disconnect the appliance from the wall outlet and contact a service center.                                                                                                                              |
| The appliance heats up but the Toasting Lever is not pressed down       | Malfunctioning appliance                                                                           | Disconnect the appliance from the wall outlet and contact a service center.                                                                                                                              |
| The Toasting Lever is pressed down but the appliance does not heat up   | Malfunctioning appliance                                                                           | Disconnect the appliance from the wall outlet and contact a service center.                                                                                                                              |
| Toasts/bagels are ejected very quickly                                  | Toasting Lever not locked in place                                                                 | Press the Toasting Lever down until it locks in place. Ensure the appliance is connected to an energized wall outlet                                                                                     |
| Toasts/bagels are not ejected once the toasting cycle is complete       | Damaged Toasting Lever<br><br>Toasts/bagels stuck in the Toasting Slots (torn/too thick/too large) | Disconnect the appliance from the wall outlet and contact a service center.<br><br>Disconnect the appliance from the wall outlet and allow it to cool down. Remove toasts/bagels with non-metal utensils |

| Problem                                           | Cause                                                                | Solution                                                                                                                                                                                                     |
|---------------------------------------------------|----------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The appliance produces an odor and/or emits smoke | Residues from the production process are eliminated during first use | Operate the appliance at least twice on its highest setting, with no food, until no odor or smoke is present                                                                                                 |
|                                                   | Food type not suitable for toasting                                  | Press either the <b>ON/OFF</b> or <b>CANCEL</b> Button to stop the cycle and remove the food from the Toasting Slots, using suitable non-metal utensils                                                      |
|                                                   | Browning level too high                                              | Press either the <b>ON/OFF</b> or <b>CANCEL</b> Button to stop the cycle and remove the toasts/bagels from the Toasting Slots, using suitable non-metal utensils. Reduce the browning level for the next set |
|                                                   | Malfunctioning appliance                                             | Disconnect the appliance from the wall outlet and contact a service center.                                                                                                                                  |

If additional assistance is needed, please contact a service center.

## TECHNICAL DATA

Rated voltage: 120V ~ 60Hz

Rated power input: 1600W

PRINTED IN MEXICO  
 SC: 12-26-2023 Elbrd:J.M  
 OBPB:4897074551967  
 SHDML: FWF0SS100017876

804106902

