

QUICK START GUIDE

SETTING UP YOUR AIR PURIFIER



 
1. **DO NOT** plug in the air purifier. First, carefully turn the air purifier upside down and place it on a level, floor surface. Rotate the filter door counter clockwise to the unlocked position to access the HEPA filter.




2. Take the HEPA filter out of its plastic packaging. Reinstall the HEPA filter in either orientation.




3. With the HEPA filter installed, twist the filter door clockwise until it clicks into place.

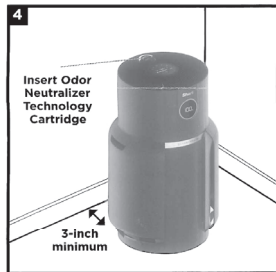

 4. Set up the air purifier on a flat, level, floor surface, at least 3 inches (8 cm) away from walls and objects.
If included with your HP300 series air purifier, locate the odor neutralizer technology cartridge and follow the instructions for how to insert into the product.

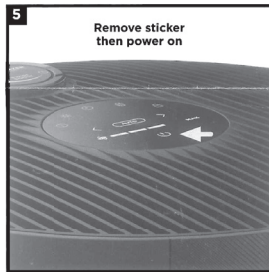

 5. Carefully remove the yellow sticker on the top of the product to access the control panel.
Plug the air purifier into an electrical outlet and press the power button on the top control panel.

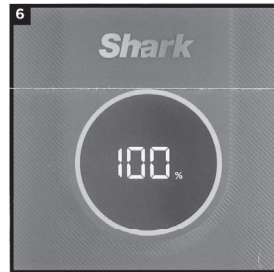

6. When the air purifier power is on, it will begin to analyze the air quality, indicated by the rotating lights.
After a few seconds, the air purifier will display the current air quality. See below for more information.

UNDERSTANDING YOUR AIR QUALITY

On the front display, the color of the ring tells you about your air quality.



TRY THESE TIPS TO ENSURE CLEAN AIR CONFIDENCE.

- **Run on Auto Mode**—Fan speeds will adjust automatically. As air quality decreases, the fan speed will increase.
- **Optimize Performance in Eco Mode**—After 100% clean air status is achieved for 5 minutes in Auto Mode, your air purifier will enter Eco Mode. The HEPA filter life will be optimized.
- **Maintain Mesh Dust Filters**—When you see the red pulsing ring on the front display, check and clean both mesh dust filters to help keep your air purifier working optimally for longer.

Accessory type and quantity may vary depending on the model.

• The images shown here are for illustrative purposes only and may be subject to change, the actual descriptions of control panel and their locations may vary depending on the model.

• The image shown here is for illustrative purposes only and may be subject to change.

IMPORTANT SAFETY INSTRUCTIONS

HOUSEHOLD USE ONLY

READ ALL THESE INSTRUCTIONS BEFORE USE.

1. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature. Unplug or disconnect the appliance from the power supply before servicing.
2. **DO NOT** operate any unit with a damaged cord or plug. Discard the unit or return to an authorized service facility for examination and/or repair.
3. **DO NOT** run cord under carpeting. **DO NOT** cover cord with throw rugs, runners, or similar coverings. **DO NOT** route cord under furniture or appliances. Keep cord away from high traffic areas where it will not be tripped over.
4. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
5. This appliance is not intended for use by anyone (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they **DO NOT** play with the appliance.
7. Cleaning and user maintenance shall not be made by children without supervision.
8. Prior to cleaning or other maintenance, the appliance must be unplugged from the electrical outlet.
9. **DO NOT** handle plug or appliance with wet hands.
10. **DO NOT** use without filter in place.
11. Only use Shark® branded filters and accessories.
12. **DO NOT** damage the power cord:
 - a) **DO NOT** pull or carry appliance by the cord or use the cord as a handle.
 - b) **DO NOT** unplug by pulling on cord. Grasp the plug, not the cord.
 - c) **DO NOT** stand the appliance on the power cord, close a door on the cord, pull the cord around sharp corners, or leave the cord near heated surfaces.
13. **DO NOT** use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
14. **DO NOT** use if airflow is restricted. If the air paths become blocked, turn the appliance off and unplug from electrical outlet. Remove all obstructions before you plug in and turn on the unit again.
15. **DO NOT** use if appliance is not working as it should, or has been dropped, damaged, left outdoors, or dropped into water.
16. **DO NOT** place appliance on unstable surfaces such as chairs or tables.
17. **DO NOT** use in the following areas:
 - a) Wet or damp surfaces
 - b) Outdoor areas
 - c) Spaces that are enclosed and may contain explosive or toxic fumes or vapors (lighter fluid, gasoline, kerosene, paint, paint thinners, mothproofing substances, or flammable dust)
18. Turn off all controls before plugging in or unplugging the appliance.
19. Unplug from electrical outlet when not in use and before any maintenance or cleaning.
20. Hand-wash with water only. Washing with cleaning chemicals could damage the unit.
21. Make sure filter is in place after routine maintenance.
22. Not suitable for use with solid-state speed controls.

ODOR NEUTRALIZER TECHNOLOGY

23. Observe the following when interacting with the odor neutralizer technology cartridge.
 - a) **DO NOT** attempt to disassemble odor neutralizer technology cartridge.
 - b) Avoid direct contact with the fragrance pod in the cartridge.
 - c) **DO NOT** directly inhale from the odor neutralizer technology cartridge.
 - d) Keep away from children and pets.
 - e) Keep away from heat, sparks, and open flame.
 - f) **DO NOT** place in direct sunlight.

FRAGRANCE CARTRIDGE FIRST AID

- a) Avoid contact with fabrics and finished surfaces.
- b) Eye contact: Remove contact lenses if present. Rinse continuously with water for several minutes
- c) Skin contact: Wash hands thoroughly after handling. If irritation or rash develops, seek medical advice/attention.
- d) Inhalation: Move person to fresh air if they are experiencing any respiratory symptoms. If symptoms persist, seek medical advice/attention.
- e) Ingestion: **DO NOT** induce vomiting. Seek medical advice/attention.

24. Dispose of batteries properly. Keep batteries away from children at all times. Even used batteries can cause injury.

WARNING: Chemical Burn Hazard. Keep batteries away from children.

This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. When not changing batteries, keep the battery compartment completely closed. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

WARNING: Contains coin battery.

Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate. Even used batteries may cause severe injury or death. Call a local poison control center for treatment information. Compatible battery type is CR2025. The nominal battery voltage is 3V. Non-rechargeable batteries are not to be recharged. Do not force discharge, recharge, disassemble, heat above 60 C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

Ensure the batteries are installed correctly according to polarity (+ and -). Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



NOTE: (Remote control and battery included in UA1450 model only.)

READ AND SAVE THESE INSTRUCTIONS



814100222

PRINTED IN MEXICO / SC: 06-06-2024_2P / MODEL: HP300_B

OBPN: HP300Series_W5_QSG_MP_Mv4_230509 / Elbrd: J.E.

Rev 1: 09-04-2024 agrego modelo UA1450_part: remote & Batteries