

Step 2. Check the Soundbar's status

The blue LED should not be blinking once the Bluetooth connection is complete.



NOTES

 
- If asked for a PIN code when connecting a Bluetooth device, enter <0000>.
- The Soundbar automatically turns off after 18 minutes in the Ready state.
- The Soundbar may not perform Bluetooth search or connection correctly under the following circumstances:
 - If there is a strong electrical field around the Soundbar.
 - If several Bluetooth devices are simultaneously paired with the Soundbar.
 - If the Bluetooth device is turned off, not in place, or malfunctions.
- Electronic devices may cause radio interference. Devices that generate electromagnetic waves must be kept away from the Soundbar main unit - e.g., microwaves, wireless LAN devices, etc.

06 CONNECTING AN EXTERNAL DEVICE


Connect to an external device via an optical cable or analog cable to play the external device's sound through the Soundbar.

Connecting using an Optical Cable

Step 1. Connect using an Optical Cable

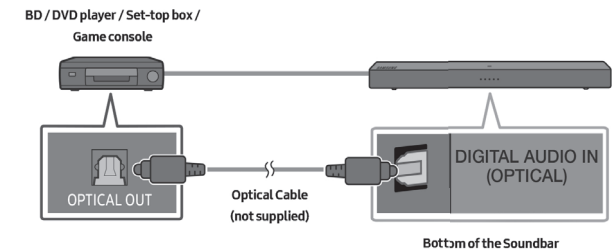


 Step 2. Change the Soundbar's mode to D.IN

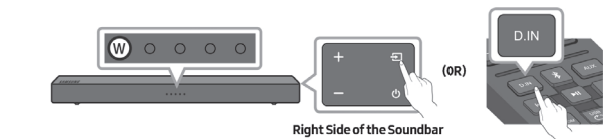


Connecting using an Analog Audio (AUX) Cable

 Step 1. Connect using an Analog Audio (AUX) Cable

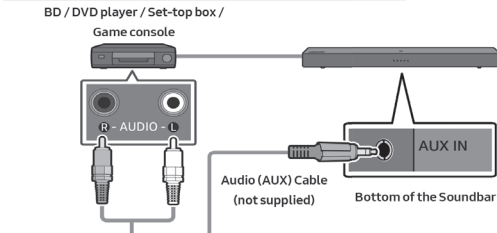


 Step 2. Change the Soundbar's mode to AUX



07 CONNECTING A USB STORAGE DEVICE

 
Step 1. Connect a USB Drive

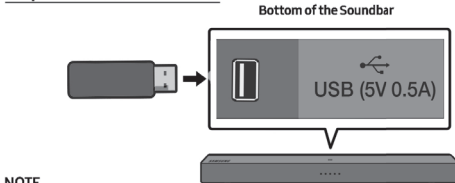

NOTE

- The Soundbar automatically turns off (Auto Power Off) if you do not connect a USB device to the Soundbar within 18 minutes.

 Step 2. Change the Soundbar's mode to USB

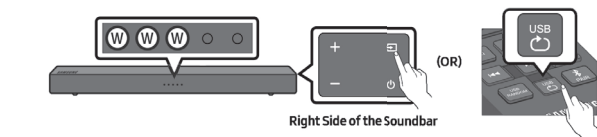

Setting Repeat Play Options

Repeat play

When the Soundbar is in "USB" mode, each time you press the  button the "USB" mode changes how it plays tracks in the following order: "Repeat - Off" > "Repeat - 1 song" > "Repeat - All songs". See the table below for details.

Mode	Remote control Button	LED Indicator
Repeat - Off		
Repeat - 1 song		
Repeat - All songs		

Repeat play at Random

When the Soundbar is in "USB" mode, once you press the  button, the "USB" mode changes how it plays tracks to "Repeat - Random". See the table below for details.

Mode	Remote control Button	LED Indicator
Repeat - Random		

 
Software Update

Samsung may offer updates for the Soundbar's system firmware in the future.

If an update is offered, you can update the firmware by connecting a USB device with the firmware update store on it to the USB port on your soundbar. For more information about how to download update files, go to the Samsung Electrics website at (www.samsung.com - support).

Then, enter or select the model number of your Soundbar,select the Software & Apps option, and then Downloads.Note that the option names can vary.

08 SYSTEM INITIALIZE

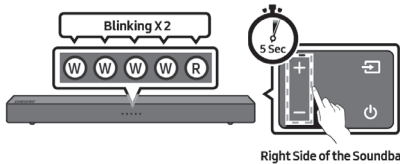

With the Soundbar on, press the **+ - (Volume)** buttons on the body at the same time for at least 5 seconds.

CAUTION

 
- All the settings of the Soundbar are initialized. Be sure to perform this only when initialization is required.

09 INSTALLING THE WALL MOUNT
(Wall mount kit not supplied)


Installation Precautions

- Install on a vertical wall only.
- Do not install in a place with high temperature or humidity.
- Verify whether the wall is strong enough to support the product's weight. If not, reinforce the wall or choose another installation point.
- Purchase and use the fixing screws or anchors appropriate for the kind of wall you have (plaster board, iron board, wood, etc.). If possible, fix the support screws into wall studs.
- Purchase wall mounting screws according to the type and thickness of the wall you want to mount the Soundbar on.
 - Diameter: M4
 - Length: 1.6 inches or longer recommended.
- Connect cables from the unit to external devices before you install the Soundbar on the wall.
- Make sure the unit is turned off and unplugged before you install it. Otherwise, it may cause an electric shock.


Wall mount Components

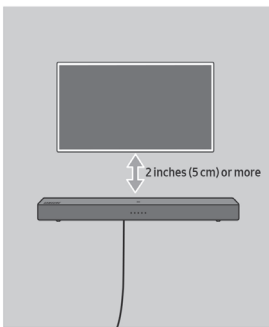

 For Installation on Concrete Walls
(not supplied)

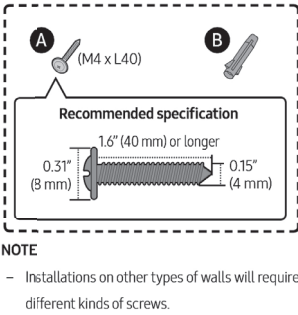

 
1.

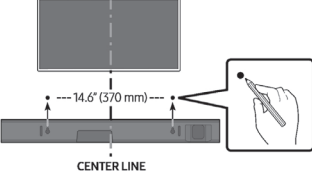

NOTES

- If your TV is installed on the wall, install the Soundbar 2 inches (5 cm) or more below your TV.
- Use a pencil to mark the holes' positions.

 
2.

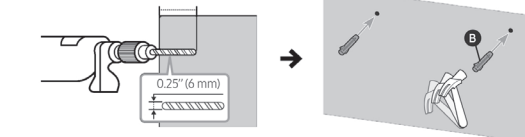

IMPORTANT NOTE

- The installation method shown here is for CONCRETE walls. Installation methods will vary depending on the wall type. For installation on dry wall, we strongly recommend you drill screw support holes into the underlying wood studs.

 
3.

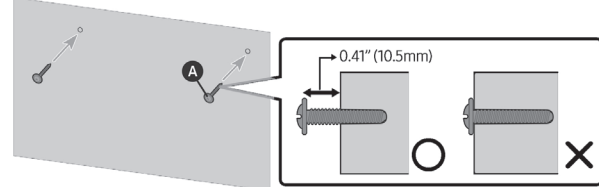

4.



 5.

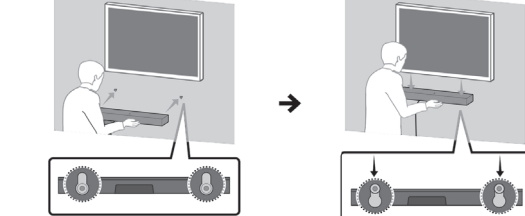

NOTE

- Supports for wall installation are built into the back of the Soundbar.

CAUTION

- Press the Soundbar down with sufficient force to fix it to the wall. If the Soundbar is not firmly fixed to the wall, it could be accidentally detached, resulting in personal injury.
- Do not bump into or strike the Soundbar (especially from the bottom). The impact could detach the Soundbar from the wall, resulting in personal injury.

The cables mentioned in this guide is not supplied with your unit.

Note: The image shown here is for illustrative purposes only and may be subject to change. The actual number of ports and their locations may vary depending on the model.

10 TROUBLESHOOTING

Refer to the table below if this product does not function properly. If the problem you are experiencing is not listed below or if the instructions below do not help, turn off the product, disconnect the power cord, and contact a service center.

The unit will not turn on.
Is the power cord firmly plugged into the wall outlet? → Unplug and reconnect the power cord to the wall outlet to make sure the connection is secure.
A function does not work when the button is pressed.
Is there static electricity in the air? → Disconnect the power plug and connect it again.
Sound dropouts occur in Bluetooth mode.
→ See the Bluetooth connection sections. → In Bluetooth connection mode, the Bluetooth connection will be lost if the distance between the Soundbar and the Bluetooth device exceeds 32.8 ft (10m).
Sound is not produced.
Is the Mute function on? → Press the VOL button to cancel the function.
Is the volume set to minimum? → Adjust the Volume.
The remote control does not work.
Is the battery drained? → Replace with new batteries.
Is the distance between the remote control and Soundbar main unit too far? → Move the remote control closer to the Soundbar main unit.

11 LICENSE



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.



For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, DTS in combination with the Symbol, and DTS 2.0 Channel are registered trademarks or trademarks of DTS, Inc. in the United States and/or other countries. © DTS, Inc. All Rights Reserved.



The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Samsung Electronics Co., Ltd. is under license. Other trademarks and trade names are those of their respective owners.

12 OPEN SOURCE
LICENSE NOTICE

To send inquiries and requests regarding open sources, contact Samsung via Email (oss.request@samsung.com).

13 IMPORTANT
NOTES ABOUT
SERVICE

- Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance.
- An administration fee may be charged if either:
 - a. An engineer is called out to your home at your request and there is no defect in the product.
 - b. You bring the unit to a repair center and there is no defect in the product.
- You will be advised of the amount of the administration fee before any work is done or a home visit is made.
- If you have a problem with this product, we strongly recommend you read the appropriate section of this manual, contact a service center.

14 SPECIFICATIONS AND GUIDE

Specifications

Model Name	HW-T400
USB	5V/0.5A
Weight	4.4 lbs (2.0 kg)
Dimensions (W x H x D)	25.2 x 2.6 x 4.2 inches (641.0 x 65.0 x 107.0 mm)
Operating Temperature Range	+41°F to +95°F (+5°C to +35°C)
Operating Humidity Range	10 % ~ 75 %
Supported play formats (DTS 2.0 sound is played in DTS format.)	LPCM 2ch, Dolby Audio™ (supporting Dolby® Digital), DTS

NOTES

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.

