

KEURIG

 
Let's get
brewing.

K-Express®

SINGLE SERVE COFFEE MAKER

"Recipe book not included"

Quick Start Guide

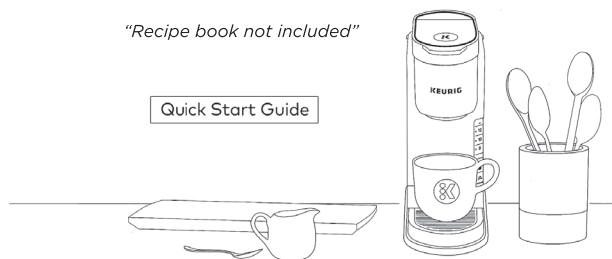

Please Read this guide carefully before using the device and keep it for future reference.

IMPORTANT SAFEGUARDS



When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS.**
2. For household use only.
3. Do not use distilled water.
4. Scalding may occur if the handle is opened during the brewing process.
5. Do not touch hot surfaces. Use handles or knobs.
6. To protect against fire, electric shock, and injury to persons, do not immerse appliance, cord, or plugs in water or other liquid.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children.
8. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
9. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact a service center.
10. The use of accessory attachments not authorized by the appliance manufacturer may result in fire, electric shock, or injury to persons.
11. Do not use outdoors.
12. Do not let cord hang over edge of table or counter or touch hot surfaces.
13. Do not place on or near a hot gas or electric burner or in a heated oven.
14. Always attach plug to appliance first (if not permanently attached), then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
15. Do not use appliance for other than intended use.
16. Use brewer in upright position only.
17. Only use K-Cup® pods intended for this appliance. If the pod does not fit, do not force it into the appliance.
18. Avoid spilling any liquid substances on powered connectors.

 
1. **WARNING:** Keep all plastic bags away from children.
2. **CAUTION:** Keurig recommends using only Keurig® My K-Cup® Universal Reusable Filters and Keurig® approved K-Cup® pods in this appliance. If the pod does not fit, do not force the pod into the appliance. The use of non-Keurig® pods or accessories may cause brewer malfunction or injury.

3. **WARNING:** Used K-Cup® pods should be removed from the pod holder, and the drip tray and water reservoir (if applicable) should be rinsed clean regularly or as part of the daily cleaning routine.
4. **WARNING:** There is extremely hot water under pressure in the K-Cup® pod holder during the brew process. To avoid risk of injury, do not lift the handle or otherwise open the handle during the brew process.
5. **CAUTION:** There are sharp needles that puncture the K-Cup® pod above the K-Cup® pod holder and in the bottom of the K-Cup® pod holder. To avoid risk of injury, be aware of the needle locations.
6. **WARNING:** If this appliance has a polarized plug (one blade is wider than the other), it is intended to fit into a polarized outlet only one way to reduce the risk of electric shock. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
7. **POWER CORD INSTRUCTIONS:**
 - a. A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
 - b. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
 - c. If a long detachable power-supply cord or extension cord is used:
 - i. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - ii. If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord.
 - iii. The longer cord should be arranged so that it will not drape over the countertop or tabletop, where it can be pulled on by children or tripped over.
8. **CAUTION: HOT COCOA/OTHER NON-COFFEE PODS:** Immediately after using a hot cocoa/other non-coffee pod, run a hot water brew cycle without a pod to avoid the possibility of clogging the exit needle. Do NOT assume the next user will do this.

SAVE THESE INSTRUCTIONS




Button Overview

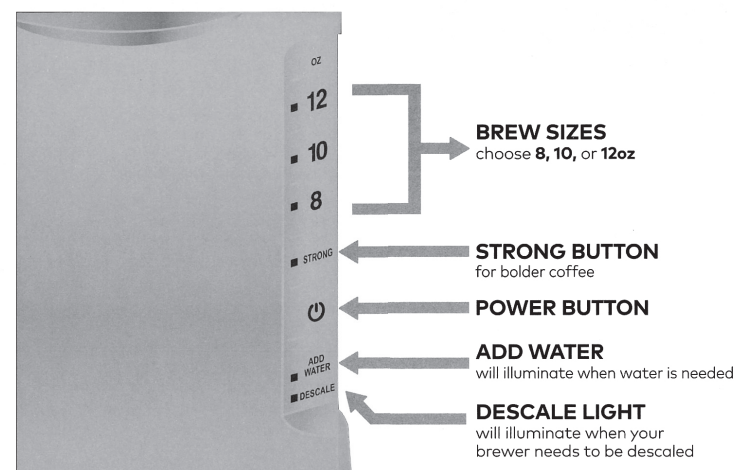

NOTE:

The actual descriptions of control panel and their locations may vary depending on the model.

 Before You Brew

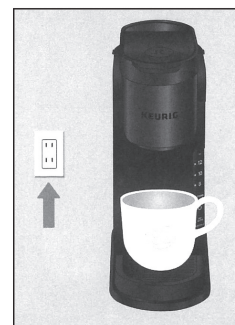

(CUP is not included)

1 Plug & Place

Remove packing tape from brewer. Plug into an outlet.

Place a large mug (10oz minimum) on the drip tray.

Accessory type and quantity may vary depending on the model.



2 Rinse & Fill

Remove the water reservoir lid, then lift the reservoir straight up to remove it. If you have a Keurig® Water Filter (sold separately), install it now. Refer to your Water Filter Starter Kit for instructions.

Rinse reservoir with fresh water and fill to the **MAX FILL** line.

Replace water reservoir, making sure the tank is seated properly in the base. Replace lid.

NOTE: Do not use distilled water.

 
(Keurig Water Filter is not included)

• The images shown in this manual are for illustrative purposes only and may be subject to change.



3 Lift & Lower

Lift and lower the handle. **Do not insert a K-Cup® pod.** The brewer will power on automatically.

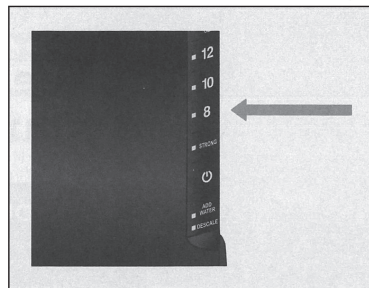

4 Cleansing Brew

The 3 cup sizes will blink. Press the **8oz** button to start a cleansing brew. Pour the hot water into the sink.

Do not remove the water reservoir or lift the handle once the brew button has been pressed until the brew has completed.
The one-time setup process is now complete and you are ready to brew!

 
Brew Your First Cup



5 Place Mug & Pod

Place a mug on the drip tray. If using a travel mug, remove the drip tray and place the mug on the drip tray base. Lift the handle and place a K-Cup® pod in the K-Cup® pod holder. Lower the handle completely to close the lid.

Do not remove the foil lid on the K-Cup® pod.

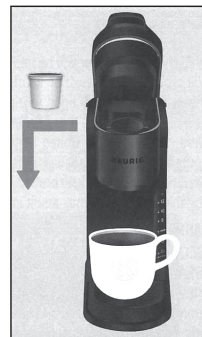

(K-Cup pods is not included)

6 Brew & Enjoy!

The 3 brew sizes will blink. Select and press your brew size. The light will remain illuminated while brewing. Brewing is complete when the sizes are all illuminated. Lift the handle and recycle the K-Cup® pod (see instructions above). For a bolder brew, the **STRONG** button may be turned on before or after brew size is selected.

CAUTION: While brewing, there is extremely hot water in the K-Cup® pod holder. To avoid injury, do not lift the handle during the brewing process.

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

Caring for Your Brewer

(Keurig Descaling Solution is not included)

Descaling Your Brewer: Keurig® brewer performance matters. Descaling regularly removes mineral buildup that can affect taste and quality, ensuring your Keurig® brewer brews a perfect cup every time. In order for the **DESCALE** light to turn off, you must enter **DESCALE MODE** on the brewer. To enter **DESCALE MODE**, press and hold the **8oz** and **12oz** buttons together for 3 seconds.

Frequency	Product	Benefit
Weekly	Keurig® Rinse Pods (not included)	Weekly cleaning with Keurig® Rinse Pods helps reduce flavor carryover between brews
Every 2 months	Keurig® Water Filters (not included)	Keep your water fresh and help remove impurities
Every 3 months or when the Descale notification turns on*	Keurig® Descaling Solution Keurig® Descaling Pouch** (not included)	Eliminate mineral buildup to enhance the taste of your coffee and preserve the long-term health and performance of your coffee maker

*To turn off Descale notification, follow the full descaling procedure as outlined in this guide and the Use & Care Guide.

**Descaling pouch provides 1 month of coverage.

If the brewer has been in storage or hasn't been used in days, run a cleansing brew before brewing your beverage.

On a weekly basis, **hand-wash** the water reservoir, lid, and drip tray with warm, soapy water and rinse clean.

CAUTION: Parts are not dishwasher safe.

NOTE: Do not dry the inside of the water reservoir with a cloth, as lint may remain.

Brewer Features

FAST & FRESH-BREWED: Coffee made in minutes.

STRONG BREW: For a bolder, more intense cup.

BACK-TO-BACK BREWING: Immediately brew a second cup; no need to wait for reheating.

TRAVEL MUG FRIENDLY: Accommodates travel mugs up to 7" tall.

MAINTENANCE ALERT: Reminds you to descale after every 250 brews.

COMPATIBLE WITH THE MY K-CUP® UNIVERSAL REUSABLE COFFEE FILTER: Brew your own ground coffee (sold separately).

AUTO OFF: Automatically turns your brewer off after a brew is complete or after 5 minutes of inactivity for energy savings.

DESCALE MODE: Once in mode, follow guided process found in the Use & Care Guide to effectively remove scale from your brewer.

HIGH ALTITUDE: To ensure your coffee maker works properly at higher altitudes (5,000 feet), please enable the High Altitude Brewing Mode on your coffee maker.

1. Begin with the brewer plugged in and powered off.
2. Press and hold the **POWER** button and **8oz** button for 3 seconds. The **12oz** button will illuminate to confirm that the High Altitude Brewing Mode has been enabled.
3. High Altitude Mode will remain enabled until steps 1-2 are repeated and the **12oz** light turns off and the **8oz** light turns on to confirm that the High Altitude Brewing Mode is disabled.

HIGH ALTITUDE BREWING: While holding the brewer handle up, push down slowly on the K-Cup® pod in the pod holder until the bottom of the K-Cup® pod is punctured by the exit needle.

STRONG BREW MODE: Keeps the Strong feature on with every brew.

With the brewer plugged in and powered off, press and hold the **STRONG** button for 3 seconds (**STRONG** will blink twice).

To exit the mode, repeat the same steps.

To turn the Strong Mode off for a single brew, press the **STRONG** button once until no longer illuminated.

Strong Mode will be reactivated for the next brew automatically.

Descaling Your Brewer

NOTE: The full descaling procedure must be completed to turn off the **DESCALE** light.

Descaling Procedure

Before you begin, you will need a large ceramic mug (14oz minimum), fresh water, Keurig® Descaling Solution, and access to a sink. Do not use a paper cup. Ensure that there is no beverage pod in the K-Cup® pod holder. The descaling procedure takes approximately 10-15 minutes. Empty the water from the water reservoir. If using a Keurig® Water Filter, remove and set aside.

STEP 1: Prepare the Brewer

Pour the entire bottle of Keurig® Descaling Solution into an empty water reservoir. Then fill the empty bottle with water and pour into the water reservoir. **Do not insert a K-Cup® pod.** Place a large mug on the drip tray.

STEP 2: Descal the Brewer

To activate **DESCALE MODE**, begin with the brewer plugged in and powered off, then press and hold the **8oz** and **12oz** buttons together for 3 seconds. When flashing, press the **12oz** button to start the descaling process. Once the brew is complete, pour the hot liquid into the sink. Repeat this step two to three more times until the **ADD WATER** light illuminates.

STEP 3: Fresh Water Rinse

Empty and rinse the water reservoir, rinse the tank thoroughly, and refill to the **MAX FILL** line with fresh water. When flashing, press the **12oz** button to start the rinsing process. Once the brew is complete, pour the liquid into the sink. Continue to brew 12oz until the Descale notification turns off (there may be residual water left in the tank). The brewer has now exited **DESCALE MODE** and will be ready for use!

NOTE: Liquid dispensed in the fresh water rinse may be room temperature.

PRINTED IN MEXICO

Elbrd: J.M. / SC: 19-06-2025

OBPN: DC0000007685 REV D / SHDML: K26EBK_B

8 1 4 1 0 0 4 9 9

