

KEURIG®

K•Supreme PLUS™

SMART

814100492

Recipe Book not included

Please read this manual carefully before operating your unit and retain for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:



1. READ ALL INSTRUCTIONS

- For household use only.
- Do not use distilled water.
- Scalding may occur if the handle is opened during the brewing process.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons do not immerse appliance, cord, or plugs in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not authorized by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first (if not permanently attached), then plug cord into the wall outlet. To disconnect, turn any control to "off" then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use brewer in upright position only. Allow brewer to cool (90 min) prior to turning it in any position other than upright.
- Do not immerse brewer in water.
- Only use K-Cup® pods intended for this appliance. If the pod does not fit, do not force it into the appliance.

SAVE THESE INSTRUCTIONS

For detailed brewer cleaning and maintenance instructions, videos, and the full Use & Care Guide visit Support.Keurig.com.

- WARNING:** Keep all plastic bags away from children.
- CAUTION:** Keurig recommends using only Keurig® My K-Cup® Universal Reusable Filters and Keurig® approved K-Cup® pods in this appliance. If the pod does not fit, do not force the pod into the appliance. The use of non-Keurig® pods or accessories may cause brewer malfunction or injury.
- WARNING:** Used K-Cup® pods should be removed from the pod holder after brewing, or in part with the daily cleaning routine.
- WARNING:** There is extremely hot water under pressure in the K-Cup® pod holder during the brew process. To avoid risk of injury do not lift the handle or otherwise open the handle during the brew process.
- CAUTION:** There are sharp needles that puncture the K-Cup® pod, five above the K-Cup® pod holder and one in the bottom of the K-Cup® pod holder. To avoid risk of injury, be aware of the needle locations

6. POWER CORD INSTRUCTIONS:

- A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- If a long detachable power-supply cord or extension cord is used:
 - The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord.
 - The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

7. CAUTION: HOT COCOA/OTHER NON-COFFEE PODS:

Immediately after using a hot cocoa/other non-coffee pod, run a hot water brew cycle without a pod to avoid the possibility of clogging the exit needle. DO NOT assume the next user will do this.

FCC Compliance Notice Contains FCC ID: 2AC7Z-ESPWROOM32D
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This device complies with applicable sections of Part 15 of the FCC Rules. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna or product suffering interference.
Increase the separation between this equipment and receiver/product.
Connect this equipment into an outlet on a circuit different from that to which the receiver/other product is connected.
Consult Keurig for troubleshooting or if further help is needed.



Get connected with the Keurig® app.

You will need this to set up and control your brewer.



 
- SCAN**
The QR code
on the back of the brewer:
Use the camera on your
smartphone to scan the
QR code to download
the app and get started
or download the Keurig® app
in the App Store.



App Store® is a service mark of Apple Inc.
Google Play and the Google Play logo are trademarks of Google LLC.

Connect Your Brewer

2



PLUG IT IN

Remove packing tape from brewer and plug into a grounded outlet.

Press any button to **POWER** the brewer on.

3



GET CONNECTED

To connect to Wi-Fi®,
select **"CONNECT"** on brewer
and in the app.

Wi-Fi® is a registered trademark of Wi-Fi Alliance®

4



SET UP

Follow on-screen prompts
to sign in and set up.

Before You Brew



Rinse & Fill

Rinse reservoir with fresh water and fill to the max fill line.

If you have a Keurig® Water Filter, install it now. Please find instructions under **tips**.


NOTE: Do not use distilled water.

Cleansing Brew

Press any button to **power on**. Place a large mug (10oz minimum) on the drip tray. Follow the instruction on the brewer screen to perform a cleansing brew.

Do not remove the water reservoir once the brew button has been pressed until the brew has completed. The one-time setup process is now complete and you are ready to brew!

Brew Your First Cup

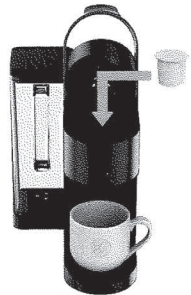

Place Mug & Insert Pod

Lift the handle and place a K-Cup® pod in the K-Cup® pod holder.

Lower the handle completely to close the lid.

Do not remove the foil lid on the K-Cup® pod.

NOTE: Remove the drip tray to accommodate a travel mug up to 7" tall.

Brew & Enjoy!

Customize your brew settings, choose a size, then press the blinking **BREW** button. Once the brew is completed dispose of the used K-Cup® pod.

Brewing is complete when the **"Enjoy"** screen is displayed.

CAUTION: While brewing, there is extremely hot water in the K-Cup® pod holder. To avoid injury, do not lift the handle during the brewing process.

• The image shown here is for illustrative purposes only and may be subject to change.

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

Get To Know Your Brewer



Recognizes your K-Cup® pod and customizes the brew settings to make each cup distinctively delicious.

RECOMMENDED BREW Recognizes your K-Cup® pod and adjust temperature and strength to brew the way the roaster recommends.

Create and Store your **FAVORITE** brew settings on Brewer and in App.

Brew your Favorite beverages **OVER ICE**. Do not use glass. Brews hot coffee extra strong to make up for ice melting and beverage dilution.

Dial your Brew **STRENGTH** up or down with 5 settings, from Balanced to Intense. Choose the perfect **TEMPERATURE** with 6 settings, from Warm to Max Hot.

MULTISTREAM TECHNOLOGY™ Extracts more flavor and aroma* in every brew. *vs. Keurig® leading brewer K-Class® with The Original Donut Shop® K-Cup® pod.

SMART IN-APP FEATURES:

- Schedule a Brew
- Customize your Brew Settings
- Smart Auto-Delivery, Never Run Out of Coffee
- Voice-Controlled Brew
- Maintenance Alerts

Tips

For best results, we recommend one-time use with our K-Cup® pods. A twice-brewed pod won't provide full flavor, and if the pod holder isn't lined up with the original holes, it can cause an overflow of water and coffee grounds.

For the best coffee experience, we recommend a cleansing brew after coffee before brewing other types of beverages or a hot water brew.

HIGH ALTITUDE MODE Press and hold both arrows to access Settings menu. Select **High Altitude** and follow the prompts on screen.

KEURIG® WATER FILTER INSTALLATION:

- STEP 1:** Soak the charcoal filter cartridge for 5 minutes in fresh water. Rinse the cartridge for 60 seconds once complete.
- STEP 2:** On the bottom of the handle, press in the tabs on both sides of the base at the same time and pull down to separate. Insert the filter cartridge.
- STEP 3:** Reattach the bottom of the Water Filter Handle.
- STEP 4:** Insert the handle into your empty, removable Water Reservoir. Be sure to push down firmly all the way down to correctly attach the Water Filter to the inside of your removable Water Reservoir.

Caring for your Brewer

Keep your brewer running at peak performance by following the recommended maintenance schedule:

Frequency	Product	Benefit
Weekly	Keurig® Rinse Pods	A simple, fast, and convenient way to reduce flavor carry-over between brews.
Every 2 Months	Keurig® Water Filters	Keep your water fresh and clean for a great tasting cup of coffee every time.
Every 3 Months or when the Descale notification turns on*	Keurig® Descale Solution	Remove calcium deposits, or scale, that can build up inside a brewer over time and help extend the life of your brewer (when used regularly).



PRINTED IN MEXICO / Elbrd: A.M. / SC: 06-13-2025_2P
MODEL: K29KSPSBK / OBPB: D0000005861 REV A