



Let's get brewing.

K-Classic®

8 0 4 1 0 0 2 2 5

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:



- 1. READ ALL INSTRUCTIONS**
- For household use only.
- Do not fill water above max fill line or use distilled water.
- Only use capsules intended for this appliance. If the capsule does not fit, do not force the capsule into the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons do not immerse appliance, cord, or plugs in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children 12 years or younger.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not authorized by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

The image shown here is for illustrative purposes only and may be subject to change.

- Always attach plug to appliance first (if not permanently attached), then plug cord into the wall outlet. To disconnect, turn any control to "off" (if applicable) then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use brewer in upright position only. Allow brewer to cool (90 min) prior to turning it in any position other than upright.
- Do not immerse brewer in water.
- 1. WARNING:** To avoid risk of injury, do not open the brew chamber during the brew process.
- 2. WARNING:** Keep all plastic bags away from children.
- 3. CAUTION:** Keurig recommends using only Keurig® My K-Cup® Reusable Coffee Filter and Keurig® K-Cup® pods in this appliance. The use of non-Keurig® pods or accessories may cause brewer malfunction or injury.
- 4. CAUTION:** There are two sharp needles that puncture the K-Cup® pod, one above the K-Cup® pod holder and the other in the bottom of the K-Cup® pod holder. To avoid risk of injury, be aware of the needle locations.
- 5. CAUTION:** There is extremely hot water under pressure in the K-Cup® pod holder during the brew process. To avoid risk of injury do not lift the handle or otherwise open the handle during the brew process. Wait 15 minutes before lifting handle at the end of the brew.
- 6. POWER CORD INSTRUCTIONS:**
 - A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
 - Longer extension cords are available and may be used if care is exercised in their use.
 - If a long extension cord is used:
 - The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.

Accessory type and quantity may vary depending on the model.

Before You Brew



1 Plug & Place

Remove packing tape from brewer and plug into a grounded outlet.

Place a large mug (10oz minimum) on the drip tray.




2 Rinse & Fill

Remove the water reservoir lid, then lift the reservoir straight up to remove it.

If you have a Keurig® Water Filter, install it now. Refer to your Water Filter Starter Kit for instructions.

Rinse reservoir with fresh water and fill to the **MAX FILL** line. **Do not use distilled water.**

Replace water reservoir, making sure the lock tabs engage with the brewer. Replace lid.

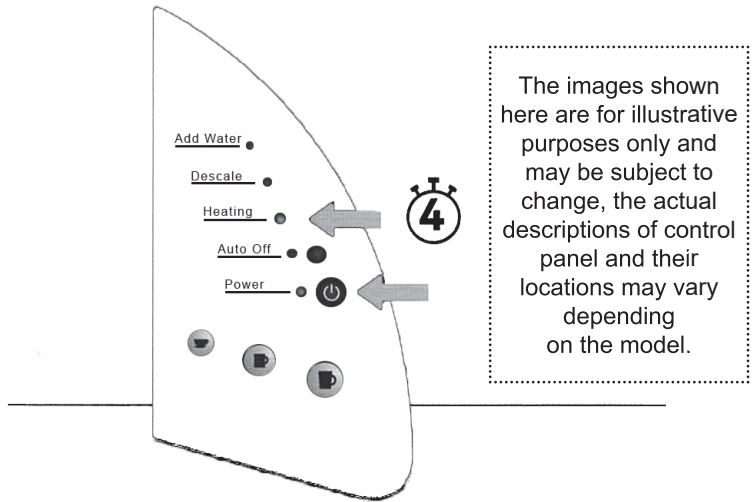

3 Power On

Press power button—the green power light will illuminate.

The brewer will automatically begin heating the water. The red heating light will illuminate for about 4 minutes. Once the heating light goes off and the brew buttons illuminate, the brewer is ready.



4 Cleansing Brew

Lift and lower the handle. **Do not insert a K-Cup® pod.** The three brew buttons will blink. Press the small cup button to start a cleansing brew. Pour the hot water into the sink.

The one-time setup process is now complete and you are ready to brew!

NOTE: Between brew cycles, the brewer may take about a minute to reheat.

Brew Your First Cup



5 Place Mug & Pod

Place a mug on the drip tray. If using a travel mug, remove the drip tray and place the mug on the drip tray base. Lift the handle and place a K-Cup® pod in the K-Cup® pod holder. Lower the handle completely to close the lid. **Do not remove the foil lid on the K-Cup® pod.**

High Altitude Brewing: While holding the brewer handle up, push down slowly on the K-Cup® pod in the pod holder until the bottom of the K-Cup® pod is punctured by the exit needle.

NOTE: To enable the High Altitude Mode, see the Use & Care Guide



6 Brew & Enjoy!

Select your brew size. The button will remain illuminated while brewing—about 1 minute. Brewing is complete when the button is no longer illuminated. Lift the handle and dispose of the used K-Cup® pod.

The brewer will be ready to brew another cup in about a minute.

NOTE: After 60 seconds, the brew buttons will be disabled. To reactivate, lift and lower the handle completely.

CAUTION: While brewing, there is extremely hot water in the K-Cup® pod holder. To avoid injury, do not lift the handle during the brewing process.

Brewer Features

Auto Off automatically turns your brewer off 2 hours after the last brew for energy savings. To disable the Auto Off feature, press the Auto Off button - the green Auto Off light will turn off.

To enable the Auto Off feature, press the Auto Off button. The green Auto Off light will illuminate.

Smart Start heats then brews in one simple process. No need to wait for the brewer to heat before selecting brew size. Power on your brewer, place mug, insert a K-Cup® pod, and lower the handle. Then, select your brew size. The brewer will heat, then automatically begin brewing.


Caring for your Brewer

Regular cleaning keeps your brewer running smoothly. Always be sure to turn off and unplug your brewer before cleaning.

Water Reservoir

The water reservoir lid and water reservoir should be cleaned periodically. Clean in a dishwasher (top rack only) or hand wash. To hand wash, use a damp, soapy, non-abrasive cloth. Rinse the reservoir thoroughly after cleaning. This will ensure that no cleaning solutions remain in the area as they may contaminate the water supply. After rinsing, fill the reservoir with clean water and return it to the brewer. Do not dry the inside of the water reservoir with a cloth as lint may remain.

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

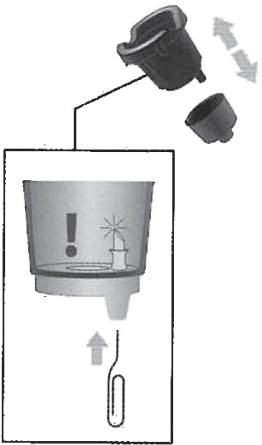

Exit Needle

Remove the pod holder assembly and detach the funnel. Locate the exit needle on the inside bottom of the K-Cup® pod holder. Insert a straightened paper clip into the exit needle to loosen any coffee grounds.

Entrance Needle

Lift the brewer handle and locate the entrance needle on the underside of the lid. To clean the holes in the needle, hold the brewer handle in the upward position and with your other hand, carefully insert a straightened paper clip into all the holes. Gently move it around to loosen any coffee grounds. Lower the handle completely and run two water-only brew cycles. Do not insert a K-Cup® pod.

CAUTION: There are sharp needles that puncture the K-Cup® pod above the K-Cup® pod holder and in the bottom of the K-Cup® pod holder. To avoid risk of injury, do not put your fingers in the K-Cup® pod holder.

Coffeehouse taste in your own home.

Accessory type and quantity may vary depending on the model.

The image shown here is for illustrative purposes only and may be subject to change.

8 0 4 1 0 0 2 2 5



PRINTED IN MEXICO SC: 06-24-2024 ELBRD: J.E.
MODEL:K50CBBK_B OBPN: DC00000001085 REV E