

KEURIG

Let's get brewing.

K-Café® Barista Bar

SINGLE SERVE COFFEE MAKER

RECIPE BOOK NOT INCLUDED

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS

2. For household use only.

3. Do not used distilled water.

4. Scalding may occur if the handle is opened during the brewing process.

5. Do not touch hot surfaces. Use handles or knobs.

6. To protect against fire, electric shock, and injury to persons, do not immerse appliance, cord, or plugs in water or other liquid.

7. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children.

8. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.

9. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
10. The use of accessory attachments not authorized by the appliance manufacturer may result in fire, electric shock, or injury to persons.

11. Do not use outdoors.

12. Do not let cord hang over edge of table or counter or touch hot surfaces.

13. Do not place on or near a hot gas or electric burner or in a heated oven.

14. Always attach plug to appliance first (if not permanently attached), then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.

15. Do not use appliance for other than intended use.

16. Use brewer in upright position only.

17. Only use K-Cup® pods intended for this appliance. If the pod does not fit, do not force it into the appliance.

18. Scalding may occur if the lid is removed during the frother cycles.

19. Do not place hand or fingers inside the frother while in operation.

20. Intended for use with included power supply base only.

1. **WARNING:** Keep all plastic bags away from children.

2. **CAUTION:** Keurig recommends using only Keurig® My K-Cup® Universal Reusable Filters and Keurig® approved K-Cup® pods in this appliance. If the pod does not fit, do not force the pod into the appliance. The use of non-Keurig® pods or accessories may cause brewer malfunction or injury.

3. **WARNING:** There is extremely hot water under pressure in the K-Cup® pod holder during the brew process. To avoid risk of injury, do not lift the handle or otherwise open the handle during the brew process.

4. **CAUTION:** There are sharp needles that puncture the K-Cup® pod, one above the K-Cup® pod holder and the other in the bottom of the K-Cup® pod holder. To avoid risk of injury, be aware of the needle locations.

5. **WARNING:** This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

6. **POWER CORD INSTRUCTIONS:**

a. A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.

b. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

c. If a long detachable power-supply cord or extension cord is used:

i. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.

ii. If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord.

iii. The longer cord should be arranged so that it will not drape over the countertop or tabletop, where it can be pulled on by children or tripped over.

7. **CAUTION: HOT COCOA/OTHER NON-COFFEE PODS:** Immediately after using a hot cocoa/ other non-coffee pod, run a hot water brew cycle without a pod to avoid the possibility of clogging the exit needle. DO NOT assume the next user will do this.
- SAVE THESE INSTRUCTIONS

WARNING

RISK OF FIRE OR ELECTRIC SHOCK DO NOT OPEN

WARNING, TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE
- Button Overview
- 15

12

10

8

SHOT

ADD WATER

DESCALE

BREW OVER ICE BUTTON

full-flavored iced coffee with less ice melt

BREW SIZES

choose 8, 10, or 12oz

SHOT BUTTON

brew a concentrated coffee shot for specialty beverages

ADD WATER LIGHT

will illuminate when water is needed

DESCALE LIGHT

will illuminate when your brewer needs to be descaled

HOT & COLD Standalone Frother

will produce creamy, velvety froth for your favorite specialty beverages

Before You Brew

1

Plug & Place

Remove packing tape from brewer and frother. Plug each into an outlet.

Place a large mug (10oz minimum) on the drip tray.

2

Rinse & Fill

Remove the water reservoir lid, then lift the reservoir straight up to remove it. If you have a Keurig® Water Filter (sold separately), install it now. Refer to your Water Filter Starter Kit for instructions. Rinse reservoir with fresh water and fill to the **MAX FILL** line. Replace water reservoir, making sure the tank is seated properly in the base. Replace lid.

NOTE: Do not use distilled water.

3

Clean the Frother

Remove the lid and whisk from inside the frother. Wash the interior of the frother, lid, and whisk with warm, soapy water. Dry all parts thoroughly using a soft, nonabrasive cloth, then reassemble.

NOTE: Frother is not dishwasher safe. Do not submerge frother in water. Only use nonabrasive cleaning materials to prevent damage to the inner surface of the frother. Dry interior of frother and base with a soft cloth after cleaning.

4

Cleansing Brew

Lift and lower the handle. **Do not insert a K-Cup® pod.** The brewer will power on automatically. The 3 cup sizes will blink. Press the **8oz** button to start a cleansing brew. Pour the hot water into the sink. **Do not remove the water reservoir or lift the handle once the brew button has been pressed until the brew has completed.** The one-time setup process is complete and you are ready to brew!

Make Your First Hot or Iced Latte

1. Froth Milk

Remove lid and add milk to the MAX line marked in the frother (for cappuccino, fill to MIN line). Replace the lid and place the frother on the frother base. Press the **K button** on the frother one time to activate the hot froth setting. The LED will stay illuminated while frothing. Frothing is complete when the LED turns off. **To Make It Iced:** Press the **K button** twice in rapid succession to activate the Iced Setting on your frother. **CAUTION:** Frother is not microwave or dishwasher safe. **NOTE:** Do not under- or overfill frother. Do not operate before adding milk.

2. Brew

While frothing, lift the handle of your brewer and place a K-Cup® pod in the K-Cup® pod holder. Lower the handle completely to close the lid and place a mug on the drip tray. The brew selections will blink. Press the **SHOT*** button. **To Make It Iced:** Place ice in your cup and press the **Brew Over Ice** button. **NOTE:** Do not use a glass mug for the BOI setting. **CAUTION:** While brewing, there is extremely hot water in the K-Cup® pod holder. To avoid injury, do not lift the handle during the brew process. Do not remove the foil lid on the K-Cup® pod. *Can also brew any cup size, but **SHOT** is recommended for coffeehouse beverages.

3. Create Your Latte

Once the brew is completed, dispose of the used K-Cup® pod. Remove the frother from the base. Remove the lid and pour the frothed milk over your coffee. **NOTE:** Clean frother immediately after use. For cleaning instructions, see Caring for Your Frother section in this guide.

Accessory type and quantity may vary depending on the model.

* **NOTE:** In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

Hot and Cold Frother Instructions

1. Fill the frother with your milk of choice, staying within the MIN/MAX line.
2. Plug in the frother.
3. Toggle between the froth settings using the **K button**:
Hot Froth: Single press and the LED will illuminate red
Cold Froth: Double press and the LED will illuminate blue
4. The frother will immediately begin frothing when on desired setting. Frothing is complete when the frother light is no longer illuminated.
5. Pour your fresh froth over your coffee and enjoy!

How to froth like a pro:

A few simple tips to help ensure a fantastic frothing experience, every time.

Fresher is Better

Using fresh milk delivers the richest, frothiest foam possible. Opened milk will still froth, but may lose effectiveness over time as the fats inside break down.

Milk Matters! Different types of milk produce different results. Depending on which milk you use, here’s what you can expect:

- **Fat-Free/Skim Milk:** Easy to froth, it creates a light, airy foam.
- **2% Milk:** Easy to foam like skim milk, but with a creamier consistency.
- **Whole Milk:** Higher fat content creates the richest-tasting foam.
- **Non-Dairy Milk:** Results will vary depending on type; loses its bubbles more quickly than dairy milk.
- **Lactose-Free Milk:** Less reliable, due to its different properties.

Not All Brands Are the Same

Even individual brands of milk can froth differently, so experiment with different brands to see what works best.

Proper Sequencing

For an optimal beverage experience, we recommend frothing first, then brewing.

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

Brewer Features

HOT AND COLD FROTHER: Use any fresh milk or dairy alternative, like oat, almond, or soy.

BREW OVER ICE: Brews by starting hotter to extract full flavor, then cooling down for less ice melt.

SHOT: Use any K-Cup® pod to brew a concentrated 2oz coffee shot.

FAST & FRESH-BREWED: Coffee made in minutes.

BACK-TO-BACK BREWING: Immediately brew a second cup; no need to wait for reheating.

TRAVEL MUG FRIENDLY: Accommodates travel mugs up to 7.25” tall.

SIMPLE BUTTON CONTROLS: Just insert any K-Cup® pod and use the button controls to brew a delicious cup.

MAINTENANCE ALERT: Reminds you to descale after every 250 brews.

TO DESCALE: Press and hold the **12oz** and **8oz** buttons for 3 seconds. 12oz and **DESCALE** will flash. Simply press 12oz to begin.

NOTE: Regular descaling enhances the taste of your coffee and the long-term performance of your brewer; it is highly recommended to continue this practice.

COMPATIBLE WITH THE MY K-CUP® UNIVERSAL REUSABLE COFFEE FILTER: Brew your own ground coffee (sold separately).

AUTO OFF: Automatically turns your brewer off 5 minutes after the last brew for energy savings, but will be ready to brew as soon as it is powered on again.

HIGH ALTITUDE BREWING: While holding the brewer handle up, push down slowly on the K-Cup® pod in the pod holder until the bottom of the K-Cup® pod is punctured by the exit needle.

HIGH ALTITUDE: To ensure your coffee maker works properly at higher altitudes (5,000 feet), please enable the High Altitude Brewing Mode on your coffee maker.

1. Begin with the brewer plugged in and powered off.
2. Press and hold the **BREW OVER ICE** button and **10oz** button for 3 seconds. The **12oz** button will illuminate to confirm that the High Altitude Mode has been enabled.

High Altitude Mode will remain enabled until steps 1-2 are repeated and the **8oz** light turns on to confirm that the High Altitude Brewing Mode is disabled.

Caring for Your Brewer

For great-tasting coffee, keep your brewer running at peak performance by following the recommended maintenance schedule:

Frequency	Product	Benefit
Weekly	Keurig® Rinse Pods	Weekly cleaning with Keurig® Rinse Pods helps reduce flavor carryover between brews
Every 2 months	Keurig® Water Filters	Keep your water fresh and help remove impurities
Every 3 months or when the Descale notification turns on*	Keurig® Descaling Solution	Eliminate mineral buildup to enhance the taste of your coffee and preserve the long-term health and performance of your coffee maker

*To turn off Descale notification, follow the full descaling procedure as outlined in this guide and the Use & Care Guide .

If the brewer has been in storage or hasn’t been used in days, run a cleansing brew before brewing your beverage.

Hand-wash the water reservoir, lid, and drip tray with warm, soapy water and rinse clean on a weekly basis.

CAUTION: Parts are not dishwasher safe.

NOTE: Do not dry the inside of the water reservoir with a cloth, as lint may remain.

Caring for Your Frother

Clean immediately after each use and before first use.

To Clean:

1. Remove frother from the base, remove silicone ring from lid, and remove the whisk from inside the frother.
2. Wash the silicone ring, lid and whisk with warm, soapy water.
3. Clean the interior of the frother with soap and rinse with warm water. Use a soft, nonabrasive cloth or sponge to prevent damaging the inner coating.
4. Wipe the exterior with a soft, damp cloth.
5. Dry all parts thoroughly and reassemble for next use.
Note: Frother is not dishwasher safe. Do not submerge frother in water. Only use nonabrasive cleaning materials to prevent damage to the inner surface of the frother.

The images shown in this manual are for illustrative purposes only and may be subject to change.

8 1 4 1 0 0 4 3 7



PRINTED IN MEXICO / SC:04-29-2025_TAB
SHNMDL: KCBBK86S_B
OBPN: AW0000000823 REV A / Elbrd:J.E.