

**KEURIG®**  
Brew the love.™

Let's get brewing.  
**K•Café®**  
Quick Start Guide

1. **READ ALL INSTRUCTIONS**

2. For household use only.
3. Do not use distilled water.
4. Scalding may occur if the handle is opened during the brewing process.
5. Do not touch hot surfaces. Use handles or knobs.
6. To protect against fire, electric shock, and injury to persons do not immerse appliance, cord, or plugs in water or other liquid.
7. Close supervision is necessary when any appliance is used by or near children 12 years or younger.
8. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
9. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
10. The use of accessory attachments not authorized by the appliance manufacturer may result in fire, electric shock, or injury to persons.
11. Do not use outdoors.
12. Do not let cord hang over edge of table or counter, or touch hot surfaces.
13. Do not place on or near a hot gas or electric burner, or in a heated oven.
14. Always attach plug to appliance first (if not permanently attached), then plug cord into the wall outlet. To disconnect, turn any control to "off" then remove plug from wall outlet.
15. Do not use appliance for other than intended use.
16. Use brewer in upright position only. Allow brewer to cool (90 min) prior to turning it in any position other than upright.
17. Do not immerse brewer in water.
18. Only use K-Cup® pods intended for this appliance. If the pod does not fit, do not force it into the appliance.

**For detailed brewer cleaning and maintenance instructions,** Contact a service center.

- 1. WARNING:** Keep all plastic bags away from children.
- 2. CAUTION:** Keurig® recommends using only Keurig® My K-Cup® Reusable Coffee Filter and Keurig® K-Cup® pods in this appliance. The use of non-Keurig® pods or accessories may cause brewer malfunction or injury.

3. **WARNING:** There is extremely hot water under pressure in the K-Cup® pod holder during the brew process. To avoid risk of injury do not lift the handle or otherwise open the handle during the brew process.
4. **POWER CORD INSTRUCTIONS:**
  - a. A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
  - b. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
  - c. If a long detachable power-supply cord or extension cord is used:
    - i. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
    - ii. If the appliance is of the grounded type, the extension cord should be a Grounding type 3-wire cord.
    - iii. The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
5. **CAUTION: HOT COCOA/OTHER NON-COFFEE PODS:** Immediately after using a hot cocoa/other non-coffee pod, run a hot water brew cycle without a pod to avoid the possibility of clogging the exit needle. DO NOT assume the next user will do this.

## SAVE THESE INSTRUCTIONS



**WARNING, TO REDUCE THE RISK OF  
FIRE OR ELECTRIC SHOCK,  
DO NOT REMOVE COVER (OR BACK).  
NO USER SERVICEABLE PARTS INSIDE.**

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

## Before You Brew



## 1 Plug & Place

Remove packing tape from brewer and remove frother from plastic bag. Plug into a grounded outlet.

Place a large mug (12oz minimum) on the drip tray.



 
## 2 Rinse & Fill

Remove the water reservoir lid, then lift the reservoir straight up to remove it.

Rinse reservoir with fresh water and fill to the **MAX** fill line.

Replace water reservoir, making sure the lock tab engages with the brewer. Replace lid.

**NOTE:** Do not use distilled water.

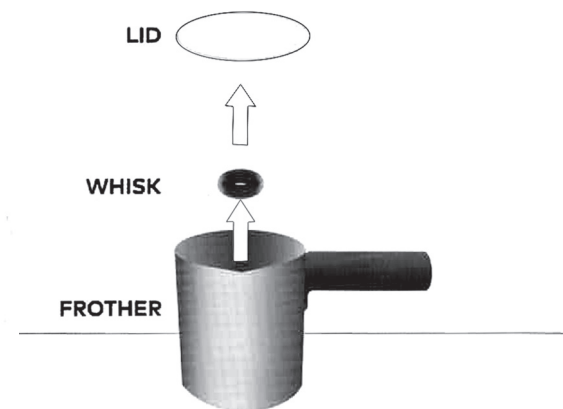


Accessory type and quantity may vary depending on the model.

### 3 Clean the Frother

 Remove the lid and whisk from inside the frother. Wash the interior of the frother, lid, and whisk with warm, soapy water. Dry all parts thoroughly using a soft, non-abrasive cloth, and then reassemble.

**NOTE: Frother and frother lid are top rack dishwasher safe.** Whisk should be placed in the utensil basket. If washing by hand, only use non-abrasive cleaning materials to prevent damage to the inner surface of the frother.

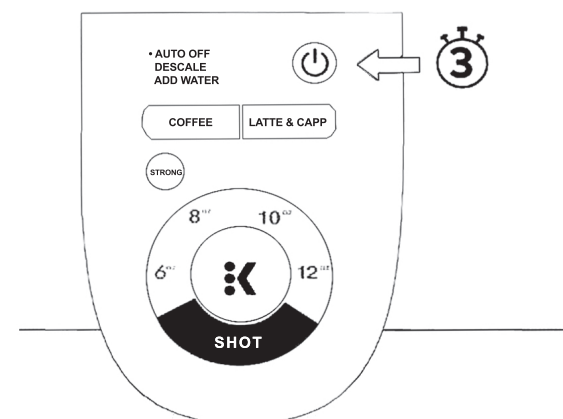


#### 4 Power On

Press power button - the power light and **AUTO OFF** light will illuminate.

The brewer will automatically begin heating the water. This will take about 3 minutes. Once the heating sound stops, the brewer is ready.

The images shown here are for illustrative purposes only and may be subject to change, the actual descriptions of control panel and their locations may vary depending on the model.

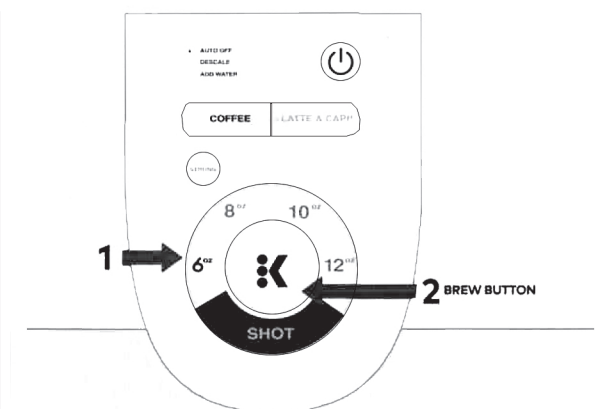 


## 5 Cleansing Brew

Lift and lower the handle. **Do not insert a K-Cup® pod.** The **COFFEE** and **LATTE & CAPP** buttons will blink. Press the **6oz** button, then press the blinking **BREW** button to start a cleansing brew (the **COFFEE** button will illuminate). Pour the hot water into the sink.

**The one-time setup process is now complete and you are ready to brew!**

**NOTE:** Between brew cycles, the brewer may take about a minute to reheat.
 
## Make Your First Latte or Cappuccino

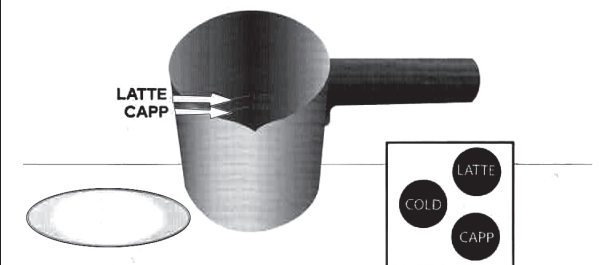

## 1 Fill Frother

**To make a Hot Latte or Hot Cappuccino:**

Remove lid and add chilled milk to the **LATTE** or **CAPP** line marked in the frother. Replace the lid and place frother on the frother base. Press the **LATTE** or **CAPP** button on the frother base. The frother will beep once and the button will illuminate while heating – approximately 3 minutes.


Frothing is complete when the frother beeps twice and the light on the **LATTE** or **CAPP** button is no longer illuminated.

**TIP:** Having trouble frothing? We're here to help. Give us a call at 1-866-901-BREW (2739).

**NOTE:** Do not under or overfill frother. Do not operate before adding milk.  
CAPP line = minimum fill LATTE line = maximum fill

**CAUTION:** Frother is not microwave safe.

The image shown here is for illustrative purposes only and may be subject to change.

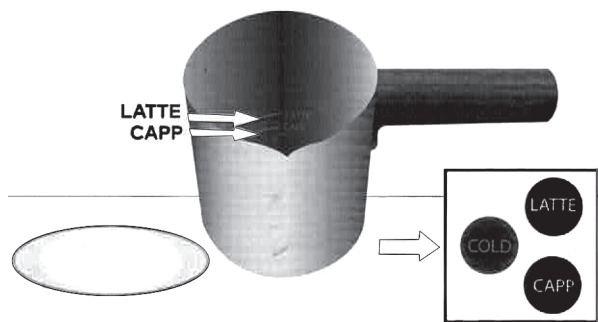 

### To make an Iced Latte or Iced Cappuccino:

Remove lid and add chilled milk to the **LATTE** or **CAPP** line marked in the frother. Replace the lid and place frother on the frother base. Press the **COLD** button followed by the **LATTE** or **CAPP** button. The frother will beep once and both buttons will illuminate while the milk is frothing – approximately 3 minutes.

Frothing is complete when the frother beeps twice and the light on the **COLD** and **LATTE** or **CAPP** buttons are no longer illuminated.

**NOTE:** Do not under or overfill frother. Do not operate before adding milk. CAPP line = minimum fill, LATTE line = maximum fill

**CAUTION:** Frother is not microwave safe.



 
## 2 Place Mug & Pod

Place a mug on the drip tray plate. Lift the handle and place any K-Cup® pod in the K-Cup® pod holder. Lower the handle completely to close the lid.

**Do not remove the foil lid on the K-Cup® pod.**

To make an iced latte or iced cappuccino, fill a 16oz plastic cup half way with ice, then follow instructions above.

**NOTE:** For iced beverages, only use a plastic cup, do not use glass.

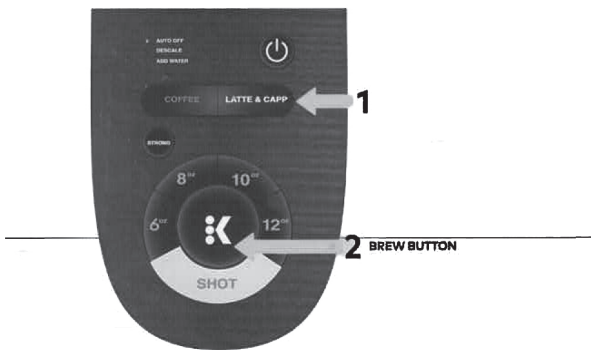


## 3 Brew a Shot

The **COFFEE** and **LATTE & CAPP** buttons will blink. Press the **LATTE & CAPP** button - the **SHOT** button and **STRONG** button will illuminate. Press the blinking **BREW** button. The **LATTE & CAPP**, **SHOT**, **STRONG**, and brew button will all remain illuminated while brewing – about 1 minute. Brewing is complete when the buttons are no longer illuminated. Lift the handle and dispose of the used K-Cup® pod. The brewer will be ready to brew another cup in about a minute.

**NOTE:** After 60 seconds, the brew button will be disabled. To reactivate, lift and lower the handle completely.

 **CAUTION:** While brewing, there is extremely hot water in the K-Cup® pod holder. To avoid injury, do not lift the handle during the brewing process.

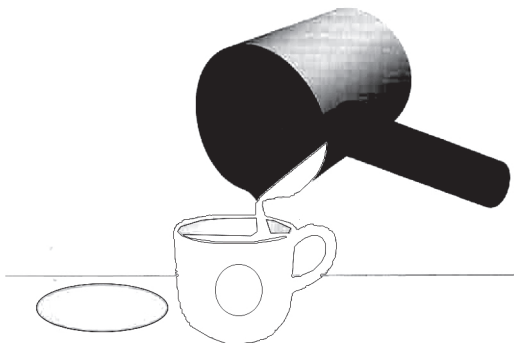

## 4 Create your Coffeehouse Beverage

Remove the frother from the base. Remove the lid and pour the frothed milk over your shot of coffee.

**NOTE:** Clean frother immediately after use. For cleaning instructions, see Caring For Your Brewer section in this guide.

The image shown here is for illustrative purposes only and may be subject to change.

# Brew Your First Coffee



 
## 1 Place Mug & Pod

Place a mug on the drip tray. If using a travel mug, remove the drip tray and place the mug on the drip tray base. Lift the handle and place a K-Cup® pod in the K-Cup® pod holder. Lower the handle completely to close the lid.

**Do not remove the foil lid on the K-Cup® pod.**

**High Altitude Brewing:** While holding the brewer handle up, push down slowly on the K-Cup® pod in the pod holder until the bottom of the K-Cup® pod is punctured by the exit needle.

**NOTE:** To enable the High Altitude Mode, see the Use & Care Guide on support.keurig.com.

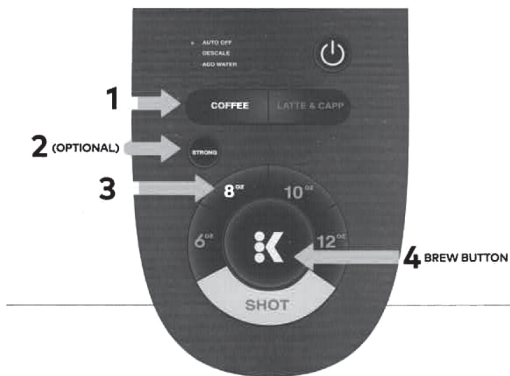

## 2 Brew & Enjoy!

The **COFFEE** and **LATTE & CAPP** buttons will blink. Press the **COFFEE** button. The 4 cup sizes will blink. Select your cup size - for bolder coffee, press the **STRONG** button before selecting your cup size. Press the blinking **BREW** button. The **COFFEE**, **STRONG** (if selected), cup size, and brew button will all remain illuminated while brewing – about 1 minute. Brewing is complete when the buttons are no longer illuminated. Lift the handle and dispose of the used K-Cup® pod. The brewer will be ready to brew another cup in about a minute.

**NOTE:** After 60 seconds, the **BREW** button will be disabled. To reactivate, lift and lower the handle completely.

**CAUTION:** While brewing, there is extremely hot water in the K-Cup® pod holder. To avoid injury, do not lift the handle during the brewing process.

# Brewer Features

**Frother** froths milk to create your favorite latte or cappuccino.

**SHOT** button brews a shot of coffee to make full-flavored, delicious lattes and cappuccinos.

**COLD** button for cold frothed milk to create iced lattes and iced cappuccinos.

**Strong Brew** increases your coffee strength and intensity. For bolder coffee, press the **STRONG** button.

**Smart Start** heats then brews in one simple process. No need to wait for the brewer to heat before selecting cup size. Power on your brewer, place mug, insert a K-Cup® pod, and lower the handle. Then, select your cup size and press the brew button. The brewer will heat, then automatically begin brewing.

**Auto Off** automatically turns your brewer off 2 hours after the last brew for energy savings.

To disable the Auto Off feature:

1. Power the brewer off while it is plugged in.
2. Press and hold the **STRONG** and the **10oz** buttons for 3 seconds - the Auto Off light will turn off.
3. Power the brewer on - the Auto Off light will no longer be illuminated.

To enable the Auto Off feature, repeat steps 1-3. The Auto Off light will illuminate.

# Caring For Your Brewer

Regular cleaning keeps your brewer running smoothly. Always be sure to turn off and unplug your brewer before cleaning. For detailed brewer cleaning and maintenance instructions, videos, and the full Use & Care Guide visit support.keurig.com. Beyond these recommended cleaning instructions, this brewer is not user-serviceable. For service, please refer to the warranty included with your brewer.

## Frother

Clean immediately after each use and before first use.

To clean - **frother and frother lid are top rack dishwasher safe**. Whisk should be placed in the utensil basket of your dishwasher. If washing by hand, only use non-abrasive cleaning materials to prevent damage to the inner surface of the frother. To hand wash the whisk, soak in warm, soapy water for 15 minutes then scrub with a soft bristled brush. Dry thoroughly, and then reassemble for next use.

## Water Reservoir

The water reservoir lid and water reservoir should be cleaned periodically. Clean in a dishwasher (top rack only) or hand wash. To hand wash, use a damp, soapy, non-abrasive cloth. Rinse the reservoir thoroughly after cleaning. This will ensure that no cleaning solutions remain in the area as they may contaminate the water supply. After rinsing, fill the reservoir with

clean water and return it to the brewer. Do not dry the inside of the water reservoir with a cloth as lint may remain.



## Exit Needle

Remove the pod holder assembly and detach the funnel. Locate the exit needle on the inside bottom of the K-Cup® pod holder. Insert a straightened paper clip into the exit needle to loosen any coffee grounds.

## Entrance Needle

Lift the brewer handle and locate the entrance needle on the underside of the lid. To clean both holes in the needle, hold the brewer handle in the upward position and with your other hand, carefully insert a straightened paper clip into both holes. Gently move it around to loosen any coffee grounds. Lower the handle completely and run two water-only brew cycles. Do not insert a K-Cup® pod.

**CAUTION:** There are sharp needles that puncture the K-Cup® pod above the K-Cup® pod holder and in the bottom of the K-Cup® pod holder. To avoid risk of injury, do not put your fingers in the K-Cup® pod holder.

• Accessory type and quantity may vary depending on the model.

The images shown here are for illustrative purposes only and may be subject to change, the actual descriptions of control panel and their locations may vary depending on the model.

PRINTED IN MEXICO Elbrd: J.E. SC: 06-24-2024 TAB  
OBPN: DC0000001291 REV E SHNMDL: KCK84NK\_B

8 1 4 1 0 0 2 2 7

