

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:



- 1. READ ALL INSTRUCTIONS**
- For household use only.
- Do not fill water reservoir above max fill line or use distilled water.
- Scalding may occur if the handle or drawer is opened during the brewing process.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons do not immerse appliance, cord, or plugs in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children 12 years or younger.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact a Keurig authorized distributor for examination, repair, or adjustment if applicable, or contact a service center.
- The use of accessory attachments not authorized by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first (if not permanently attached), then plug cord into the wall outlet. To disconnect, turn any control to “off” (if applicable) then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use brewer in upright position only. Allow brewer to cool (90 min) prior to turning it in any position other than upright.
- The glass carafe is designed for use with this appliance. It must never be used on a range top.
- Do not set a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with abrasive cleansers, steel wool, or other abrasive material.
- Only use K-Cup® pods intended for this appliance. If the K-Cup® pod does not fit, do not force the K-Cup® pod into the appliance.

SAVE THESE INSTRUCTIONS

- 1. WARNING:** Keep all plastic bags away from children.
- 2. WARNING:** Always make sure the carafe is positioned properly to accept the dispensed hot liquid. Overflow can lead to scalding hazards.
- 3. WARNING:** Used K-Cup® pods should be removed from the pod holder, and areas holding coffee grounds should be rinsed clean after brewing, or in part with the daily cleaning routine.
- 4. WARNING:** Do not open filter basket drawer while brewing is in progress.
- 5. WARNING:** Snap lid securely onto carafe before serving any beverages.
- 6. WARNING:** Scalding may occur if the carafe lid is removed during brew cycle.
- 7. CAUTION:** Keurig® recommends using only Keurig® My K-Cup® Reusable Coffee Filter and Keurig® K-Cup® pods in this appliance. **Do not remove foil lid.** The use of non-Keurig® pods or accessories may cause brewer malfunction or injury.
- 8. CAUTION:** There are sharp needles that puncture the K-Cup® pod; one above the K-Cup® pod holder and the other in the bottom of the K-Cup® pod holder. To avoid risk of injury, be aware of the needle locations.
- 9. WARNING:** There is extremely hot water under pressure in the K-Cup® pod holder during the brew process. To avoid risk of injury do not lift the handle or otherwise open the handle during the brew process.

- 10. POWER CORD INSTRUCTIONS:**
- A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
 - Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
 - If a long detachable power-supply cord or extension cord is used:
 - The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord.
 - The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
- CAUTION: HOT COCOA/OTHER NON-COFFEE PODS:** Immediately after using a hot cocoa/other non-coffee pod, run a hot water brew cycle without a pod to avoid the possibility of clogging the exit needle. **DO NOT** assume the next user will do this.

**WARNING**

RISK OF FIRE OR ELECTRIC SHOCK DO NOT OPEN

WARNING, TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE

Button Overview

ADD WATER LIGHT
illuminates flashing blue when water is needed

DESCALE INDICATOR
illuminates solid blue when descale is required

 
BREW SIZES
for both single cup and carafe

Choose **OZ** & **8**, **10**, or **12** for a **single cup**

Choose **CUPS** & **8**, **10**, or **12** for a **carafe**

Press to power on **SINGLE CUP**
Use K-Cup® pods

Press to power on **CARAFE**
Use ground coffee

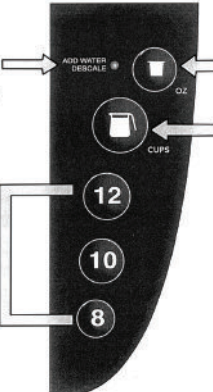

NOTE: The image shown here is for illustrative purposes only and may be subject to change. The actual descriptions of control panel and their locations may vary, depending on the model.

Before You Brew



 
- 1 Plug & Place**
- Remove packing tape from brewer and plug into an outlet.
- Single Cup** - Place a large mug (12oz minimum) on the drip tray.
- Carafe** - Rinse the carafe and place it on the heating plate.

NOTE:


In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.




- 2 Rinse & Fill**
- Remove the water reservoir lid, then lift the reservoir straight up to remove it.
- If you have a Keurig® Water Filter, install it now. Refer to your Water Filter Starter Kit for instructions.
- Fill the reservoir with fresh water to the **MAX** fill line.
- Replace water reservoir, making sure the lock tabs engage with the brewer.

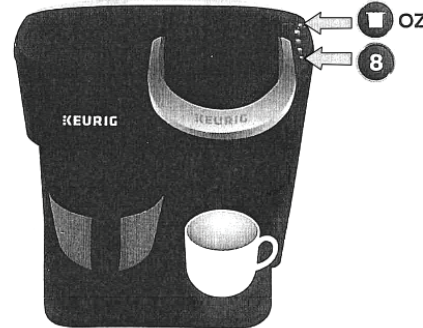


- 3 Cleansing Brew - Single Cup**
- Press the **OZ** button to power on the single cup side, then press the **8** button to start the cleansing brew – the **OZ** button will pulse green while the brewer is heating. **Do not insert a K-Cup® pod.** Once heated, the **OZ** button will turn solid green and the cleansing brew will begin. Pour the hot water into the sink.
- The one-time single cup setup process is now complete and you are ready to brew!**
- NOTE:** Between brew cycles, the brewer may take about a minute to reheat

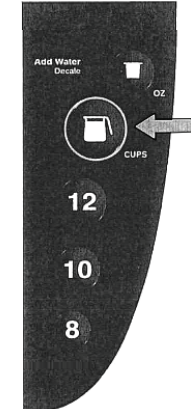 

 - 4 Power On - Carafe**
- Fill the reservoir to the **MAX** fill line, and then press the **CUPS** button to power on the carafe side. **Do not fill filter basket with coffee grounds.** The selected button will illuminate green and the 3 brew size buttons will blink blue.

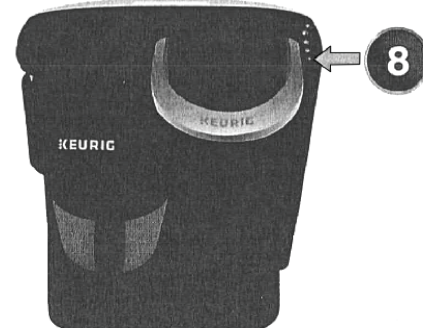

 - 5 Cleansing Brew - Carafe**
- Press the **8** button to start a cleansing brew – the button will illuminate blue.

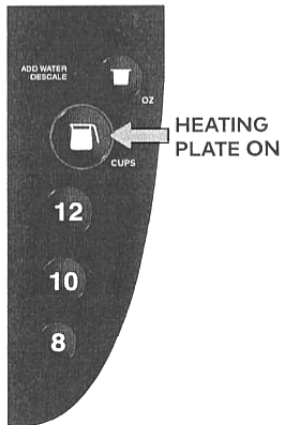

The **CUPS** button will illuminate red to indicate the heating plate is on when the cleansing brew is complete. Press and hold the **CUPS** button to turn the heating plate off, and pour the hot water into the sink.

NOTE: The images shown here are for illustrative purposes only and may be subject to change.

Brew Your First Single Cup



1 Place Mug & Pod

Place a mug on the drip tray. If using a travel mug, remove the drip tray and place the mug on the drip tray base. Lift the handle and place a K-Cup® pod in the K-Cup® pod holder. Lower the handle completely to close the lid.

High Altitude Brewing: While holding the brewer handle up, push down slowly on the K-Cup® pod in the pod holder until the bottom of the K-Cup® pod is punctured by the exit needle.



2 Brew & Enjoy!

 
Press the **OZ** button, then select your brew size. The **OZ** button and brew size button will remain illuminated while brewing – about 1 minute. Brewing is complete when the brew size button is no longer illuminated. Lift the handle and dispose of the used K-Cup® pod. The brewer will be ready to brew another cup in about a minute.

We recommend using a Keurig® Rinse Pod or running a cleansing brew immediately after brewing hot cocoa or other sweetened pods to keep the needles clean.

NOTE: After 60 seconds, the brew buttons will be disabled. To reactivate, press **OZ** or **CUPS**.

NOTE: The image shown here is for illustrative purposes only and may be subject to change. The actual number of accessories may vary depending on the model.


Brew Your First Carafe

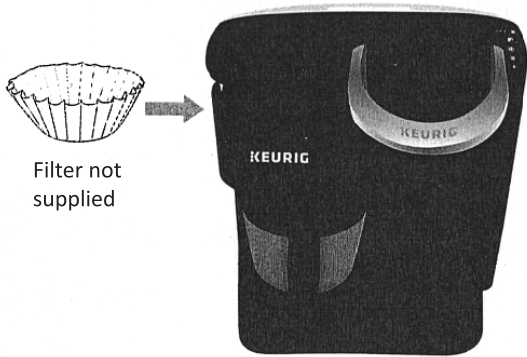

1 Place Carafe & Fill Basket

Fill the water reservoir to the **MAX** fill line. Remove the filter basket drawer by pulling outward and insert a 12 cup paper filter into the filter basket. Add the desired amount of ground coffee (1 tablespoon of ground coffee per cup is recommended). Reinsert the filter basket drawer completely and make sure the carafe is on the heating plate.

 NOTE: The maximum capacity for ground coffee is 15 tablespoons. Exceeding this amount may cause overflow.

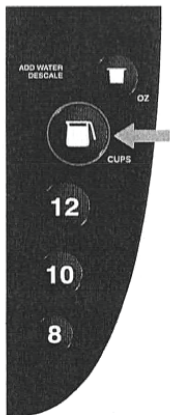

2 Brew & Enjoy!

Press the **CUPS** button and select your brew size. Once the brew is complete, the heating plate will automatically turn on and remain on for 2 hours - the **CUPS** button will illuminate red. To turn off the heating plate, press and hold the **CUPS** button until the light is no longer illuminated.

If you accidentally shut the heating plate off, press and hold the **CUPS** button until the red light illuminates to turn it back on.

NOTE: The images shown here are for illustrative purposes only and may be subject to change.

Brewer Features

Smart Start heats then brews in one simple process. No need to wait for the brewer to heat before selecting brew size. Power on your brewer, add coffee, then select your brew size. The brewer will heat, then automatically begin brewing.

Brewer Auto Off automatically turns your brewer off 2 hours after the last brew for energy savings.

Heating Plate Auto Off automatically turns your heating plate off 2 hours after the last brew for energy savings.

Pause & Pour a cup mid-brew while brewing a carafe using the 20 second automatic pause feature.

NOTE: Removing the carafe for more than 20 seconds may cause the filter basket to overflow.

Brew & Pause a carafe brew by pressing the **CUPS** button during a brew. Press the **CUPS** button to resume the carafe brew.

Caring for your Brewer

Regular cleaning keeps your brewer running smoothly. Always be sure to unplug your brewer and allow it to cool before cleaning.

If the brewer has been in storage, or hasn't been used in days, run a cleansing brew before brewing your beverage.

Periodically **hand-wash** the water reservoir and lid, carafe and lid, filter basket drawer, and filter basket with warm soapy water and rinse clean.

CAUTION: Parts are not dishwasher safe.

NOTE: Do not dry the inside of the water reservoir with a cloth as lint may remain.

Troubleshooting

If the 8, 10, and 12 button lights all illuminate solid simultaneously, lift handle and remove K-Cup® pod (if present in the brewer). Close handle and place a large mug on the drip tray. Press the Single Cup button once. The brewer may dispense hot water and the lights will turn off.

Reinserting the Filter Basket Drawer

To reinsert the filter basket drawer, line up the tab on the filter basket drawer with the open slot on the brewer and push in until it clicks.

Descaling

Descal your brewer every 3 months (or if you experience low coffee volume or slower performance).

Coffehouse taste in your own home.