

KEURIG

Let's get brewing.

K•ICED™ Plus

SINGLE SERVE COFFEE MAKER

"Recipe book not included"

814100228

Quick Start Guide

Please read this manual carefully before operating your unit and retain for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:



1. **READ ALL INSTRUCTIONS.**
2. For household use only.
3. Do not use distilled water.
4. Scalding may occur if the handle is opened during the brewing process.
5. Do not touch hot surfaces. Use handles or knobs.
6. To protect against fire, electric shock, and injury to persons, do not immerse appliance, cord, or plugs in water or other liquid.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
Close supervision is necessary when any appliance is used by or near children.
8. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
9. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact service center.
10. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
11. Do not use outdoors.
12. Do not let cord hang over edge of table or counter or touch hot surfaces.
13. Do not place on or near a hot gas or electric burner or in a heated oven.
14. Always attach plug to appliance first (if not permanently attached), then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
15. Do not use appliance for other than intended use.
16. Use brewer in upright position only.
17. Only use K-Cup® pods intended for this appliance. If the pod does not fit, do not force it into the appliance.
6. **WARNING:** The appliance has a polarized plug (one blade is wider than the other); to reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
7. **POWER CORD INSTRUCTIONS:**
 - a. A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
 - b. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
 - c. If a long detachable power-supply cord or extension cord is used:
 - i. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.

 
- ii. If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord.
- iii. The longer cord should be arranged so that it will not drape over the countertop or tabletop, where it can be pulled on by children or tripped over.

8. **CAUTION: HOT COCOA/OTHER NON-COFFEE PODS:** Immediately after using a hot cocoa/other non-coffee pod, run a hot water brew cycle without a pod to avoid the possibility of clogging the exit needle. DO NOT assume the next user will do this.



SAVE THESE INSTRUCTIONS

Before You Brew

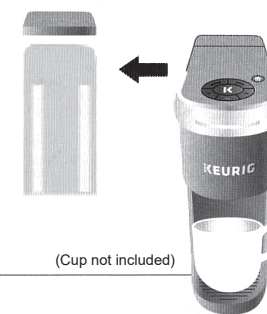

1 Plug & Place

Remove packing tape from brewer. Plug into a grounded outlet. Place mug on drip tray.

NOTE: The brewer will automatically turn off after 5 minutes of inactivity, or you can hold down the **BREW OVER ICE** button to turn the brewer off at any time.



3 Lift & Lower

Lift and lower the handle. **Do not insert a K-Cup® pod.** The brewer will power on automatically.

(K-Cup not included)

 
2 Rinse & Fill

Remove the water reservoir lid, then lift the reservoir straight up to remove it.

Rinse reservoir with fresh water and fill to the **MAX FILL** line.

Replace water reservoir, making sure the lock tabs engage with the brewer. Replace lid.

NOTE: Do not use distilled water.

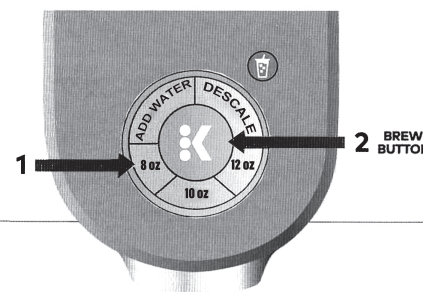


4 Cleansing Brew

The 3 cup sizes will blink. Press the **8oz** button, then press the blinking **BREW** button to start a cleansing brew. Pour the hot water into the sink.

The one-time setup process is now complete and you are ready to brew!

NOTE: For the best experience, we recommend a cleansing brew after coffee before brewing other types of beverages or a hot water brew.

 To Brew Over Ice

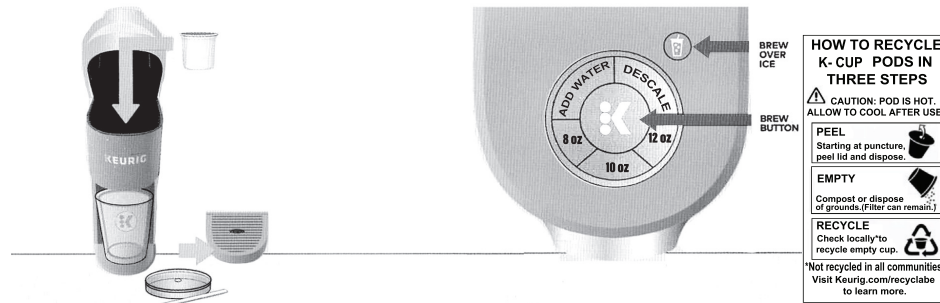

1 Place Tumbler & Pod

Add ice to a tumbler and place on the drip tray (for more height, remove drip tray). Lift the handle and place a K-Cup® pod in the K-Cup® pod holder. Lower the handle completely to close the lid.

(K-Cup not included)

CAUTION: While brewing, there is extremely hot water in the K-Cup® pod holder. To avoid injury, do not lift the handle during the brewing process. Do not brew into glass.

NOTE: For best results, we recommend one-time use with our K-Cup® pods. A twice-brewed pod won't provide full flavor, and if the pod holder isn't lined up with the original holes, it can cause an overflow of water and coffee grounds.

 
2 Brew & Enjoy!

The **BREW OVER ICE** button will blink. Press the **BREW OVER ICE** button, select your brew size, and press the blinking **BREW** button. The **BREW** button will remain illuminated while brewing.

Brewing is complete when all the buttons are illuminated. Lift the handle and dispose of the K-Cup® pod.

Like your coffee strong? Try the 8oz option!

To Brew Hot

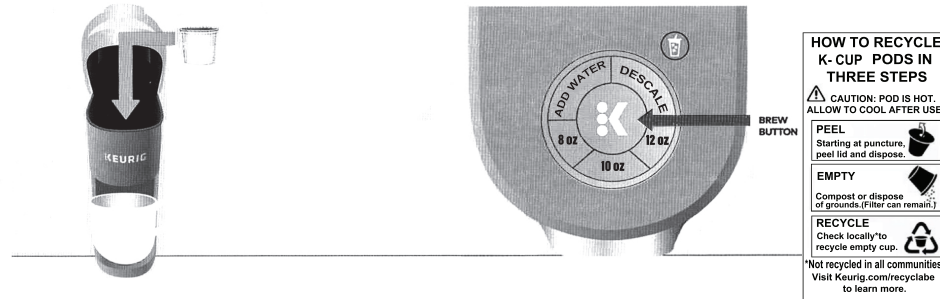

1 Place Mug & Pod

Place a mug on the drip tray. Lift the handle and place a K-Cup® pod in the K-Cup® pod holder. Lower the handle completely to close the lid.

(K-Cup not included)

CAUTION: While brewing, there is extremely hot water in the K-Cup® pod holder. To avoid injury, do not lift the handle during the brewing process. Do not brew into glass.

NOTE: For best results, we recommend one-time use with our K-Cup® pods. A twice-brewed pod won't provide full flavor, and if the pod holder isn't lined up with the original holes, it can cause an overflow of water and coffee grounds.

2 Brew & Enjoy!

The 3 brew size buttons will blink. Select your brew size, then press the blinking **BREW** button. The **BREW** button will remain illuminated while brewing.

Brewing is complete when all the buttons are illuminated. Lift the handle and dispose of the K-Cup® pod.

- Accessory type and quantity may vary depending on the model.
- The images shown here are for illustrative purposes only and may be subject to change.

NOTE: The images shown here are for illustrative purposes only and may be subject to change, the actual descriptions of control panel and their locations may vary depending on the model.

Brewer Features

BREW OVER ICE: Brew a refreshing iced coffee in minutes. The **BREW OVER ICE** feature automatically adjusts brew temperature — starting hotter to help extract full flavor, then cooling down for less ice melt.

FAST & FRESH-BREWED: Coffee made in minutes.

BACK-TO-BACK BREWING: Immediately brew a second cup; no need to wait for reheating.

TRAVEL MUG FRIENDLY: Accommodates travel mugs up to 7" tall.

MAINTENANCE ALERT: Reminds you to descale after every 250 brews.

AUTO OFF: Automatically turns your brewer off 5 minutes after the last brew for energy savings.

HIGH ALTITUDE: To ensure your brewer works properly at higher altitudes (5,000 feet), enable the High Altitude setting by pressing and holding the **BREW** button and **8oz** button for 3 seconds.

Descaling Procedure

(Descaling Solution not included)

Before you begin, you will need a large ceramic mug, fresh water, Keurig® Descaling Solution, and access to a sink. Do not use a paper cup. Ensure that there is no beverage pod in the K-Cup® pod holder. Please allow approximately 15-20 minutes for the descaling procedure.

STEP 1: Descaling Solution Rinse

Pour the entire bottle of Keurig® Descaling Solution into an emptied water reservoir. Then fill the empty bottle with water and pour into the water reservoir. Do not insert a K-Cup® pod.

Place a large mug on the drip tray. To activate Descal Mode, begin with the brewer powered off by pressing and holding the **BREW OVER ICE** button. Then press and hold the **8oz** and **12oz** buttons together for 3 seconds until the **DESCALE** light turns solid.

When the **BREW** button begins flashing, press the **BREW** button to start the cleansing rinse brew. Pour the hot liquid into the sink. Repeat the cleansing rinse

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process. For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

Caring for Your Brewer

For great-tasting coffee, keep your brewer running at peak performance by following the recommended maintenance schedule:

Frequency	Product	Benefit
Weekly	Keurig® Rinse Pods	A simple, fast, and convenient way to reduce flavor carryover between brews.
Every 2 months	Keurig® Water Filters	Keep your water fresh and clean for a great-tasting cup of coffee every time.
Every 3 months or when the Descal notification turns on*	Keurig® Descaling Solution	Remove calcium deposits, or scale, that can build up inside a brewer over time and help extend the life of your brewer (when used regularly).

*To turn off Descal notification, follow the full descaling procedure as outlined in this guide.

If the brewer has been in storage or hasn't been used in days, run a cleansing brew before brewing your beverage.

Periodically **hand-wash** the water reservoir and lid and drip tray with warm, soapy water and rinse clean. Do not use any vinegar-based cleaning products to clean the outside of your brewer.

CAUTION: Parts are not dishwasher safe.

NOTE: Do not dry the inside of the water reservoir with a cloth, as lint may remain.

STEP 2: Rest & Rinse

Empty the water reservoir and refill to the **MAX FILL** line with fresh water.

STEP 3: Fresh Water Rinse

Press the **BREW** button once it begins flashing. Repeat until the **DESCALE** notification turns off. The brewer will now exit Descal Mode and will be ready for use!

NOTE: The cleaning action of Keurig® Descaling Solution may result in a "foam" dispensed from the brewer. This is natural, as the solution is reacting with the scale inside. For a brewer that is heavily scaled, the brewer may not fill properly after the descaler is added. If this occurs, you may see little to no output dispensed, followed by the sound of air blowing out. If this occurs:

- Turn off and unplug the brewer.
- If there is Keurig® Descaling Solution in the water reservoir, discard the contents, rinse the water reservoir thoroughly, and refill with water.
- Plug the brewer back in, power on, and repeat the Step 3 Fresh Water Rinse cycle. The brewer should begin to function normally as the solution is rinsed out and the scale is removed. If problem persists, allow brewer to sit unplugged for at least 30 minutes before continuing with the rinse.

PRINTED IN MEXICO

Elbrd: J.M. SC: 06-28-2024

OBPN: AW0000000656 REV B

SHDML: KIPK900FBK_B

Add: KIPK900FWH_KIPK900FAGY_KIPK900FMGY

814100228

